


# M58LR128HT M58LR128HB

128 Mbit (8 Mb ×16, Multiple Bank, Multilevel interface, Burst)
1.8 V supply Flash memories

#### **Features**

- Supply voltage
  - V<sub>DD</sub> = 1.7 V to 2.0 V for program, erase and read
  - V<sub>DDO</sub> = 1.7 V to 2.0 V for I/O Buffers
  - V<sub>PP</sub> = 9 V for fast program
- Synchronous / Asynchronous Read
  - Synchronous Burst Read mode: 54 MHz
  - Asynchronous Page Read mode
  - Random access: 85 ns
- Synchronous Burst Read Suspend
- Programming time
  - 2.5 µs typical word program time using Buffer Enhanced Factory Program command
- Memory organization
  - Multiple Bank memory array: 8 Mbit banks
  - Parameter Blocks (top or bottom location)
- Dual operations
  - program/erase in one Bank while read in others
  - No delay between read and write operations
- Block locking
  - All blocks locked at power-up
  - Any combination of blocks can be locked with zero latency
  - WP for Block Lock-Down
  - Absolute Write Protection with V<sub>PP</sub> = V<sub>SS</sub>
- Security
  - 64 bit unique device number
  - 2112 bit user programmable OTP Cells
- Common Flash Interface (CFI)
- 100 000 program/erase cycles per block

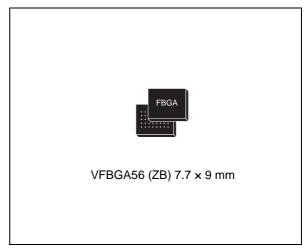

- Electronic signature
  - Manufacturer code: 20h
  - Top device codes: M58LR128HT: 88C4h
  - Bottom device codes M58LR128HB: 88C5h
- VFBGA56 package
  - ECOPACK® compliant

## **Contents**

1	Descr	ription	8
2	Signa	ıl descriptions	12
	2.1	Address inputs (A0-A22)	12
	2.2	Data inputs/outputs (DQ0-DQ15)	12
	2.3	Chip Enable (E)	12
	2.4	Output Enable (G)	12
	2.5	Write Enable (W)	12
	2.6	Write Protect (WP)	12
	2.7	Reset (RP)	13
	2.8	Latch Enable ( $\overline{L}$ )	13
	2.9	Clock (K)	13
	2.10	Wait (WAIT)	13
	2.11	V <sub>DD</sub> supply voltage	13
	2.12	V <sub>DDQ</sub> supply voltage	13
	2.13	V <sub>PP</sub> Program supply voltage	14
	2.14	V <sub>SS</sub> ground	14
	2.15	V <sub>SSQ</sub> ground	14
3	Bus o	pperations	15
	3.1	Bus Read	15
	3.2	Bus Write	15
	3.3	Address Latch	15
	3.4	Output Disable	15
	3.5	Standby	16
	3.6	Reset	16
4	Comn	mand interface	17
	4.1	Read Array command	18
	4.2	Read Status Register command	18
	4.3	Read Electronic Signature command	19
	4.4	Read CFI Query command	19

	4.5	Clear Status Register command	20
	4.6	Block Erase command	20
	4.7	Blank Check command	21
	4.8	Program command	22
	4.9	Buffer Program command	23
	4.10	Buffer Enhanced Factory Program command	24
		4.10.1 Setup phase	24
		4.10.2 Program and Verify phase	25
		4.10.3 Exit phase	25
	4.11	Program/Erase Suspend command	26
	4.12	Program/Erase Resume command	27
	4.13	Protection Register Program command	27
	4.14	Set Configuration Register command	28
	4.15	Block Lock command	28
	4.16	Block Unlock command	28
	4.17	Block Lock-Down command	29
5	Statu	s Register	3⊿
	5.1	Program/Erase Controller Status bit (SR7)	
	5.2	Erase Suspend Status bit (SR6)	
	5.3	Erase/Blank Check Status bit (SR5)	
	5.4	Program Status bit (SR4)	
	5.5	V <sub>PP</sub> Status bit (SR3)	
	5.6	Program Suspend Status bit (SR2)	
	5.7	Block Protection Status bit (SR1)	
	5.8	Bank Write/Multiple Word Program Status bit (SR0)	36
6	Confi	guration Register	38
	6.1	Read Select bit (CR15)	38
	6.2	X-Latency bits (CR13-CR11)	38
	6.3	Wait Polarity bit (CR10)	39
	6.4	Data Output Configuration bit (CR9)	39
	6.5	Wait Configuration bit (CR8)	
	6.6	Burst Type bit (CR7)	39

	6.7	Valid Clock Edge bit (CR6)	40
	6.8	Wrap Burst bit (CR3)	40
	6.9	Burst length bits (CR2-CR0)	40
7	Rea	ad modes	45
	7.1	Asynchronous Read mode	45
	7.2	Synchronous Burst Read mode	46
		7.2.1 Synchronous Burst Read Suspend	. 47
	7.3	Single Synchronous Read mode	47
8	Dua	al operations and Multiple Bank architecture	48
9	Blo	ck locking	50
	9.1	Reading a block's lock status	50
	9.2	Locked state	50
	9.3	Unlocked state	50
	9.4	Lock-Down state	51
	9.5	Locking operations during Erase Suspend	51
10	Pro	ogram and erase times and endurance cycles	53
11	Ma	ximum rating	55
12	DC	and AC parameters	56
13	Pac	ckage mechanical	72
14	Par	t numbering	74
Appendix	Α	Block address tables	75
Appendix	В	Common Flash Interface	83
Appendix	C	Flowcharts and pseudocodes	93
Appendix	D	Command interface state tables	102

M58LR128HT, M58LR128HB	Contents
Revision history	111

## List of tables

Table 1.	Signal names	9
Table 2.	Bank architecture	11
Table 3.	Bus operations	16
Table 4.	Command codes	17
Table 5.	Standard commands	30
Table 6.	Factory commands	31
Table 7.	Electronic Signature codes	31
Table 8.	Protection Register locks	33
Table 9.	Status Register bits	37
Table 10.	X-Latency settings	38
Table 11.	Configuration Register	41
Table 12.	Burst type definition	42
Table 13.	Dual operations allowed in other banks	48
Table 14.	Dual operations allowed in same bank	49
Table 15.	Dual operation limitations	49
Table 16.	Lock status	52
Table 17.	Program/Erase times and endurance cycles	
Table 18.	Absolute maximum ratings	55
Table 19.	Operating and AC measurement conditions	
Table 20.	Capacitance	57
Table 21.	DC characteristics - currents	
Table 22.	DC characteristics - voltages	59
Table 23.	Asynchronous Read AC characteristics	
Table 24.	Synchronous Read AC characteristics	66
Table 25.	Write AC characteristics, Write Enable controlled	68
Table 26.	Write AC characteristics, Chip Enable controlled	
Table 27.	Reset and Power-up AC characteristics	
Table 28.	VFBGA56 7.7 x 9mm - 10x4 ball array, 0.50mm pitch, package mechanical data .	
Table 29.	Ordering information scheme	
Table 30.	Top boot block addresses, M58LR128HT	
Table 31.	Bottom boot block addresses, M58LR128HB	
Table 32.	Query structure overview	
Table 33.	CFI query identification string	
Table 34.	CFI query system interface information	
Table 35.	Device geometry definition	
Table 36.	Primary algorithm-specific extended query table	
Table 37.	Protection Register information	
Table 38.	Burst Read information	
Table 39.	Bank and Erase block region information	
Table 40.	Bank and Erase block region 1 information	
Table 41.	Bank and Erase block region 2 information	
Table 42.	Command Interface states - modify table, next state	
Table 43.	Command Interface states - modify table, next output state	
Table 44.	Command interface states - lock table, next state	
Table 45.	Command interface states - lock table, next output state	
Table 16	Document revision history	111

## **List of figures**

Figure 1.	Logic diagram	9
Figure 2.	VFBGA56 package connections (top view through package)	
Figure 3.	Memory map	
Figure 4.	Protection Register memory map	. 32
Figure 5.	X-Latency and data output configuration example	. 44
Figure 6.	Wait configuration example	. 44
Figure 7.	AC measurement I/O waveform	. 56
Figure 8.	AC measurement load circuit	. 57
Figure 9.	Asynchronous random access Read AC waveforms	. 60
Figure 10.	Asynchronous Page Read AC waveforms	. 61
Figure 11.	Synchronous Burst Read AC waveforms	. 63
Figure 12.	Single Synchronous Read AC waveforms	. 64
Figure 13.	Synchronous Burst Read Suspend AC waveforms	. 65
Figure 14.	Clock input AC waveform	. 66
Figure 15.	Write AC waveforms, Write Enable controlled	. 67
Figure 16.	Write AC waveforms, Chip Enable controlled	
Figure 17.	Reset and Power-up AC waveforms	. 71
Figure 18.	VFBGA56 7.7 × 9mm - 8×7 active ball array, 0.75mm pitch, bottom view	
	package outline	
Figure 19.	Program flowchart and pseudocode	
Figure 20.	Blank Check flowchart and pseudocode	
Figure 21.	Buffer Program flowchart and pseudocode	. 95
Figure 22.	Program Suspend & Resume flowchart and pseudocode	
Figure 23.	Block Erase flowchart and pseudocode	
Figure 24.	Erase Suspend & Resume flowchart and pseudocode	
Figure 25.	Locking Operations flowchart and pseudocode	
Figure 26.	Protection Register Program flowchart and pseudocode	
Figure 27.	Buffer Enhanced Factory Program flowchart and pseudocode	101

## 1 Description

The M58LR128HT/B are 128 Mbit (8 Mbit  $\times$ 16) non-volatile Flash memories. They may be erased electrically at block level and programmed in-system on a Word-by-Word basis using a 1.7 V to 2.0 V V<sub>DD</sub> supply for the circuitry and a 1.7 V to 2.0 V V<sub>DDQ</sub> supply for the Input/Output pins. An optional 9V V<sub>PP</sub> power supply is provided to speed up factory programming.

The devices feature an asymmetrical block architecture. The M58LR128HT/B have an array of 131 blocks, and are divided into 8 Mbit banks. There are 15 banks each containing 8 main blocks of 64 KWords, and one parameter bank containing 4 parameter blocks of 16 KWords and 7 main blocks of 64 KWords.

The Multiple Bank Architecture allows Dual Operations, while programming or erasing in one bank, read operations are possible in other banks. Only one bank at a time is allowed to be in program or erase mode. It is possible to perform burst reads that cross bank boundaries. The bank architecture is summarized in *Table 2*, and the memory map is shown in *Figure 3*. The Parameter Blocks are located at the top of the memory address space for the M58LR128HT, and at the bottom for the M58LR128HB.

Each block can be erased separately. Erase can be suspended, in order to perform a program or read operation in any other block, and then resumed. Program can be suspended to read data at any memory location except for the one being programmed, and then resumed. Each block can be programmed and erased over 100,000 cycles using the supply voltage  $V_{DD}$ . There is a Buffer Enhanced Factory programming command available to speed up programming.

Program and erase commands are written to the Command Interface of the memory. An internal Program/Erase Controller takes care of the timings necessary for program and erase operations. The end of a program or erase operation can be detected and any error conditions identified in the Status Register. The command set required to control the memory is consistent with JEDEC standards.

The device supports Synchronous Burst Read and Asynchronous Read from all blocks of the memory array; at power-up the device is configured for Asynchronous Read. In Synchronous Burst Read mode, data is output on each clock cycle at frequencies of up to 54 MHz. The Synchronous Burst Read operation can be suspended and resumed.

The device features an Automatic Standby mode. When the bus is inactive during Asynchronous Read operations, the device automatically switches to the Automatic Standby mode. In this condition the power consumption is reduced to the standby value and the outputs are still driven.

The M58LR128HT/B features an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency, enabling instant code and data protection. All blocks have three levels of protection. They can be locked and locked-down individually preventing any accidental programming or erasure. There is an additional hardware protection against program and erase. When  $V_{PP} \leq V_{PPLK}$  all blocks are protected against program or erase. All blocks are locked at power-up.

The device includes 17 Protection Registers and 2 Protection Register locks, one for the first Protection Register and the other for the 16 One-Time-Programmable (OTP) Protection Registers of 128 bits each. The first Protection Register is divided into two segments: a 64 bit segment containing a unique device number written by ST, and a 64 bit segment One-

Time-Programmable (OTP) by the user. The user programmable segment can be permanently protected. *Figure 4*, shows the Protection Register Memory Map.

The M58LR128HT/B are offered in a VFBGA56,  $7.7 \times 9$  mm, 0.50 mm pitch package. They are supplied with all the bits erased (set to '1').

Figure 1. Logic diagram

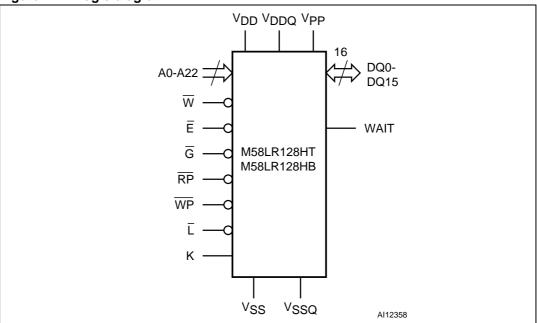


Table 1. Signal names

A0-A22	Address Inputs
DQ0-DQ15	Data Input/Outputs, Command Inputs
Ē	Chip Enable
G	Output Enable
W	Write Enable
RP	Reset
WP	Write Protect
К	Clock
Ī	Latch Enable
WAIT	Wait
$V_{DD}$	Supply Voltage
$V_{DDQ}$	Supply Voltage for Input/Output Buffers
V <sub>PP</sub>	Optional Supply Voltage for Fast Program & Erase
V <sub>SS</sub>	Ground
$V_{SSQ}$	Ground Input/Output Supply
NC	Not Connected Internally
DU	Do Not Use

5/




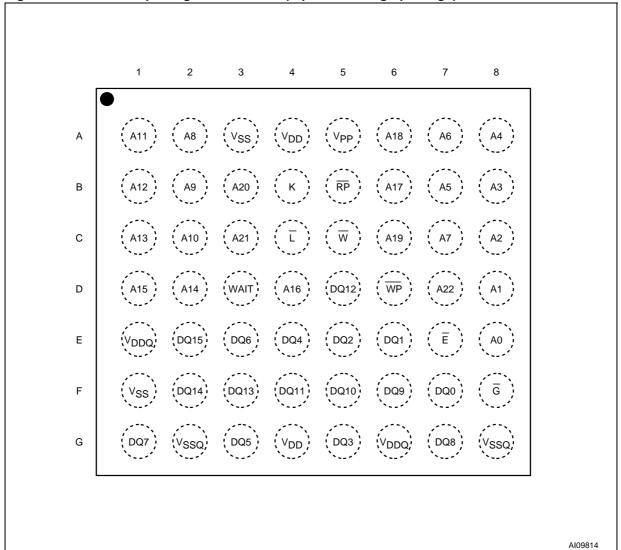


Table 2. Bank architecture

Number	Bank size	Parameter blocks	Main blocks
Parameter Bank	8 Mbits	4 blocks of 16 KWords	7 blocks of 64 KWords
Bank 1	8 Mbits	-	8 blocks of 64 KWords
Bank 2	8 Mbits	-	8 blocks of 64 KWords
Bank 3	8 Mbits	-	8 blocks of 64 KWords
Bank 14	8 Mbits	-	8 blocks of 64 KWords
Bank 15	8 Mbits	-	8 blocks of 64 KWords

Figure 3. Memory map

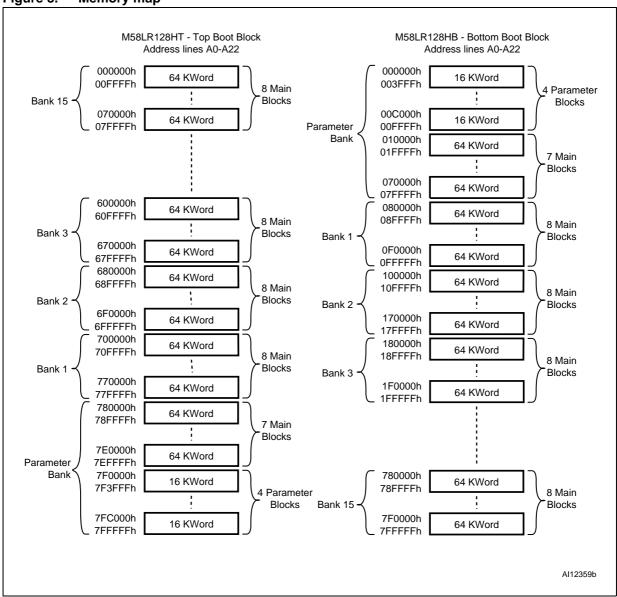

## 2 Signal descriptions

See Figure 1: Logic diagram and Table 1: Signal names, for a brief overview of the signals connected to this device.

#### 2.1 Address inputs (A0-A22)

The Address Inputs select the cells in the memory array to access during Bus Read operations. During Bus Write operations they control the commands sent to the Command Interface of the Program/Erase Controller.

#### 2.2 Data inputs/outputs (DQ0-DQ15)

The Data I/O output the data stored at the selected address during a Bus Read operation or input a command or the data to be programmed during a Bus Write operation.

## 2.3 Chip Enable ( $\overline{E}$ )

The Chip Enable input activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is at  $V_{IL}$  and Reset is at  $V_{IH}$  the device is in active mode. When Chip Enable is at  $V_{IH}$  the memory is deselected, the outputs are high impedance and the power consumption is reduced to the standby level.

## 2.4 Output Enable (G)

The Output Enable input controls data outputs during the Bus Read operation of the memory.

## 2.5 Write Enable $(\overline{W})$

The Write Enable input controls the Bus Write operation of the memory's Command Interface. The data and address inputs are latched on the rising edge of Chip Enable or Write Enable whichever occurs first.

## 2.6 Write Protect (WP)

Write Protect is an input that gives an additional hardware protection for each block. When Write Protect is at  $V_{IL}$ , the Lock-Down is enabled and the protection status of the Locked-Down blocks cannot be changed. When Write Protect is at  $V_{IH}$ , the Lock-Down is disabled and the Locked-Down blocks can be locked or unlocked. (refer to *Table 16: Lock status*).

## 2.7 Reset (RP)

The Reset input provides a hardware reset of the memory. When Reset is at  $V_{IL}$ , the memory is in reset mode: the outputs are high impedance and the current consumption is reduced to the Reset Supply Current  $I_{DD2}$ . Refer to *Table 21: DC characteristics - currents*, for the value of  $I_{DD2}$ . After Reset all blocks are in the Locked state and the Configuration Register is reset. When Reset is at  $V_{IH}$ , the device is in normal operation. Exiting reset mode the device enters asynchronous read mode, but a negative transition of Chip Enable or Latch Enable is required to ensure valid data outputs.

The Reset pin can be interfaced with 3 V logic without any additional circuitry. It can be tied to V<sub>RPH</sub> (refer to *Table 22: DC characteristics - voltages*).

## 2.8 Latch Enable $(\overline{L})$

Latch Enable latches the address bits on its rising edge. The address latch is transparent when Latch Enable is at  $V_{II}$  and it is inhibited when Latch Enable is at  $V_{IH}$ .

#### 2.9 Clock (K)

The clock input synchronizes the memory to the microcontroller during synchronous read operations; the address is latched on a Clock edge (rising or falling, according to the configuration settings) when Latch Enable is at  $V_{\rm IL}$ . Clock is ignored during asynchronous read and in write operations.

#### 2.10 Wait (WAIT)

Wait is an output signal used during synchronous read to indicate whether the data on the output bus are valid. This output is high impedance when Chip Enable is at  $V_{IH}$  or Reset is at  $V_{IL}$ . It can be configured to be active during the wait cycle or one clock cycle in advance. The WAIT signal is high impedance when Output Enable is at  $V_{IH}$ .

## 2.11 V<sub>DD</sub> supply voltage

V<sub>DD</sub> provides the power supply to the internal core of the memory device. It is the main power supply for all operations (Read, Program and Erase).

## 2.12 V<sub>DDQ</sub> supply voltage

 $V_{DDQ}$  provides the power supply to the I/O pins and enables all Outputs to be powered independently from  $V_{DD}$ .  $V_{DDQ}$  can be tied to  $V_{DD}$  or can use a separate supply.

47/

#### 2.13 V<sub>PP</sub> Program supply voltage

V<sub>PP</sub> is both a control input and a power supply pin. The two functions are selected by the voltage range applied to the pin.

If  $V_{PP}$  is kept in a low voltage range (0V to  $V_{DDQ}$ )  $V_{PP}$  is seen as a control input. In this case a voltage lower than  $V_{PPLK}$  gives absolute protection against program or erase, while  $V_{PP}$  in the  $V_{PP1}$  range enables these functions (see Tables 21 and 22, DC Characteristics for the relevant values).  $V_{PP}$  is only sampled at the beginning of a program or erase; a change in its value after the operation has started does not have any effect and program or erase operations continue.

If  $V_{PP}$  is in the range of  $V_{PPH}$  it acts as a power supply pin. In this condition  $V_{PP}$  must be stable until the Program/Erase algorithm is completed.

#### 2.14 V<sub>SS</sub> ground

V<sub>SS</sub> ground is the reference for the core supply. It must be connected to the system ground.

### 2.15 V<sub>SSQ</sub> ground

 $V_{SSQ}$  ground is the reference for the input/output circuitry driven by  $V_{DDQ}$ .  $V_{SSQ}$  must be connected to  $V_{SS}$ 

Note:

Each device in a system should have  $V_{DD}$ ,  $V_{DDQ}$  and  $V_{PP}$  decoupled with a 0.1  $\mu$ F ceramic capacitor close to the pin (high frequency, inherently low inductance capacitors should be as close as possible to the package). See Figure 8: AC measurement load circuit. The PCB track widths should be sufficient to carry the required  $V_{PP}$  program and erase currents.

## 3 Bus operations

There are six standard bus operations that control the device. These are Bus Read, Bus Write, Address Latch, Output Disable, Standby and Reset. See *Table 3: Bus operations*, for a summary.

Typically glitches of less than 5ns on Chip Enable or Write Enable are ignored by the memory and do not affect Bus Write operations.

#### 3.1 Bus Read

Bus Read operations are used to output the contents of the Memory Array, the Electronic Signature, the Status Register and the Common Flash Interface. Both Chip Enable and Output Enable must be at  $V_{\rm IL}$  in order to perform a read operation. The Chip Enable input should be used to enable the device. Output Enable should be used to gate data onto the output. The data read depends on the previous command written to the memory (see Command Interface section). See Figures 9, 10 and 11 Read AC Waveforms, and Tables 23 and 24 Read AC Characteristics, for details of when the output becomes valid.

#### 3.2 Bus Write

Bus Write operations write Commands to the memory or latch Input Data to be programmed. A bus write operation is initiated when Chip Enable and Write Enable are at  $V_{IL}$  with Output Enable at  $V_{IH}$ . Commands, Input Data and Addresses are latched on the rising edge of Write Enable or Chip Enable, whichever occurs first. The addresses must be latched prior to the write operation by toggling Latch Enable (when Chip Enable is at  $V_{IL}$ ). The Latch Enable must be tied to  $V_{IH}$  during the bus write operation.

See Figures 15 and 16, Write AC Waveforms, and Tables 25 and 26, Write AC Characteristics, for details of the timing requirements.

#### 3.3 Address Latch

Address latch operations input valid addresses. Both Chip enable and Latch Enable must be at  $V_{\rm IL}$  during address latch operations. The addresses are latched on the rising edge of Latch Enable.

## 3.4 Output Disable

The outputs are high impedance when the Output Enable is at V<sub>IH</sub>.

#### 3.5 Standby

Standby disables most of the internal circuitry allowing a substantial reduction of the current consumption. The memory is in standby when Chip Enable and Reset are at  $V_{IH}$ . The power consumption is reduced to the standby level  $I_{DD3}$  and the outputs are set to high impedance, independently from the Output Enable or Write Enable inputs. If Chip Enable switches to  $V_{IH}$  during a program or erase operation, the device enters Standby mode when finished.

#### 3.6 Reset

During Reset mode the memory is deselected and the outputs are high impedance. The memory is in Reset mode when Reset is at  $V_{IL}$ . The power consumption is reduced to the Reset level, independently from the Chip Enable, Output Enable or Write Enable inputs. If Reset is pulled to  $V_{SS}$  during a Program or Erase, this operation is aborted and the memory content is no longer valid.

Table 3. Bus operations<sup>(1)</sup>

Operation	Ē	G	W	Ī	RP	WAIT <sup>(2)</sup>	DQ15-DQ0
Bus Read	$V_{IL}$	$V_{IL}$	$V_{IH}$	V <sub>IL</sub> (3)	$V_{IH}$		Data Output
Bus Write	V <sub>IL</sub>	$V_{IH}$	V <sub>IL</sub>	V <sub>IL</sub> <sup>(3)</sup>	$V_{IH}$		Data Input
Address Latch	V <sub>IL</sub>	Х	V <sub>IH</sub>	V <sub>IL</sub>	V <sub>IH</sub>		Data Output or Hi-Z <sup>(4)</sup>
Output Disable	$V_{IL}$	$V_{IH}$	V <sub>IH</sub>	Х	$V_{IH}$	Hi-Z	Hi-Z
Standby	V <sub>IH</sub>	Х	Х	Х	$V_{IH}$	Hi-Z	Hi-Z
Reset	Х	Х	Х	Х	V <sub>IL</sub>	Hi-Z	Hi-Z

- 1. X = Don't care.
- 2. WAIT signal polarity is configured using the Set Configuration Register command.
- 3.  $\overline{L}$  can be tied to  $V_{IH}$  if the valid address has been previously latched.
- 4. Depends on  $\overline{G}$ .

#### 4 Command interface

All Bus Write operations to the memory are interpreted by the Command Interface. Commands consist of one or more sequential Bus Write operations. An internal Program/Erase Controller handles all timings and verifies the correct execution of the program and erase commands. The Program/Erase Controller provides a Status Register whose output may be read at any time to monitor the progress or the result of the operation.

The Command Interface is reset to read mode when power is first applied, when exiting from Reset or whenever  $V_{DD}$  is lower than  $V_{LKO}$ . Command sequences must be followed exactly. Any invalid combination of commands will be ignored.

Refer to *Table 4: Command codes*, *Table 5: Standard commands*, *Table 6: Factory commands*, and *Appendix D: Command interface state tables*, for a summary of the Command Interface.

Table 4. Command codes

Hex Code	Command
01h	Block Lock Confirm
03h	Set Configuration Register Confirm
10h	Alternative Program Setup
20h	Block Erase Setup
2Fh	Block Lock-Down Confirm
40h	Program Setup
50h	Clear Status Register
60h	Block Lock Setup, Block Unlock Setup, Block Lock Down Setup and Set Configuration Register Setup
70h	Read Status Register
80h	Buffer Enhanced Factory Program Setup
90h	Read Electronic Signature
98h	Read CFI Query
B0h	Program/Erase Suspend
BCh	Blank Check Setup
C0h	Protection Register Program
CBh	Blank Check Confirm
D0h	Program/Erase Resume, Block Erase Confirm, Block Unlock Confirm, Buffer Program or Buffer Enhanced Factory Program Confirm
E8h	Buffer Program
FFh	Read Array

#### 4.1 Read Array command

The Read Array command returns the addressed bank to Read Array mode.

One Bus Write cycle is required to issue the Read Array command. Once a bank is in Read Array mode, subsequent read operations will output the data from the memory array.

A Read Array command can be issued to any banks while programming or erasing in another bank.

If the Read Array command is issued to a bank currently executing a program or erase operation, the bank will return to Read Array mode but the program or erase operation will continue, however the data output from the bank is not guaranteed until the program or erase operation has finished. The read modes of other banks are not affected.

#### 4.2 Read Status Register command

The device contains a Status Register that is used to monitor program or erase operations.

The Read Status Register command is used to read the contents of the Status Register for the addressed bank.

One Bus Write cycle is required to issue the Read Status Register command. Once a bank is in Read Status Register mode, subsequent read operations will output the contents of the Status Register.

The Status Register data is latched on the falling edge of the Chip Enable or Output Enable signals. Either Chip Enable or Output Enable must be toggled to update the Status Register data

The Read Status Register command can be issued at any time, even during program or erase operations. The Read Status Register command will only change the read mode of the addressed bank. The read modes of other banks are not affected. Only Asynchronous Read and Single Synchronous Read operations should be used to read the Status Register. A Read Array command is required to return the bank to Read Array mode.

See *Table 9* for the description of the Status Register Bits.

#### 4.3 Read Electronic Signature command

The Read Electronic Signature command is used to read the Manufacturer and Device Codes, the Lock Status of the addressed bank, the Protection Register, and the Configuration Register.

One Bus Write cycle is required to issue the Read Electronic Signature command. Once a bank is in Read Electronic Signature mode, subsequent read operations in the same bank will output the Manufacturer Code, the Device Code, the Lock Status of the addressed bank, the Protection Register, or the Configuration Register (see *Table 8*).

The Read Electronic Signature command can be issued at any time, even during program or erase operations, except during Protection Register Program operations. Dual operations between the Parameter bank and the Electronic Signature location are not allowed (see *Table 15: Dual operation limitations* for details).

If a Read Electronic Signature command is issued to a bank that is executing a program or erase operation the bank will go into Read Electronic Signature mode. Subsequent Bus Read cycles will output the Electronic Signature data and the Program/Erase controller will continue to program or erase in the background.

The Read Electronic Signature command will only change the read mode of the addressed bank. The read modes of other banks are not affected. Only Asynchronous Read and Single Synchronous Read operations should be used to read the Electronic Signature. A Read Array command is required to return the bank to Read Array mode.

#### 4.4 Read CFI Query command

The Read CFI Query command is used to read data from the Common Flash Interface (CFI).

One Bus Write cycle is required to issue the Read CFI Query command. Once a bank is in Read CFI Query mode, subsequent Bus Read operations in the same bank read from the Common Flash Interface.

The Read CFI Query command can be issued at any time, even during program or erase operations.

If a Read CFI Query command is issued to a bank that is executing a program or erase operation the bank will go into Read CFI Query mode. Subsequent Bus Read cycles will output the CFI data and the Program/Erase controller will continue to program or erase in the background.

The Read CFI Query command will only change the read mode of the addressed bank. The read modes of other banks are not affected. Only Asynchronous Read and Single Synchronous Read operations should be used to read from the CFI. A Read Array command is required to return the bank to Read Array mode. Dual operations between the Parameter Bank and the CFI memory space are not allowed (see *Table 15: Dual operation limitations* for details).

See *Appendix B: Common Flash Interface*, Tables 32, 33, 34, 35, 36, 37, 38, 39, 40 and 41 for details on the information contained in the Common Flash Interface memory area.

#### 4.5 Clear Status Register command

The Clear Status Register command can be used to reset (set to '0') all error bits (SR1, 3, 4 and 5) in the Status Register.

One Bus Write cycle is required to issue the Clear Status Register command. The Clear Status Register command does not affect the read mode of the bank.

The error bits in the Status Register do not automatically return to '0' when a new command is issued. The error bits in the Status Register should be cleared before attempting a new program or erase command.

#### 4.6 Block Erase command

The Block Erase command is used to erase a block. It sets all the bits within the selected block to '1'. All previous data in the block is lost.

If the block is protected then the erase operation will abort, the data in the block will not be changed and the Status Register will output the error.

Two Bus Write cycles are required to issue the command.

- The first bus cycle sets up the Block Erase command.
- The second latches the block address and starts the Program/Erase Controller.

If the second bus cycle is not the Block Erase Confirm code, Status Register bits SR4 and SR5 are set and the command is aborted.

Once the command is issued the bank enters Read Status Register mode and any read operation within the addressed bank will output the contents of the Status Register. A Read Array command is required to return the bank to Read Array mode.

During Block Erase operations the bank containing the block being erased will only accept the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend command, all other commands will be ignored.

The Block Erase operation aborts if Reset,  $\overline{RP}$ , goes to  $V_{IL}$ . As data integrity cannot be guaranteed when the Block Erase operation is aborted, the block must be erased again.

Refer to Dual Operations section for detailed information about simultaneous operations allowed in banks not being erased.

Typical Erase times are given in Table 17: Program/Erase times and endurance cycles.

See Appendix C, Figure 23: Block Erase flowchart and pseudocode, for a suggested flowchart for using the Block Erase command.

#### 4.7 Blank Check command

The Blank Check command is used to check whether a Main Array Block has been completely erased. Only one Block at a time can be checked. To use the Blank Check command  $V_{PP}$  must be equal to  $V_{PPH}$ . If  $V_{PP}$  is not equal to  $V_{PPH}$ , the device ignores the command and no error is shown in the Status Register.

Two bus cycles are required to issue the Blank Check command:

- The first bus cycle writes the Blank Check command (BCh) to any address in the Block to be checked.
- The second bus cycle writes the Blank Check Confirm command (CBh) to any address in the Block to be checked and starts the Blank Check operation.

If the second bus cycle is not Blank Check Confirm, Status Register bits SR4 and SR5 are set to '1' and the command aborts.

Once the command is issued the addressed bank automatically enters the Status Register mode and further reads within the bank output the Status Register contents.

The only operation permitted during Blank Check is Read Status Register. Dual Operations are not supported while a Blank Check operation is in progress. Blank Check operations cannot be suspended and are not allowed while the device is in Program/Erase Suspend.

The SR7 Status Register bit indicates the status of the Blank Check operation in progress: SR7 = '0' means that the Blank Check operation is still ongoing. SR7 = '1' means that the operation is complete.

The SR5 Status Register bit goes High (SR5 = '1') to indicate that the Blank Check operation has failed.

At the end of the operation the bank remains in the Read Status Register mode until another command is written to the Command Interface.

See *Appendix C*, *Figure 20: Blank Check flowchart and pseudocode*, for a suggested flowchart for using the Blank Check command.

Typical Blank Check times are given in *Table 17: Program/Erase times and endurance cycles*.

#### 4.8 Program command

The program command is used to program a single Word to the memory array.

If the block being programmed is protected, then the Program operation will abort, the data in the block will not be changed and the Status Register will output the error.

Two Bus Write cycles are required to issue the Program Command.

- The first bus cycle sets up the Program command.
- The second latches the address and data to be programmed and starts the Program/Erase Controller.

Once the programming has started, read operations in the bank being programmed output the Status Register content.

During a Program operation, the bank containing the Word being programmed will only accept the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend command, all other commands will be ignored. A Read Array command is required to return the bank to Read Array mode.

Refer to Dual Operations section for detailed information about simultaneous operations allowed in banks not being programmed.

Typical Program times are given in Table 17: Program/Erase times and endurance cycles.

The Program operation aborts if Reset,  $\overline{RP}$ , goes to  $V_{IL}$ . As data integrity cannot be guaranteed when the Program operation is aborted, the Word must be reprogrammed.

See *Appendix C*, *Figure 19: Program flowchart and pseudocode*, for the flowchart for using the Program command.

#### 4.9 Buffer Program command

The Buffer Program Command makes use of the device's 32-Word Write Buffer to speed up programming. Up to 32 Words can be loaded into the Write Buffer. The Buffer Program command dramatically reduces in-system programming time compared to the standard non-buffered Program command.

Four successive steps are required to issue the Buffer Program command.

1. The first Bus Write cycle sets up the Buffer Program command. The setup code can be addressed to any location within the targeted block.

After the first Bus Write cycle, read operations in the bank will output the contents of the Status Register. Status Register bit SR7 should be read to check that the buffer is available (SR7 = 1). If the buffer is not available (SR7 = 0), re-issue the Buffer Program command to update the Status Register contents.

- The second Bus Write cycle sets up the number of Words to be programmed. Value n
  is written to the same block address, where n+1 is the number of Words to be
  programmed.
- 3. Use n+1 Bus Write cycles to load the address and data for each Word into the Write Buffer. Addresses must lie within the range from the start address to the start address + n, where the start address is the location of the first data to be programmed. Optimum performance is obtained when the start address corresponds to a 32 Word boundary.
- 4. The final Bus Write cycle confirms the Buffer Program command and starts the program operation.

All the addresses used in the Buffer Program operation must lie within the same block.

Invalid address combinations or failing to follow the correct sequence of Bus Write cycles will set an error in the Status Register and abort the operation without affecting the data in the memory array.

If the Status Register bits SR4 and SR5 are set to '1', the Buffer Program Command is not accepted. Clear the Status Register before re-issuing the command.

If the block being programmed is protected an error will be set in the Status Register and the operation will abort without affecting the data in the memory array.

During Buffer Program operations the bank being programmed will only accept the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend command, all other commands will be ignored.

Refer to Dual Operations section for detailed information about simultaneous operations allowed in banks not being programmed.

See *Appendix C*, *Figure 21: Buffer Program flowchart and pseudocode*, for a suggested flowchart on using the Buffer Program command.

#### 4.10 Buffer Enhanced Factory Program command

The Buffer Enhanced Factory Program command has been specially developed to speed up programming in manufacturing environments where the programming time is critical.

It is used to program one or more Write Buffer(s) of 32 Words to a block. Once the device enters Buffer Enhanced Factory Program mode, the Write Buffer can be reloaded any number of times as long as the address remains within the same block. Only one block can be programmed at a time.

If the block being programmed is protected, then the Program operation will abort, the data in the block will not be changed and the Status Register will output the error.

The use of the Buffer Enhanced Factory Program command requires certain operating conditions:

- V<sub>PP</sub> must be set to V<sub>PPH</sub>
- V<sub>DD</sub> must be within operating range
- Ambient temperature T<sub>A</sub> must be 30°C ± 10°C
- The targeted block must be unlocked
- The start address must be aligned with the start of a 32 Word buffer boundary
- The address must remain the Start Address throughout programming.

Dual operations are not supported during the Buffer Enhanced Factory Program operation and the command cannot be suspended.

The Buffer Enhanced Factory Program Command consists of three phases: the Setup Phase, the Program and Verify Phase, and the Exit Phase, Please refer to *Table 6: Factory commands* for detail information.

#### 4.10.1 Setup phase

The Buffer Enhanced Factory Program command requires two Bus Write cycles to initiate the command.

- The first Bus Write cycle sets up the Buffer Enhanced Factory Program command.
- The second Bus Write cycle confirms the command.

After the confirm command is issued, read operations output the contents of the Status Register. The read Status Register command must not be issued as it will be interpreted as data to program.

The Status Register P/E.C. Bit SR7 should be read to check that the P/E.C. is ready to proceed to the next phase.

If an error is detected, SR4 goes high (set to '1') and the Buffer Enhanced Factory Program operation is terminated. See Status Register section for details on the error.

#### 4.10.2 Program and Verify phase

The Program and Verify Phase requires 32 cycles to program the 32 Words to the Write Buffer. The data is stored sequentially, starting at the first address of the Write Buffer, until the Write Buffer is full (32 Words). To program less than 32 Words, the remaining Words should be programmed with FFFFh.

Three successive steps are required to issue and execute the Program and Verify Phase of the command.

- Use one Bus Write operation to latch the Start Address and the first Word to be programmed. The Status Register Bank Write Status bit SR0 should be read to check that the P/E.C. is ready for the next Word.
- 2. Each subsequent Word to be programmed is latched with a new Bus Write operation. The address must remain the Start Address as the P/E.C. increments the address location. If any address that is not in the same block as the Start Address is given, the Program and Verify Phase terminates. Status Register bit SR0 should be read between each Bus Write cycle to check that the P/E.C. is ready for the next Word.
- Once the Write Buffer is full, the data is programmed sequentially to the memory array.
   After the program operation the device automatically verifies the data and reprograms if necessary.

The Program and Verify phase can be repeated, without re-issuing the command, to program additional 32 Word locations as long as the address remains in the same block.

4. Finally, after all Words, or the entire block have been programmed, write one Bus Write operation to any address outside the block containing the Start Address, to terminate Program and Verify Phase.

Status Register bit SR0 must be checked to determine whether the program operation is finished. The Status Register may be checked for errors at any time but it must be checked after the entire block has been programmed.

#### 4.10.3 Exit phase

Status Register P/E.C. bit SR7 set to '1' indicates that the device has exited the Buffer Enhanced Factory Program operation and returned to Read Status Register mode. A full Status Register check should be done to ensure that the block has been successfully programmed. See the section on the Status Register for more details.

For optimum performance the Buffer Enhanced Factory Program command should be limited to a maximum of 100 program/erase cycles per block. If this limit is exceeded the internal algorithm will continue to work properly but some degradation in performance is possible. Typical program times are given in *Table 17*.

See Appendix C, Figure 27: Buffer Enhanced Factory Program flowchart and pseudocode, for a suggested flowchart on using the Buffer Enhanced Factory Program command.

#### 4.11 Program/Erase Suspend command

The Program/Erase Suspend command is used to pause a Program or Block Erase operation. The command can be addressed to any bank.

The Program/Erase Resume command is required to restart the suspended operation.

One bus write cycle is required to issue the Program/Erase Suspend command. Once the Program/Erase Controller has paused bits SR7, SR6 and/ or SR2 of the Status Register will be set to '1'.

The following commands are accepted during Program/Erase Suspend:

- Program/Erase Resume
- Read Array (data from erase-suspended block or program-suspended Word is not valid)
- Read Status Register
- Read Electronic Signature
- Read CFI Query

Additionally, if the suspended operation was a Block Erase then the following commands are also accepted:

- Clear Status Register
- Set Configuration Register
- Program (except in erase-suspended block)
- Buffer Program (except in erase suspended blocks)
- Block Lock
- Block Lock-Down
- Block Unlock.

During an erase suspend the block being erased can be protected by issuing the Block Lock or Block Lock-Down commands. When the Program/Erase Resume command is issued the operation will complete.

It is possible to accumulate multiple suspend operations. For example: suspend an erase operation, start a program operation, suspend the program operation, then read the array.

If a Program command is issued during a Block Erase Suspend, the erase operation cannot be resumed until the program operation has completed.

The Program/Erase Suspend command does not change the read mode of the banks. If the suspended bank was in Read Status Register, Read Electronic signature or Read CFI Query mode the bank remains in that mode and outputs the corresponding data.

Refer to Dual Operations section for detailed information about simultaneous operations allowed during Program/Erase Suspend.

During a Program/Erase Suspend, the device can be placed in standby mode by taking Chip Enable to  $V_{IH}$ . Program/erase is aborted if Reset,  $\overline{RP}$ , goes to  $V_{II}$ .

See Appendix C, Figure 22: Program Suspend & Resume flowchart and pseudocode, and Figure 24: Erase Suspend & Resume flowchart and pseudocode, for flowcharts for using the Program/Erase Suspend command.

#### 4.12 Program/Erase Resume command

The Program/Erase Resume command is used to restart the program or erase operation suspended by the Program/Erase Suspend command. One Bus Write cycle is required to issue the command. The command can be issued to any address.

The Program/Erase Resume command does not change the read mode of the banks. If the suspended bank was in Read Status Register, Read Electronic signature or Read CFI Query mode the bank remains in that mode and outputs the corresponding data.

If a Program command is issued during a Block Erase Suspend, then the erase cannot be resumed until the program operation has completed.

See Appendix C, Figure 22: Program Suspend & Resume flowchart and pseudocode, and Figure 24: Erase Suspend & Resume flowchart and pseudocode, for flowcharts for using the Program/Erase Resume command.

#### 4.13 Protection Register Program command

The Protection Register Program command is used to program the user One-Time-Programmable (OTP) segments of the Protection Register and the two Protection Register Locks.

The device features 16 OTP segments of 128 bits and one OTP segment of 64 bits, as shown in *Figure 4: Protection Register memory map*.

The segments are programmed one Word at a time. When shipped all bits in the segment are set to '1'. The user can only program the bits to '0'.

Two Bus Write cycles are required to issue the Protection Register Program command.

- The first bus cycle sets up the Protection Register Program command.
- The second latches the address and data to be programmed to the Protection Register and starts the Program/Erase Controller.

Read operations to the bank being programmed output the Status Register content after the program operation has started.

Attempting to program a previously protected Protection Register will result in a Status Register error.

The Protection Register Program cannot be suspended. Dual operations between the Parameter Bank and the Protection Register memory space are not allowed (see *Table 15: Dual operation limitations* for details)

The two Protection Register Locks are used to protect the OTP segments from further modification. The protection of the OTP segments is not reversible. Refer to *Figure 4: Protection Register memory map*, and *Table 8: Protection Register locks*, for details on the Lock bits.

See *Appendix C*, *Figure 26: Protection Register Program flowchart and pseudocode*, for a flowchart for using the Protection Register Program command.

47/

#### 4.14 Set Configuration Register command

The Set Configuration Register command is used to write a new value to the Configuration Register.

Two Bus Write cycles are required to issue the Set Configuration Register command.

- The first cycle sets up the Set Configuration Register command and the address corresponding to the Configuration Register content.
- The second cycle writes the Configuration Register data and the confirm command.

The Configuration Register data must be written as an address during the bus write cycles, that is A0 = CR0, A1 = CR1, ..., A15 = CR15. Addresses A16-A22 are ignored.

Read operations output the array content after the Set Configuration Register command is issued.

The Read Electronic Signature command is required to read the updated contents of the Configuration Register.

#### 4.15 Block Lock command

The Block Lock command is used to lock a block and prevent program or erase operations from changing the data in it. All blocks are locked after power-up or reset.

Two Bus Write cycles are required to issue the Block Lock command.

- The first bus cycle sets up the Block Lock command.
- The second Bus Write cycle latches the block address and locks the block.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 16* shows the Lock Status after issuing a Block Lock command.

Once set, the Block Lock bits remain set even after a hardware reset or power-down/power-up. They are cleared by a Block Unlock command.

Refer to the section, Block Locking, for a detailed explanation. See *Appendix C*, *Figure 25: Locking Operations flowchart and pseudocode*, for a flowchart for using the Lock command.

#### 4.16 Block Unlock command

The Block Unlock command is used to unlock a block, allowing the block to be programmed or erased.

Two Bus Write cycles are required to issue the Block Unlock command.

- The first bus cycle sets up the Block Unlock command.
- The second Bus Write cycle latches the block address and unlocks the block.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 16* shows the protection status after issuing a Block Unlock command.

Refer to the section, Block Locking, for a detailed explanation and *Appendix C*, *Figure 25: Locking Operations flowchart and pseudocode*, for a flowchart for using the Block Unlock command.

#### 4.17 Block Lock-Down command

The Block Lock-Down command is used to lock-down a locked or unlocked block.

A locked-down block cannot be programmed or erased. The lock status of a locked-down block cannot be changed when  $\overline{WP}$  is low,  $V_{IL}$ . When  $\overline{WP}$  is high,  $V_{IH}$ , the lock-down function is disabled and the locked blocks can be individually unlocked by the Block Unlock command.

Two Bus Write cycles are required to issue the Block Lock-Down command.

- The first bus cycle sets up the Block Lock-Down command.
- The second Bus Write cycle latches the block address and locks-down the block.

The lock status can be monitored for each block using the Read Electronic Signature command.

Locked-Down blocks revert to the locked (and not locked-down) state when the device is reset on power-down. *Table 16* shows the Lock Status after issuing a Block Lock-Down command.

Refer to the section, Block Locking, for a detailed explanation and *Appendix C*, *Figure 25: Locking Operations flowchart and pseudocode*, for a flowchart for using the Lock-Down command.

Table 5. Standard commands<sup>(1)</sup>

		Bus Operations									
Commands	Cycles		1st Cycle		2nd Cycle						
	S	Op.	Add	Data	Op.	Add	Data				
Read Array	1+	Write	BKA	FFh	Read	WA	RD				
Read Status Register	1+	Write	BKA	70h	Read	BKA <sup>(2)</sup>	SRD				
Read Electronic Signature	1+	Write	BKA	90h	Read	BKA <sup>(2)</sup>	ESD				
Read CFI Query	1+	Write	BKA	98h	Read	BKA <sup>(2)</sup>	QD				
Clear Status Register	1	Write	Х	50h							
Block Erase	2	Write	BKA or BA <sup>(3)</sup>	20h	Write	ВА	D0h				
Program	2	Write	BKA or WA <sup>(3)</sup>	40h or 10h	Write	WA	PD				
		Write	BA	E8h	Write	BA	n				
Buffer Program <sup>(4)</sup>	n+4	Write	PA <sub>1</sub>	PD <sub>1</sub>	Write	PA <sub>2</sub>	PD <sub>2</sub>				
		Write	PA <sub>n+1</sub>	PD <sub>n+1</sub>	Write	Х	D0h				
Program/Erase Suspend	1	Write	Х	B0h							
Program/Erase Resume	1	Write	Х	D0h							
Protection Register Program	2	Write	PRA	C0h	Write	PRA	PRD				
Set Configuration Register	2	Write	CRD	60h	Write	CRD	03h				
Block Lock	2	Write	BKA or BA <sup>(3)</sup>	60h	Write	ВА	01h				
Block Unlock	2	Write	BKA or BA <sup>(3)</sup>	60h	Write	ВА	D0h				
Block Lock-Down	2	Write	BKA or BA <sup>(3)</sup>	60h	Write	ВА	2Fh				

X = Don't Care, WA = Word Address in targeted bank, RD =Read Data, SRD =Status Register Data, ESD = Electronic Signature Data, QD =Query Data, BA =Block Address, BKA = Bank Address, PD = Program Data, PRA = Protection Register Address, PRD = Protection Register Data, CRD = Configuration Register Data.

<sup>2.</sup> Must be same bank as in the first cycle. The signature addresses are listed in *Table* 7.

<sup>3.</sup> Any address within the bank can be used.

<sup>4.</sup> n+1 is the number of Words to be programmed.

Table 6. Factory commands

Command	Phase	•	Bus Write Operations <sup>(1)</sup>										
		Phase	Cycles	1st		2r	2nd		3rd		Final -1		Final
		ပ	Add	Data	Add	Data	Add	Data		Add	Data	Add	Data
Blank Check		2	ВА	BCh	ВА	CBh							
Buffer Enhanced Factory Program	Setup	2	BKA or WA <sup>(2)</sup>	80h	WA <sub>1</sub>	D0h							
	Program/ Verify <sup>(3)</sup>	≥32	WA <sub>1</sub>	PD <sub>1</sub>	WA <sub>1</sub>	PD <sub>2</sub>	WA <sub>1</sub>	PD <sub>3</sub>		WA <sub>1</sub>	PD <sub>31</sub>	WA <sub>1</sub>	PD <sub>32</sub>
	Exit	1	NOT BA <sub>1</sub> <sup>(4)</sup>	Х									

- WA = Word Address in targeted bank, BKA = Bank Address, PD = Program Data, BA = Block Address, X = Don't Care.
- 2. Any address within the bank can be used.
- 3. The Program/Verify phase can be executed any number of times as long as the data is to be programmed to the same block.
- 4.  $WA_1$  is the Start Address, NOT  $BA_1$  = Not Block Address of  $WA_1$ .

Table 7. Electronic Signature codes

	Code	Address (h)	Data (h)
Manufacturer Code		Bank Address + 00	0020
Device Code	Тор	Bank Address + 01	88C4 (M58LR128HT)
	Bottom	Bank Address + 01	88C5 (M58LR128HB)
Block Protection	Locked		0001
	Unlocked	Block Address + 02	0000
	Locked and Locked-Down		0003
	Unlocked and Locked-Down		0002
Configuration Register		Bank Address + 05	CR <sup>(1)</sup>
Protection Register PR0 Lock	ST Factory Default		0002
	OTP Area Permanently Locked	Bank Address + 80	0000
Protection Register PR0		Bank Address + 81 Bank Address + 84	Unique Device Number
		Bank Address + 85 Bank Address + 88	OTP Area
Protection Register PR1 through PR16 Lock		Bank Address + 89	PRLD <sup>(1)</sup>
Protection Registers P	R1-PR16	Bank Address + 8A Bank Address + 109	OTP Area

<sup>1.</sup> CR = Configuration Register, PRLD = Protection Register Lock Data.

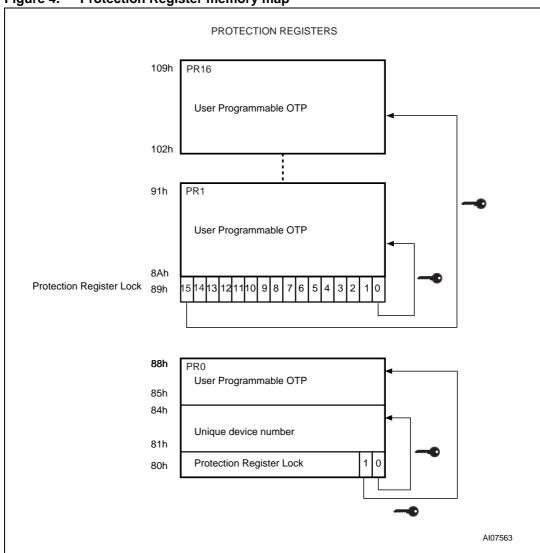


Figure 4. Protection Register memory map

Table 8. Protection Register locks

Lock			Description	
Number	Address	Bits	Description	
Lock 1		Bit 0	preprogrammed to protect Unique Device Number, address 81h to 84h in PR0	
	80h	Bit 1	protects 64bits of OTP segment, address 85h to 88h in PR0	
		Bits 2 to 15	reserved	
Lock 2	89h	Bit 0	protects 128bits of OTP segment PR1	
		Bit 1	protects 128bits of OTP segment PR2	
		Bit 2	protects 128bits of OTP segment PR3	
		Bit 13	protects 128bits of OTP segment PR14	
		Bit 14	protects 128bits of OTP segment PR15	
		Bit 15	protects 128bits of OTP segment PR16	

## 5 Status Register

The Status Register provides information on the current or previous program or erase operations. Issue a Read Status Register command to read the contents of the Status Register, refer to Read Status Register Command section for more details. To output the contents, the Status Register is latched and updated on the falling edge of the Chip Enable or Output Enable signals and can be read until Chip Enable or Output Enable returns to V<sub>IH</sub>. The Status Register can only be read using single Asynchronous or Single Synchronous reads. Bus Read operations from any address within the bank always read the Status Register during program and erase operations if no Read Array command has been issued.

The various bits convey information about the status and any errors of the operation. Bits SR7, SR6, SR2 and SR0 give information on the status of the device and are set and reset by the device. Bits SR5, SR4, SR3 and SR1 give information on errors, they are set by the device but must be reset by issuing a Clear Status Register command or a hardware reset. If an error bit is set to '1' the Status Register should be reset before issuing another command.

The bits in the Status Register are summarized in *Table 9: Status Register bits*. Refer to *Table 9* in conjunction with the following text descriptions.

#### 5.1 Program/Erase Controller Status bit (SR7)

The Program/Erase Controller Status bit indicates whether the Program/Erase Controller is active or inactive in any bank.

When the Program/Erase Controller Status bit is Low (set to '0'), the Program/Erase Controller is active; when the bit is High (set to '1'), the Program/Erase Controller is inactive, and the device is ready to process a new command.

The Program/Erase Controller Status bit is Low immediately after a Program/Erase Suspend command is issued until the Program/Erase Controller pauses. After the Program/Erase Controller pauses the bit is High.

## 5.2 Erase Suspend Status bit (SR6)

The Erase Suspend Status bit indicates that an erase operation has been suspended in the addressed block. When the Erase Suspend Status bit is High (set to '1'), a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

The Erase Suspend Status bit should only be considered valid when the Program/Erase Controller Status bit is High (Program/Erase Controller inactive). SR6 is set within the Erase Suspend Latency time of the Program/Erase Suspend command being issued therefore the memory may still complete the operation rather than entering the Suspend mode.

When a Program/Erase Resume command is issued the Erase Suspend Status bit returns Low.

#### 5.3 Erase/Blank Check Status bit (SR5)

The Erase/Blank Check Status bit is used to identify if there was an error during a Block Erase operation. When the Erase/Blank Check Status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the block and still failed to verify that it has erased correctly.

The Erase/Blank Check Status bit should be read once the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

The Erase/Blank Check Status bit is also used to indicate whether an error occurred during the Blank Check operation: if the data at one or more locations in the block where the Blank Check command has been issued is different from FFFFh, SR5 is set to '1'.

Once set High, the Erase/Blank Check Status bit must be set Low by a Clear Status Register command or a hardware reset before a new erase command is issued, otherwise the new command will appear to fail.

#### 5.4 Program Status bit (SR4)

The Program Status bit is used to identify if there was an error during a program operation.

The Program Status bit should be read once the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

When the Program Status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the Word and still failed to verify that it has programmed correctly.

Attempting to program a '1' to an already programmed bit while  $V_{PP} = V_{PPH}$  will also set the Program Status bit High. If  $V_{PP}$  is different from  $V_{PPH}$ , SR4 remains Low (set to '0') and the attempt is not shown.

Once set High, the Program Status bit must be set Low by a Clear Status Register command or a hardware reset before a new program command is issued, otherwise the new command will appear to fail.

## 5.5 V<sub>PP</sub> Status bit (SR3)

The  $V_{PP}$  Status bit is used to identify an invalid voltage on the  $V_{PP}$  pin during program and erase operations. The  $V_{PP}$  pin is only sampled at the beginning of a program or erase operation. Program and erase operations are not guaranteed if  $V_{PP}$  becomes invalid during an operation

When the  $V_{PP}$  Status bit is Low (set to '0'), the voltage on the  $V_{PP}$  pin was sampled at a valid voltage.

When the  $V_{PP}$  Status bit is High (set to '1'), the  $V_{PP}$  pin has a voltage that is below the  $V_{PP}$  Lockout Voltage,  $V_{PPLK}$ , the memory is protected and program and erase operations cannot be performed.

Once set High, the  $V_{PP}$  Status bit must be set Low by a Clear Status Register command or a hardware reset before a new program or erase command is issued, otherwise the new command will appear to fail.

#### 5.6 Program Suspend Status bit (SR2)

The Program Suspend Status bit indicates that a program operation has been suspended in the addressed block. The Program Suspend Status bit should only be considered valid when the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

When the Program Suspend Status bit is High (set to '1'), a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

SR2 is set within the Program Suspend Latency time of the Program/Erase Suspend command being issued therefore the memory may still complete the operation rather than entering the Suspend mode.

When a Program/Erase Resume command is issued the Program Suspend Status bit returns Low.

#### 5.7 Block Protection Status bit (SR1)

The Block Protection Status bit is used to identify if a Program or Block Erase operation has tried to modify the contents of a locked or locked-down block.

When the Block Protection Status bit is High (set to '1'), a program or erase operation has been attempted on a locked or locked-down block

Once set High, the Block Protection Status bit must be set Low by a Clear Status Register command or a hardware reset before a new program or erase command is issued, otherwise the new command will appear to fail.

## 5.8 Bank Write/Multiple Word Program Status bit (SR0)

The Bank Write Status bit indicates whether the addressed bank is programming or erasing. In Buffer Enhanced Factory Program mode the Multiple Word Program bit shows if the device is ready to accept a new Word to be programmed to the memory array.

The Bank Write Status bit should only be considered valid when the Program/Erase Controller Status SR7 is Low (set to '0').

When both the Program/Erase Controller Status bit and the Bank Write Status bit are Low (set to '0'), the addressed bank is executing a program or erase operation. When the Program/Erase Controller Status bit is Low (set to '0') and the Bank Write Status bit is High (set to '1'), a program or erase operation is being executed in a bank other than the one being addressed.

In Buffer Enhanced Factory Program mode if Multiple Word Program Status bit is Low (set to '0'), the device is ready for the next Word, if the Multiple Word Program Status bit is High (set to '1') the device is not ready for the next Word.

For further details on how to use the Status Register, see the Flowcharts and Pseudocodes provided in *Appendix C*.

Table 9. Status Register bits

Bit	Name	Туре	Logic Level <sup>(1)</sup>		Definition		
SR7	P/E.C. Status	Status	'1'	Ready			
SK/	P/E.C. Status	Status	'0'	Busy			
SR6	Erase Suspend	Status	'1'	Erase Sus	pended		
Oito	Status	Otatus	'0'	Erase In p	rogress or Completed		
SR5	Erase/Blank Check	Error	'1'	Erase/Blank Check Error			
Orto	Status	Liioi	'0'	Erase/Blank Check Success			
SR4	Program Status	Error	'1'	Program Error			
OIX	1 Togram Status	LIIOI	'0'	Program S	Success		
SR3	V <sub>PP</sub> Status	Error	'1'	V <sub>PP</sub> Invalid	d, Abort		
Orto	Vpp Ciatas	Liioi	'0'	V <sub>PP</sub> OK			
SR2	Program Suspend	Status	'1'	Program Suspended			
OIXZ	Status	Otatus	'0'	Program In Progress or Completed			
SR1	Block Protection	Error	'1'	Program/Erase on protected Block, Abort			
OIXT	Status	LIIOI	'0'	No operation to protected blocks			
				SR7 = '1'	Not Allowed		
			'1'	SR7 = '0'	Program or erase operation in a bank other than the addressed bank		
	Bank Write Status	Status	'0'	SR7 = '1'	No Program or erase operation in the device		
SR0			O	SR7 = '0'	Program or erase operation in addressed bank		
SKU				SR7 = '1'	Not Allowed		
	Multiple Word Program Status (Buffer Enhanced	Status	'1'	SR7 = '0'	the device is NOT ready for the next Buffer loading or is going to exit the BEFP mode		
	Factory Program mode)			SR7 = '1'	the device has exited the BEFP mode		
			'0'	SR7 = '0'	the device is ready for the next Buffer loading		

<sup>1.</sup> Logic level '1' is High, '0' is Low.

# 6 Configuration Register

The Configuration Register is used to configure the type of bus access that the memory will perform. Refer to Read Modes section for details on read operations.

The Configuration Register is set through the Command Interface using the Set Configuration Register command. After a reset or power-up the device is configured for asynchronous read (CR15 = 1). The Configuration Register bits are described in *Table 11* They specify the selection of the burst length, burst type, burst X latency and the read operation. Refer to Figures 5 and 6 for examples of synchronous burst configurations.

# 6.1 Read Select bit (CR15)

The Read Select bit, CR15, is used to switch between Asynchronous and Synchronous Read operations.

When the Read Select bit is set to '1', read operations are asynchronous; when the Read Select bit is set to '0', read operations are synchronous.

Synchronous Burst Read is supported in both parameter and main blocks and can be performed across banks.

On reset or power-up the Read Select bit is set to '1' for asynchronous access.

# 6.2 X-Latency bits (CR13-CR11)

The X-Latency bits are used during Synchronous Read operations to set the number of clock cycles between the address being latched and the first data becoming available. Refer to *Figure 5: X-Latency and data output configuration example*.

For correct operation the X-Latency bits can only assume the values in *Table 11: Configuration Register.* 

*Table 10* shows how to set the X-Latency parameter, taking into account the speed class of the device and the Frequency used to read the Flash memory in Synchronous mode.

Table 10. X-Latency settings

fmax	t <sub>K</sub> min	X-Latency min
30 MHz	33 ns	3
40 MHz	25 ns	4
54 MHz	19 ns	5

### 6.3 Wait Polarity bit (CR10)

The Wait Polarity bit is used to set the polarity of the Wait signal used in Synchronous Burst Read mode. During Synchronous Burst Read mode the Wait signal indicates whether the data output are valid or a WAIT state must be inserted.

When the Wait Polarity bit is set to '0' the Wait signal is active Low. When the Wait Polarity bit is set to '1' the Wait signal is active High.

### 6.4 Data Output Configuration bit (CR9)

The Data Output Configuration bit is used to configure the output to remain valid for either one or two clock cycles during synchronous mode.

When the Data Output Configuration Bit is '0' the output data is valid for one clock cycle, when the Data Output Configuration Bit is '1' the output data is valid for two clock cycles.

The Data Output Configuration must be configured using the following condition:

t<sub>K</sub> > t<sub>KQV</sub> + t<sub>QVK</sub> CPU

#### where

- t<sub>K</sub> is the clock period
- t<sub>QVK CPU</sub> is the data setup time required by the system CPU
- t<sub>KQV</sub> is the clock to data valid time.

If this condition is not satisfied, the Data Output Configuration bit should be set to '1' (two clock cycles). Refer to *Figure 5: X-Latency and data output configuration example*.

# 6.5 Wait Configuration bit (CR8)

The Wait Configuration bit is used to control the timing of the Wait output pin, WAIT, in Synchronous Burst Read mode.

When WAIT is asserted, Data is Not Valid and when WAIT is de-asserted, Data is Valid.

When the Wait Configuration bit is Low (set to '0') the Wait output pin is asserted during the WAIT state. When the Wait Configuration bit is High (set to '1'), the Wait output pin is asserted one data cycle before the WAIT state.

# 6.6 Burst Type bit (CR7)

The Burst Type bit determines the sequence of addresses read during Synchronous Burst Reads.

The Burst Type bit is High (set to '1'), as the memory outputs from sequential addresses only.

See *Table 12: Burst type definition*, for the sequence of addresses output from a given starting address in sequential mode.

## 6.7 Valid Clock Edge bit (CR6)

The Valid Clock Edge bit, CR6, is used to configure the active edge of the Clock, K, during synchronous read operations. When the Valid Clock Edge bit is Low (set to '0') the falling edge of the Clock is the active edge. When the Valid Clock Edge bit is High (set to '1') the rising edge of the Clock is the active edge.

## 6.8 Wrap Burst bit (CR3)

The Wrap Burst bit, CR3, is used to select between wrap and no wrap. Synchronous burst reads can be confined inside the 4, 8 or 16 Word boundary (wrap) or overcome the boundary (no wrap).

When the Wrap Burst bit is Low (set to '0') the burst read wraps. When it is High (set to '1') the burst read does not wrap.

## 6.9 Burst length bits (CR2-CR0)

The Burst Length bits are used to set the number of Words to be output during a Synchronous Burst Read operation as result of a single address latch cycle.

They can be set for 4 Words, 8 Words, 16 Words or continuous burst, where all the Words are read sequentially. In continuous burst mode the burst sequence can cross bank boundaries.

In continuous burst mode, in 4, 8 or 16 Words no-wrap, depending on the starting address, the device asserts the WAIT signal to indicate that a delay is necessary before the data is output.

If the starting address is shifted by 1, 2 or 3 positions from the four-Word boundary, WAIT is asserted for 1, 2 or 3 clock cycles, respectively, when the burst sequence crosses the first 16-Word boundary, to indicate that the device needs an internal delay to read the successive Words in the array. WAIT will be asserted only once during a continuous burst access. See also *Table 12: Burst type definition*.

CR14, CR5 and CR4 are reserved for future use.

Table 11. Configuration Register

Bit	Description	Value	Description
CR15	Read Select	0	Synchronous Read
CK15	Neau Select	1	Asynchronous Read (Default at power-on)
CR14	Reserved		
		010	2 clock latency <sup>(1)</sup>
		011	3 clock latency
		100	4 clock latency
CR13-CR11	X-Latency	101	5 clock latency
		110	6 clock latency
		111	7 clock latency (default)
		Other co	onfigurations reserved
OD40	Mait Delevity	0	WAIT is active Low
CR10	Wait Polarity	1	WAIT is active High (default)
CDO	Data Output	0	Data held for one clock cycle
CR9	Configuration	1	Data held for two clock cycles (default) <sup>(1)</sup>
		0	WAIT is active during WAIT state
CR8	Wait Configuration	1	WAIT is active one data cycle before WAIT state <sup>(1)</sup> (default)
CR7	Durat Tuna	0	Reserved
CR7	Burst Type	1	Sequential (default)
CR6	Valid Clock Edge	0	Falling Clock edge
CRO	Valid Clock Edge	1	Rising Clock edge (default)
CR5-CR4	Reserved		
CR3	Wrop Buret	0	Wrap
CRS	Wrap Burst	1	No Wrap (default)
		001	4 Words
CR2-CR0	Burst Length	010	8 Words
CRZ-CRU	Duist Length	011	16 Words
		111	Continuous (default)

The combination X-Latency=2, Data held for two clock cycles and Wait active one data cycle before the WAIT state is not supported.

Table 12. Burst type definition

de	Start	71	Sequer	ntial	Continuous Burst
Mode	Add	4 Words	8 Words	16 Words	Continuous Burst
	0	0-1-2-3	0-1-2-3-4-5-6- 7	0-1-2-3-4-5-6-7-8-9-10- 11-12-13-14-15	0-1-2-3-4-5-6
	1	1-2-3-0	1-2-3-4-5-6-7- 0	1-2-3-4-5-6-7-8-9-10- 11-12-13-14-15-0	1-2-3-4-5-6-715-WAIT-16-17- 18
	2	2-3-0-1	2-3-4-5-6-7-0- 1	2-3-4-5-6-7-8-9-10-11- 12-13-14-15-0-1	2-3-4-5-6-715-WAIT-WAIT-16- 17-18
	3	3-0-1-2	3-4-5-6-7-0-1- 2	3-4-5-6-7-8-9-10-11-12- 13-14-15-0-1-2	3-4-5-6-715-WAIT-WAIT- WAIT-16-17-18
Wrap					
	7	7-4-5-6	7-0-1-2-3-4-5- 6	7-8-9-10-11-12-13-14- 15-0-1-2-3-4-5-6	7-8-9-10-11-12-13-14-15-WAIT- WAIT-WAIT-16-17
	12				12-13-14-15-16-17-18
	13				13-14-15-WAIT-16-17-18
	14				14-15-WAIT-WAIT-16-17-18
	15				15-WAIT-WAIT-16-17-18

Table 12. Burst type definition (continued)


	12.	- Baiot typ	e deminion (c						
Mode	Start		Sequei	ntial	Continuous Burst				
ĕ	Add	4 Words	8 Words	16 Words	Continuous Burst				
	0	0-1-2-3	0-1-2-3-4-5-6- 7	0-1-2-3-4-5-6-7-8-9-10- 11-12-13-14-15					
	1	1-2-3-4	1-2-3-4-5-6-7- 8	1-2-3-4-5-6-7-8-9-10- 11-12-13-14-15-WAIT- 16					
	2	2-3-4-5	2-3-4-5-6-7-8- 9	2-3-4-5-6-7-8-9-10-11- 12-13-14-15-WAIT- WAIT-16-17					
	3	3-4-5-6	3-4-5-6-7-8-9- 10	3-4-5-6-7-8-9-10-11-12- 13-14-15-WAIT-WAIT- WAIT-16-17-18					
					_				
No-wrap	7	7-8-9-10	7-8-9-10-11- 12-13-14	7-8-9-10-11-12-13-14- 15-WAIT-WAIT- 16-17-18-19-20-21-22	Same as for Wrap (Wrap /No Wrap has no effect				
å					on Continuous Burst)				
	12	12-13-14- 15	12-13-14-15- 16-17-18-19	12-13-14-15-16-17-18- 19-20-21-22-23-24-25- 26-27					
	13	13-14-15- WAIT-16	13-14-15- WAIT-16-17- 18-19-20	13-14-15-WAIT-16-17- 18-19-20-21-22-23-24- 25-26-27-28					
	14	14-15- WAIT- WAIT-16- 17	14-15-WAIT- WAIT-16-17- 18-19-20-21	14-15-WAIT-WAIT-16- 17-18-19-20-21-22-23- 24-25-26-27-28-29					
	15	15-WAIT- WAIT- WAIT-16- 17-18	15-WAIT- WAIT-WAIT- 16-17-18-19- 20-21-22	15-WAIT-WAIT- 16-17-18-19-20-21-22- 23-24-25-26-27-28-29- 30					

- X-latency 1st cycle 2nd cycle 3rd cycle 4th cycle Κ Ē ī A22-A0<sup>(1)</sup> VALID ADDRESS tK tQVK\_CPUtKQV-DQ15-DQ0 VALID DATA VALID DATA Ai11072

Figure 5. X-Latency and data output configuration example

1. The settings shown are X-latency = 4, Data Output held for one clock cycle.

Wait configuration example

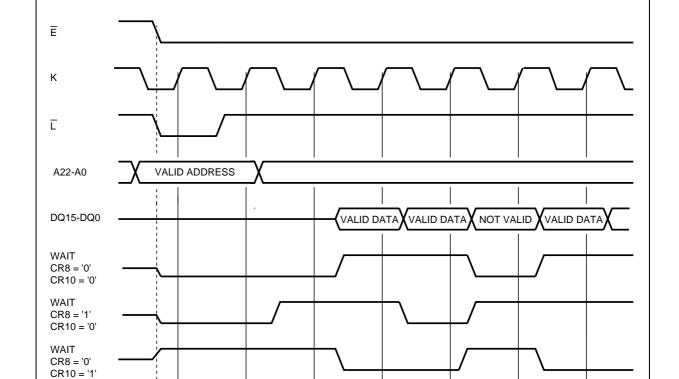

AI06972

WAIT CR8 = '1' CR10 = '1'

Figure 6.

#### 7 Read modes

Read operations can be performed in two different ways depending on the settings in the Configuration Register. If the clock signal is 'don't care' for the data output, the read operation is asynchronous; if the data output is synchronized with clock, the read operation is synchronous.

The read mode and format of the data output are determined by the Configuration Register. (See Configuration Register section for details). All banks support both asynchronous and synchronous read operations.

## 7.1 Asynchronous Read mode

In Asynchronous Read operations the clock signal is 'don't care'. The device outputs the data corresponding to the address latched, that is the memory array, Status Register, Common Flash Interface or Electronic Signature depending on the command issued. CR15 in the Configuration Register must be set to '1' for asynchronous operations.

Asynchronous Read operations can be performed in two different ways, Asynchronous Random Access Read and Asynchronous Page Read. Only Asynchronous Page Read takes full advantage of the internal page storage so different timings are applied.

In Asynchronous Read mode a Page of data is internally read and stored in a Page Buffer. The Page has a size of 4 Words and is addressed by address inputs A0 and A1.

The first read operation within the Page has a longer access time ( $t_{AVQV}$ , Random access time), subsequent reads within the same Page have much shorter access times ( $t_{AVQV1}$ , Page access time). If the Page changes then the normal, longer timings apply again.

The device features an Automatic Standby mode. During Asynchronous Read operations, after a bus inactivity of 150ns, the device automatically switches to the Automatic Standby mode. In this condition the power consumption is reduced to the standby value and the outputs are still driven.

In Asynchronous Read mode, the WAIT signal is always deasserted.

See Table 23: Asynchronous Read AC characteristics, Figure 9: Asynchronous random access Read AC waveforms and Figure 10: Asynchronous Page Read AC waveforms for details.

## 7.2 Synchronous Burst Read mode

In Synchronous Burst Read mode the data is output in bursts synchronized with the clock. It is possible to perform burst reads across bank boundaries.

Synchronous Burst Read mode can only be used to read the memory array. For other read operations, such as Read Status Register, Read CFI and Read Electronic Signature, Single Synchronous Read or Asynchronous Random Access Read must be used.

In Synchronous Burst Read mode the flow of the data output depends on parameters that are configured in the Configuration Register.

A burst sequence starts at the first clock edge (rising or falling depending on Valid Clock Edge bit CR6 in the Configuration Register) after the falling edge of Latch Enable or Chip Enable, whichever occurs last. Addresses are internally incremented and data is output on each data cycle after a delay which depends on the X latency bits CR13-CR11 of the Configuration Register.

The number of Words to be output during a Synchronous Burst Read operation can be configured as 4 Words, 8 Words, 16 Words or Continuous (Burst Length bits CR2-CR0). The data can be configured to remain valid for one or two clock cycles (Data Output Configuration bit CR9).

The order of the data output can be modified through the Wrap Burst bit in the Configuration Register. The burst sequence is sequential and can be confined inside the 4, 8 or 16 Word boundary (Wrap) or overcome the boundary (No Wrap).

The WAIT signal may be asserted to indicate to the system that an output delay will occur. This delay will depend on the starting address of the burst sequence and on the burst configuration.

WAIT is asserted during the X latency, the WAIT state and at the end of a 4, 8 and 16 Word burst. It is only de-asserted when output data are valid or when  $\overline{G}$  is at  $V_{IH}$ . In Continuous Burst Read mode a WAIT state will occur when crossing the first 16 Word boundary. If the starting address is aligned to the Burst Length (4, 8 or 16 Words) the wrapped configuration has no impact on the output sequence.

The WAIT signal can be configured to be active Low or active High by setting CR10 in the Configuration Register.

See Table 24: Synchronous Read AC characteristics, and Figure 11: Synchronous Burst Read AC waveforms, for details.

#### 7.2.1 Synchronous Burst Read Suspend

A Synchronous Burst Read operation can be suspended, freeing the data bus for other higher priority devices. It can be suspended during the initial access latency time (before data is output) or after the device has output data. When the Synchronous Burst Read operation is suspended, internal array sensing continues and any previously latched internal data is retained. A burst sequence can be suspended and resumed as often as required as long as the operating conditions of the device are met.

A Synchronous Burst Read operation is suspended when Chip Enable,  $\overline{E}$ , is Low and the current address has been latched (on a Latch Enable rising edge or on a valid clock edge). The Clock signal is then halted at  $V_{II}$  or at  $V_{II}$ , and Output Enable,  $\overline{G}$ , goes High.

When Output Enable,  $\overline{G}$ , becomes Low again and the Clock signal restarts, the Synchronous Burst Read operation is resumed exactly where it stopped.

WAIT being gated by  $\overline{E}$ , it will remain active and will not revert to high impedance when  $\overline{G}$  goes High. So if two or more devices are connected to the system's READY signal, to prevent bus contention the WAIT signal of the M58LR128HT/B should not be directly connected to the system's READY signal.

WAIT will revert to high-impedance when Chip Enable,  $\overline{E}$ , goes High.

See Table 24: Synchronous Read AC characteristics, and Figure 13: Synchronous Burst Read Suspend AC waveforms, for details.

### 7.3 Single Synchronous Read mode

Single Synchronous Read operations are similar to Synchronous Burst Read operations except that the memory outputs the same data to the end of the operation.

Synchronous Single Reads are used to read the Electronic Signature, Status Register, CFI, Block Protection Status, Configuration Register Status or Protection Register. When the addressed bank is in Read CFI, Read Status Register or Read Electronic Signature mode, the WAIT signal is asserted during the X-latency, the WAIT state and at the end of a 4, 8 and 16 Word burst. It is only de-asserted when output data are valid.

See Table 24: Synchronous Read AC characteristics, and Figure 11: Synchronous Burst Read AC waveforms, for details.

# 8 Dual operations and Multiple Bank architecture

The Multiple Bank Architecture of the M58LR128HT/B gives greater flexibility for software developers to split the code and data spaces within the memory array. The Dual Operations feature simplifies the software management of the device by allowing code to be executed from one bank while another bank is being programmed or erased.

The Dual Operations feature means that while programming or erasing in one bank, read operations are possible in another bank with zero latency (only one bank at a time is allowed to be in program or erase mode).

If a read operation is required in a bank, which is programming or erasing, the program or erase operation can be suspended.

Also if the suspended operation was erase then a program command can be issued to another block, so the device can have one block in Erase Suspend mode, one programming and other banks in read mode.

Bus Read operations are allowed in another bank between setup and confirm cycles of program or erase operations.

By using a combination of these features, read operations are possible at any moment in the M58LR128HT/B device.

Dual operations between the Parameter Bank and either of the CFI, the OTP or the Electronic Signature memory space are not allowed. *Table 15* shows which dual operations are allowed or not between the CFI, the OTP, the Electronic Signature locations and the memory array.

Tables 13 and 14 show the dual operations possible in other banks and in the same bank.

Table 13. Dual operations allowed in other banks

		Commands allowed in another bank									
Status of bank	Read Array	Read Status Register	Read CFI Query	Read Electronic Signature	Program, Buffer Program	Block Erase	Program /Erase Suspend	Program /Erase Resume			
Idle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes			
Programming	Yes	Yes	Yes	Yes	_	_	Yes	_			
Erasing	Yes	Yes	Yes	Yes	_	_	Yes	_			
Program Suspended	Yes	Yes	Yes	Yes	-	-	-	Yes			
Erase Suspended	Yes	Yes	Yes	Yes	Yes	_	_	Yes			

Table 14. Dual operations allowed in same bank

	Commands allowed in same bank									
Status of bank	Read Array	Read Status Register	Read CFI Query	Read Electronic Signature	Program, Buffer Program	Block Erase	Program /Erase Suspend	Program /Erase Resume		
Idle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Programming	_(1)	Yes	Yes	Yes	_	_	Yes	_		
Erasing	_(1)	Yes	Yes	Yes	_	_	Yes	_		
Program Suspended	Yes <sup>(2)</sup>	Yes	Yes	Yes	_	-	_	Yes		
Erase Suspended	Yes <sup>(2)</sup>	Yes	Yes	Yes	Yes <sup>(1)</sup>	-	_	Yes		

The Read Array command is accepted but the data output is not guaranteed until the Program or Erase has completed.

Table 15. Dual operation limitations

			Command	s allowed		
Current Status		Pood CEL/OTD/	Read	Read Main Blocks		
Current	Status	Read CFI / OTP / Electronic Signature	Parameter Blocks	Located in Parameter Bank	Not Located in Parameter Bank	
•	Programming / Erasing Parameter Blocks		No	No	Yes	
Programming/	Located in Parameter Bank	Yes	No	No	Yes	
Erasing Main Blocks	Not Located in Parameter Bank	Yes	Yes	Yes	In Different Bank Only	
Programming OTP		No	No	No	No	

<sup>2.</sup> Not allowed in the Block that is being erased or in the Word that is being programmed.

# 9 Block locking

The M58LR128HT/B features an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency. This locking scheme has three levels of protection.

- Lock/Unlock this first level allows software only control of block locking.
- Lock-Down this second level requires hardware interaction before locking can be changed.
- V<sub>PP</sub> ≤V<sub>PPLK</sub> the third level offers a complete hardware protection against program and erase on all blocks.

The protection status of each block can be set to Locked, Unlocked, and Locked-Down. *Table 16*, defines all of the possible protection states (WP, DQ1, DQ0), and *Appendix C*, *Figure 25*, shows a flowchart for the locking operations.

## 9.1 Reading a block's lock status

The lock status of every block can be read in the Read Electronic Signature mode of the device. To enter this mode issue the Read Electronic Signature command. Subsequent reads at the address specified in *Table 7*, will output the protection status of that block.

The lock status is represented by DQ0 and DQ1. DQ0 indicates the Block Lock/Unlock status and is set by the Lock command and cleared by the Unlock command. DQ0 is automatically set when entering Lock-Down. DQ1 indicates the Lock-Down status and is set by the Lock-Down command. DQ1 cannot be cleared by software, only by a hardware reset or power-down.

The following sections explain the operation of the locking system.

#### 9.2 Locked state

The default status of all blocks on power-up or after a hardware reset is Locked (states (0,0,1) or (1,0,1)). Locked blocks are fully protected from program or erase operations. Any program or erase operations attempted on a locked block will return an error in the Status Register. The Status of a Locked block can be changed to Unlocked or Locked-Down using the appropriate software commands. An Unlocked block can be Locked by issuing the Lock command.

#### 9.3 Unlocked state

Unlocked blocks (states (0,0,0), (1,0,0) (1,1,0)), can be programmed or erased. All unlocked blocks return to the Locked state after a hardware reset or when the device is powered-down. The status of an unlocked block can be changed to Locked or Locked-Down using the appropriate software commands. A locked block can be unlocked by issuing the Unlock command.

#### 9.4 Lock-Down state

Blocks that are Locked-Down (state (0,1,x))are protected from program and erase operations (as for Locked blocks) but their protection status cannot be changed using software commands alone. A Locked or Unlocked block can be Locked-Down by issuing the Lock-Down command. Locked-Down blocks revert to the Locked state when the device is reset or powered-down.

The Lock-Down function is dependent on the Write Protect, WP, input pin.

When  $\overline{WP}=0$  (V<sub>IL</sub>), the blocks in the Lock-Down state (0,1,x) are protected from program, erase and protection status changes.

When WP=1 ( $V_{IH}$ ) the Lock-Down function is disabled (1,1,x) and Locked-Down blocks can be individually unlocked to the (1,1,0) state by issuing the software command, where they can be erased and programmed.

When the Lock-Down function is disabled ( $\overline{WP}$ =1) blocks can be locked (1,1,1) and unlocked (1,1,0) as desired. When  $\overline{WP}$ =0 blocks that were previously Locked-Down return to the Lock-Down state (0,1,x) regardless of any changes that were made while  $\overline{WP}$ =1.

Device reset or power-down resets all blocks, including those in Lock-Down, to the Locked state.

## 9.5 Locking operations during Erase Suspend

Changes to block lock status can be performed during an erase suspend by using the standard locking command sequences to unlock, lock or lock-down a block. This is useful in the case when another block needs to be updated while an erase operation is in progress.

To change block locking during an erase operation, first write the Erase Suspend command, then check the Status Register until it indicates that the erase operation has been suspended. Next write the desired Lock command sequence to a block and the lock status will be changed. After completing any desired lock, read, or program operations, resume the erase operation with the Erase Resume command.

If a block is locked or locked-down during an erase suspend of the same block, the locking status bits will be changed immediately, but when the erase is resumed, the erase operation will complete. Locking operations cannot be performed during a program suspend.

Table 16. Lock status

	ection Status <sup>(1)</sup> (Q1, DQ0)	Next Protection Status <sup>(1)</sup> (WP, DQ1, DQ0)					
Current Program/Erase State Allowed		After Block Lock Command	After Block Unlock Command	After Block Lock-Down Command	After WP transition		
1,0,0	yes	1,0,1	1,0,0	1,1,1	0,0,0		
1,0,1 <sup>(2)</sup>	no	1,0,1	1,0,0	1,1,1	0,0,1		
1,1,0	yes	1,1,1	1,1,0	1,1,1	0,1,1		
1,1,1	no	1,1,1	1,1,0	1,1,1	0,1,1		
0,0,0	yes	0,0,1	0,0,0	0,1,1	1,0,0		
0,0,1 <sup>(2)</sup>	no	0,0,1	0,0,0	0,1,1	1,0,1		
0,1,1	no	0,1,1	0,1,1	0,1,1	1,1,1 or 1,1,0 <sup>(3)</sup>		

<sup>1.</sup> The lock status is defined by the write protect pin and by DQ1 ('1' for a locked-down block) and DQ0 ('1' for a locked block) as read in the Read Electronic Signature command with DQ1 =  $V_{IH}$  and DQ0 =  $V_{IL}$ .

<sup>2.</sup> All blocks are locked at power-up, so the default configuration is 001 or 101 according to  $\overline{\text{WP}}$  status.

<sup>3.</sup> A  $\overline{\text{WP}}$  transition to  $V_{\text{IH}}$  on a locked block will restore the previous DQ0 value, giving a 111 or 110.

# 10 Program and erase times and endurance cycles

The Program and Erase times and the number of Program/ Erase cycles per block are shown in *Table 17*. Exact erase times may change depending on the memory array condition. The best case is when all the bits in the block are at '0' (pre-programmed). The worst case is when all the bits in the block are at '1' (not preprogrammed). Usually, the system overhead is negligible with respect to the erase time. In the M58LR128HT/B the maximum number of Program/Erase cycles depends on the V<sub>PP</sub> voltage supply used.

Table 17. Program/Erase times and endurance cycles<sup>(1)</sup> (2)

	Parameter	Condition		Min	Тур	Typical after 100kW/E Cycles	Max	Unit
		Parameter Block	(16 KWord)		0.4	1	2.5	S
	Erase	Main Block (64	Preprogrammed		1.2	3	4	S
		KWord)	Not Preprogrammed		1.5		4	S
	Program <sup>(3)</sup>	Single Word	Word Program		12		180	μs
V <sub>DD</sub>			Buffer Program		12		180	μs
II	Program	Buffer (32 Words) (Buffer Program)			384			μs
V <sub>PP</sub>		Main Block (64 K	Word)		768			ms
	Sugnand Latanay	Program			5		10	μs
	Suspend Latency	Erase			5		20	μs
	Program/Erase Cycles	Main Blocks	Main Blocks					cycles
	(per Block)	Parameter Blocks	Parameter Blocks					cycles

Table 17. Program/Erase times and endurance cycles<sup>(1)</sup> (continued)

	Parameter	Cor	Min	Тур	Typical after 100kW/E Cycles	Max	Unit	
	Erase	Parameter Block (		0.4		2.5	S	
	Liase	Main Block (64 KV	Vord)		1		4	s
			Word Program		10		170	μs
			Buffer Enhanced Factory Program <sup>(4)</sup>		2.5			μs
		Buffer (32 Words)	Buffer Program		80			μs
I	Program <sup>(3)</sup>		Buffer Enhanced Factory Program		80			μs
Vррн		Main Block (64 KWords)	Buffer Program		160			ms
V <sub>PP</sub> =			Buffer Enhanced Factory Program		160			ms
			Buffer Program		1.28			S
		Bank (8 Mbits)	Buffer Enhanced Factory Program		1.28			S
	Program/Erase Cycles	Main Blocks					1000	cycles
	(per Block)	Parameter Blocks					2500	cycles
	Blank Check	Main Blocks			16			ms
	DIATIK CHECK	Parameter Blocks			4			ms

<sup>1.</sup>  $T_A = -25$  to 85 °C;  $V_{DD} = 1.7$  V to 2 V;  $V_{DDQ} = 1.7$  V to 2 V.

<sup>2.</sup> Values are liable to change with the external system-level overhead (command sequence and Status Register polling execution).

<sup>3.</sup> Excludes the time needed to execute the command sequence.

<sup>4.</sup> This is an average value on the entire device.

# 11 Maximum rating

Stressing the device above the rating listed in the Absolute Maximum Ratings table may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the STMicroelectronics SURE Program and other relevant quality documents.

Table 18. Absolute maximum ratings

Sumbal	Parameter	Val	lue	Unit
Symbol	Farameter	Min	Max	Onit
T <sub>A</sub>	Ambient Operating Temperature	-25	85	°C
T <sub>BIAS</sub>	Temperature Under Bias	-25	85	°C
T <sub>STG</sub>	Storage Temperature	-65	125	°C
V <sub>IO</sub>	Input or Output Voltage	-0.5	3.8	V
$V_{DD}$	Supply Voltage	-0.2	2.5	V
$V_{DDQ}$	Input/Output Supply Voltage	-0.2	2.5	V
V <sub>PP</sub>	Program Voltage	-0.2	10	V
I <sub>O</sub>	Output Short Circuit Current		100	mA
t <sub>VPPH</sub>	Time for V <sub>PP</sub> at V <sub>PPH</sub>		100	hours


# 12 DC and AC parameters

This section summarizes the operating measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement Conditions summarized in *Table 19: Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the operating conditions when relying on the quoted parameters.

Table 19. Operating and AC measurement conditions

	M58LR	Units		
Parameter	:			
	Min	Max		
V <sub>DD</sub> Supply Voltage	1.7	2.0	V	
V <sub>DDQ</sub> Supply Voltage	1.7	1.7 2.0		
V <sub>PP</sub> Supply Voltage (Factory environment)	(PP Supply Voltage (Factory environment) 8.5 9.5			
V <sub>PP</sub> Supply Voltage (Application environment)	upply Voltage (Application environment) -0.4 V <sub>DDQ</sub> +0.4			
Ambient Operating Temperature	-25	85	°C	
Load Capacitance (C <sub>L</sub> )	;	30	pF	
Input Rise and Fall Times		5	ns	
Input Pulse Voltages	0 to	0 to V <sub>DDQ</sub>		
Input and Output Timing Ref. Voltages	V <sub>D</sub>	V <sub>DDQ</sub> /2		

Figure 7. AC measurement I/O waveform

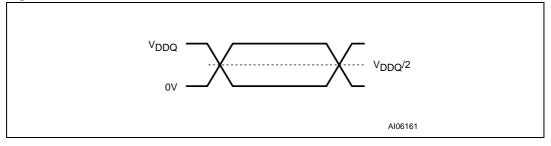

V<sub>DDQ</sub>
V<sub>DDQ</sub>
V<sub>DDQ</sub>
V<sub>DDQ</sub>
16.7kΩ
16.7kΩ
C<sub>L</sub> includes JIG capacitance

Figure 8. AC measurement load circuit

Table 20. Capacitance<sup>(1)</sup>

Symbol	Parameter	Test condition	Min	Max	Unit
C <sub>IN</sub>	Input Capacitance	V <sub>IN</sub> = 0 V	6	8	pF
C <sub>OUT</sub>	Output Capacitance	V <sub>OUT</sub> = 0 V	8	12	pF

<sup>1.</sup> Sampled only, not 100% tested.

Table 21. DC characteristics - currents

Symbol	Parameter	Test condition	Тур	Max	Unit
ILI	Input Leakage Current	0V ≤V <sub>IN</sub> ≤V <sub>DDQ</sub>		±1	μΑ
I <sub>LO</sub>	Output Leakage Current	0V ≤V <sub>OUT</sub> ≤V <sub>DDQ</sub>		±1	μΑ
	Supply Current Asynchronous Read (f = 5 MHz)	$\overline{E} = V_{IL}, \overline{G} = V_{IH}$	13	15	mA
		4 Word	18	20	mA
I <sub>DD1</sub>	Supply Current	8 Word	20	22	mA
	Synchronous Read (f = 54 MHz)	16 Word	25	27	mA
I <sub>DD2</sub>		Continuous	28	30	mA
I <sub>DD2</sub>	Supply Current (Reset)	$\overline{RP} = V_{SS} \pm 0.2 \text{ V}$	22	50	μΑ
I <sub>DD3</sub>	Supply Current (Standby)	$\overline{E} = V_{DD} \pm 0.2 V$ $K = V_{SS}$	22	50	μΑ
I <sub>DD4</sub>	Supply Current (Automatic Standby)	$\overline{E} = V_{IL}, \overline{G} = V_{IH}$	22	50	μΑ
I <sub>DD5</sub> <sup>(1)</sup>	Supply Current (Program)	$V_{PP} = V_{PPH}$	8	20	mA
	Supply Current (Flogram)	$V_{PP} = V_{DD}$	10	25	mA
	Supply Current (Erase)	$V_{PP} = V_{PPH}$	8	20	mA
	Supply Current (Liase)	$V_{PP} = V_{DD}$	10	25	mA
	Supply Current	Program/Erase in one Bank, Asynchronous Read in another Bank	23	40	mA
I <sub>DD6</sub> <sup>(1),(2)</sup>	Supply Current (Dual Operations)	Program/Erase in one Bank, Synchronous Read (Continuous f = 54 MHz) in another Bank	38	55	mA
I <sub>DD7</sub> <sup>(1)</sup>	Supply Current Program/ Erase Suspended (Standby)	$\overline{E} = V_{DD} \pm 0.2 V$ $K=V_{SS}$	22	50	μΑ
	V Supply Current (Program)	$V_{PP} = V_{PPH}$	2	5	mA
	V <sub>PP</sub> Supply Current (Program)	$V_{PP} = V_{DD}$	0.2	5	μΑ
	V <sub>PP</sub> Supply Current (Erase)	$V_{PP} = V_{PPH}$	2	5	mA
	VPP Supply Surrent (Elase)	$V_{PP} = V_{DD}$	0.2	5	μΑ
I <sub>PP2</sub>	V <sub>PP</sub> Supply Current (Read)	V <sub>PP</sub> ≤V <sub>DD</sub>	0.2	5	μΑ
I <sub>PP3</sub> <sup>(1)</sup>	V <sub>PP</sub> Supply Current (Standby)	V <sub>PP</sub> ≤V <sub>DD</sub>	0.2	5	μΑ

<sup>1.</sup> Sampled only, not 100% tested.

<sup>2.</sup>  $V_{\mbox{\scriptsize DD}}$  Dual Operation current is the sum of read and program or erase currents.

Table 22. DC characteristics - voltages

Symbol	Parameter	Test Condition	Min	Тур	Max	Unit
V <sub>IL</sub>	Input Low Voltage		0		0.4	V
$V_{IH}$	Input High Voltage		V <sub>DDQ</sub> -0.4		V <sub>DDQ</sub> + 0.4	V
V <sub>OL</sub>	Output Low Voltage	$I_{OL} = 100 \mu A$			0.1	V
V <sub>OH</sub>	Output High Voltage	$I_{OH} = -100 \ \mu A$	V <sub>DDQ</sub> -0.1			V
V <sub>PP1</sub>	V <sub>PP</sub> Program Voltage-Logic	Program, Erase	1.3	1.8	3.3	V
V <sub>PPH</sub>	V <sub>PP</sub> Program Voltage Factory	Program, Erase	8.5	9.0	9.5	V
V <sub>PPLK</sub>	Program or Erase Lockout				0.4	V
V <sub>LKO</sub>	V <sub>DD</sub> Lock Voltage				1	V
V <sub>RPH</sub>	RP pin Extended High Voltage				3.3	V

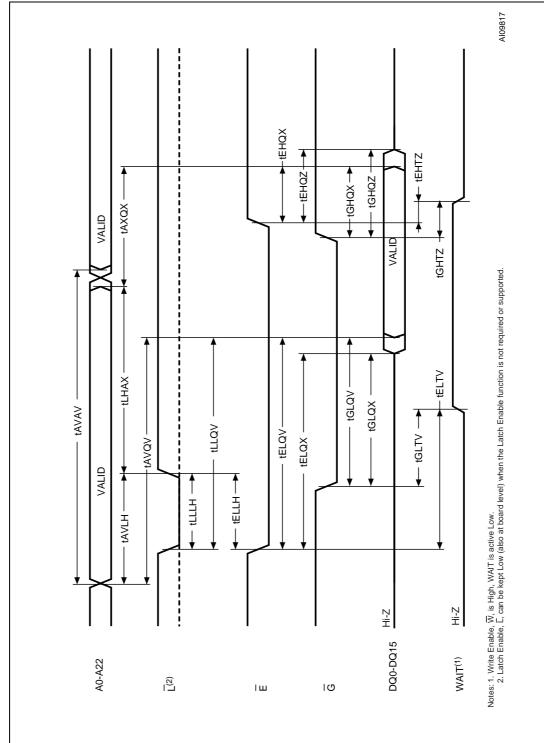


Figure 9. Asynchronous random access Read AC waveforms

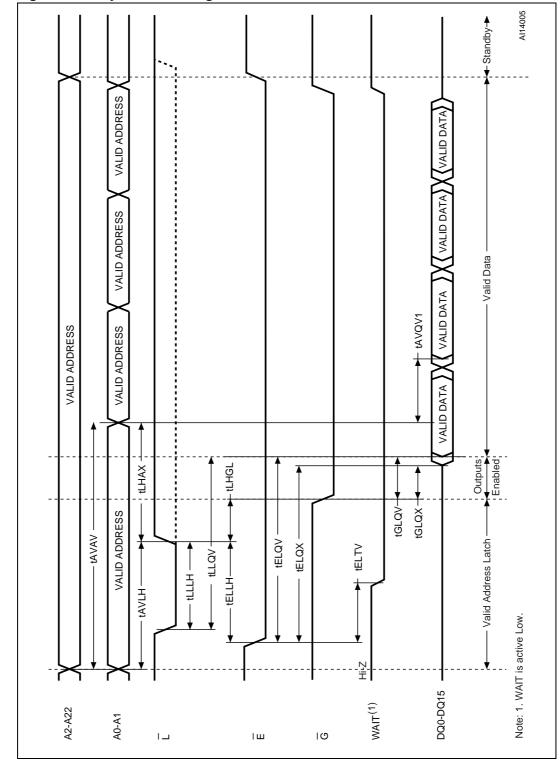


Figure 10. Asynchronous Page Read AC waveforms

Table 23. Asynchronous Read AC characteristics

		A1/	B		M58LR128HT/B	11!	
5	ymbol	Alt Parameter			85	Unit	
	t <sub>AVAV</sub>	t <sub>RC</sub>	Address Valid to Next Address Valid	Min	85	ns	
	t <sub>AVQV</sub>	t <sub>ACC</sub>	Address Valid to Output Valid (Random)	Max	85	ns	
	t <sub>AVQV1</sub>	t <sub>PAGE</sub>	Address Valid to Output Valid (Page)	Max	25	ns	
	t <sub>AXQX</sub> <sup>(1)</sup>	t <sub>OH</sub>	Address Transition to Output Transition	Min	0	ns	
	t <sub>ELTV</sub>		Chip Enable Low to Wait Valid	Max	14	ns	
	t <sub>ELQV</sub> <sup>(2)</sup>	t <sub>CE</sub>	Chip Enable Low to Output Valid	Max	85	ns	
gg	t <sub>ELQX</sub> <sup>(1)</sup>	t <sub>LZ</sub>	Chip Enable Low to Output Transition	Min	0	ns	
Read Timings	t <sub>EHTZ</sub>		Chip Enable High to Wait Hi-Z	Max	14	ns	
ad T	t <sub>EHQX</sub> <sup>(1)</sup>		Chip Enable High to Output Transition	Min	2	ns	
Re	t <sub>EHQZ</sub> <sup>(1)</sup>	t <sub>HZ</sub>	Chip Enable High to Output Hi-Z	Max	14	ns	
	t <sub>GLQV</sub> <sup>(2)</sup>		Output Enable Low to Output Valid	Max	20	ns	
	t <sub>GLQX</sub> <sup>(1)</sup>	t <sub>OLZ</sub>	Output Enable Low to Output Transition	Min	0	ns	
	t <sub>GLTV</sub>		Output Enable Low to Wait Valid	Max	14	ns	
	t <sub>GHQX</sub> <sup>(1)</sup>	t <sub>OH</sub>	Output Enable High to Output Transition	Min	2	ns	
	t <sub>GHQZ</sub> <sup>(1)</sup>	t <sub>DF</sub>	Output Enable High to Output Hi-Z	Max	14	ns	
	t <sub>GHTZ</sub>		Output Enable High to Wait Hi-Z	Max	14	ns	
	t <sub>AVLH</sub>	t <sub>AVADVH</sub>	Address Valid to Latch Enable High	Min	7	ns	
ngs	t <sub>ELLH</sub>	t <sub>ELADVH</sub>	Chip Enable Low to Latch Enable High	Min	10	ns	
Latch Timings	t <sub>LHAX</sub>	t <sub>ADVHAX</sub>	Latch Enable High to Address Transition	Min	7	ns	
tch	t <sub>LLLH</sub>	t <sub>ADVLADVH</sub>	Latch Enable Pulse Width	Min	7	ns	
La	t <sub>LLQV</sub>	t <sub>ADVLQV</sub>	Latch Enable Low to Output Valid (Random)	Max	85	ns	

<sup>1.</sup> Sampled only, not 100% tested.

<sup>2.</sup>  $\overline{G}$  may be delayed by up to  $t_{ELQV}$  -  $t_{GLQV}$  after the falling edge of  $\overline{E}$  without increasing  $t_{ELQV}$ .

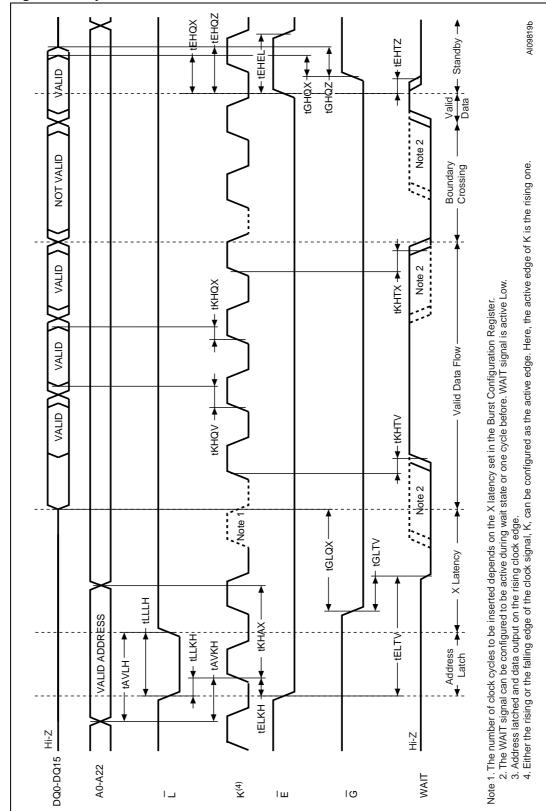


Figure 11. Synchronous Burst Read AC waveforms

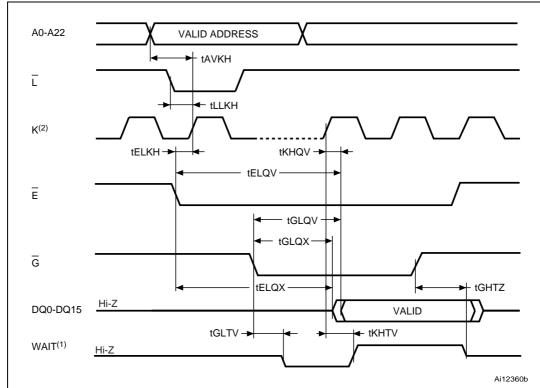


Figure 12. Single Synchronous Read AC waveforms

- 1. The WAIT signal is configured to be active during wait state. WAIT signal is active Low.
- 2. Address latched and data output on the rising clock edge. Either the rising or the falling edge of the clock signal, K, can be configured as the active edge. Here, the active edge is the rising one.

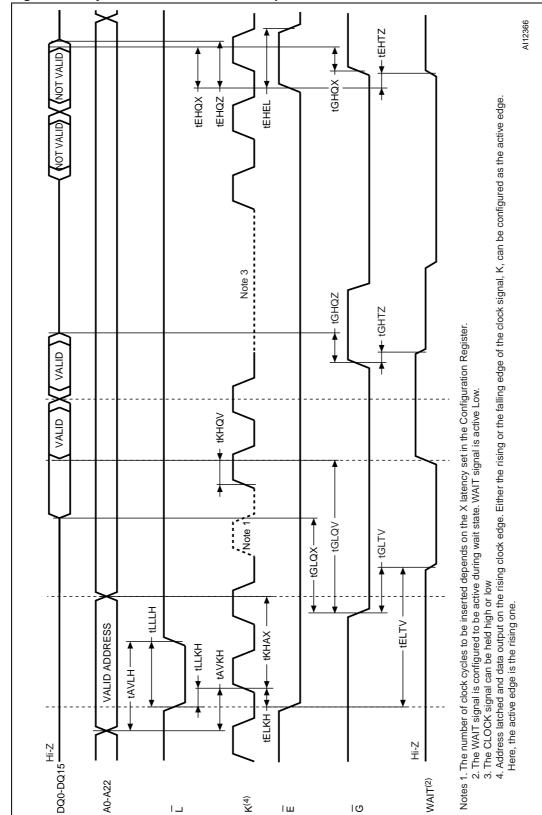


Figure 13. Synchronous Burst Read Suspend AC waveforms

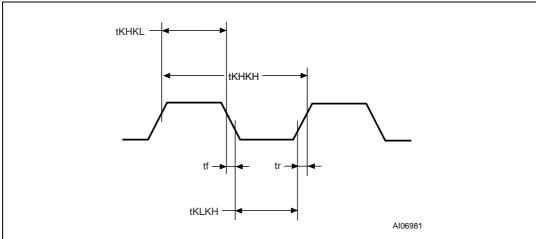


Figure 14. Clock input AC waveform

Table 24. Synchronous Read AC characteristics<sup>(1)</sup> (2)

	tumbal	Alt	Parameter		M58LR128HT/L	Unit	
	Symbol	Ait	Faranietei		85		
	t <sub>AVKH</sub>	t <sub>AVCLKH</sub>	Address Valid to Clock High	Min	7	ns	
	t <sub>ELKH</sub>	t <sub>ELCLKH</sub>	Chip Enable Low to Clock High	Min	7	ns	
gs	t <sub>ELTV</sub>		Chip Enable Low to Wait Valid	Max	14	ns	
Read Timings	t <sub>EHEL</sub>		Chip Enable Pulse Width (subsequent synchronous reads)	Min	14	ns	
Rea	t <sub>EHTZ</sub>		Chip Enable High to Wait Hi-Z	Max	14	ns	
	t <sub>KHAX</sub>	t <sub>CLKHAX</sub>	Clock High to Address Transition	Min	7	ns	
Synchronous	t <sub>KHQV</sub>	t <sub>CLKHQV</sub>	Clock High to Output Valid Clock High to WAIT Valid	Max	14	ns	
S	t <sub>KHQX</sub> t <sub>KHTX</sub>	t <sub>CLKHQX</sub>	Clock High to Output Transition Clock High to WAIT Transition	Min	3	ns	
	t <sub>LLKH</sub>	t <sub>ADVLCLKH</sub>	Latch Enable Low to Clock High	Min	7	ns	
suc	t <sub>KHKH</sub>	t <sub>CLK</sub>	Clock Period (f=54MHz)	Min	18.5	ns	
Specifications	t <sub>KHKL</sub>		Clock High to Clock Low Clock Low to Clock High	Min	4.5	ns	
Clock Sp	t <sub>f</sub> t <sub>r</sub>		Clock Fall or Rise Time	Max	3	ns	

<sup>1.</sup> Sampled only, not 100% tested.

<sup>2.</sup> For other timings please refer to Table 23: Asynchronous Read AC characteristics.

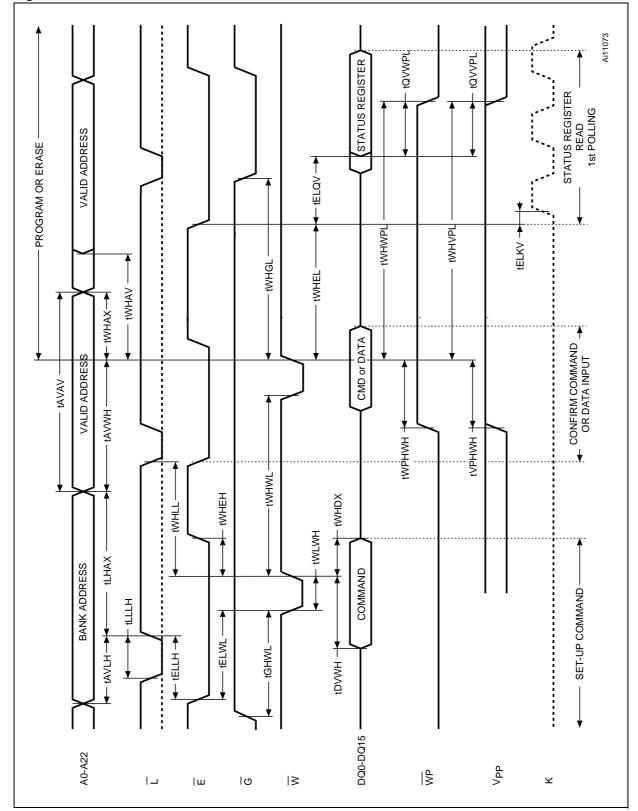


Figure 15. Write AC waveforms, Write Enable controlled

Table 25. Write AC characteristics, Write Enable controlled<sup>(1)</sup>

	Symbol		B	M58LR1	128HT/B	Unit
Symbol		Alt	It Parameter —		85	
	t <sub>AVAV</sub>	$t_{WC}$	Address Valid to Next Address Valid	Min	85	ns
	t <sub>AVLH</sub>		Address Valid to Latch Enable High	Min	7	ns
	t <sub>AVWH</sub> <sup>(2)</sup>		Address Valid to Write Enable High	Min	45	ns
	t <sub>DVWH</sub>	t <sub>DS</sub>	Data Valid to Write Enable High	Min	45	ns
	t <sub>ELLH</sub>		Chip Enable Low to Latch Enable High	Min	10	ns
	t <sub>ELWL</sub>	t <sub>CS</sub>	Chip Enable Low to Write Enable Low	Min	0	ns
sbu	t <sub>ELQV</sub>		Chip Enable Low to Output Valid	Min	85	ns
Timir	t <sub>ELKV</sub>		Chip Enable Low to Clock Valid	Min	7	ns
Write Enable Controlled Timings	t <sub>GHWL</sub>		Output Enable High to Write Enable Low	Min	17	ns
ntrol	t <sub>LHAX</sub>		Latch Enable High to Address Transition	Min	7	ns
o Co	t <sub>LLLH</sub>		Latch Enable Pulse Width	Min	7	ns
nable	t <sub>WHAV</sub> <sup>(2)</sup>		Write Enable High to Address Valid	Min	0	ns
E E	t <sub>WHAX</sub> <sup>(2)</sup>	t <sub>AH</sub>	Write Enable High to Address Transition	Min	0	ns
Wri	t <sub>WHDX</sub>	t <sub>DH</sub>	Write Enable High to Input Transition	Min	0	ns
	t <sub>WHEH</sub>	t <sub>CH</sub>	Write Enable High to Chip Enable High	Min	0	ns
	t <sub>WHEL</sub> (3)		Write Enable High to Chip Enable Low	Min	20	ns
	t <sub>WHGL</sub>		Write Enable High to Output Enable Low	Min	0	ns
	t <sub>WHLL</sub> (3)		Write Enable High to Latch Enable Low	Min	20	ns
	t <sub>WHWL</sub>	t <sub>WPH</sub>	Write Enable High to Write Enable Low	Min	20	ns
	t <sub>WLWH</sub>	t <sub>WP</sub>	Write Enable Low to Write Enable High	Min	45	ns
<b>,</b>	t <sub>QVVPL</sub>		Output (Status Register) Valid to V <sub>PP</sub> Low	Min	0	ns
sbuir	t <sub>QVWPL</sub>		Output (Status Register) Valid to Write Protect Low	Min	0	ns
Tir	t <sub>VPHWH</sub>	t <sub>VPS</sub>	V <sub>PP</sub> High to Write Enable High	Min	200	ns
ctior	t <sub>WHVPL</sub>		Write Enable High to V <sub>PP</sub> Low	Min	200	ns
Protection Timings	t <sub>WHWPL</sub>		Write Enable High to Write Protect Low	Min	200	ns
ш	t <sub>WPHWH</sub>		Write Protect High to Write Enable High	Min	200	ns

<sup>1.</sup> Sampled only, not 100% tested.

<sup>2.</sup> Meaningful only if  $\overline{L}$  is always kept low.

<sup>3.</sup> t<sub>WHEL</sub> and t<sub>WHLL</sub>have this value when reading in the targeted bank or when reading following a Set Configuration Register command. System designers should take this into account and may insert a software No-Op instruction to delay the first read in the same bank after issuing any command and to delay the first read to any address after issuing a Set Configuration Register command. If the first read after the command is a Read Array operation in a different bank and no changes to the Configuration Register have been issued, t<sub>WHEL</sub> and t<sub>WHLL</sub> is 20ns.

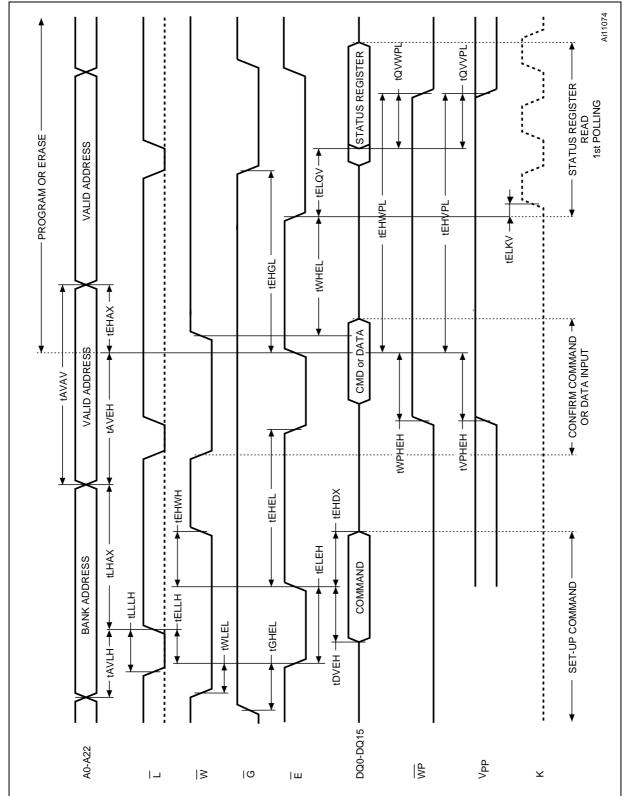


Figure 16. Write AC waveforms, Chip Enable controlled

Table 26. Write AC characteristics, Chip Enable controlled<sup>(1)</sup>

Symbol Alt			Dovernator	M58LF	R128HT/B	Unit
5	Symbol		Parameter -		85	
	t <sub>AVAV</sub>	t <sub>WC</sub>	Address Valid to Next Address Valid	Min	85	ns
	t <sub>AVEH</sub>		Address Valid to Chip Enable High	Min	45	ns
	t <sub>AVLH</sub>		Address Valid to Latch Enable High	Min	7	ns
	t <sub>DVEH</sub>	t <sub>DS</sub>	Data Valid to Chip Enable High	Min	45	ns
	t <sub>EHAX</sub>	t <sub>AH</sub>	Chip Enable High to Address Transition	Min	0	ns
sbi	t <sub>EHDX</sub>	t <sub>DH</sub>	Chip Enable High to Input Transition	Min	0	ns
imi'	t <sub>EHEL</sub>	t <sub>CPH</sub>	Chip Enable High to Chip Enable Low	Min	20	ns
ed J	t <sub>EHGL</sub>		Chip Enable High to Output Enable Low	Min	0	ns
ltroll	t <sub>EHWH</sub>	t <sub>CH</sub>	Chip Enable High to Write Enable High	Min	0	ns
Chip Enable Controlled Timings	t <sub>ELKV</sub>		Chip Enable Low to Clock Valid	Min	7	ns
able	t <sub>ELEH</sub>	t <sub>CP</sub>	Chip Enable Low to Chip Enable High	Min	45	ns
p Er	t <sub>ELLH</sub>		Chip Enable Low to Latch Enable High	Min	10	ns
Chi	t <sub>ELQV</sub>		Chip Enable Low to Output Valid	Min	85	ns
	t <sub>GHEL</sub>		Output Enable High to Chip Enable Low	Min	17	ns
	t <sub>LHAX</sub>		Latch Enable High to Address Transition	Min	7	ns
	t <sub>LLLH</sub>		Latch Enable Pulse Width	Min	7	ns
	t <sub>WHEL</sub> <sup>(2)</sup>		Write Enable High to Chip Enable Low	Min	20	ns
	t <sub>WLEL</sub>	t <sub>CS</sub>	Write Enable Low to Chip Enable Low	Min	0	ns
	t <sub>EHVPL</sub>		Chip Enable High to V <sub>PP</sub> Low	Min	200	ns
ngs	t <sub>EHWPL</sub>		Chip Enable High to Write Protect Low	Min	200	ns
Timi.	t <sub>QVVPL</sub>		Output (Status Register) Valid to V <sub>PP</sub> Low	Min	0	ns
Protection Timings	t <sub>QVWPL</sub>		Output (Status Register) Valid to Write Protect Low	Min	0	ns
Pro	t <sub>VPHEH</sub>	t <sub>VPS</sub>	V <sub>PP</sub> High to Chip Enable High	Min	200	ns
	t <sub>WPHEH</sub>		Write Protect High to Chip Enable High	Min	200	ns

<sup>1.</sup> Sampled only, not 100% tested.

<sup>2.</sup> t<sub>WHEL</sub> has this value when reading in the targeted bank or when reading following a Set Configuration Register command. System designers should take this into account and may insert a software No-Op instruction to delay the first read in the same bank after issuing any command and to delay the first read to any address after issuing a Set Configuration Register command. If the first read after the command is a Read Array operation in a different bank and no changes to the Configuration Register have been issued, t<sub>WHEL</sub> is 0ns.

AI06976

W, E, G, L

tPHWL
tPHEL
tPHGL
tPLGL
tPLGL
tPLLL

RP

VDD, VDDQ

Reset

Figure 17. Reset and Power-up AC waveforms

Table 27. Reset and Power-up AC characteristics

Power-Up

Symbol	Parameter	Test Condition		85	Unit
tour	Reset Low to	During Program	Min	25	μs
t <sub>PLWL</sub> t <sub>PLEL</sub>	Write Enable Low,	During Erase	Min	25	μs
t <sub>PLGL</sub> t <sub>PLLL</sub>	Chip Enable Low, Output Enable Low, Latch Enable Low	Other Conditions	Min	80	ns
t <sub>PHWL</sub> t <sub>PHEL</sub> t <sub>PHGL</sub> t <sub>PHLL</sub>	Reset High to Write Enable Low Chip Enable Low Output Enable Low Latch Enable Low		Min	30	ns
t <sub>PLPH</sub> <sup>(1),(2)</sup>	RP Pulse Width		Min	50	ns
t <sub>VDHPH</sub> (3)	Supply Voltages High to Reset High		Min	150	μs

<sup>1.</sup> The device Reset is possible but not guaranteed if  $t_{PLPH}$  < 50ns.

<sup>2.</sup> Sampled only, not 100% tested.

<sup>3.</sup> It is important to assert  $\overline{\text{RP}}$  in order to allow proper CPU initialization during Power-Up or Reset.

# 13 Package mechanical

In order to meet environmental requirements, ST offers these devices in ECOPACK® packages. These packages have a Lead-free second-level interconnect. The category of Second-Level Interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97.

The maximum ratings related to soldering conditions are also marked on the inner box label. ECOPACK is an ST trademark. ECOPACK specifications are available at: www.st.com.

Figure 18. VFBGA56 7.7 × 9mm - 8×7 active ball array, 0.75mm pitch, bottom view package outline


Drawing is not to scale.

Table 28. VFBGA56 7.7  $\times$  9mm - 10 $\times$ 4 ball array, 0.50mm pitch, package mechanical data

Complete	millimeters			inches		
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.000			0.0394
A1		0.200			0.0079	
A2	0.660			0.0260		
b	0.350	0.300	0.400	0.0138	0.0118	0.0157
D	7.700	7.600	7.800	0.3031	0.2992	0.3071
D1	5.250	-	_	0.2067	-	_
ddd			0.080			0.0031
е	0.750	-	_	0.0295	-	_
E	9.000	8.900	9.100	0.3543	0.3504	0.3583
E1	4.500	-	_	0.1772	-	_
FD	1.225	-	-	0.0482	-	-
FE	2.250	-	-	0.0886	-	-
SD	0.375	-	-	0.0148	-	-

### 14 Part numbering

Table 29. Ordering information scheme

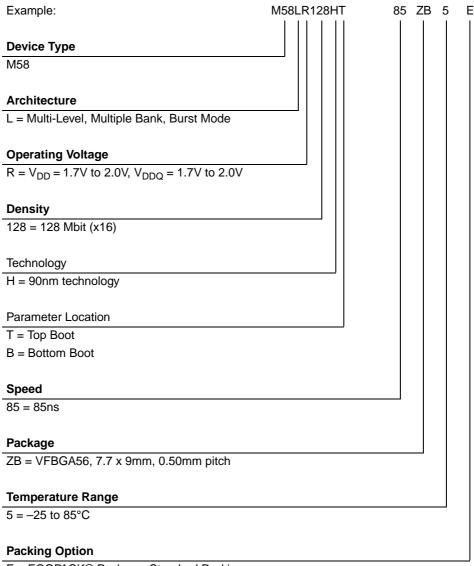

E = ECOPACK® Package, Standard Packing

F = ECOPACK® Package, Tape & Reel Packing

Devices are shipped from the factory with the memory content bits erased to '1'.

For a list of available options (Speed, Package, etc.) or for further information on any aspect of this device, please contact the ST Sales Office nearest to you.

## Appendix A Block address tables

Table 30. Top boot block addresses, M58LR128HT

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	0	16	7FC000-7FFFFF
	1	16	7F8000-7FBFFF
	2	16	7F4000-7F7FFF
훅 -	3	16	7F0000-7F3FFF
Bar	4	64	7E0000-7EFFFF
eter	5	64	7D0000-7DFFFF
Parameter Bank	6	64	7C0000-7CFFFF
Pa	7	64	7B0000-7BFFFF
	8	64	7A0000-7AFFFF
	9	64	790000-79FFFF
	10	64	780000-78FFFF
	11	64	770000-77FFFF
	12	64	760000-76FFFF
	13	64	750000-75FFFF
<del>7</del>	14	64	740000-74FFF
Bank 1	15	64	730000-73FFFF
	16	64	720000-72FFFF
	17	64	710000-71FFFF
	18	64	700000-70FFFF
	19	64	6F0000-6FFFFF
	20	64	6E0000-6EFFFF
	21	64	6D0000-6DFFFF
2	22	64	6C0000-6CFFFF
Bank 2	23	64	6B0000-6BFFFF
	24	64	6A0000-6AFFFF
	25	64	690000-69FFFF
	26	64	680000-68FFFF
	27	64	670000-67FFF
	28	64	660000-66FFFF
	29	64	650000-65FFFF
ε	30	64	640000-64FFFF
Bank 3	31	64	630000-63FFFF
_	32	64	620000-62FFFF
	33	64	610000-61FFFF
	34	64	600000-60FFFF

Table 30. Top boot block addresses, M58LR128HT (continued)

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	35	64	5F0000-5FFFFF
	36	64	5E0000-5EFFFF
	37	64	5D0000-5DFFFF
<del>х</del> 4	38	64	5C0000-5CFFFF
Bank 4	39	64	5B0000-5BFFFF
	40	64	5A0000-5AFFFF
	41	64	590000-59FFFF
	42	64	580000-58FFFF
	43	64	570000-57FFFF
	44	64	560000-56FFFF
	45	64	550000-55FFFF
<del>ا</del> 5	46	64	540000-54FFFF
Bank 5	47	64	530000-53FFFF
	48	64	520000-52FFFF
	49	64	510000-51FFFF
	50	64	500000-50FFFF
	51	64	4F0000-4FFFF
	52	64	4E0000-4EFFFF
	53	64	4D0000-4DFFFF
A 6	54	64	4C0000-4CFFFF
Bank 6	55	64	4B0000-4BFFFF
	56	64	4A0000-4AFFFF
	57	64	490000-49FFFF
	58	64	480000-48FFFF
	59	64	470000-47FFFF
	60	64	460000-46FFFF
	61	64	450000-45FFFF
× ×	62	64	440000-44FFFF
Bank 7	63	64	430000-43FFFF
	64	64	420000-42FFFF
	65	64	410000-41FFFF
	66	64	400000-40FFFF

Table 30. Top boot block addresses, M58LR128HT (continued)

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	67	64	3F0000-3FFFFF
	68	64	3E0000-3EFFFF
	69	64	3D0000-3DFFFF
주 8	70	64	3C0000-3CFFFF
Bank 8	71	64	3B0000-3BFFFF
	72	64	3A0000-3AFFFF
	73	64	390000-39FFFF
	74	64	380000-38FFFF
	75	64	370000-37FFFF
	76	64	360000-36FFFF
	77	64	350000-35FFFF
& ⊙	78	64	340000-34FFFF
Bank 9	79	64	330000-33FFFF
	80	64	320000-32FFFF
	81	64	310000-31FFFF
	82	64	300000-30FFFF
	83	64	2F0000-2FFFFF
	84	64	2E0000-2EFFFF
	85	64	2D0000-2DFFFF
v 10	86	64	2C0000-2CFFFF
Bank 10	87	64	2B0000-2BFFFF
	88	64	2A0000-2AFFFF
	89	64	290000-29FFFF
	90	64	280000-28FFFF
	91	64	270000-27FFFF
	92	64	260000-26FFFF
	93	64	250000-25FFFF
<del>7</del>	94	64	240000-24FFFF
Bank 11	95	64	230000-23FFFF
	96	64	220000-22FFFF
	97	64	210000-21FFFF
	98	64	200000-20FFFF

Table 30. Top boot block addresses, M58LR128HT (continued)

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	99	64	1F0000-1FFFFF
	100	64	1E0000-1EFFFF
	101	64	1D0000-1DFFFF
× 12	102	64	1C0000-1CFFFF
Bank 12	103	64	1B0000-1BFFFF
_	104	64	1A0000-1AFFFF
	105	64	190000-19FFFF
	106	64	180000-18FFFF
	107	64	170000-17FFFF
	108	64	160000-16FFFF
	109	64	150000-15FFFF
Bank 13	110	64	140000-14FFFF
3anl	111	64	130000-13FFFF
ш	112	64	120000-12FFFF
	113	64	110000-11FFFF
	114	64	100000-10FFFF
	115	64	0F0000-0FFFF
	116	64	0E0000-0EFFFF
	117	64	0D0000-0DFFFF
Bank 14	118	64	0C0000-0CFFFF
Banl	119	64	0B0000-0BFFFF
ш	120	64	0A0000-0AFFFF
	121	64	090000-09FFFF
	122	64	080000-08FFFF
	123	64	070000-07FFFF
	124	64	060000-06FFFF
	125	64	050000-05FFFF
Bank 15	126	64	040000-04FFFF
Sank	127	64	030000-03FFFF
<u></u>	128	64	020000-02FFFF
	129	64	010000-01FFFF
	130	64	000000-00FFFF

There are two Bank Regions: Bank Region 1 contains all the banks that are made up of main blocks only; Bank Region 2 contains the banks that are made up of the parameter and main blocks (Parameter Bank).

Table 31. Bottom boot block addresses, M58LR128HB

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	130	64	7F0000-7FFFF
	129	64	7E0000-7EFFFF
	128	64	7D0000-7DFFFF
c 15	127	64	7C0000-7CFFFF
Bank 15	126	64	7B0000-7BFFFF
_	125	64	7A0000-7AFFFF
	124	64	790000-79FFFF
	123	64	780000-78FFFF
	122	64	770000-77FFFF
	121	64	760000-76FFFF
	120	64	750000-75FFFF
41	119	64	740000-74FFFF
Bank 14	118	64	730000-73FFFF
ш	117	64	720000-72FFFF
	116	64	710000-71FFFF
	115	64	700000-70FFFF
	114	64	6F0000-6FFFFF
	113	64	6E0000-6EFFFF
	112	64	6D0000-6DFFFF
c 13	111	64	6C0000-6CFFFF
Bank 13	110	64	6B0000-6BFFFF
ш	109	64	6A0000-6AFFFF
	108	64	690000-69FFFF
	107	64	680000-68FFFF
	106	64	670000-67FFFF
	105	64	660000-66FFFF
	104	64	650000-65FFFF
c 12	103	64	640000-64FFFF
Bank 12	102	64	630000-63FFFF
ш	101	64	620000-62FFFF
	100	64	610000-61FFFF
	99	64	600000-60FFFF

Table 31. Bottom boot block addresses, M58LR128HB (continued)

### Page   Page	Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
96 64 50000-5DFFFF  95 64 5C0000-5CFFFF  94 64 5B0000-5BFFFF  93 64 5A0000-5AFFFF  92 64 590000-59FFFF  91 64 580000-58FFFF  91 64 580000-5FFFFF  88 64 560000-5FFFFF  88 64 550000-5FFFFF  88 64 550000-5FFFFF  88 64 540000-5FFFFF  88 64 520000-52FFFFF  88 64 520000-52FFFFF  88 64 500000-5FFFFF  88 64 500000-5FFFFF  88 64 500000-5FFFFF  88 64 500000-5FFFFF  88 64 4F0000-4FFFFF  88 64 4E0000-4EFFFFF  89 64 4C0000-4CFFFFF  80 64 4D0000-4DFFFFF  70 64 4A0000-4AFFFFF  71 64 4A0000-4AFFFFF  72 64 480000-48FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF		98	64	5F0000-5FFFFF
95 64 50000-5CFFFF  94 64 58000-5BFFFF  93 64 59000-59FFFF  91 64 58000-58FFFF  90 64 570000-57FFFF  88 64 560000-56FFFF  88 64 550000-55FFFF  88 64 540000-55FFFF  88 64 520000-55FFFF  88 64 520000-52FFFF  88 64 510000-51FFFF  88 64 510000-51FFFF  88 64 500000-50FFFF  88 64 540000-4FFFFF  88 64 4F0000-4FFFFF  88 64 4C0000-4EFFFF  89 64 4C0000-4EFFFF  79 64 4C0000-4EFFFF  77 64 4A0000-4BFFFF  78 64 4B0000-4BFFFF  79 64 4C0000-4FFFFF  79 64 4A0000-4BFFFF  71 64 4A0000-4BFFFF  72 64 450000-4FFFFF  73 64 450000-4FFFFF  74 64 470000-4FFFFF  75 64 480000-4FFFFF  76 64 480000-4BFFFFF  77 64 480000-4BFFFFF  78 64 480000-4BFFFFF  79 64 450000-4FFFFF  70 64 450000-4FFFFF  71 64 440000-4FFFFF  72 64 450000-4FFFFF  73 64 440000-4FFFFF  74 64 440000-4FFFFF  75 64 440000-4FFFFF  76 64 440000-4FFFFF  77 64 440000-4FFFFF  78 64 440000-4FFFFF  79 64 450000-4FFFFF  79 64 440000-4FFFFF  70 64 430000-4FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF		97	64	5E0000-5EFFFF
93 64 5A0000-5AFFFF 92 64 590000-59FFFF 91 64 580000-58FFFF 90 64 570000-57FFFF 88 64 560000-56FFFF 88 64 550000-55FFFF 88 64 530000-53FFFF 88 64 520000-53FFFF 88 64 510000-51FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 4F0000-4FFFFF 88 64 4F0000-4FFFFF 89 64 4C0000-4CFFFFF 79 64 4C0000-4CFFFFF 77 64 4A0000-4AFFFFF 78 64 4B0000-4BFFFF 79 64 4C0000-4FFFFF 79 64 4A0000-4FFFFF 79 64 4A0000-4FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF		96	64	5D0000-5DFFFF
93 64 5A0000-5AFFFF 92 64 590000-59FFFF 91 64 580000-58FFFF 90 64 570000-57FFFF 88 64 560000-56FFFF 88 64 550000-55FFFF 88 64 530000-53FFFF 88 64 520000-53FFFF 88 64 510000-51FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 4F0000-4FFFFF 88 64 4F0000-4FFFFF 89 64 4C0000-4CFFFFF 79 64 4C0000-4CFFFFF 77 64 4A0000-4AFFFFF 78 64 4B0000-4BFFFF 79 64 4C0000-4FFFFF 79 64 4A0000-4FFFFF 79 64 4A0000-4FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	11	95	64	5C0000-5CFFFF
93 64 5A0000-5AFFFF 92 64 590000-59FFFF 91 64 580000-58FFFF 90 64 570000-57FFFF 88 64 560000-56FFFF 88 64 550000-55FFFF 88 64 530000-53FFFF 88 64 520000-53FFFF 88 64 510000-51FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 4F0000-4FFFFF 88 64 4F0000-4FFFFF 89 64 4C0000-4CFFFFF 79 64 4C0000-4CFFFFF 77 64 4A0000-4AFFFFF 78 64 4B0000-4BFFFF 79 64 4C0000-4FFFFF 79 64 4A0000-4FFFFF 79 64 4A0000-4FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF	3ank	94	64	5B0000-5BFFFF
91 64 580000-58FFFF  90 64 570000-57FFFF  89 64 560000-56FFFF  88 64 550000-55FFFF  87 64 540000-54FFFF  86 64 530000-53FFFF  87 64 520000-52FFFF  88 64 520000-52FFFF  88 64 510000-51FFFF  88 64 500000-40FFFFF  89 64 4F0000-44FFFF  79 64 4C0000-42FFFF  78 64 4B0000-48FFFF  77 64 4A0000-43FFFF  78 64 480000-48FFFF  77 64 480000-48FFFF  78 64 480000-48FFFF  79 64 480000-48FFFF  70 64 450000-45FFFF  71 64 450000-45FFFF  72 64 450000-43FFFFF  73 64 460000-43FFFFF  74 64 450000-43FFFFF  75 64 4400000-43FFFFF  76 64 4400000-43FFFFF  77 64 4400000-43FFFFF  78 64 4400000-43FFFFF  79 64 4400000-43FFFFF  70 64 4400000-43FFFFFFFFFFFFFFFFFFFFFFFFFFFFFF		93	64	5A0000-5AFFFF
90 64 570000-57FFFF 89 64 560000-56FFFF 88 64 550000-55FFFF 87 64 540000-54FFFF 86 64 530000-53FFFF 88 64 520000-52FFFF 88 64 510000-51FFFF 88 64 500000-50FFFF 88 64 500000-50FFFF 88 64 4F0000-4FFFFF 89 64 4C0000-4DFFFF 79 64 4C0000-4DFFFF 78 64 4B0000-4BFFFF 77 64 4A0000-4AFFFF 78 64 490000-49FFFF 78 64 490000-49FFFF 79 64 400000-49FFFF 79 64 450000-45FFFF 79 65 64 450000-45FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF		92	64	590000-59FFFF
89       64       560000-56FFFF         88       64       550000-55FFFF         87       64       540000-54FFFF         86       64       530000-53FFFF         85       64       520000-52FFFF         84       64       510000-50FFFF         83       64       500000-50FFFF         81       64       4F0000-4FFFFF         80       64       4D0000-4DFFFF         79       64       4C0000-4DFFFF         78       64       4B0000-4BFFFF         76       64       490000-49FFFF         75       64       480000-48FFFF         73       64       460000-45FFFF         72       64       450000-45FFFF         70       64       430000-43FFFF         69       64       420000-42FFFF         69       64       420000-42FFFF         68       64       410000-41FFFF		91	64	580000-58FFFF
88       64       550000-55FFFF         87       64       540000-54FFFF         86       64       530000-53FFFF         85       64       520000-52FFFF         84       64       510000-51FFFF         83       64       500000-50FFFF         82       64       4F0000-4EFFFF         80       64       4D0000-4DFFFF         79       64       4C0000-4DFFFF         77       64       4B0000-4BFFFF         76       64       490000-49FFFF         75       64       480000-48FFFF         73       64       460000-45FFFF         72       64       450000-45FFFF         71       64       440000-44FFFF         70       64       430000-43FFFF         69       64       420000-42FFFF         68       64       410000-41FFFF		90	64	570000-57FFFF
B7   64   540000-54FFFF     B6   64   530000-53FFFF     B5   64   520000-52FFFF     B4   64   510000-51FFFF     B3   64   500000-50FFFF     B3   64   4F0000-4FFFFF     B1   64   4E0000-4EFFFF     B0   64   4D0000-4DFFFF     79   64   4C0000-4DFFFF     77   64   4A0000-4AFFFF     76   64   490000-49FFFF     75   64   480000-48FFFF     76   64   470000-47FFFF     77   64   460000-48FFFF     77   64   470000-47FFFF     77   64   450000-45FFFF     70   64   430000-43FFFF     70   64   430000-43FFFF     69   64   420000-42FFFF     69   64   420000-42FFFF     68   64   410000-41FFFFF     68   64   410000-41FFFFF     68   64   410000-41FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF		89	64	560000-56FFFF
85		88	64	550000-55FFFF
85	, 10 10	87	64	540000-54FFFF
85	3ank	86	64	530000-53FFFF
83 64 500000-50FFFF  82 64 4F0000-4FFFFF  81 64 4E0000-4EFFFFF  80 64 4D0000-4DFFFF  79 64 4C0000-4CFFFF  78 64 4B0000-4BFFFF  76 64 490000-49FFFF  75 64 480000-48FFFF  75 64 470000-47FFFF  73 64 460000-45FFFF  72 64 450000-45FFFF  72 64 450000-45FFFF  73 64 440000-45FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF		85	64	520000-52FFFF
82 64 4F0000-4FFFF  81 64 4E0000-4EFFFF  80 64 4D0000-4DFFFF  79 64 4C0000-4CFFFF  78 64 4B0000-4BFFFF  76 64 490000-49FFFF  75 64 480000-48FFFF  76 64 470000-47FFFF  77 64 470000-47FFFF  78 64 450000-45FFFF  79 64 450000-45FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF		84	64	510000-51FFFF
81 64 4E0000-4EFFFF  80 64 4D0000-4DFFFF  79 64 4C0000-4CFFFF  78 64 4B0000-4AFFFF  76 64 490000-49FFFF  75 64 480000-48FFFF  77 64 470000-47FFFF  78 64 460000-48FFFF  79 64 450000-45FFFF  70 64 440000-45FFFF  71 64 440000-44FFFF  70 64 420000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF		83	64	500000-50FFFF
80       64       4D0000-4DFFF         79       64       4C0000-4CFFFF         78       64       4B0000-4BFFFF         77       64       4A0000-4AFFFF         76       64       490000-49FFFF         75       64       480000-48FFFF         73       64       460000-46FFFF         72       64       450000-45FFFF         71       64       440000-44FFFF         69       64       420000-42FFFF         68       64       410000-41FFFF		82	64	4F0000-4FFFF
TY       64       4C0000-4CFFFF         78       64       4B0000-4BFFFF         77       64       4A0000-4AFFFF         76       64       490000-49FFFF         75       64       480000-48FFFF         74       64       470000-47FFFF         73       64       460000-46FFFF         72       64       450000-45FFFF         71       64       440000-44FFFF         70       64       430000-43FFFF         69       64       420000-42FFFF         68       64       410000-41FFFF		81	64	4E0000-4EFFFF
77 64 4A0000-4AFFFF  76 64 490000-49FFFF  75 64 480000-48FFFF  77 64 470000-47FFFF  78 64 460000-46FFFF  79 64 450000-45FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF		80	64	4D0000-4DFFFF
77 64 4A0000-4AFFFF  76 64 490000-49FFFF  75 64 480000-48FFFF  77 64 470000-47FFFF  78 64 460000-46FFFF  79 64 450000-45FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF	6 4	79	64	4C0000-4CFFFF
77 64 4A0000-4AFFFF  76 64 490000-49FFFF  75 64 480000-48FFFF  77 64 470000-47FFFF  78 64 460000-46FFFF  79 64 450000-45FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF	Ban	78	64	4B0000-4BFFFF
75 64 48000-48FFF  74 64 47000-47FFF  73 64 46000-46FFF  72 64 45000-45FFF  71 64 44000-44FFF  70 64 43000-43FFF  69 64 42000-42FFF  68 64 41000-41FFF		77	64	4A0000-4AFFFF
8       74       64       470000-47FFFF         73       64       460000-46FFFF         72       64       450000-45FFFF         71       64       440000-44FFFF         70       64       430000-43FFFF         69       64       420000-42FFFF         68       64       410000-41FFFF		76	64	490000-49FFFF
73 64 460000-46FFFF  72 64 450000-45FFFF  71 64 440000-44FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF	Ţ	75	64	480000-48FFFF
72 64 450000-45FFFF  71 64 440000-44FFFF  70 64 430000-43FFFF  69 64 420000-42FFFF  68 64 410000-41FFFF		74	64	470000-47FFFF
71     64     440000-44FFFF       70     64     430000-43FFFF       69     64     420000-42FFFF       68     64     410000-41FFFF	Ţ	73	64	460000-46FFFF
69 64 420000-42FFFF 68 64 410000-41FFFF		72	64	450000-45FFFF
69 64 420000-42FFFF 68 64 410000-41FFFF	& ⊗	71	64	440000-44FFFF
69 64 420000-42FFFF 68 64 410000-41FFFF	Ban	70	64	430000-43FFFF
	Ţ	69	64	420000-42FFFF
67 64 400000-40FFFF	Ţ	68	64	410000-41FFFF
	Ţ	67	64	400000-40FFFF

Table 31. Bottom boot block addresses, M58LR128HB (continued)

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	66	64	3F0000-3FFFFF
	65	64	3E0000-3EFFFF
	64	64	3D0000-3DFFFF
<u> 본</u>	63	64	3C0000-3CFFFF
Bank 7	62	64	3B0000-3BFFFF
	61	64	3A0000-3AFFFF
	60	64	390000-39FFFF
	59	64	380000-38FFFF
	58	64	370000-37FFFF
	57	64	360000-36FFFF
	56	64	350000-35FFFF
Bank 6	55	64	340000-34FFFF
Ban	54	64	330000-33FFFF
	53	64	320000-32FFFF
	52	64	310000-31FFFF
	51	64	300000-30FFFF
	50	64	2F0000-2FFFF
	49	64	2E0000-2EFFFF
	48	64	2D0000-2DFFFF
Bank 5	47	64	2C0000-2CFFFF
Ban	46	64	2B0000-2BFFFF
	45	64	2A0000-2AFFFF
	44	64	290000-29FFFF
	43	64	280000-28FFFF
	42	64	270000-27FFFF
	41	64	260000-26FFFF
	40	64	250000-25FFFF
<del>추</del> 4	39	64	240000-24FFFF
Bank 4	38	64	230000-23FFFF
	37	64	220000-22FFFF
	36	64	210000-21FFFF
	35	64	200000-20FFFF

Table 31. Bottom boot block addresses, M58LR128HB (continued)

Bank <sup>(1)</sup>	#	Size (KWord)	Address Range
	34	64	1F0000-1FFFFF
	33	64	1E0000-1EFFFF
	32	64	1D0000-1DFFFF
κ 8	31	64	1C0000-1CFFFF
Bank 3	30	64	1B0000-1BFFFF
	29	64	1A0000-1AFFFF
	28	64	190000-19FFFF
	27	64	180000-18FFFF
	26	64	170000-17FFFF
	25	64	160000-16FFFF
	24	64	150000-15FFFF
2	23	64	140000-14FFFF
Bank 2	22	64	130000-13FFFF
	21	64	120000-12FFFF
	20	64	110000-11FFFF
	19	64	1F0000-1FFFFF
	18	64	0F0000-0FFFFF
	17	64	0E0000-0EFFFF
	16	64	0D0000-0DFFFF
<del>⊼</del>	15	64	0C0000-0CFFFF
Bank 1	14	64	0B0000-0BFFFF
	13	64	0A0000-0AFFFF
	12	64	090000-09FFFF
	11	64	080000-08FFFF
	10	64	070000-07FFFF
	9	64	060000-06FFFF
	8	64	050000-05FFFF
훅	7	64	040000-04FFFF
Parameter Bank	6	64	030000-03FFFF
eter	5	64	020000-02FFFF
ıram	4	64	010000-01FFFF
Ра	3	16	00C000-00FFFF
	2	16	008000-00BFFF
	1	16	004000-007FFF
	0	16	000000-003FFF

<sup>1.</sup> There are two Bank Regions: Bank Region 2 contains all the banks that are made up of main blocks only; Bank Region 1 contains the banks that are made up of the parameter and main blocks (Parameter Bank).

#### Appendix B Common Flash Interface

The Common Flash Interface is a JEDEC approved, standardized data structure that can be read from the Flash memory device. It allows a system software to query the device to determine various electrical and timing parameters, density information and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the Read CFI Query Command is issued the device enters CFI Query mode and the data structure is read from the memory. Tables 32, 33, 34, 35, 36, 37, 38, 39, 40 and 41 show the addresses used to retrieve the data. The Query data is always presented on the lowest order data outputs (DQ0-DQ7), the other outputs (DQ8-DQ15) are set to 0.

The CFI data structure also contains a security area where a 64 bit unique security number is written (see *Figure 4: Protection Register memory map*). This area can be accessed only in Read mode by the final user. It is impossible to change the security number after it has been written by ST. Issue a Read Array command to return to Read mode.

Table 32. Query structure overview

Offset	Sub-section Name	Description
000h	Reserved	Reserved for algorithm-specific information
010h	CFI Query Identification String	Command set ID and algorithm data offset
01Bh	System Interface Information	Device timing & voltage information
027h	Device Geometry Definition	Flash device layout
Р	Primary Algorithm-specific Extended Query table	Additional information specific to the Primary Algorithm (optional)
Α	Alternate Algorithm-specific Extended Query table	Additional information specific to the Alternate Algorithm (optional)
080h	Security Code Area	Lock Protection Register Unique device Number and User Programmable OTP

The Flash memory display the CFI data structure when CFI Query command is issued. In this table are listed the main sub-sections detailed in Tables 33, 34, 35 and 36. Query data is always presented on the lowest order data outputs.

Table 33. CFI query identification string

Offset	Sub-section Name	Description		Value
000h	0020h	Manufacturer Code		ST
001h	88C4h 88C5h	Device Code	M58LR128HT M58LR128HB	Top Bottom
002h-00Fh	Reserved	Reserved		
010h	0051h			"Q"
011h	0052h	Query Unique ASCII String "QRY"		"R"
012h	0059h			"Y"
013h	0001h	Primary Algorithm Command Set and Control		
014h	0000h	Interface ID code 16 bit ID code defining a specific algorithm		
015h	offset = P = 000Ah	Address for Primary Algorithm extended Query table		p = 10Ah
016h	0001h	(see Table 36)		p = TOATI
017h	0000h	Alternate Vendor Command Set and Control		
018h	0000h	Interface ID Code second vendor - specified algorithm supported		NA
019h	value = A = 0000h	Address for Alternate Algorithm extended Query table		NA
01Ah	0000h			INA

Table 34. CFI query system interface information

Offset	Data	Description	Value
01Bh	0017h	V <sub>DD</sub> Logic Supply Minimum Program/Erase or Write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 millivolts	1.7V
01Ch	0020h	V <sub>DD</sub> Logic Supply Maximum Program/Erase or Write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 millivolts	2V
01Dh	0085h	V <sub>PP</sub> [Programming] Supply Minimum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 millivolts	8.5V
01Eh	0095h	V <sub>PP</sub> [Programming] Supply Maximum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 millivolts	9.5V
01Fh	0004h	Typical time-out per single byte/word program = 2 <sup>n</sup> μs	16µs
020h	0009h	Typical time-out for Buffer Program = 2 <sup>n</sup> µs	512µs
021h	000Ah	Typical time-out per individual block erase = 2 <sup>n</sup> ms	1s
022h	0000h	Typical time-out for full chip erase = 2 <sup>n</sup> ms	NA
023h	0004h	Maximum time-out for word program = 2 <sup>n</sup> times typical	256µs
024h	0004h	Maximum time-out for Buffer Program = 2 <sup>n</sup> times typical	8192µs
025h	0002h	Maximum time-out per individual block erase = 2 <sup>n</sup> times typical	4s
026h	0000h	Maximum time-out for chip erase = 2 <sup>n</sup> times typical	NA

Table 35. Device geometry definition

	Offset	Data	Description	Value		
	027h	0018h	Device Size = 2 <sup>n</sup> in number of bytes	16 MBytes		
	028h 029h	0001h 0000h	Flash Device Interface Code description	x16 Async.		
	02Ah 02Bh	0006h 0000h	Maximum number of bytes in multi-byte program or page = 2 <sup>n</sup>	64 Bytes		
	02Ch	0002h	Number of identical sized erase block regions within the device bit 7 to 0 = x = number of Erase Block Regions	2		
	02Dh 007Eh Erase Block Region 1 Information 02Eh 0000h Number of identical-size erase blocks = 007Eh+1					
SES	02Fh 030h	0000h 0002h	Erase Block Region 1 Information Block size in Region 1 = 0200h * 256 Byte	128 KByte		
TOP DEVICES	031h 032h	0003h 0000h	Erase Block Region 2 Information  Number of identical-size erase blocks = 0003h+1	4		
TOF	033h 034h	0080h 0000h	Erase Block Region 2 Information Block size in Region 2 = 0080h * 256 Byte	32 KByte		
	035h 038h	Reserved	Reserved for future erase block region information	NA		
	02Dh 02Eh	0003h 0000h	Erase Block Region 1 Information  Number of identical-size erase block = 0003h+1	4		
/ICES	02Fh 030h	0080h 0000h	Erase Block Region 1 Information Block size in Region 1 = 0080h * 256 bytes	32 KBytes		
BOTTOM DEVICES	031h 032h	007Eh 0000h	Erase Block Region 2 Information  Number of identical-size erase block = 007Eh+1	127		
ВОТТС	033h 034h	0000h 0002h	Erase Block Region 2 Information Block size in Region 2 = 0200h * 256 bytes	128 KBytes		
	035h 038h	Reserved	Reserved for future erase block region information	NA		

Table 36. Primary algorithm-specific extended query table

Offset	Data	Description	Value
(P)h = 10Ah	0050h		"P"
	0052h	Primary Algorithm extended Query table unique ASCII string "PRI"	"R"
	0049h		" "
(P+3)h =10Dh	0031h	Major version number, ASCII	"1"
(P+4)h = 10Eh	0033h	Minor version number, ASCII	"3"
(P+5)h = 10Fh	00E6h	Extended Query table contents for Primary Algorithm. Address	
	0003h	(P+5)h contains less significant byte.	
(P+7)h = 111h (P+8)h = 112h	0000h	bit 0 Chip Erase supported(1 = Yes, 0 = No) bit 1 Erase Suspend supported(1 = Yes, 0 = No) bit 2 Program Suspend supported(1 = Yes, 0 = No) bit 3 Legacy Lock/Unlock supported(1 = Yes, 0 = No) bit 4 Queued Erase supported(1 = Yes, 0 = No) bit 5 Instant individual block locking supported(1 = Yes, 0 = No) bit 6 Protection bits supported(1 = Yes, 0 = No) bit 7 Page mode read supported(1 = Yes, 0 = No) bit 8 Synchronous read supported(1 = Yes, 0 = No) bit 9 Simultaneous operation supported(1 = Yes, 0 = No) bit 10 to 31 Reserved; undefined bits are '0'. If bit 31 is '1' then another 31 bit field of optional features follows at the end of the bit-30 field.	No Yes Yes No No Yes Yes Yes Yes
(P+9)h = 113h	0001h	Supported Functions after Suspend Read Array, Read Status Register and CFI Query  bit 0 Program supported after Erase Suspend (1 = Yes, 0 = No) bit 7 to 1 Reserved; undefined bits are '0'	Yes
(P+A)h = 114h	0003h	Block Protect Status  Defines which bits in the Block Status Register section of the Query are implemented.	
(P+B)h = 115h	0000h	bit 0 Block protect Status Register Lock/Unlock bit active (1 = Yes, 0 = No) bit 1 Block Lock Status Register Lock-Down bit active (1 = Yes, 0 = No) bit 15 to 2 Reserved for future use; undefined bits are '0'	Yes Yes
(P+C)h = 116h	0018h	V <sub>DD</sub> Logic Supply Optimum Program/Erase voltage (highest performance)  bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	1.8V
(P+D)h = 117h	0090h	V <sub>PP</sub> Supply Optimum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	9V

Table 37. Protection Register information

Offset	Data	Description	Value					
(P+E)h = 118h	0002h	Number of protection register fields in JEDEC ID space. 0000h indicates that 256 fields are available.	2					
(P+F)h = 119h	0080h	Protection Field 1: Protection Description	80h					
(P+10)h = 11Ah	0000h	Bits 0-7 Lower byte of protection register address						
(P+ 11)h = 11Bh	0003h	Bits 8-15 Upper byte of protection register address  Bits 16-23 2 <sup>n</sup> bytes in factory pre-programmed region						
(P+12)h = 11Ch	0003h	Bits 24-31 2 <sup>n</sup> bytes in user programmable region						
(P+13)h = 11Dh	0089h	Protection Register 2: Protection Recognition	89h					
(P+14)h = 11Eh	0000h	Protection Register 2: Protection Description Bits 0-31 protection register address	00h					
(P+15)h = 11Fh	0000h	Bits 32-39 n number of factory programmed regions (lower						
(P+16)h = 120h	0000h	byte) Bits 40-47 n number of factory programmed regions (upper	00h					
(P+17)h = 121h	0000h	byte)	0					
(P+18)h = 122h	0000h	Bits 48-55 2 <sup>n</sup> bytes in factory programmable region	0					
(P+19)h = 123h	0000h	Bits 56-63 n number of user programmable regions (lower byte)	0					
(P+1A)h = 124h	0010h	Bits 64-71 n number of user programmable regions (upper						
(P+1B)h = 125h	0000h	byte) Bits 72-79 2 <sup>n</sup> bytes in user programmable region						
(P+1C)h = 126h	0004h	51.0 72 73 2 Bytes in user programmable region	16					

Table 38. Burst Read information

Offset	Data	Description	Value
(P+1D)h = 127h	0003h	Page-mode read capability bits 0-7 n' such that 2 <sup>n</sup> HEX value represents the number of read-page bytes. See offset 0028h for device word width to determine page-mode data output width.	8 Bytes
(P+1E)h = 128h	0004h	Number of synchronous mode read configuration fields that follow.	4
(P+1F)h = 129h	0001h	Synchronous mode read capability configuration 1 bit 3-7 Reserved bit 0-2 n' such that 2 <sup>n+1</sup> HEX value represents the maximum number of continuous synchronous reads when the device is configured for its maximum word width. A value of 07h indicates that the device is capable of continuous linear bursts that will output data until the internal burst counter reaches the end of the device's burstable address space. This field's 3-bit value can be written directly to the read configuration register bit 0-2 if the device is configured for its maximum word width. See offset 0028h for word width to determine the burst data output width.	4
(P+20)h = 12Ah	0002h	Synchronous mode read capability configuration 2	8
(P-21)h = 12Bh	0003h	Synchronous mode read capability configuration 3	16
(P+22)h = 12Ch	0007h	Synchronous mode read capability configuration 4	Cont.

Table 39. Bank and Erase block region information<sup>(1) (2)</sup>

F	Flash memory	(top)	Flash memory (b	oottom)	Description
	Offset	Data	Offset	Data	Description
(P	P+23)h = 12Dh	02h	(P+23)h = 12Dh	02h	Number of Bank Regions within the device

- 1. The variable P is a pointer which is defined at CFI offset 015h.
- 2. Bank Regions. There are two Bank Regions, see *Table 30* and *Table 31*.

Table 40. Bank and Erase block region 1 information

M58LR128HT	(top)	M58LR128H (bottom)		Description				
Offset	Data	Offset	Data					
(P+24)h = 12Eh	0Fh	(P+24)h = 12Eh	01h	Number of identical banks within Bank Region 1				
(P+25)h = 12Fh	00h	(P+25)h = 12Fh	00h	Number of identical banks within bank Region 1				
(P+26)h = 130h	11h	(P+26)h = 130h	11h	Number of program or erase operations allow in Bank Region 1: Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations				
(P+27)h = 131h	00h	(P+27)h = 131h	00h	Number of program or erase operations allowed in other banks while a bank in same region is programming Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations				
(P+28)h = 132h	00h	(P+28)h = 132h	00h	Number of program or erase operations allowed in other banks while a bank in this region is erasing Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations				
(P+29)h = 133h	h = 133h		02h	Types of erase block regions in Bank Region 1 n = number of erase block regions with contiguous same-size erase blocks.  Symmetrically blocked banks have one blocking region <sup>(2)</sup> .				
(P+2A)h = 134h	07h	(P+2A)h = 134h	03h	Bank Region 1 Erase Block Type 1 Information				
(P+2B)h = 135h	00h	(P+2B)h = 135h	00h	Bits 0-15: n+1 = number of identical-sized erase blocks				
(P+2C)h = 136h	00h	(P+2C)h = 136h	80h	Bits 16-31: n×256 = number of bytes in erase				
(P+2D)h = 137h	02h	(P+2D)h = 137h	00h	block region				
(P+2E)h = 138h	64h	(P+2E)h = 138h	64h	Bank Region 1 (Erase Block Type 1)				
(P+2F)h = 139h	00h	(P+2F)h = 139h	00h	Minimum block erase cycles × 1000				

Table 40. Bank and Erase block region 1 information (continued)

M58LR128HT		M58LR128H (bottom)	-HB	Description
Offset	Data	Offset	Data	
(P+30)h = 13Ah	01h	(P+30)h = 13Ah	01h	Bank Region 1 (Erase Block Type 1): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved
(P+31)h = 13Bh	03h	03h (P+31)h = 13Bh 03		Bank Region 1 (Erase Block Type 1): Page mode and Synchronous mode capabilities Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved
		(P+32)h = 13Ch	06h	Bank Region 1 Erase Block Type 2 Information
		(P+33)h = 13Dh	00h	Bits 0-15: n+1 = number of identical-sized erase
		(P+34)h = 13Eh	00h	blocks Bits 16-31: n×256 = number of bytes in erase
		(P+35)h = 13Fh	02h	block region
		(P+36)h = 140h	64h	Bank Region 1 (Erase Block Type 2)
		(P+37)h = 141h	00h	Minimum block erase cycles × 1000
		(P+38)h = 142h	01h	Bank Regions 1 (Erase Block Type 2): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved
		(P+39)h = 143h	03h	Bank Region 1 (Erase Block Type 2): Page mode and Synchronous mode capabilities Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved

<sup>1.</sup> The variable P is a pointer which is defined at CFI offset 015h.

<sup>2.</sup> Bank Regions. There are two Bank Regions, see *Table 30* to *Table 31*.

Table 41. Bank and Erase block region 2 information

M58LR128HT	(top)	M58LR128HB (b	ottom)	
Offset	Data	Offset	Data	Description
(P+32)h = 13Ch	01h	(P+3A)h = 144h	0Fh	Number of identical banks within Donk Daries 2
(P+33)h = 13Dh	00h	(P+3B)h = 145h	00h	Number of identical banks within Bank Region 2
(P+34)h = 13Eh	11h	(P+3C)h = 146h	11h	Number of program or erase operations allowed in Bank Region 2: Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations
(P+35)h = 13Fh	00h	(P+3D)h = 147h	00h	Number of program or erase operations allowed in other banks while a bank in this region is programming Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations
(P+36)h = 140h	00h	(P+3E)h = 148h	00h	Number of program or erase operations allowed in other banks while a bank in this region is erasing Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations
(P+37)h = 141h	02h	(P+3F)h = 149h	01h	Types of erase block regions in Bank Region 2 n = number of erase block regions with contiguous same-size erase blocks.  Symmetrically blocked banks have one blocking region. (2)
(P+38)h = 142h	06h	(P+40)h = 14Ah	07h	Bank Region 2 Erase Block Type 1 Information
(P+39)h = 143h	00h	(P+41)h = 14Bh	00h	Bits 0-15: n+1 = number of identical-sized erase blocks
(P+3A)h = 144h	00h	(P+42)h = 14Ch	00h	Bits 16-31: n×256 = number of bytes in erase
(P+3B)h = 145h	02h	(P+43)h = 14Dh	02h	block region
(P+3C)h = 146h	64h	(P+44)h = 14Eh	64h	Bank Region 2 (Erase Block Type 1)
(P+3D)h = 147h	00h	(P+45)h = 14Fh	00h	Minimum block erase cycles × 1000
(P+3E)h = 148h	01h	(P+46)h = 150h	01h	Bank Region 2 (Erase Block Type 1): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved

Table 41. Bank and Erase block region 2 information (continued)


M58LR128HT	(top)	M58LR128HB (b	ottom)	Deceriation
Offset	Data	Offset Data		Description
(P+3F)h = 149h	03h	(P+47)h = 151h	03h	Bank Region 2 (Erase Block Type 1):Page mode and Synchronous mode capabilities (defined in <i>Table 38</i> ) Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved
(P+40)h = 14Ah	03h			Bank Region 2 Erase Block Type 2 Information
(P+41)h = 14Bh	00h			Bits 0-15: n+1 = number of identical-sized erase blocks
(P+42)h = 14Ch	80h			Bits 16-31: n×256 = number of bytes in erase
(P+43)h = 14Dh	00h			block region
(P+44)h = 14Eh	64h			Bank Region 2 (Erase Block Type 2)
(P+45)h = 14Fh	00h			Minimum block erase cycles × 1000
(P+46)h = 150h	01h			Bank Region 2 (Erase Block Type 2): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved
(P+47)h = 151h	03h			Bank Region 2 (Erase Block Type 2): Page mode and Synchronous mode capabilities (defined in <i>Table 38</i> ) Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved
(P+48)h = 152h		(P+48)h = 152h		Feature Space definitions
(P+49)h = 153h		(P+43)h = 153h		Reserved

<sup>1.</sup> The variable P is a pointer which is defined at CFI offset 015h.

<sup>2.</sup> Bank Regions. There are two Bank Regions, see *Table 30* and *Table 31*.


### Appendix C Flowcharts and pseudocodes

Figure 19. Program flowchart and pseudocode

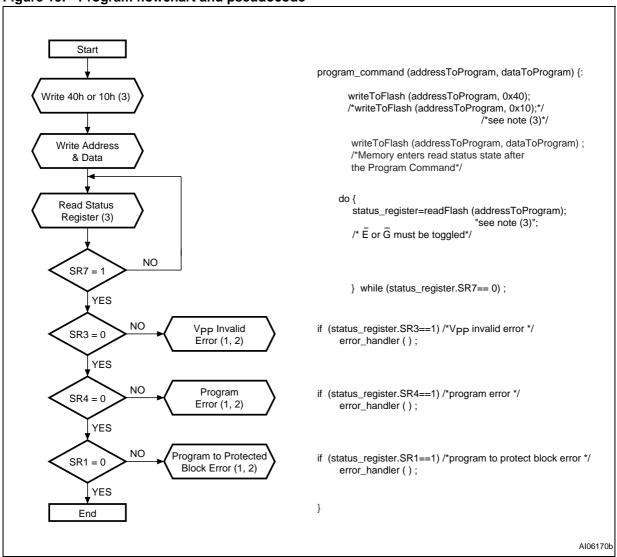


- Status check of SR1 (Protected Block), SR3 (V<sub>PP</sub> Invalid) and SR4 (Program Error) can be made after each program operation or after a sequence.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.
- 3. Any address within the bank can equally be used.

Figure 20. Blank Check flowchart and pseudocode

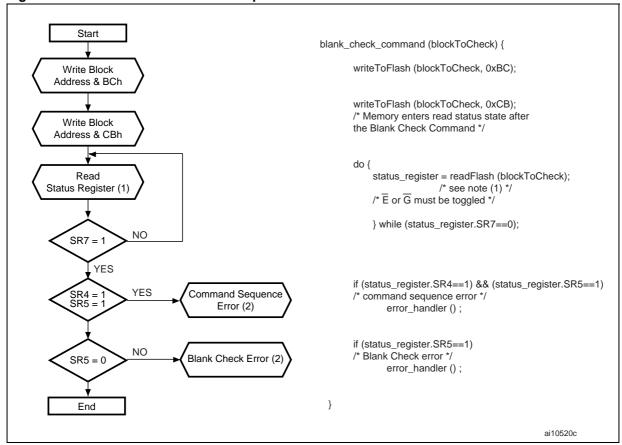


- 1. Any address within the bank can equally be used.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase operations.

Figure 21. Buffer Program flowchart and pseudocode

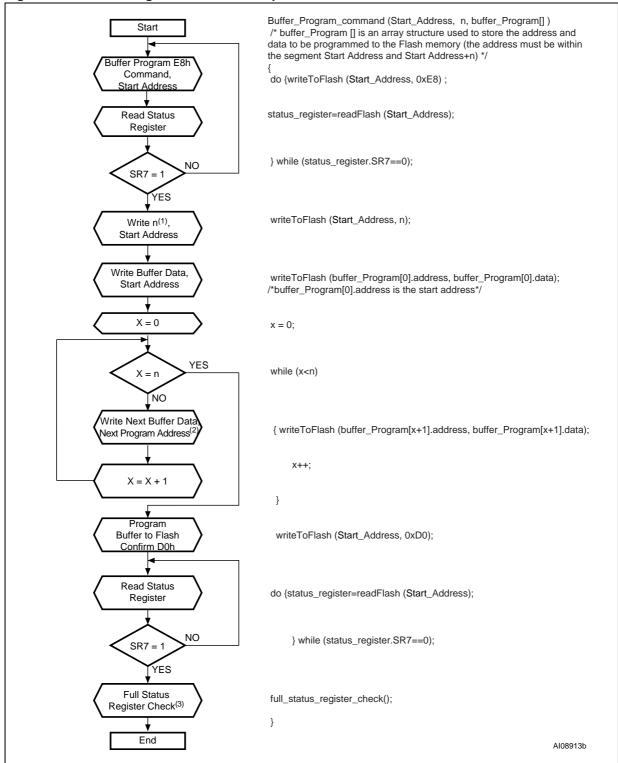


- 1. n + 1 is the number of data being programmed.
- Next Program data is an element belonging to buffer\_Program[].data; Next Program address is an element belonging to buffer\_Program[].address
- 3. Routine for Error Check by reading SR3, SR4 and SR1.

Figure 22. Program Suspend & Resume flowchart and pseudocode

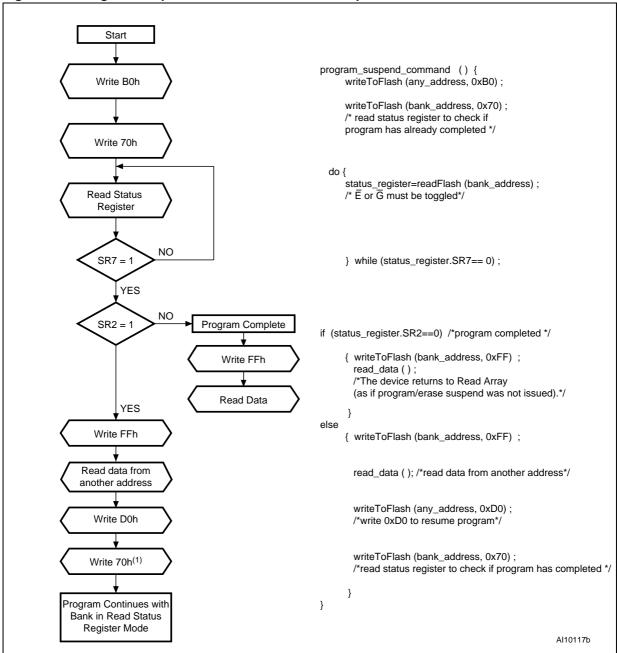


1. The Read Status Register command (Write 70h) can be issued just before or just after the Program Resume command.

Figure 23. Block Erase flowchart and pseudocode

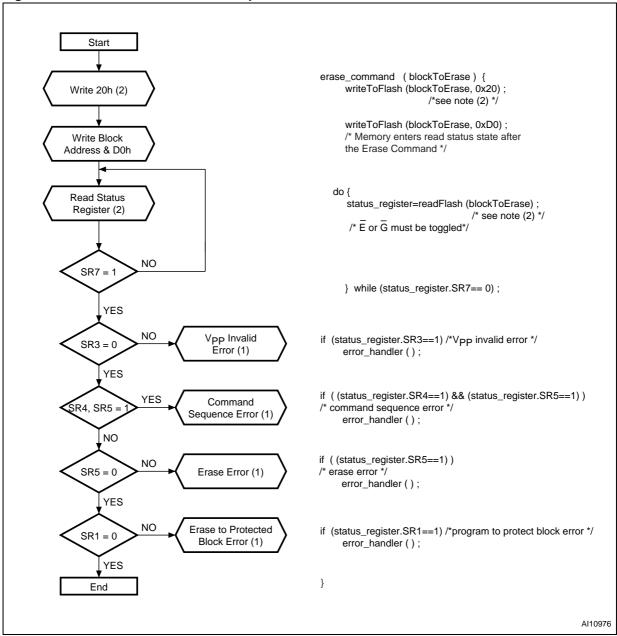


- 1. If an error is found, the Status Register must be cleared before further Program/Erase operations.
- 2. Any address within the bank can equally be used.

Figure 24. Erase Suspend & Resume flowchart and pseudocode

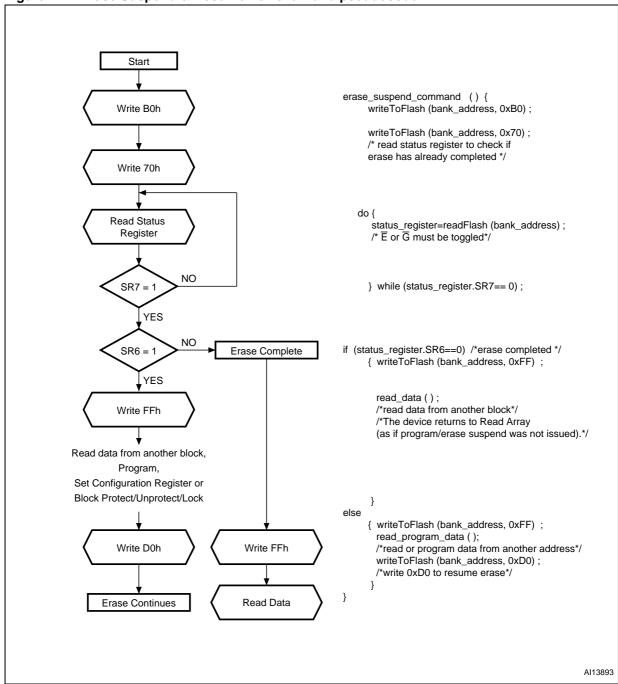


1. The Read Status Register command (Write 70h) can be issued just before or just after the Erase Resume command.

Figure 25. Locking Operations flowchart and pseudocode

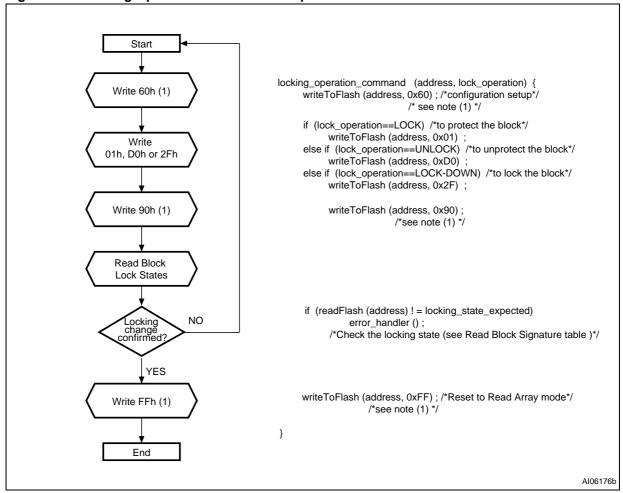

1. Any address within the bank can equally be used.

Figure 26. Protection Register Program flowchart and pseudocode

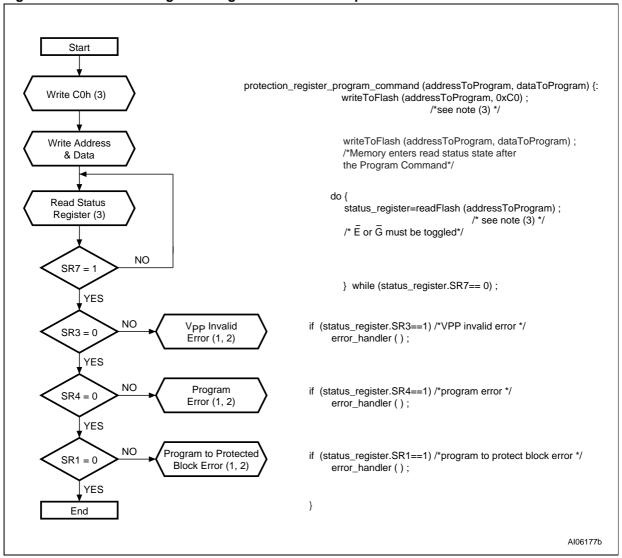

- Status check of SR1 (Protected Block), SR3 (V<sub>PP</sub> Invalid) and SR4 (Program Error) can be made after each program operation or after a sequence.
- 2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.
- 3. Any address within the bank can equally be used.

SETUP PHASE  $Buffer\_Enhanced\_Factory\_Program\_Command$ Start (start\_address, DataFlow[]) { Write 80h to Address WA1 writeToFlash (start\_address, 0x80) ; Write D0h to Address WA1 writeToFlash (start\_address, 0xD0); Read Status do { status\_register = readFlash (start\_address); Register NO SR7 = 0if (status\_register.SR4==1) { /\*error\*/ if (status\_register.SR3==1) error\_handler ( );/\*Vpp error \*/ YES if (status\_register.SR1==1) error\_handler ( ) ;/\* Locked Block \* PROGRAM AND SR4 = 1 Initialize count while (status\_register.SR7==1) VERIFY PHASE X = 0x=0; /\* initialize count \*/ do { Write PDX Read Status Register writeToFlash (start\_address, DataFlow[x]); Address WA1 SR3 and SR1for errors Exit Increment Count X++: X = X + 1NO X = 32}while (x<32) do { YES Read Status Register status\_register = readFlash (start\_address); NO SR0 = 0}while (status\_register.SR0==1) YES NO Last data } while (not last data) YES Write FFFFh to Address = NOT WA1 writeToFlash (another\_block\_address, FFFFh) **EXIT PHASE** Read Status do { Register status\_register = readFlash (start\_address) NO SR7 = 1 }while (status\_register.SR7==0) Full Status Register Check full\_status\_register\_check(); End AI07302a }

Figure 27. Buffer Enhanced Factory Program flowchart and pseudocode

# Appendix D Command interface state tables

Table 42. Command Interface states - modify table, next state<sup>(1)</sup>

Table 42.								mand Input					
Current	CI State	Read Array <sup>(2)</sup> (FFh)	Program Setup <sup>(3)(4)</sup> (10/40h)	Buffer Program (3)(4) (E8h)	Block Erase, Setup <sup>(3)(4)</sup> (20h)	BEFP Setup (80h)	Blank Check setup (BCh)	Erase Confirm P/E Resume, Block Unlock confirm, BEFP Confirm(3)(4) (D0h)	Blank Check confirm (CBh)	Buffer Program, Program/ Erase Suspend (B0h)	Read Status Register (70h)	Clear Status Register (5)	Read Electronic Signature , Read CFI Query (90h, 98h)
Rea	ady	Ready	Program Setup	BP Setup	Erase Setup	BEFP Setup	Blank Check setup	Ready					
Lock/CI	R Setup			Ready (Lo	ck Error)			Ready (unlock block)		Rea	dy (Lock E	Error)	
	Setup		OTP Busy										
ОТР	Busy	OTP Busy	IS in OTP Busy	OTP busy	IS in OTF	Busy			(	OTP Busy			
	IS in OTP busy	OTP Busy											
	Setup	Program Busy											
	Busy	Program Busy	IS in Program Busy	Program Busy	IS in Pro Bus			Program Busy	Program Suspend				
Program	IS in Program Busy	n Program Busy											
	Suspend	PS	IS in PS	PS	IS in Pro Suspe	gram end	PS	Program Busy	Program Suspend				
	IS in PS						Progr	am Suspend					
	Setup				Buffe	er Progra	am Load 1	give word cou	nt load (N	N-1));			
	Buffer Load 1		if	N=0 go to	Buffer Prog	ram Cor	nfirm. Else	e (N ≠ 0) go to B	uffer Pro	gram Load 2	2 (data loa	ıd)	
	Buffer Load 2		(note					count =0; Else E any block addres				ress)	
Buffe-	Confirm			Ready (	error)			BP Busy		R	eady (erro	or)	
Buffer Program	Busy	BP Busy	IS in BP Busy	BP Busy	IS in BP	Busy		BP Busy		BP Suspend	Buffe	er Progran	n Busy
	IS in BP Busy						Buffer	r Program Busy					
	Suspend	BP Suspend	IS in BP Suspend	BP Suspend	IS in BP S	uspend	BP Suspend	BP busy	BP busy Buffer Program Suspend				
	IS in BP Suspend						Buffer Pr	ogram Suspend	I				

Table 42. Command Interface states - modify table, next state<sup>(1)</sup> (continued)

	12. C			1400 0				mand Input	(55		• /			
				1	ı		Colli	manu mput		ı		1	ı	
Current	CI State	Read Array <sup>(2)</sup> (FFh)	Program Setup <sup>(3)(4)</sup> (10/40h)	Buffer Program (3)(4) (E8h)	Block Erase, Setup <sup>(3)(4)</sup> (20h)	BEFP Setup (80h)	Blank Check setup (BCh)	Erase Confirm P/E Resume, Block Unlock confirm, BEFP Confirm <sup>(3)(4)</sup> (D0h)	Blank Check confirm (CBh)	Buffer Program, Program/ Erase Suspend (B0h)	Read Status Register (70h)	Clear Status Register (5) (50h)	Read Electronic Signature , Read CFI Query (90h, 98h)	
	Setup			Ready (	(error)			Erase Busy		R	eady (erro	or)		
	Busy	Erase Busy	IS in Erase Busy	Erase Busy	IS in Eras	e Busy		Erase Busy		Erase Suspend Erase Busy			sy	
Erase	IS in Erase Busy		Erase Busy											
	Suspend	Erase Suspend	Program in ES	BP in ES	IS in Erase Suspend ES			Erase Busy		Er	ase Suspe	end		
	IS in ES		Erase Suspend											
	Setup					Pro	gram Bus	sy in Erase Susp	end					
	Busy	Program Busy in ES	IS in Program Busy in ES	Program Busy in ES	IS in Pro Busy in		Pr	ogram Busy in E	ES	PS in ES	Program Busy in Erase Suspend			
Program in Erase Suspend	IS in Program busy in ES	Program busy in Erase Suspend												
	Suspend	PS in ES S IS in PS in ES S IS in Program Suspend in ES Program Busy in ES Program Busy Program ES							rogram Sus	pend in E	rase Susp	end		
	IS in PS in ES	Program Suspend in Erase Suspend												
	Setup	Buffer P	rogram Loa	d 1 in Eras	se Suspend	(give w		load (N-1)); if N Program Load 2	=0 go to l	Buffer Progr	Program confirm. Else (N ≠ 0) go to			
	Buffer Load 1				Buffe	er Progra	ım Load 2	in Erase Suspe	end (data	load)				
	Buffer Load 2	Buffer Pro	ogram Conf					lse Buffer Progr ddress is differe				note: Buffe	er Program	
	Confirm		Erase S	Suspend (s	sequence e	rror)		BP Busy in ES		Erase Susp	end (seq	uence erro	or)	
Buffer Program in Erase	Busy	BP Busy in ES	IS in BP Busy in ES	BP busy in ES	IS in BP t			BP Busy in ES		BP Suspend in ES	Buffer F	Program B	usy in ES	
Suspend	IS in BP busy in ES					Buffer	Program	Busy in Erase S	uspend					
	Suspend	BP Suspend in ES	IS in BP Suspend in ES	BP Suspend in ES	IS in BP S in Erase S	uspend uspend	BP Suspend in ES	BP Busy in Erase Suspend	Buffer Program Suspend in Erase Suspend			uspend		
	IS in BP Suspend in ES					ВІ	P Suspend	d in Erase Susp	end					

5//

Table 42. Command Interface states - modify table, next state<sup>(1)</sup> (continued)

							Com	mand Input					
Current	CI State	Read Array <sup>(2)</sup> (FFh)	Program Setup <sup>(3)(4)</sup> (10/40h)	Buffer Program (3)(4) (E8h)	Block Erase, Setup <sup>(3)(4)</sup> (20h)	BEFP Setup (80h)	Blank Check setup (BCh)	Erase Confirm P/E Resume, Block Unlock confirm, BEFP Confirm <sup>(3)(4)</sup> (D0h)	Blank Check confirm (CBh)		Read Status Register (70h)	Register (5)	Read Electronic Signature , Read CFI Query (90h, 98h)
Blank	Setup				Ready (erro	or)			Blank Check Ready (error) busy				
Check	Busy	Blank Check busy	IS in Blank Check busy	Blank Check busy	IS in Blank			Blank Check busy					
	Setup in Suspend	Erase Suspend (Lock Error)						Erase Suspend	Frase Suspend (Lock Error)				
Buffer	Setup			Ready (	(error)			BEFP Busy Ready (error)					
EFP	Busy						BE	BEFP Busy <sup>(6)</sup>					

- CI = Command Interface, CR = Configuration register, BEFP = Buffer Enhanced Factory program, P/E C = Program/Erase controller, IS = Illegal State, BP = Buffer Program, ES = Erase Suspend.
- 2. At power-up, all banks are in Read Array mode. Issuing a Read Array command to a busy bank, results in undetermined data output.
- 3. The two cycle command should be issued to the same bank address.
- 4. If the P/E C is active, both cycles are ignored.
- 5. The Clear Status Register command clears the SR error bits except when the P/E C. is busy or suspended.
- 6. BEFP is allowed only when Status Register bit SR0 is reset to '0'. BEFP is busy if Block Address is first BEFP Address. Any other commands are treated as data.

Table 43. Command Interface states - modify table, next output state<sup>(1) (2)</sup>

		Command Input										
Current CI State	Read Array (3) (FFh)	Program Setup <sup>(4)</sup> (5) (10/40h)	Buffer Program (E8h)	Block Erase, Setup <sup>(4)</sup> (5)	BEFP Setup (80h)	Blank Check setup (BCh)	Erase Confirm P/E Resume, Block Unlock confirm, BEFP Confirm <sup>(4)(5)</sup> (D0h)	Blank Check confir m (CBh)	Program/ Erase Suspend (B0h)	Read Status Register (70h)	Clear Status Register (50h)	Read Electronic signature, Read CFI Query (90h, 98h)
Program Setup												
Erase Setup												
OTP Setup												
Program Setup in Erase Suspend												
BEFP Setup												
BEFP Busy												
Buffer Program Setup												
Buffer Program Load 1												
Buffer Program Load 2												
Buffer Program Confirm							Status Register					
Buffer Program Setup in Erase Suspend												
Buffer Program Load 1 in Erase Suspend												
Buffer Program Load 2 in Erase Suspend												
Buffer Program Confirm in Erase Suspend												
Blank Check setup												
Lock/CR Setup												
Lock/CR Setup in Erase Suspend												

Table 43. Command Interface states - modify table, next output state<sup>(1)</sup> (continued)

		Command Input										
Current CI State	Read Array (3) (FFh)	Program Setup <sup>(4)</sup> (5) (10/40h)	Buffer Program (E8h)	Block Erase, Setup <sup>(4)</sup> (5)	BEFP Setup (80h)	Blank Check setup (BCh)	Erase Confirm P/E Resume, Block Unlock confirm, BEFP Confirm <sup>(4)(5)</sup> (D0h)	Blank Check confir m (CBh)	Program/ Erase Suspend (B0h)	Read Status Register (70h)	Clear Status Register (50h)	Read Electronic signature, Read CFI Query (90h, 98h)
OTP Busy												Status Register
Ready												
Program Busy												
Erase Busy												
Buffer Program Busy												
Program/Erase Suspend												
Buffer Program Suspend	Array		Status Register					Output Unchanged				Electronic
Program Busy in Erase Suspend											Signature/ CFI	
Buffer Program Busy in Erase Suspend												
Program Suspend in Erase Suspend												
Buffer Program Suspend in Erase Suspend												
Blank Check busy												
Illegal State		Output Unchanged										

The output state shows the type of data that appears at the outputs if the bank address is the same as the command
address. A bank can be placed in Read Array, Read Status Register, Read Electronic Signature or Read CFI mode,
depending on the command issued. Each bank remains in its last output state until a new command is issued to that bank.
The next state does not depend on the bank output state.

- 4. The two cycle command should be issued to the same bank address.
- 5. If the P/E.C. is active, both cycles are ignored.

<sup>2.</sup> CI = Command Interface, CR = Configuration Register, BEFP = Buffer Enhanced Factory Program, P/E. C. = Program/Erase Controller.

<sup>3.</sup> At Power-Up, all banks are in Read Array mode. Issuing a Read Array command to a busy bank, results in undetermined data output.

Table 44. Command interface states - lock table, next state<sup>(1)</sup>

					Comman	d Input									
Curre	nt CI State	Lock/CR Setup <sup>(2)</sup> (60h)	Setup' /     Down   Colliffi  /2/   - 9												
F	Ready	Lock/CR Setup	OTP Setup			Ready			N/A						
Lock/CR Setup		Ready (Lock	error)		Ready		Ready	(Lock error)	N/A						
	Setup			(	OTP Busy		•		N/A						
ОТР	Busy	IS in OTP B	usy			OTP Bus	у		Ready						
	IS in OTP busy	OTP Busy							IS Ready						
	Setup			Pr	ogram Busy				N/A						
	Busy	IS in Program	Busy			Program Bi	ısy		Ready						
Program	IS in Program busy	Program busy							IS Ready						
	Suspend	IS in PS Program Suspend							IS in PS Program Suspend						N/A
	IS in PS		Program Suspend												
	Setup	Buffer Program Load 1 (give word count load (N-1));													
	Buffer Load 1		Buffer Program Load 2 <sup>(6)</sup> Exit see note <sup>(6)</sup>												
	Buffer Load 2		Buffer Program Confirm when count =0; Else Buffer Program Load 2 (note: Buffer Program will fail at this point if any block address is different from the first address)												
	Confirm			Re	eady (error)				N/A						
Buffer Program	Busy	IS in BP Bu	ısy		В	uffer Progran	n Busy		Ready						
	IS in Buffer Program busy			Buffer	Program Bu	sy			IS Ready						
	Suspend	IS in BP Sus	pend		Buf	fer Program S	Suspend								
	IS in BP Suspend	Buffer Program Suspend													
	Setup	Ready (error)													
	Busy	IS in Erase E	Erase Bus	Erase Busy											
Erase	IS in Erase busy	Erase Busy							IS ready						
	Suspend	Lock/CR Setup in ES													
	IS in ES			Era	se Suspend				. N/A						

Table 44. Command interface states - lock table, next state<sup>(1)</sup> (continued)

					Comman	d Input						
Current CI State							Illegal Command <sup>(4)</sup>	P/E C operation completed (5)				
	Setup	Program Busy in Erase Suspend										
	Busy	IS in Program bu	sy in ES		Prograr	n Busy in Era	se Suspend		ES			
Program in Erase Suspend	IS in Program busy in ES			Program Bu	sy in Erase S	Suspend			IS in ES			
	Suspend	IS in PS in	ES		Program	Suspend in E	rase Suspen	d	N/A			
	IS in PS in ES		Program Suspend in Erase Suspend									
	Setup	Buff	Buffer Program Load 1 in Erase Suspend (give word count load (N-1))									
	Buffer Load 1	Buffer	Buffer Program Load 2 in Erase Suspend <sup>(7)</sup> Exit see note <sup>(7)</sup>									
	Buffer Load 2	Buffer Program Confirm in Erase Suspend when count =0; Else Buffer Program Load 2 in Erase Suspend (note: Buffer Program will fail at this point if any block address is different from the first address)										
Buffer	Confirm	Erase Suspend (sequence error)										
Program in Erase Suspend	Busy	IS in BP busy in ES Buffer Program Busy in Erase Suspend						nd	ES			
Suspend	IS in BP busy in ES		BP busy in ES						BP busy in ES			IS in ES
	Suspend	IS in BP suspen	IS in BP suspend in ES Buffer Program Suspend in Erase Suspend									
	IS in BP Suspend in ES	Buffer Program Suspend in Erase Suspend										
Blank	Setup	Ready (error)							N/A			
Check	Blank Check busy	IS in Blank Check busy Blank Check busy						Ready				
Lock/CR	Setup in ES	Erase Suspend (Lock error) Erase Suspend Erase Suspend (Lock error)										
BEFP	Setup	Ready (error)										
DEFF	Busy		BEF	P Busy <sup>(8)</sup>			Exit	BEFP Busy <sup>(8)</sup>	N/A			

CI = Command Interface, CR = Configuration register, BEFP = Buffer Enhanced Factory program, P/E C = Program/Erase controller, IS = Illegal State, BP = Buffer program, ES = Erase suspend, WA0 = Address in a block different from first BEFP address.

- 2. If the P/E C is active, both cycle are ignored.
- 3. BEFP Exit when Block Address is different from first Block Address and data are FFFFh.
- 4. Illegal commands are those not defined in the command set.
- 5. N/A: not available. In this case the state remains unchanged.
- 6. If N=0 go to Buffer Program Confirm. Else (not =0) go to Buffer Program Load 2 (data load)
- 7. If N=0 go to Buffer Program Confirm in Erase suspend. Else (not =0) go to Buffer Program Load 2 in Erase suspend.
- 8. BEFP is allowed only when Status Register bit SR0 is set to '0'. BEFP is busy if Block Address is first BEFP Address. Any other commands are treated as data.

Table 45. Command interface states - lock table, next output state (1) (2)

	Command Input									
Current CI State	Lock/CR Setup <sup>(3)</sup> ( 60h)	Blank Check setup (BCh)	OTP Setup <sup>(3)</sup> (C0h)	Blank Check confirm (CBh)	Block Lock Confirm (01h)	Block Lock- Down Confirm (2Fh)	Set CR Confirm (03h)	BEFP Exit <sup>(4)</sup> (FFFFh)	Illegal Command (5)	P. E./C. Operation Completed
Program Setup										
Erase Setup										
OTP Setup										
Program Setup in Erase Suspend										
BEFP Setup										
BEFP Busy										
Buffer Program Setup										
Buffer Program Load 1										
Buffer Program Load 2					Status Regis	ter				_
Buffer Program Confirm										Output Unchanged
Buffer Program Setup in Erase Suspend										
Buffer Program Load 1 in Erase Suspend										
Buffer Program Load 2 in Erase Suspend										
Buffer Program Confirm in Erase Suspend										
Blank Check setup										
Lock/CR Setup										
Lock/CR Setup in Erase Suspend			Stat	us Register			Array	Status	Register	

Table 45. Command interface states - lock table, next output state (continued)<sup>(1)</sup> (2)

				Command Input							
Current CI State	Lock/CR Setup <sup>(3)</sup> ( 60h)	Blank Check setup (BCh)	OTP Setup <sup>(3)</sup> (C0h)	Blank Check confirm (CBh)	Block Lock Confirm (01h)	Block Lock- Down Confirm (2Fh)	Set CR Confirm (03h)	BEFP Exit <sup>(4)</sup> (FFFFh)	Illegal Command (5)	P. E./C. Operation Completed	
OTP Busy											
Ready											
Program Busy											
Erase Busy											
Buffer Program Busy											
Program/Erase Suspend											
Buffer Program Suspend	St	atus Regist	er		Output U	nchanged	Array	Output Unchanged			
Program Busy in Erase Suspend											
Buffer Program Busy in Erase Suspend											
Program Suspend in Erase Suspend											
Buffer Program Suspend in Erase Suspend											
Blank Check busy											
Illegal State					Output U	Jnchanged					

The output state shows the type of data that appears at the outputs if the bank address is the same as the command address. A bank can be placed in Read Array, Read Status Register, Read Electronic Signature or Read CFI mode, depending on the command issued. Each bank remains in its last output state until a new command is issued to that bank. The next state does not depend on the bank's output state.

- 3. If the P/E.C. is active, both cycles are ignored.
- 4. BEFP Exit when Block Address is different from first Block Address and data are FFFFh.
- 5. Illegal commands are those not defined in the command set.

<sup>2.</sup> CI = Command Interface, CR = Configuration Register, BEFP = Buffer Enhanced Factory Program, P/E. C. = Program/Erase Controller.

## **Revision history**

Table 46. Document revision history

Date	Revision	Changes
17-Feb-2006	0.1	Initial release.
30-Jun-2006	0.2	Document status promoted from Target Specification to Preliminary data. Small text changes.  By default CR10 = 1 and CR8 = 1 (see Table 11: Configuration Register). Table 12: Burst type definition modified.  Figure 5: X-Latency and data output configuration example modified.  Section 7.1: Asynchronous Read mode and Section 7.3: Single Synchronous Read mode modified.  In Table 17: Program/Erase times and endurance cycles:  - Main Block Program at V <sub>PP</sub> = V <sub>DD</sub> modified  - Buffer, Main Block and Bank Program modified, and Blank Check timings added at V <sub>PP</sub> = V <sub>PPH</sub> t <sub>VDHPH</sub> changed in Table 27: Reset and Power-up AC characteristics.  t <sub>WHLL</sub> and Note 3 modified in Table 25: Write AC characteristics, Write Enable controlled.
26-Feb-2007	1	Document status promoted from Preliminary data to full Datasheet. Address lines corrected in Figure 3: Memory map. Set Configuration Register is not accepted during Program Suspend but it is accepted during Erase Suspend (see Figure 24: Erase Suspend & Resume flowchart and pseudocode).  Figure 10: Asynchronous Page Read AC waveforms modified.  Appendix D: Command interface state tables modified.

#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED ST REPRESENTATIVE, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2007 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

