

Utopia Level 3
Master/Master Bridge
Datasheet

CONTENTS

1	INTRODUCTION	3
1.1	UTOPIA OVERVIEW.....	3
2	UTOPIA MASTER/MASTER BRIDGE APPLICATION	4
3	UTOPIA LEVEL 3 (L3) BRIDGE CORE FEATURES	5
4	APPLICATION.....	6
5	CORE PINOUT	7
5.1	SIGNAL DESCRIPTIONS	8
6	GLOBAL SIGNAL DISTRIBUTION	12
7	FUNCTIONAL DESCRIPTION – UTOPIA INTERFACE	13
7.1	UTOPIA INTERFACE SINGLE PHY TRANSMIT INTERFACE	13
	Single Cell Transfer	13
	Back to Back Cells Transfer	13
7.2	UTOPIA INTERFACE SINGLE PHY RECEIVE INTERFACE	14
	Cell Level Transfer – Single Cell	14
	Cell Level Transfer – Back to Back Cells.....	15
8	CORE MANAGEMENT AND ERROR HANDLING	16
9	COMPLEXITY AND PERFORMANCE SUMMARY.....	17
9.1	TIMING PARAMETERS DEFINITION	17
9.2	ECLIPSE IMPLEMENTATION	18
10	DEVICE PINOUT	20
10.1	SIGNALS OVERVIEW	20
10.2	PACKAGES	21
10.3	PQ208 PQFP PINOUT TABLE (BM338, BM3316).....	22
10.4	PQ208 PQFP DEVICE DIAGRAM.....	23
10.5	PT280 FPBGA PINOUT TABLE (BM3332)	24
10.6	PT280 FPBGA DEVICE DIAGRAM.....	24
11	REFERENCES	26
12	CONTACT	26

1 Introduction

1.1 Utopia Overview

The Utopia (Universal Test & Operations PHY Interface for ATM) interface is defined by the ATM Forum to provide a standard interface between ATM devices and ATM PHY or SAR (segmentation and Re-assembly) devices.

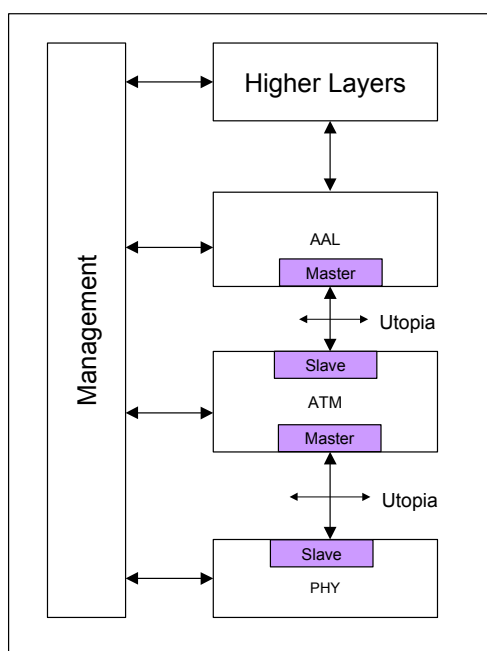


Figure 1: Utopia Reference Model

The Utopia Standard defines a full duplex bus interface with a Master/Slave paradigm. The Slave interface responds to the requests from the Master. The Master performs PHY arbitration and initiates data transfers to and from the Slave device.

The ATM forum has standardized the Utopia Levels 1 (L1) to 3 (L3). Each level extends the maximum supported interface speed from OC3, 155Mbps (L1) over OC12, 622Mbps (L2) to 3.2Gbit/s (L3).

The following Table 1 gives an overview of the main differences in these three levels.

Table 1: Utopia Level Differences

Utopia Level	Interface Width	Max. Interface Speed	Theoretic (typical) Throughput
1	8 bit	25 MHz	200Mbps (typ. OC3 155Mbps)
2	8 bit, 16 bit	50 MHz	800Mbps (typ. OC12 622Mbps)
3	8 bit, 32 bit	104MHz	3.2Gbps (typ. OC 48 2.5GBps)

Utopia Level 1 implements an 8-bit interface running at up to 25MHz. Level 2 adds a 16 Bit interface and increases the speed to 50MHz. Level 3 extends the interface further by a 32 Bit word-size and speeds up to 104MHz providing rates up to 3.2 Gbit/s over the interface.

In addition to the differences in throughput, Utopia Level 2 uses a shared bus offering to physically share a single interface bus between one master and up to 31 slave devices (Multi-PHY or MPHY operation). This allows the implementation of aggregation units that multiplex several slave devices to a single Master device. The Level 1 and Level 3 are point-to-point only, whereas Level 1 has no notion of multiple slaves. Level 3 still has the notion of multiple slaves, but they must be implemented in a single physical device connected to the Utopia Interface.

2 Utopia Master/Master Bridge Application

As it is not possible to connect two Slave devices together, the Master/Master Bridge provides the necessary interfaces to convey between two Slave devices as shown in Figure 2.

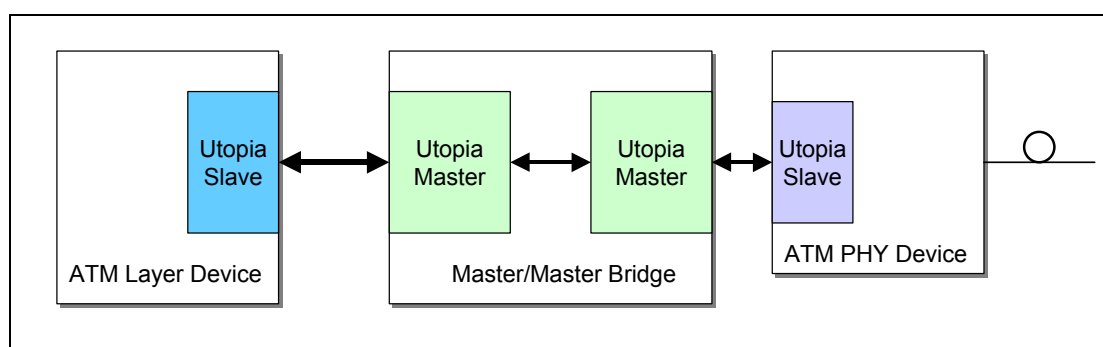


Figure 2: Utopia Master Bridge

The Bridge automatically transfers data as soon as it becomes available from one side to the other. Internal asynchronous FIFOs enable independent clock domains for each interface.

3 Utopia Level 3 (L3) Bridge Core Features

- Implements two Utopia L3 Masters providing a solution to bridge Utopia Slave devices
- Compliant with ATM-Forum af-phy-0136.000 (Utopia L3)
- Available with 8bit (BM338), 16bit (BM3316), 32bit (BM3332) data bus widths
- Meets 104MHz performance offering up to 3.2Gbps cell rate transfers (32 bit)
- Single chip solution for improved system integration
- Support cell level transfer mode
- Cell and clock rate decoupling with on chip FIFOs
- Up to 1.5 KByte of on chip FIFO per data direction
- Integrated management interface and built-in errored cell discard
- ATM Cell size programmable via external pins from 16 to 128 bytes
- Optional Utopia parity generation/checking enable/disable via external pin
- Built in JTAG port (IEEE1149 compliant)
- Simulation model available for system level verification (Contact Quicklogic or MorethanIP for details)
- Solution also available as flexible Soft-IP core, delivered with a full device modelization and verification testbenches.

4 Application

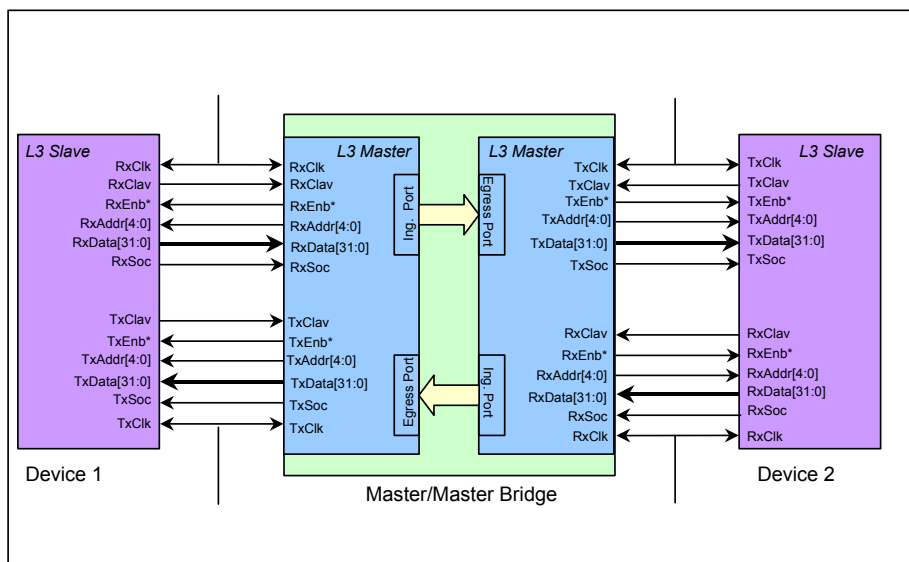


Figure 3: Master/Master Bridge connecting two Slave Devices

Data flows from the Bridge's RX Ports to the corresponding TX Ports on the other side of the bridge.

5 Core Pinout

On the Utopia interfaces, the Core implements all the required Utopia signals and provides all the Utopia optional signals (Indicated by an 'O' in the following tables). The optional Utopia signals are activated during the Core configuration and inactive Utopia signals should be left unconnected (Outputs) or tied to a zero logic level (inputs) as specified in the following Tables.

In addition to the Utopia Interface signals, error indication signals are available for error monitoring or statistics. An error indication always shows that a cell has been discarded by the bridge. Possible errors are parity or cell-length errors on the receive interface of the corresponding Utopia Interfaces.

All Utopia interfaces work in the same transfer mode (cell level). A mix is not possible.

To identify the sides of the core the notion "WEST" and "EAST" for the corresponding interfaces will be used.

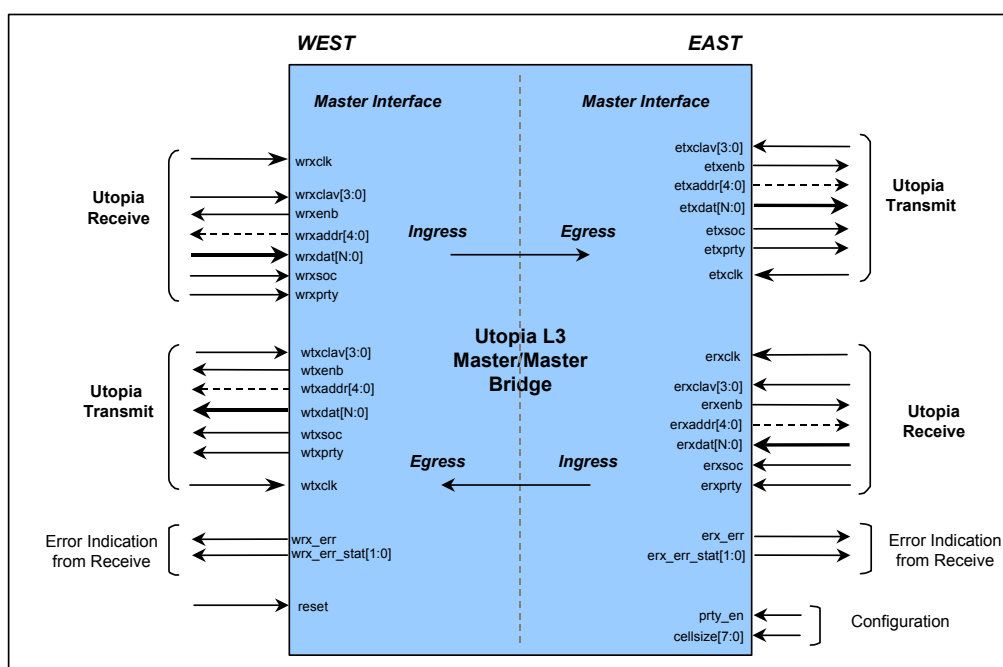


Figure 4: Utopia Level 3 Master/ Master Bridge Top Entity

5.1 Signal descriptions

Table 2: Global Signal

Pin	Mode	Description
reset	In	Active high chip reset.

Table 3: Device Management Interface

Pin	Mode	Description
wrx_err	Out	Receive error indication on west receive interface. When driven high, indicates that an errored cell (Wrong parity or wrong length) was received from the device connected to the west interface and is discarded.
wrx_err_stat(1:0)	Out	Receive error status information for west receive interface. When wrx_err is driven, indicates the error status of the discarded cell: - wrx_err_stat(0) : When set to '1' indicates that a cell is discarded because of a parity error. - wrx_err_stat(1) : When set to '1' indicates that a cell is discarded because it has a wrong length (Consecutive assertion of <code>ut_tx_soc</code> on the Utopia interface within less than a complete cell time).
erx_err	Out	Receive error indication on east receive interface(s). When driven high, indicates that an errored cell (Wrong parity or wrong length) was received from the device connected to the east interface side.
erx_err_stat(1:0)	Out	Receive error status information for east receive interface. When erx_err is driven, indicates the error status of the discarded cell: - erx_err_stat(0) : When set to '1' indicates that a cell is discarded because of a parity error. - erx_err_stat(1) : When set to '1' indicates that a cell is discarded because it has a wrong length (Consecutive assertion of <code>ut_tx_soc</code> on the Utopia interface within less than a complete cell time).

Note: wrx_... signals are sampled with west receive clock (wrxclk). erx_... signals are sampled with west transmit clock (wtxclk).

Table 4: West Utopia Master Transmit Interface

Pin	Mode	Description
wtxclk	In	104MHz transmit byte clock. The Core samples all Utopia Transmit signals on txclk rising edge.
wtxdata[N:0]	Out	Transmit data bus. The width of the data bus can be 8 or 16 or 32bit. Bit N is the MSB.

wtxprty	Out	Transmit data bus parity. Standard odd or non-standard even parity can be optionally checked by the connected Slave. When the parity check is disabled during the Core configuration, or not used in the design, the pin txprty should be left open.
wtxsoc	Out	Transmit start of cell. Asserted by the Master to indicate that the current word is the first word of a cell.
wtxenb	Out	Active low transmit data transfer enable.
wtxclav[0]	In	Cell buffer available. Asserted in octet level transfers to indicate to the Master that the FIFO is almost full (Active low) or, in cell level transfers, to indicate to the Master that the PHY port FIFO has space to accept one cell.
wtxclav[3:1] (O)	In	Extra FIFO Full / Cell buffer available. In MPHY mode and when direct status indication is selected during the Core configuration, one txclav signal is implemented per PHY port. The maximum number of clav signals is limited to four.
wtxaddr[4:0]	Out	Utopia transmit address. When the Core operates in MPHY mode, address bus used during polling and slave port selection. Bit 4 is the MSB. txaddr(4:0) becomes optional (And should be left open) when the Core does not operate in MPHY mode.

Note: (O) indicates optional signals.

Table 5: West Utopia Master Receive Interface

Pin	Mode	Description
wrxclk	In	104MHz receive byte clock. The Core samples all Utopia Receive signals on rxclk rising edge.
wrxdata[N:0]	In	Receive data bus. The width of the data bus can be 8,16 or 32 bit. Bit N is the MSB.
wrxprty (O)	In	Receive data bus parity. Standard odd or non standard even parity can be optionally generated by the Utopia Slave Core. When the parity generation is disabled during the Core configuration, the pin rxprty can be let unconnected.
wrxsoc	In	Receive start of cell. Asserted to indicate that the current word is the first word of a cell.
wrxenb	Out	Active low transmit data transfer enable.
wrxclav[0]	In	Cell buffer available. Asserted in octet level transfers to indicate to the Master that the FIFO is almost empty (Active low) or, in cell level transfers, to indicate to the Master that the PHY port FIFO has space one cell available in the FIFO.
wrxclav[3:1] (O)	In	Extra FIFO Full / Cell buffer available. In MPHY mode and when direct status indication is selected, one rxclav signal is implemented per PHY port. The maximum number of clav signals

		is limited to four.
wrxaddr(4:0)	Out	Utopia receive address. When the Core operates in MPHY mode, address bus used during polling and slave port selection. Bit 4 is the MSB. txaddr(4:0) becomes optional (And should be left open) when the Core does not operate in MPHY mode.

Table 6: East Utopia Master Transmit Interface

Pin	Mode	Description
etxclk	In	104MHz transmit byte clock. The Core samples all Utopia Transmit signals on txclk rising edge.
etxdata[N:0]	Out	Transmit data bus. The width of the data bus is user programmable and can be set to 8 or 16 or 32 bit. Bit N is the MSB.
etxppty	Out	Transmit data bus parity. Standard odd or non-standard even parity can be optionally checked by the connected Slave. When the parity check is disabled during the Core configuration, or not used in the design, the pin txppty should be left open.
etxsoc	Out	Transmit start of cell. Asserted by the Master to indicate that the current word is the first word of a cell.
etxenb	Out	Active low transmit data transfer enable.
etxclav[0]	In	Cell buffer available. Asserted in octet level transfers to indicate to the Master that the FIFO is almost full (Active low) or, in cell level transfers, to indicate to the Master that the PHY port FIFO has space to accept one cell.
etxclav[3:1] (O)	In	Extra FIFO Full / Cell buffer available. In MPHY mode and when direct status indication is selected during the Core configuration, one txclav signal is implemented per PHY port. The maximum number of clav signals is limited to four.
etxaddr[4:0]	Out	Utopia transmit address. When the Core operates in MPHY mode, address bus used during polling and slave port selection. Bit 4 is the MSB. txaddr(4:0) becomes optional (And should be left open) when the Core does not operate in MPHY mode.

Note: (O) indicates optional signals.

Table 7: East Utopia Master Receive Interface

Pin	Mode	Description
erxclk	In	104MHz receive byte clock. The Core samples all Utopia Receive signals on rxclk rising edge.

erxdata[N:0]	In	Receive data bus. The width of the data bus can be 8,16 or 32 bit. Bit N is the MSB.
erxppty (O)	In	Receive data bus parity. Standard odd or non standard even parity can be optionally generated by the Utopia Slave Core. When the parity generation is disabled during the Core configuration, the pin rxppty can be let unconnected.
erxsoc	In	Receive start of cell. Asserted to indicate that the current word is the first word of a cell.
erxenb	Out	Active low transmit data transfer enable.
erxclav[0]	In	Cell buffer available. Asserted in octet level transfers to indicate to the Master that the FIFO is almost empty (Active low) or, in cell level transfers, to indicate to the Master that the PHY port FIFO has space one cell available in the FIFO.
rxclav[3:1] (O)	In	Extra FIFO Full / Cell buffer available. In MPHY mode and when direct status indication is selected, one rxclav signal is implemented per PHY port. The maximum number of clav signals is limited to four.
erxaddr(4:0)	Out	Utopia receive address. When the Core operates in MPHY mode, address bus used during polling and slave port selection. Bit 4 is the MSB. taddr(4:0) becomes optional (And should be left open) when the Core does not operate in MPHY mode.

Table 8: Device Configuration Pins

Pin	Mode	Description
prty_en	In	Enable parity checking on the Utopia interface. If disabled (tied to 0), the wrx_err_stat(0) signal can be ignored and left open and the rx parity input should be tied to 0. Also the tx parity pins can be left open.
cellsize[7:0]	In	Define cellsize: sets the size in bytes of a cell. Binary value to be set usually by board wiring. For 16 bit implementations the size must be a multiple of 2. For 32 bit implementations the size must be a multiple of 4.

The configuration pins are not intended for change during operation. They are usually board wired to configure the device for operation.

6 Global Signal Distribution

The externally provided Utopia Transmit and Receive clocks are connected to global resources to provide low skew and fast chip level distribution. In both data directions, the two corresponding Utopia Interfaces are decoupled by asynchronous FIFOs.

Therefore each interface runs completely independently each at its own *tx* and *rx* clocks which typically are 104MHz.

The Error indications of the two receive interfaces are always sampled within the west clock domains. The errors of the east rx interface is available on the *erx_err* signal, which is handled using the west clock domain (*wtxclk*). The west rx error is directly derived from the west rx block (*wrxclk*).

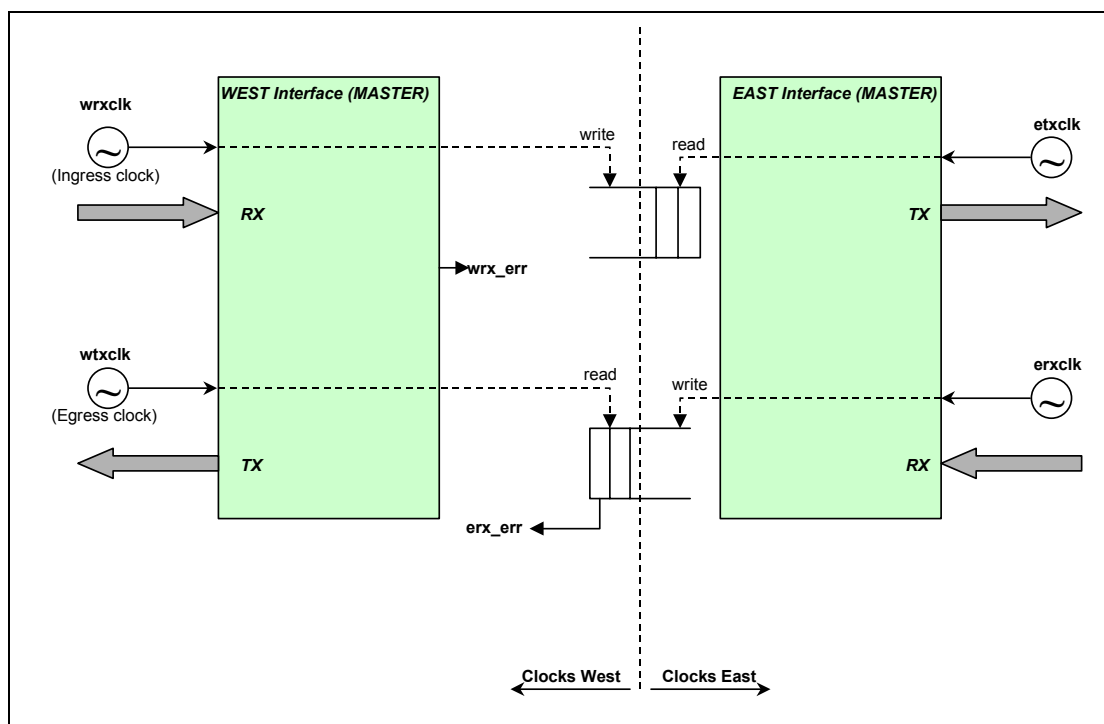


Figure 5: Master/Master Bridge Clock Distribution

7 Functional Description – Utopia Interface

The Utopia Bridge operates in single PHY mode. Therefore no address bus and only a single status pin (clav[0]) per direction is used on the interfaces.

7.1 Utopia Interface Single PHY Transmit Interface

The Transmit interface is controlled by the ATM layer.

The transmit interface has data flowing in the same direction as the ATM enable `ut_txenb`. The ATM transmit block generates all output signals on the rising edge of the `ut_txclk`.

Transmit data is transferred from the ATM layer to PHY layer via the following procedure. The Core indicates it can accept data using the `ut_txclav` signal, then the ATM layer drives data onto `ut_txdat` and asserts `ut_txenb`.

When a cell transfer is initiated, the Master or the Slave cannot pause the transfer by any means.

Single Cell Transfer

The Slave asserts `ut_txclav` **1** when it is capable of accepting the transfer of a whole cell. The Core asserts `ut_txenb` (Low) to indicate that it drives valid data to the Slave **2**. Together with the first word of a cell, the Core device asserts `ut_txsoc` for one clock cycle **3**.

To ensure that the ATM Layer (Core) does not cause transmit overrun, the Slave de-asserts `ut_txclav` when `ut_txsoc` is de-asserted by the Core **4**.

To complete the cell transfer, the Core de-asserts the Utopia enable signal `ut_txenb` **5**.

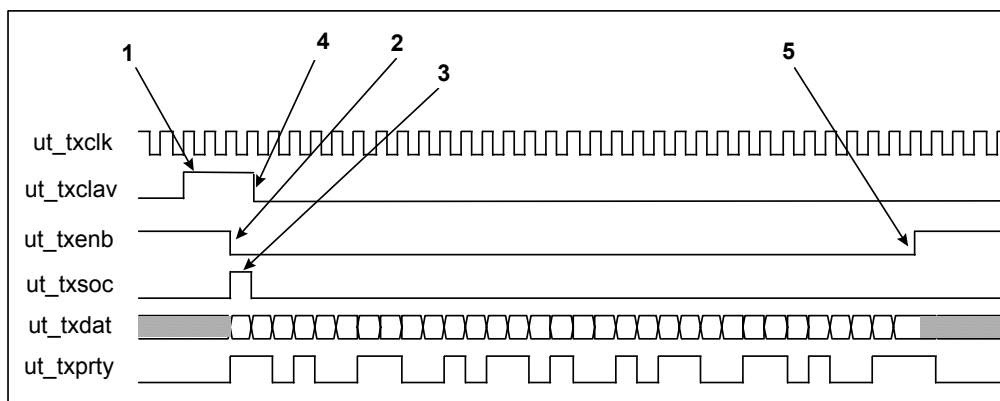


Figure 6: Single Cell Transfer – Cell Level Transfer

Back to Back Cells Transfer

When, during a cell transfer, the Slave is able to receive a subsequent cell, the Core keeps `ut_txenb` asserted between two cells **1** and asserts `ut_txsoc`, to start a new cell transfer, immediately after the last word of the previous cell **2**.

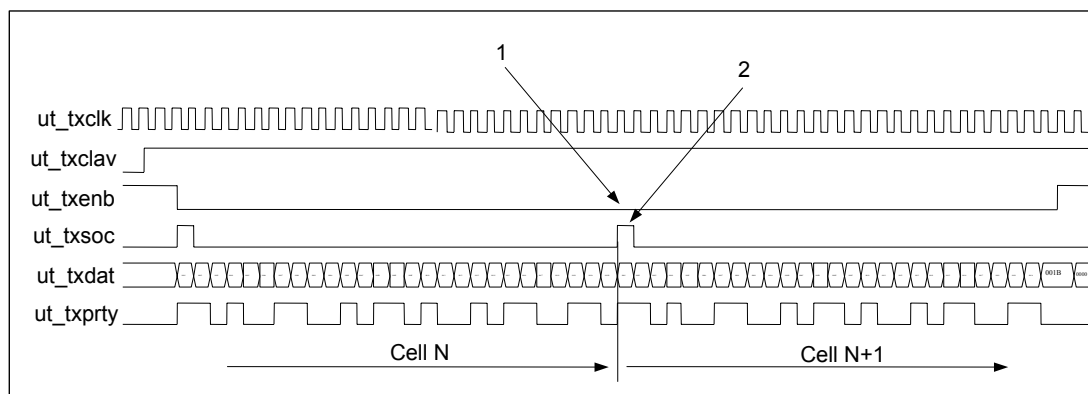


Figure 7: Back to Back Cell Transfer

7.2 Utopia Interface Single PHY Receive Interface

The Receive interface is controlled by the Master interface. The receive interface has data flowing in the opposite direction to the Master's enable **ut_rxenb**.

Receive data is transferred from the Slave to the Master via the following procedure. The Slave indicates it has valid data, then the Master asserts **ut_rxenb** to read this data from the Slave. The Master indicates valid data (thereby controlling the data flow) via the **ut_rxclav** signal.

When a cell transfer is initiated, the transfer cannot be paused by the Master or the Slave.

Cell Level Transfer – Single Cell

The Slave asserts **ut_rxclav** when it is ready to send a complete cell to the Master **1**. The Master interface asserts **ut_rxenb** to start the cell transfer **2**. The Slave samples **ut_rxenb** and start driving data on the following clock edge **3**. The Slave asserts **ut_rxsoc** together with the cell first word to indicate the start of a cell **4**.

The Master drives **ut_txenb** high two clock cycles before the expected end of the current cell if the Slave has no more cell to transfer **5**. The Slave de-asserts **ut_rxclav** to indicate that no new cell is available **6** together with the start of cell indication.

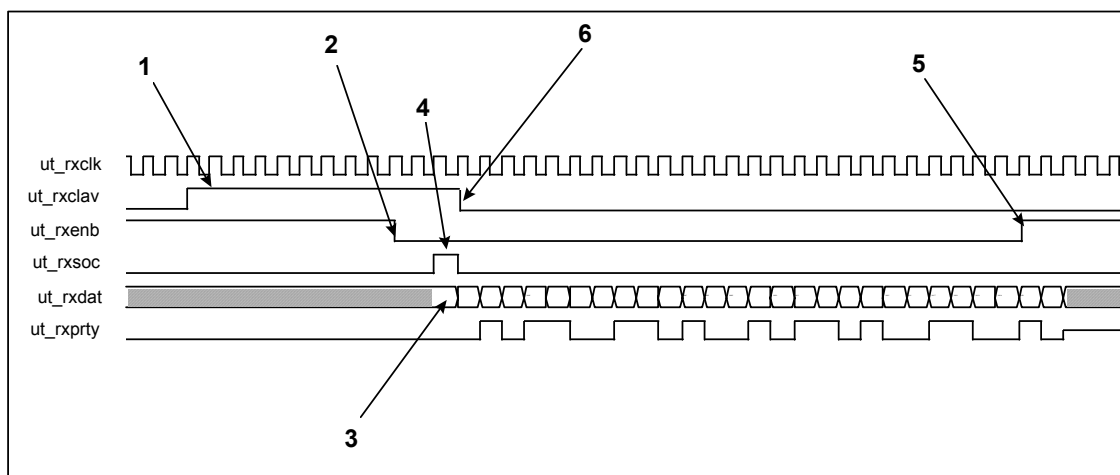


Figure 8: Single Cell Transfer

Cell Level Transfer – Back to Back Cells

If the Master keeps `ut_rxenb` asserted at the end of a cell transfer **1** and if the Slave has a new cell to send, the Slave keeps `ut_rxclav` drives the new cell asserting `ut_rxsoc` to indicate the start of a new cell **2**.

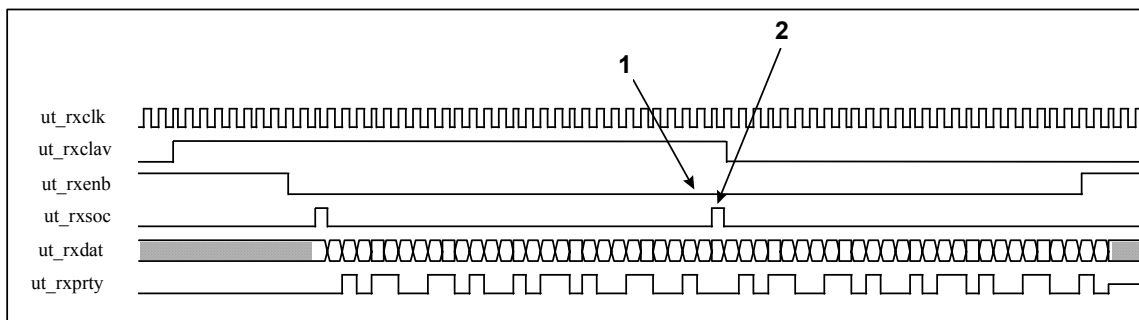


Figure 9: Back to Back Cells Transfer

8 Core Management and Error Handling

On Ingress, the Utopia Master Blocks are designed to handle and report Utopia errors such as Parity error or wrong cell length. Errored cells are discarded with an error status provided on pins for use by external management facilities.

The error handling only applies to the corresponding receive parts of the Core (i.e. Ingress Ports).

When an errored cell is received on the Utopia interface, the Core discards the complete cell and provides a cell discard indication (Signal `eg_err` asserted) **1** together with a cell discard status (Signal `eg_err_stat(1:0)`) **2**.

Note: `eg_err` is routed to the corresponding `wrx_err` and `erx_err` respectively (see Figure 4).

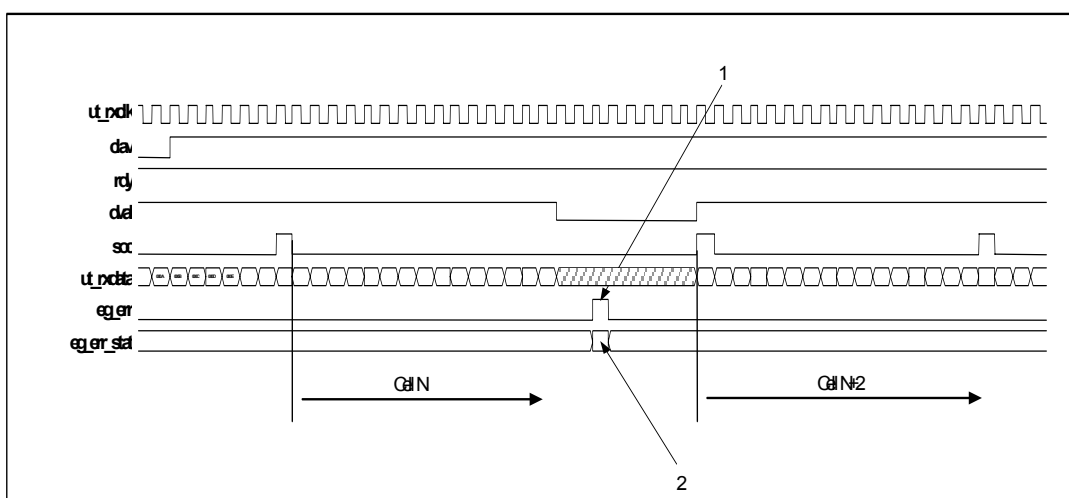


Figure 10: Cell Discard Indication

Table 9: Error Status Word Bit Coding

Error Status Bit	Name	Description
0	PARITY_ERR	Valid when <code>wrx/erx_err</code> is asserted. If set to one indicates that a cell is discarded with a parity error decoded by the Core.
1	LENGTH_ERR	Valid when <code>wrx/erx_err</code> is asserted. If set to one indicates that a cell is discarded with a cell length error detected on the Utopia interface.

The signals are sampled on the corresponding clocks from the west interface:

- `erx_...` sampled with `wtxclk` (west transmit clock)
- `wrx_...` sampled with `wrxclk` (west receive clock)

9 Complexity and Performance Summary

9.1 Timing Parameters Definition

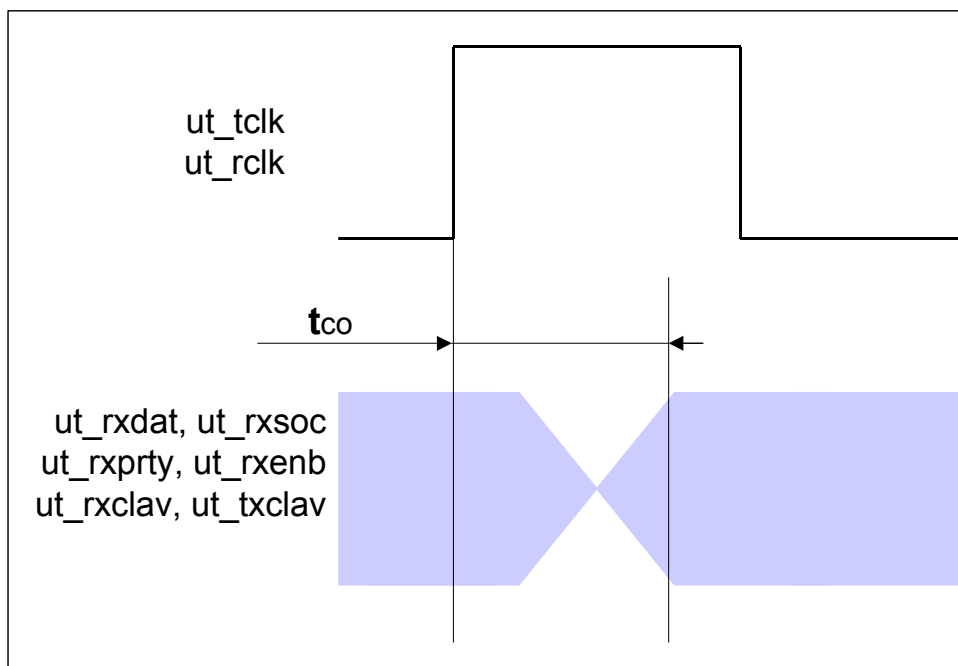


Figure 11: Tco Timing Parameter Definition

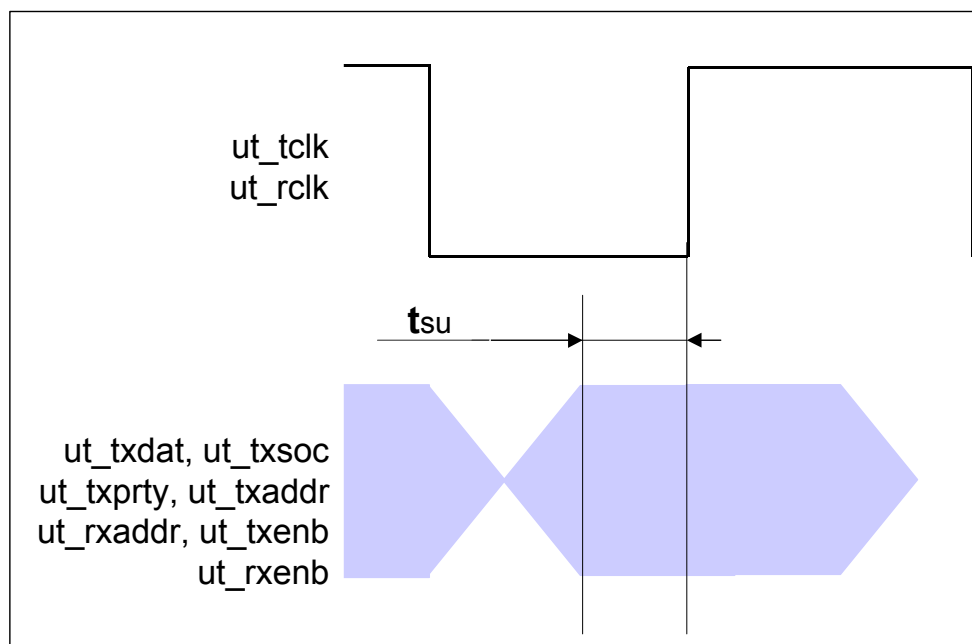


Figure 12: Tsu Timing Parameter Definition

9.2 Eclipse Implementation

Table 10: Eclipse Implementation Summary

Utopia Interface	MPHY	FIFO depth		Selected Options	Implementation	
		Ingress	Egress	Parity	Cells	RAM Blocks
32 Bit	1	128 per port	128 per port	odd	1158	18
16 Bit	1	256 per port	128 per port	odd	1082	22
8 Bit	1	512 per port	256 per port	odd	866	14

Table 11: 32-Bit Utopia Interface Timing Characteristics QL6325-PT280

Parameter	typ	Max (worst)		Unit
		-6	-7	
t_{co}	7.0		6.5	ns
t_{su}	2.5		2.0	ns
wrxclk			95	MHz
wtxclk			101	MHz
erxclk			104	MHz
etxclk			104	MHz
minimum reset time	50			ns

Note: QL6325 with timing model "worst" used.

Table 12: 16-Bit Utopia Interface Timing Characteristics QL6325-PQ208

Parameter	typ	Max (worst)		Unit
		-6	-7	
t _{co}	7.0	9.1	6.0	ns
t _{su}	2.5	3.0	1.8	ns
wrxclk			104	MHz
wtxclk			104	MHz
erxclk			104	MHz
etxclk			115	MHz
minimum reset time	50			ns

Note: QL6325 with timing model "worst" used.

8-Bit Utopia Interface Timing Characteristics QL6250-PQ208

Parameter	typ	Max (worst)		Unit
		-6	-7	
t _{co}	7.0		6.0	ns
t _{su}	2.5		1.9	ns
wrxclk			108	MHz
wtxclk			104	MHz
erxclk			104	MHz
etxclk			108	MHz
minimum reset time	50			ns

Note: QL6250 with timing model "worst" used.

10 Device Pinout

10.1 Signals Overview

Signals	Description
wrxclk, wrxclav, wrxenb*, wrxdat, wrxsoc	West Utopia Receive Interface.
wtxclk, wtxclav, wtxenb*, wtxdata, wtxsoc	West Utopia Transmit Interface.
wrx_err, wrx_err_stat	West Interface error indication (sampled with wrxclk).
erxclk, erxclav, erxenb*, erxdata, erxsoc	East Utopia Receive Interface.
etxclk, etxclav, etxenb*, etxdata, etxsoc	East Utopia Transmit Interface.
erx_err, erx_err_stat	East Interface error indication (sampled with wtxclk).
prty_en, cellsize	Configuration Pins to be board wired. BM338: Cellsize[0] only for 8-bit data busses. BM3316: Cellsize [0] Should be tied to GND. BM3332: Cellsize[0:1] should be tied to GND.
reset	Active high device reset
GND	Ground
VCC	Device Power 3.3 V
clk(x)	unused clock inputs should be tied to GND
IOCTRL(x)	
VCCIO(x)	IO Power 3.3 V
INREF(x)	connect to GND
PLL_RST(x)	connect to GND or VCC
PLLOUT(x)	connect to GND or VCC
VCCPLL(x)	
GNDPLL(x)	
TCK, TRSTB	JTAG signals. connect to GND
TMS, TDI	JTAG signals. connect to VCC
TDO	JTAG signal. leave open
iov	
nc	not connected. should be left open

*: active low signal

Unused Pins (data busses) in the following tables are to be handled like "nc".

10.2 Packages

- **BM 338:** PQ208 (208 Pin PQFP) and PT280 (280 Pin FPBGA, 0.8mm)
- **BM 3316:** PQ208 (208 Pin PQFP) and PT280 (280 Pin FPBGA, 0.8mm)
- **BM 3332:** PT280 (280 Pin FPBGA, 0.8mm)

10.3 PQ208 PQFP Pinout Table (BM338, BM3316)

PIN	Function	PIN	Function	PIN	Function	PIN	Function
1	pllrst(3)	53	gnd	105	pllrst(1)	157	gnd
2	vccpll(3)	54	vccpll(2)	106	vccpll(1)	158	vccpll(0)
3	gnd	55	pllrst(2)	107	etxclav[0]	159	pllrst(0)
4	gnd	56	vcc	108	gnd	160	gnd
5	wtxclav[0]	57	wrxprty	109	etxprty	161	erxdatt[0]
6	wtxprty	58	gnd	110	etxenb	162	vccio(g)
7	wtxenb	59	wrxenb	111	vccio(e)	163	erxdatt[1]
8	vccio(a)	60	vccio(c)	112	etxsoc	164	erxdatt[2]
9	wtxsoc	61	wrxsoc	113	vcc	165	vcc
10	wtxdat[0]	62	wrxdat[0]	114	etxdatt[0]	166	erxdatt[3]
11	ioctrl(a)	63	wrxdat[1]	115	etxdatt[1]	167	erxdatt[4]
12	vcc	64	wrxdat[2]	116	etxdatt[2]	168	erxdatt[5]
13	inref(a)	65	wrxdat[3]	117	ioctrl(e)	169	ioctrl(g)
14	ioctrl(a)	66	wrxdat[4]	118	inref(e)	170	inref(g)
15	wtxdat[1]	67	ioctrl(c)	119	ioctrl(e)	171	ioctrl(g)
16	wtxdat[2]	68	inref(c)	120	etxdatt[3]	172	erxdatt[6]
17	wtxdat[3]	69	ioctrl(c)	121	etxdatt[4]	173	erxdatt[7]
18	wtxdat[4]	70	wrxdat[5]	122	vccio(e)	174	iov
19	vccio(a)	71	wrxdat[6]	123	gnd	175	vcc
20	wtxdat[5]	72	vccio(c)	124	etxdatt[5]	176	erxdatt[8]
21	gnd	73	wrxdat[7]	125	etxdatt[6]	177	vccio(g)
22	wtxdat[6]	74	wrxdat[8]	126	etxdatt[7]	178	gnd
23	tdi	75	gnd	127	clk(5)	179	erxdatt[9]
24	wtxclk	76	vcc	128	etxclk	180	erxdatt[10]
25	clk(1)	77	wrxdat[9]	129	vcc	181	erxdatt[11]
26	vcc	78	trstb	130	erxclk	182	vcc
27	wrxclk	79	vcc	131	vcc	183	tck
28	clk(3)	80	wrxdat[10]	132	clk(8)	184	vcc
29	vcc	81	wrxdat[11]	133	tms	185	erxdatt[12]
30	clk(4)	82	wrxdat[12]	134	etxdatt[8]	186	erxdatt[13]
31	wtxdat[7]	83	gnd	135	etxdatt[9]	187	erxdatt[14]
32	wtxdat[8]	84	vccio(d)	136	etxdatt[10]	188	gnd
33	gnd	85	wrxdat[13]	137	gnd	189	vccio(h)
34	vccio(b)	86	vcc	138	vccio(f)	190	erxdatt[15]
35	wtxdat[9]	87	wrxdat[14]	139	etxdatt[11]	191	cellsize[7]
36	wtxdat[10]	88	wrxdat[15]	140	etxdatt[12]	192	ioctrl(h)
37	wtxdat[11]	89	vcc	141	etxdatt[13]	193	cellsize[6]
38	wtxdat[12]	90	wrx_err	142	etxdatt[14]	194	inref(h)
39	ioctrl(b)	91	wrx_err_stat[0]	143	etxdatt[15]	195	vcc
40	inref(b)	92	ioctrl(d)	144	ioctrl(f)	196	ioctrl(h)
41	ioctrl(b)	93	inref(d)	145	inref(f)	197	cellsize[5]
42	wtxdat[13]	94	ioctrl(d)	146	vcc	198	cellsize[4]
43	wtxdat[14]	95	wrx_err_stat[1]	147	ioctrl(f)	199	cellsize[3]
44	vccio(b)	96	erx_err	148	nc	200	cellsize[2]
45	wtxdat[15]	97	erx_err_stat[0]	149	erxclav[0]	201	cellsize[1]
46	vcc	98	vccio(d)	150	vccio(f)	202	cellsize[0]
47	nc	99	erx_err_stat[1]	151	erxprty	203	vccio(h)
48	wrxclav[0]	100	reset	152	erxenb	204	gnd
49	gnd	101	gnd	153	gnd	205	prty_en
50	tdo	102	pllout(0)	154	erxsoc	206	pllout(2)
51	pllout(1)	103	gnd	155	pllout(3)	207	gnd
52	gndpll(2)	104	gndpll(1)	156	gndpll(0)	208	gndpll(3)

Note: For **BM338**: all xxxdat signals 8 to 15 become "nc".

10.4 PQ208 PQFP Device Diagram

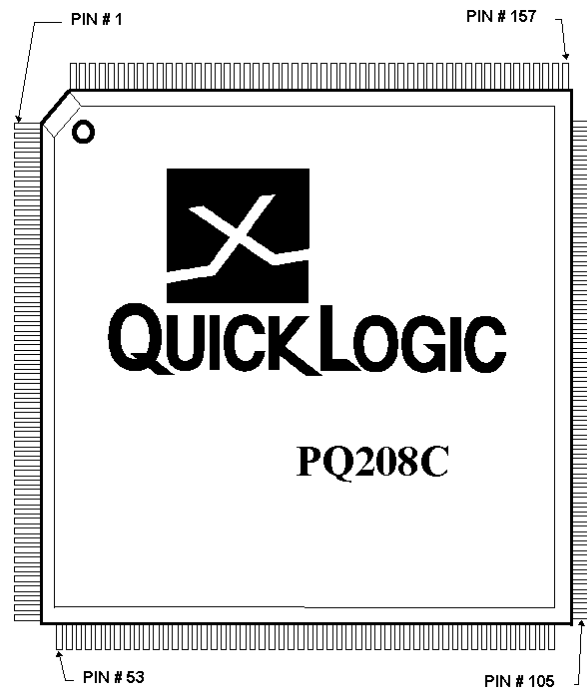


Figure 13: PQ208 top view

10.5 PT280 FPBGA Pinout Table

PIN	Function	PIN	Function	PIN	Function	PIN	Function	PIN	Function
A1	plout(3)	D1	wtxdat[27]	G19	wrxdat[12]	N16	wrxdat[28]	U6	inref(a)
A2	gndpll(0)	D2	wtxdat[28]	H1	erxdat[27]	N17	wrxdat[29]	U7	etxdat[29]
A3	erx_err	D3	wtxdat[29]	H2	erxdat[28]	N18	ioctrl(c)	U8	etxdat[25]
A4	erx_err_stat[0]	D4	wtxdat[30]	H3	erxdat[29]	N19	ioctrl(c)	U9	vccio(a)
A5	erx_err_stat[1]	D5	wtxdat[31]	H4	erxdat[30]	P1	erxdat[10]	U10	erxclk
A6	ioctrl(f)	D6	nc (cellsize[0])	H5	vcc	P2	erxdat[11]	U11	vccio(b)
A7	wtxclav[0]	D7	prty_en	H15	vcc	P3	ioctrl(h)	U12	etxdat[17]
A8	wtxprty	D8	reset	H16	vcc	P4	inref(h)	U13	etxdat[13]
A9	wtxenb	D9	clk(8)	H17	wrxdat[13]	P5	vcc	U14	ioctrl(b)
A10	wtxclk	D10	wrxclav[0]	H18	wrxdat[14]	P15	gnd	U15	vccio(b)
A11	wtxsoc	D11	wrxprty	H19	wrxdat[15]	P16	wrxdat[30]	U16	etxdat[5]
A12	wtxdat[0]	D12	wrxenb	J1	erxdat[24]	P17	wrxdat[31]	U17	tdo
A13	wtxdat[1]	D13	inref(e)	J2	erxdat[25]	P18	wrx_err	U18	pllrst(2)
A14	ioctrl(e)	D14	wrxsoc	J3	vccio(g)	P19	wrx_err_stat[0]	U19	etxprty
A15	wtxdat[2]	D15	wrxdat[0]	J4	erxdat[26]	R1	erxdat[7]	V1	plout(2)
A16	wtxdat[3]	D16	wrxdat[1]	J5	gnd	R2	erxdat[8]	V2	gndpll(3)
A17	wtxdat[4]	D17	wrxdat[2]	J15	vcc	R3	vccio(h)	V3	gnd
A18	pllrst(1)	D18	wrxdat[3]	J16	wrxdat[16]	R4	erxdat[9]	V4	erxprty
A19	gnd	D19	wrxdat[4]	J17	vccio(d)	R5	gnd	V5	erxenb
B1	pllrst(0)	E1	cellsize[3]	J18	wrxdat[17]	R6	gnd	V6	ioctrl(a)
B2	gnd	E2	cellsize[2]	J19	wrxdat[18]	R7	vcc	V7	etxdat[30]
B3	wtxdat[5]	E3	vccio(g)	K1	vcc	R8	vcc	V8	etxdat[26]
B4	wtxdat[6]	E4	cellsize[1]	K2	tck	R9	gnd	V9	etxdat[23]
B5	wtxdat[7]	E5	gnd	K3	erxdat[22]	R10	gnd	V10	clk(1)
B6	inref(f)	E6	vcc	K4	erxdat[23]	R11	vcc	V11	clk(4)
B7	wtxdat[8]	E7	vcc	K5	gnd	R12	vcc	V12	etxdat[18]
B8	wtxdat[9]	E8	vcc	K15	gnd	R13	vcc	V13	etxdat[14]
B9	tms	E9	vcc	K16	wrxdat[19]	R14	vcc	V14	inref(b)
B10	clk(6)	E10	gnd	K17	wrxdat[20]	R15	gnd	V15	etxdat[9]
B11	wtxdat[10]	E11	gnd	K18	wrxdat[21]	R16	etxdat[3]	V16	etxdat[6]
B12	wtxdat[11]	E12	vcc	K19	frstb	R17	vccio(c)	V17	etxdat[1]
B13	ioctrl(e)	E13	vcc	L1	erxdat[19]	R18	etxenb	V18	gndpll(2)
B14	wtxdat[12]	E14	gnd	L2	erxdat[20]	R19	wrx_err_stat[1]	V19	gnd
B15	wtxdat[13]	E15	gnd	L3	vccio(h)	T1	erxdat[2]	W1	gnd
B16	wtxdat[14]	E16	wrxdat[5]	L4	erxdat[21]	T2	erxdat[3]	W2	pllrst(3)
B17	vccpll(1)	E17	vccio(d)	L5	vcc	T3	erxdat[4]	W3	nc
B18	gndpll(1)	E18	inref(d)	L15	gnd	T4	erxdat[5]	W4	nc
B19	plout(0)	E19	ioctrl(d)	L16	wrxdat[22]	T5	erxdat[6]	W5	nc
C1	wtxdat[15]	F1	inref(g)	L17	vccio(c)	T6	ioctrl(a)	W6	erxclav[0]
C2	vccpll(0)	F2	ioctrl(g)	L18	wrxdat[23]	T7	etxdat[28]	W7	etxdat[31]
C3	wtxdat[16]	F3	cellsize[5]	L19	wrxdat[24]	T8	etxdat[24]	W8	etxdat[27]
C4	wtxdat[17]	F4	cellsize[4]	M1	erxdat[15]	T9	etxdat[22]	W9	tdi
C5	vccio(f)	F5	gnd	M2	erxdat[16]	T10	etxdat[21]	W10	etxclk
C6	ioctrl(f)	F15	vcc	M3	erxdat[17]	T11	clk(3)	W11	etxdat[20]
C7	wtxdat[18]	F16	ioctrl(d)	M4	erxdat[18]	T12	etxdat[16]	W12	etxdat[19]
C8	wtxdat[19]	F17	wrxdat[6]	M5	vcc	T13	etxdat[12]	W13	etxdat[15]
C9	vccio(f)	F18	wrxdat[7]	M15	vcc	T14	etxdat[11]	W14	ioctrl(b)
C10	wrxclk	F19	wrxdat[8]	M16	inref(c)	T15	etxdat[8]	W15	etxdat[10]
C11	vccio(e)	G1	erxdat[31]	M17	wrxdat[25]	T16	etxdat[4]	W16	etxdat[7]
C12	wtxdat[20]	G2	cellsize[7]	M18	wrxdat[26]	T17	vccpll(2)	W17	etxdat[2]
C13	wtxdat[21]	G3	ioctrl(g)	M19	wrxdat[27]	T18	etxsoc	W18	etxdat[0]
C14	wtxdat[22]	G4	cellsize[6]	N1	ioctrl(h)	T19	etxclav[0]	W19	plout(1)
C15	vccio(e)	G5	vcc	N2	erxdat[12]	U1	erxsoc		
C16	wtxdat[23]	G15	vcc	N3	erxdat[13]	U2	erxdat[0]		
C17	wtxdat[24]	G16	wrxdat[9]	N4	erxdat[14]	U3	vccpll(3)		
C18	wtxdat[25]	G17	wrxdat[10]	N5	vcc	U4	erxdat[1]		
C19	wtxdat[26]	G18	wrxdat[11]	N15	vcc	U5	vccio(a)		

Note: For **BS338**: xxxdat[8 .. 31] become "nc". For **BS3316**: xxxdat[16 .. 31] become "nc".

10.6 PT280 FPBGA Device Diagram

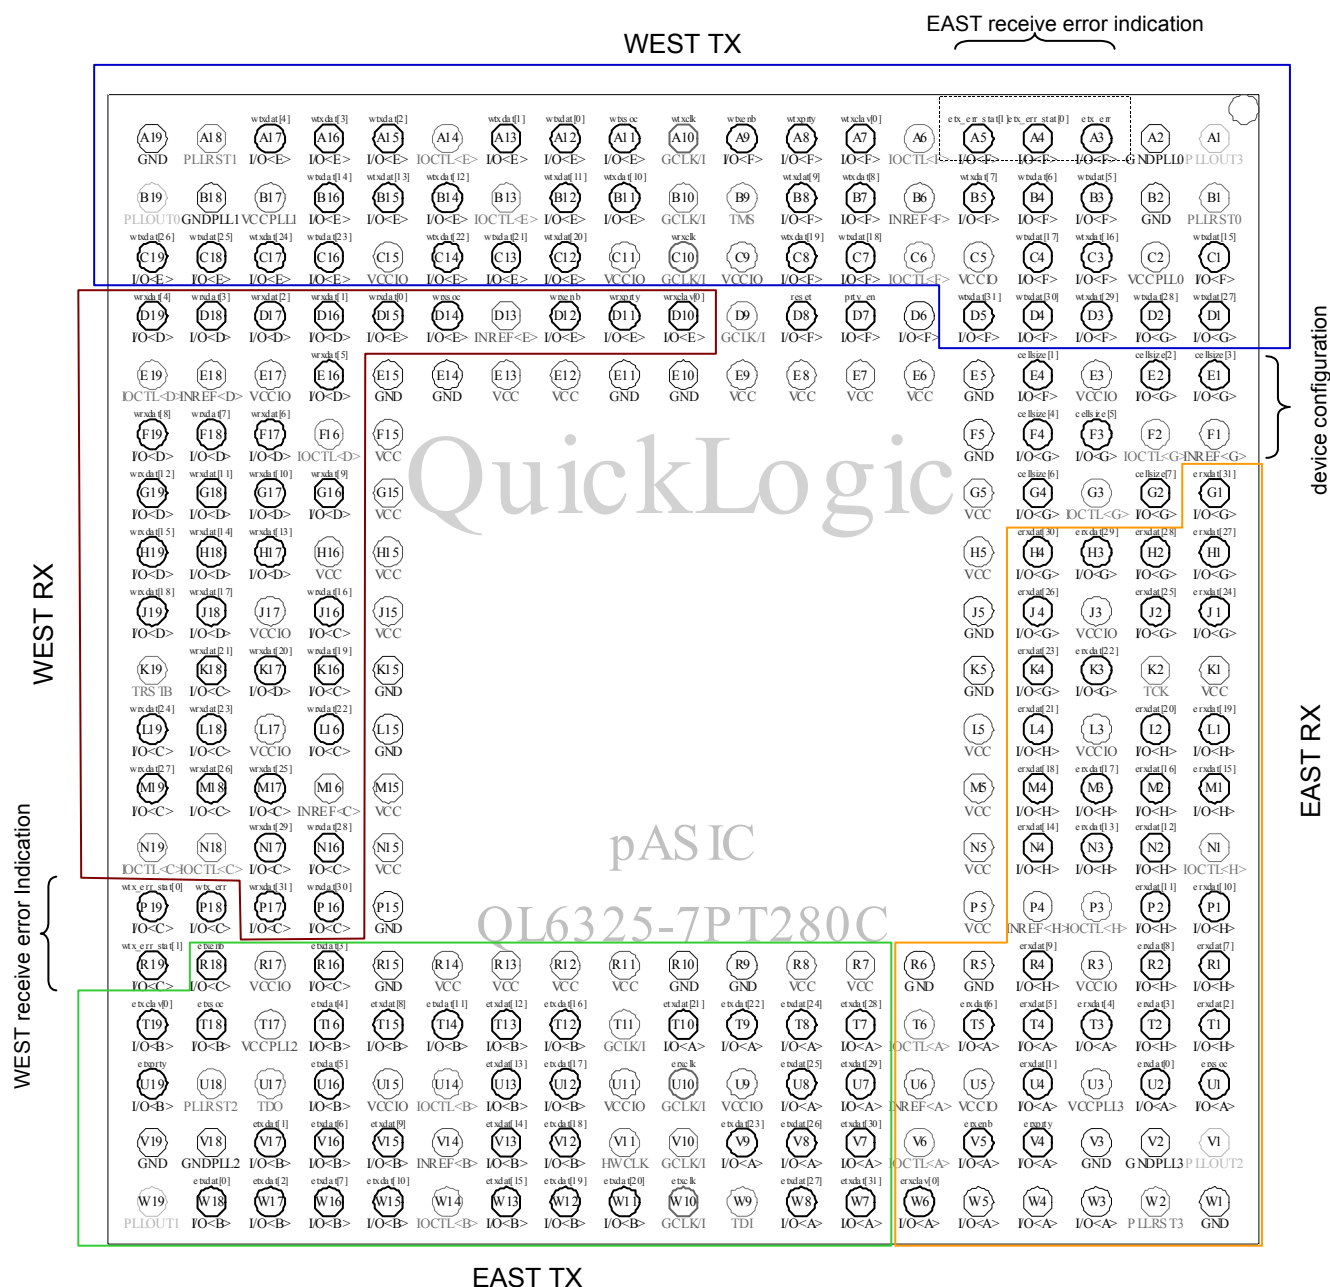


Figure 14: PT280 bottom view (0.8mm FPBGA)

11 References

- ATM Forum, Utopia Level 3, af-phy-0136.000, 1999
- Quicklogic, Eclipse Family Datasheet (Preliminary, 8/24/2000)

12 Contact

MorethanIP

Tel : +49 (0) 89 3219599 0
 FAX : +49 (0) 89 3219599 1
 E-Mail : info@morethanip.com
 Internet : www.morethanip.com

QuickLogic Corp.

Tel : 408 990 4000 (US)
 : + 44 1932 57 9011 (Europe)
 : + 49 89 930 86 170 (Germany)
 : + 852 8106 9091 (Asia)
 : + 81 45 470 5525 (Japan)
 E-mail : info@quicklogic.com
 Internet : www.quicklogic.com