

256K x 32 Synchronous Graphics RAM

Features

- Fully synchronous; all signals registered on positive edge of system clock.
- Internal pipelined operation; column address can be changed every clock cycle.
- Dual internal banks for hiding row precharge;
 Each bank is 128K x 32.
- Programmable burst lengths: 1, 2, 4, 8 or full page
- · Burst Read with Single Write
- Programmable CAS Latency: 1, 2, 3
- 8 column Block Write and Write-per-Bit modes
- Single Cycle Block Write operation
- Two Color Registers
- Independent byte operation via DQM₀₋₃
- Auto Precharge and Auto Refresh modes
- 1K Refresh cycles/16ms (Auto or Self Refresh)

- LVTTL-compatible inputs and outputs
- Single 3.3V ± 0.3V Power Supply
- 100-pin LQFP and PQFP

Options	Marking
Timing 6R7ns Access (≤ 150 Mhz clock rate) 7R5ns Access (≤ 133 Mhz clock rate) 10ns Access (≤ 100 Mhz clock rate)	-6R7 -7R5 -10
Plastic Package 100-pin LQFP (1.4mm body height) 100-pin PQFP (2.7mm body height)	

Key Timing Parameters

Speed Grade	Clock Frequency (MHz)	Access Time (ns)	Setup Time (ns)	Hold Time (ns)
-6R7	150	6.5	2.0	1.5
-7R5	133	7	2.5	1.5
-10	100	9	2.5	1.5

Description

The IBM 256K x 32 SGRAM is a high speed 8Mb CMOS Synchronous DRAM with built-in graphics features. It is internally configured as a dual bank 128K x 32 DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal CLK). Each bank is organized as 512 rows x 256 columns x 32 bits.

Read and Write operations are burst oriented; accesses start at a selected location and continue for a programmed number of locations. By having a Programmable Mode Register and a Load Special Mode Register command, the system can choose Read or Write burst lengths of 1, 2, 4, or 8 locations or the Full Page with Burst Termination option.

An Auto Precharge function may be enabled to provide a self-timed precharge that is initiated at the end of the burst sequence.

The SGRAM uses an internal pipelined architecture to achieve high speed operation, which also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing the alternate bank will hide the precharge cycles, and provide seamless high speed random operation.

The SGRAM differs from the Synchronous DRAM (SDRAM) by providing an 8 column Block Write function and a Write-per-Bit (WPB) function. The Block Write and WPB functions may be combined with individual byte enables DQM₀-DQM₃.

The part is designed to operate at 3.3V only. An Auto Refresh mode is provided along with a power saving Power Down mode. All inputs and outputs are LVTTL compatible.




Ordering Information

Part Number	I/O Level	Speed	Voltage	Package	Retention		
IBM038329NL6B - 6R7		150 MHz					
IBM038329NL6B - 7R5		133 MHz	2.21/	LQFP PQFP	Standard		
IBM038329NL6B - 10	LVTTL	100 MHz					
IBM038329NP6B - 6R7	LVIIL	150 MHz	3.3V				
IBM038329NP6B - 7R5		133 MHz					
IBM038329NP6B - 10		100 MHz					




Block Diagram

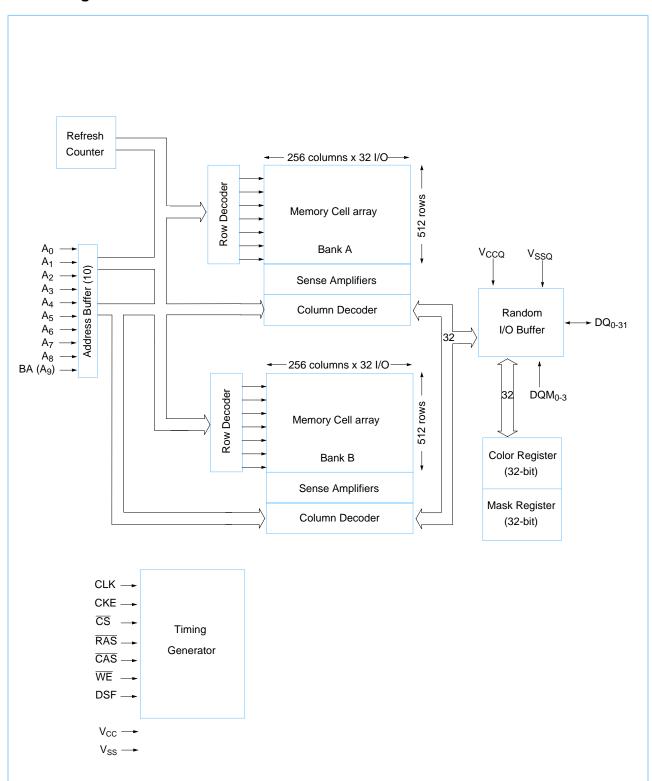



Pin Configurations

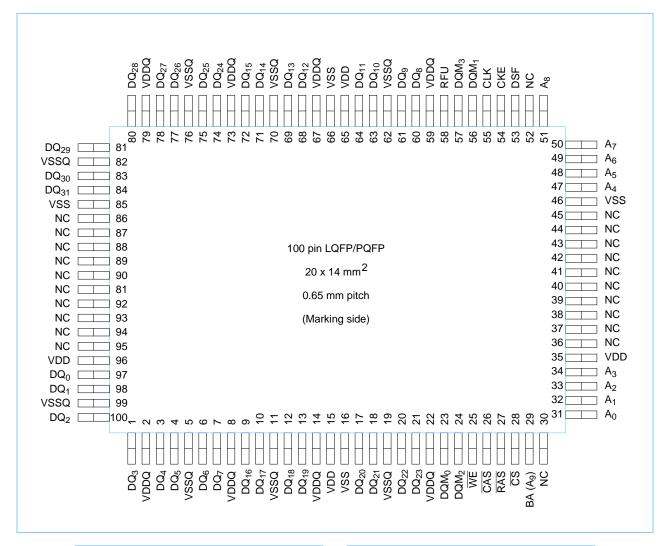

Symbol	Function
A ₀ -BA (A ₉)	Address Inputs
A ₀ -A ₈	Row Address Inputs
A ₀ -A ₈	Column Address Inputs
BA (A ₉)	Bank Select
CS	Chip Select
CAS	Column Address Strobe
CKE	Clock Enable
CLK	System Clock Input
DQ ₀ -DQ ₃₁	Data Inputs/Outputs
DQM ₀ -DQM ₃	DQ Mask Enable

Symbol	Function
DSF	Special Function Enable
NC	No Connection
RAS	Row Address Strobe
RFU	Reserved For Future Use
V_{DD}	Supply Voltage
V_{DDQ}	Supply Voltage for DQs
V _{SS}	Ground
V_{SSQ}	Ground for DQs
WE	Write Enable

Note: A₉ has been renamed BA to match JEDEC 8Mb nomenclature.





Signal Descriptions

Name	I/O	Function
A ₀ -A ₈ , BA (A ₉)	ı	Address bits A_0 - A_8 are row addresses when Active command is activated. Address bits A_0 - A_7 are column addresses when \overline{CAS} is active. Address bit A_8 , when \overline{CAS} is active, enables/disables Auto Precharge. Address bit BA (A_9) selects which of the two memory banks is to be used.
CAS	I	CAS is part of the input command to the SGRAM. SeeTtruth Table for details.
CKE	I	Clock Enable disables the clock internally, thus allowing data to remain on the output for several CLK cycles. Clock Enable is also used as part of the input command to specify Self Refresh.
CLK	I	CLK is driven by the system clock. All SGRAM input signals are sampled on the positive edge of CLK. The CLK also increments the internal burst counter and controls the output registers.
CS	I	Chip Select indicates that the command on the input lines is for this device. If \overline{CS} is high, the input command(s) will be ignored.
DQ ₀ -DQ ₃₁	I/O	Data Input/Output lines transfer data between the memory array and the system bus. These are also input mask bits for Write-per-Bit. When Block Write is activated, DQs provide column address mask.
DQM ₀ -DQM ₃	ı	During Read, DQM=1 turns off the output buffers. During Write, DQM=1 prevents a write to the current memory location. DQM ₀ corresponds to the lowest byte (DQ ₀ -DQ ₇). DQM ₁ corresponds to DQ ₈₋₁₅ . DQM ₂ corresponds to DQ ₁₆₋₂₃ . DQM ₃ corresponds to DQ ₂₄₋₃₁ .
RAS	ı	RAS is part of the input command to the SGRAM. See Function Truth Table for details.
WE	ı	Write Enable is part of the input command. See Function Truth Table for details.



Operative Command Table (Part 1 of 6)

Current State	CS	RAS	CAS	WE	DSF	Add	Command	Action	Notes
	Н	Х	Х	Х	Х	Х	INHBT	NOP or Power Down	3
	L	Н	Н	Х	Х	X	NOP or BST	NOP or Power Down	3
Idle	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	ILLEGAL	1
	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	1
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	
	L	L	Н	Н	L	BA, RA	ACT	Row Activate: No I/O Mask	
	L	L	Н	Н	Н	BA, RA	ACTM	Row Activate: I/O Mask	
	L	L	Н	L	Х	BA, PA	PRE/PREAL	NOP	
	L	L	L	Н	Х	Х	REF/SREF	Refresh or Self Refresh	4
	L	L	L	L	L	Op-Code	LMR	Mode Register Access	
	L	L	L	L	Н	Op-Code	LSMR	Special Mode Register Access	
	Н	Х	Х	Х	Х	Х	INHBT	NOP	
Row Activate	L	Н	Н	Х	Х	Х	NOP or BST	NOP	
Now Activate	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	Begin Read: Determine AP	9
	L	Н	L	L	L	BA, CA, AP	WR/WRA	Begin Write: Determine AP	9
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	Block Write: Determine AP	
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	
	L	L	Н	L	Х	BA, PA	PRE/PREAL	Precharge	6
	L	L	L	Н	Х	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	Special Mode Register Access	

ABBREVIATIONS: H = High level; L = Low level; X = Don't care (high or low); V = Valid data input

NOTE: All entries assume that CKE was active (High level) during the preceding clock cycle.

- 1. Illegal to bank specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank.
- 2. Must satisfy bus contention, bus turnaround, and/or write recovery requirements.
- 3. If both banks are idle and CKE is inactive (Low level), the device will enter Power Down Mode. All input buffers except CKE will be disabled.
- 4. If both banks are idle and CKE is inactive (Low level), the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.
- 5. Illegal if t_{RRD} is not satisfied.
- 6. Illegal if t_{RAS} is not satisfied.
- 7. Must satisfy burst interrupt condition.
- 8. Must mask preceding data which don't satisfy t_{DPL}.
- 9. Illegal if t_{RCD} is not satisfied.

 $RA = Row \ Address \ (A_0 - A_8)$ $BA = Bank \ Address \ (A_9)$ $PA = Precharge \ All \ (A_8)$ $NOP = No \ Operation \ Command$ $CA = Column \ Address \ (A_0 - A_7)$ $AP = Auto \ Precharge \ (A_8)$



Operative Command Table (Part 2 of 6)

Current State	CS	RAS	CAS	WE	DSF	Add	Command	Action	Notes
	Н	Х	Х	Х	Х	X	INHBT	Continue Burst to End \rightarrow Row Activate	
	L	Н	Н	Х	Х	X	NOP	Continue Burst to End \rightarrow Row Activate	
Read	L	Н	Н	L	Х	X	BST	Burst Stop → Row Activate	
	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	Term Burst, New Read: Determine AP	7
	L	Н	L	L	L	BA, CA, AP	WR/WRA	Term Burst, Start Write: Determine AP	2, 7
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	Term Burst, Start Block Write: Determine AP	2, 7
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	Х	BA, PA	PRE/PREAL	Term Burst, Precharging	
	L	L	L	Н	Х	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	ILLEGAL	
	Н	Х	Х	Х	Х	Х	INHBT	Continue Burst to End \rightarrow Row Activate	
	L	Н	Н	Х	Х	X	NOP	Continue Burst to End \rightarrow Row Activate	
Write	L	Н	Н	L	Х	X	BST	Burst Stop → Row Activate	
	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	Term Burst, New Read: Determine AP	7
	L	Н	L	L	L	BA, CA, AP	WR/WRA	Term Burst, Start Write: Determine AP	2, 7
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	Term Burst, Start Block Write: Determine AP	2, 7
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	Х	BA, PA	PRE/PREAL	Term Burst, Precharging	8
	L	L	L	Н	Х	X	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	ILLEGAL	

ABBREVIATIONS: H = High level; L = Low level; X = Don't care (high or low); V = Valid data input

NOTE: All entries assume that CKE was active (High level) during the preceding clock cycle.

- 1. Illegal to bank specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank
- 2. Must satisfy bus contention, bus turnaround, and/or write recovery requirements.
- 3. If both banks are idle and CKE is inactive (Low level), the device will enter Power Down Mode. All input buffers except CKE will be disabled.
- 4. If both banks are idle and CKE is inactive (Low level), the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.
- 5. Illegal if $t_{\mbox{\scriptsize RRD}}$ is not satisfied.
- 6. Illegal if t_{RAS} is not satisfied.
- 7. Must satisfy burst interrupt condition.
- 8. Must mask preceding data which don't satisfy t_{DPL}.
- 9. Illegal if t_{RCD} is not satisfied.

RA = Row Address $(A_0 - A_8)$ BA = Bank Address (A_9) PA = Precharge All (A_8) NOP = No Operation Command CA = Column Address $(A_0 - A_7)$ AP = Auto Precharge (A_8)



Operative Command Table (Part 3 of 6)

Current State	CS	RAS	CAS	WE	DSF	Add	Command	Action	Notes
	Н	Х	Х	Χ	Χ	X	INHBT	Continue Burst to End \rightarrow Precharging	
Darad	L	Н	Н	Χ	Х	Х	NOP	Continue Burst to End \rightarrow Precharging	
Read with Auto	L	Н	Н	L	Х	Х	BST	ILLEGAL	
Precharge	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	ILLEGAL	
	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	Χ	BA, PA	PRE/PREAL	ILLEGAL	1
	L	L	L	Н	Х	X	REF/SREF	ILLEGAL	1
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	ILLEGAL	
	Н	Х	Х	Х	Х	X	INHBT	Continue Burst to End \rightarrow Precharging	
10/wit =	L	Н	Н	X	Х	X	NOP	Continue Burst to End \rightarrow Precharging	
Write with Auto	L	Н	Н	L	Х	X	BST	ILLEGAL	
Precharge	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	ILLEGAL	
	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	Х	BA, PA	PRE/PREAL	ILLEGAL	1
	L	L	L	Н	Χ	Х	REF/SREF	ILLEGAL	1
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	ILLEGAL	

ABBREVIATIONS: H = High level; L = Low level; X = Don't care (high or low); V = Valid data input

NOTE: All entries assume that CKE was active (High level) during the preceding clock cycle.

- 1. Illegal to bank specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank.
- 2. Must satisfy bus contention, bus turnaround, and/or write recovery requirements.
- 3. If both banks are idle and CKE is inactive (Low level), the device will enter Power Down Mode. All input buffers except CKE will be disabled.
- 4. If both banks are idle and CKE is inactive (Low level), the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.
- 5. Illegal if t_{RRD} is not satisfied.
- 6. Illegal if t_{RAS} is not satisfied.
- 7. Must satisfy burst interrupt condition.
- 8. Must mask preceding data which don't satisfy t_{DPL}.
- 9. Illegal if t_{RCD} is not satisfied.

RA = Row Address $(A_0 - A_8)$ BA = Bank Address (A_9) PA = Precharge All (A_8) NOP = No Operation Command CA = Column Address $(A_0 - A_7)$ AP = Auto Precharge (A_8)



Operative Command Table (Part 4 of 6)

Current State	CS	RAS	CAS	WE	DSF	Add	Command	Action	Notes
	Н	Х	Χ	Χ	Χ	Х	INHBT	$NOP \to Enter \; Idle \; after \; t_{RP}$	
	L	Н	Н	Х	X	Х	NOP	$NOP \to Enter \; Idle \; after \; t_{RP}$	
Precharging	L	Н	Н	L	Χ	Х	BST	$NOP \to Enter \; Idle \; after \; t_{RP}$	
	L	Н	L	Н	X	BA, CA, AP	RD/RDA	ILLEGAL	1
	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	1
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	1
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	X	BA, PA	PRE/PREAL	$NOP \to Enter \; Idle \; after \; t_{RP}$	
	L	L	L	Н	X	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	Load Special Mode Register	
	Н	Х	Χ	Χ	Χ	X	INHBT	$NOP \to Enter\;Row\;Activate\;after\;t_{RCD}$	
Davis	L	Н	Н	Х	X	X	NOP	$NOP \to Enter\;Row\;Activate\;after\;t_{RCD}$	
Row Activating	L	Н	Н	L	X	X	BST	$NOP \to Enter\;Row\;Activate\;after\;t_{RCD}$	
	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	ILLEGAL	1
	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	1
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	1
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1, 5
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1, 5
	L	L	Н	L	X	BA, PA	PRE/PREAL	ILLEGAL	1
	L	L	L	Н	Χ	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	Load Special Mode Register	

ABBREVIATIONS: H = High level; L = Low level; X = Don't care (high or low); V = Valid data input

NOTE: All entries assume that CKE was active (High level) during the preceding clock cycle.

- 1. Illegal to bank specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank.
- 2. Must satisfy bus contention, bus turnaround, and/or write recovery requirements.
- 3. If both banks are idle and CKE is inactive (Low level), the device will enter Power Down Mode. All input buffers except CKE will be disabled.
- 4. If both banks are idle and CKE is inactive (Low level), the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.
- 5. Illegal if t_{RRD} is not satisfied.
- 6. Illegal if t_{RAS} is not satisfied.
- 7. Must satisfy burst interrupt condition.
- 8. Must mask preceding data which don't satisfy t_{DPL}.
- 9. Illegal if t_{RCD} is not satisfied.

RA = Row Address (A $_0$ - A $_8$) BA = Bank Address (A $_9$) PA = Precharge All (A $_8$) NOP = No Operation Command CA = Column Address (A $_0$ - A $_7$) AP = Auto Precharge (A $_8$)



Operative Command Table (Part 5 of 6)

Current State	CS	RAS	CAS	WE	DSF	Add	Command	Action	Notes
	Н	Х	Х	Х	Х	Χ	INHBT	$NOP \to Enter\;Row\;Activate\;after\;t_{WR}$	
	L	Н	Н	Х	X	Х	NOP	$\text{NOP} \rightarrow \text{Enter Row Activate after } t_{WR}$	
Write Recovering	L	Н	Н	L	Х	Х	BST	$NOP \to Enter\;Row\;Activate\;after\;t_{WR}$	
	L	Н	L	Н	Χ	BA, CA, AP	RD/RDA	Start Read, Determine AP	2
	L	Н	L	L	L	BA, CA, AP	WR/WRA	New Write, Determine AP	
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	New Block Write, Determine AP	
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	Х	BA, PA	PRE/PREAL	ILLEGAL	1
	L	L	L	Н	Χ	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	Load Special Mask Register	
	Н	Х	Х	Х	X	Х	INHBT	$NOP \rightarrow Enter Precharge after t_{WR}$	
	L	Н	Н	Х	X	Х	NOP	$NOP \to Enter\;Precharge\;after\;t_{WR}$	
Write Recovering	L	Н	Н	L	Х	Х	BST	$NOP \rightarrow Enter Precharge after t_{WR}$	
with Auto	L	Н	L	Н	Х	BA, CA, AP	RD/RDA	ILLEGAL	1, 2
Precharge	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	1
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	1
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	1
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	1
	L	L	Н	L	Х	BA, PA	PRE/PREAL	ILLEGAL	1
	L	L	L	Н	Χ	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	ILLEGAL	

ABBREVIATIONS: H = High level; L = Low level; X = Don't care (high or low); V = Valid data input

NOTE: All entries assume that CKE was active (High level) during the preceding clock cycle.

- 1. Illegal to bank specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank.
- 2. Must satisfy bus contention, bus turnaround, and/or write recovery requirements.
- 3. If both banks are idle and CKE is inactive (Low level), the device will enter Power Down Mode. All input buffers except CKE will be disabled.
- 4. If both banks are idle and CKE is inactive (Low level), the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.
- 5. Illegal if t_{RRD} is not satisfied.
- 6. Illegal if t_{RAS} is not satisfied.
- 7. Must satisfy burst interrupt condition.
- 8. Must mask preceding data which don't satisfy t_{DPL}.
- 9. Illegal if t_{RCD} is not satisfied.

 $RA = Row \ Address \ (A_0 - A_8)$ $BA = Bank \ Address \ (A_9)$ $PA = Precharge \ All \ (A_8)$ $NOP = No \ Operation \ Command$ $CA = Column \ Address \ (A_0 - A_7)$ $AP = Auto \ Precharge \ (A_8)$



Operative Command Table (Part 6 of 6)

Current State	CS	RAS	CAS	WE	DSF	Add	Command	Action	Notes
	Н	Х	Χ	Χ	Χ	Х	INHBT	$NOP \to Enter \; Idle \; after \; t_{RC}$	
	L	Н	Н	Х	X	X	NOP	$NOP \to Enter \; Idle \; after \; t_{RC}$	
	L	Н	Н	L	Χ	X	BST	$NOP \to Enter \; Idle \; after \; t_{RC}$	
	L	Н	L	Н	X	BA, CA, AP	RD/RDA	ILLEGAL	
Refreshing	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	
	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	
	L	L	Н	L	Χ	BA, PA	PRE/PREAL	ILLEGAL	
	L	L	L	Н	X	Х	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	OP-CODE	LSMR	ILLEGAL	
	Н	Х	Х	Χ	X	Х	INHBT	$NOP \to Enter$ Idle after two clocks	
	L	Н	Н	Х	X	X	NOP	$NOP \to Enter$ Idle after two clocks	
	L	Н	Н	L	Χ	Х	BST	$NOP \to Enter$ Idle after two clocks	
Mode	L	Н	L	Н	X	BA, CA, AP	RD/RDA	ILLEGAL	
Register	L	Н	L	L	L	BA, CA, AP	WR/WRA	ILLEGAL	
Accessing	L	Н	L	L	Н	BA, CA, AP	BW/BWA	ILLEGAL	
	L	L	Н	Н	L	BA, RA	ACT	ILLEGAL	
	L	L	Н	Н	Н	BA, RA	ACTM	ILLEGAL	
	L	L	Н	L	Χ	BA, PA	PRE/PREAL	ILLEGAL	
	L	L	L	Н	Х	X	REF/SREF	ILLEGAL	
	L	L	L	L	L	Op-Code	LMR	ILLEGAL	
	L	L	L	L	Н	Op-Code	LSMR	ILLEGAL	

ABBREVIATIONS: H = High level; L = Low level; X = Don't care (high or low); V = Valid data input

NOTE: All entries assume that CKE was active (High level) during the preceding clock cycle.

- 1. Illegal to bank specified states; Function may be legal in the bank indicated by Bank Address (BA), depending on the state of that bank.
- 2. Must satisfy bus contention, bus turnaround, and/or write recovery requirements.
- 3. If both banks are idle and CKE is inactive (Low level), the device will enter Power Down Mode. All input buffers except CKE will be disabled.
- 4. If both banks are idle and CKE is inactive (Low level), the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.
- 5. Illegal if t_{RRD} is not satisfied.
- 6. Illegal if t_{RAS} is not satisfied.
- 7. Must satisfy burst interrupt condition.
- 8. Must mask preceding data which don't satisfy t_{DPL}.
- 9. Illegal if t_{RCD} is not satisfied.

 $RA = Row \ Address \ (A_0 - A_8) \qquad \qquad BA = Bank \ Address \ (A_9) \qquad \qquad PA = Precharge \ All \ (A_8)$ $NOP = No \ Operation \ Command \qquad CA = Column \ Address \ (A_0 - A_7) \qquad \qquad AP = Auto \ Precharge \ (A_8)$



Function Truth Table

On continue	Cł	ΚE	CS	RAS	040	WE	DOE	DOM	ВА	^	Δ Δ	NANIE .
Operation	n-1	n	CS	RAS	CAS	VVE	DSF	DQM	(A ₉)	A ₈	A ₇ -A ₀	MNE
Device Deselect	Н	Х	Н	Х	Х	Х	Х	Х	Х	Х	Х	INHBT
No Operation	Н	Х	L	Н	Н	Н	Х	Х	Х	Х	Х	NOP
Load Mode Register	Н	Х	L	L	L	L	L	Х	С	P COD	E	LMR
Load Special Mode Register	Н	Х	L	L	L	L	Н	Х	С	P COD	E	LSMR
Row Activate	Н	Х	L	L	Н	Н	L	Х	BS	Row Addr		ACT
Row Activate w/WPB	Н	Х	L	L	Н	Н	Н	Х	BS	Row Addr		ACTM
Read	Н	Х	L	Н	L	Н	Х	Х	BS	L	Col.	RD
Read with Auto Precharge	Н	Х	L	Н	L	Н	Х	Х	BS	Н	Col.	RDA
Write Command	Н	Х	L	Н	L	L	L	Х	BS	L	Col.	WR
Write w/ Auto Precharge	Н	Х	L	Н	L	L	L	Х	BS	Н	Col.	WRA
Block Write	Н	Х	L	Н	L	L	Н	Х	BS	L	Col.	BW
Block Write with Auto Precharge	Н	Х	L	Н	L	L	Н	Х	BS	Н	Col.	BWA
Burst Termination	Н	Х	L	Н	Н	L	Х	Х	Х	Х	Х	BST
Precharge Single Bank	Н	Х	L	L	Н	L	Х	Х	BS	L	Х	PRE
Precharge All Banks	Н	Х	L	L	Н	L	Х	Х	Х	Н	Х	PREAL
Auto Refresh	Н	Н	L	L	L	Н	Х	Х	Х	Х	Х	REF
Self Refresh Entry	Н	L	L	L	L	Н	Х	Х	Х	Х	Х	SREF(EN)
Self Refresh Exit	L L	H H	H L	X H	X H	X H	X X	X X	X X	X X	X X	SREF(EX)
Power Down Mode (Entry)	Н	L	Н	Х	Х	Х	Х	Х	Х	Х	Х	PDN-(EN)
Power Down Mode (Entry)	Н	L	L	Н	Н	Н	Х	Х	Х	Х	Х	PDN-(EN)
Power Down Mode (Exit)	L	Н	Х	Х	Х	Х	Х	Х	Х	Х	Х	PDN-(EX)

- 1. All inputs are latched on the rising edge of CLK.
- 2. LMR, LSMR, REF, and SREF commands should be issued only after both banks are deactivated (PREAL command).
- 3. ACT and ACTM command should be issued only after the corresponding bank has been deactivated (PRE command).
- 4. WR, WRA, RD, RDA should be issued after the corresponding bank has been activated (ACT command).
- 5. Auto Precharge command is not valid for full-page burst.
- BW and BWA commands use Mask Register data only after ACTM command. DQM byte masking is active regardless of WPB mask.
- 7. Loading Mask Register: Initiate an LSMR cycle with address pin A₅=1 to load the Mask Register with the Mask data present on DQ pins. Except A₅, all other address pins must be "0" during LSMR cycle while loading the Mask Register.
- 8. Loading Color Register: Initiate an LSMR cycle with address pin A_6 =1 to load the Color register with the Color input data on DQ pins. Except A_6 , all other address pins must be "0" during LSMR cycle while loading Color Register 0.
- 9. Any Write or Block Write cycles to the selected bank/row while active will be masked according to the contents of theMask Register, in addition to the DQM signals and the column/byte mask information (the later for Block Writes only).
- 10. Block Writes are not burst oriented and always apply to the eight column locations selected by A₇-A₃.



Functional Description

IBM's 8Mb SGRAM is a dual bank 128K x 32 SDRAM with built-in graphics features including Block Write and Masked Write. It consists of two banks; each organized as 512 rows x 256 columns x 32 bits.

Read and Write accesses are burst oriented. Accesses begin with the registration of an Active command which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and the row to be accessed. Address bit BA (A_9) selects the bank and address bits A_8 - A_0 select the row. Address bits A_7 - A_0 registered coincident with the Read and Write command are used to select the starting column location for the burst access.

Block Writes are not burst oriented and always apply to eight column locations selected by A_7 - A_3 . DQs registered at a Write command are used to mask the selected columns. DQs registered coincident with the Active command are used as Write-per-Bit mask. DQs registered coincident with the Load Special Mode Register command are used as Color data (LC bit =1) or Persistent Mask (LM = 1). If LC and LM are both 1 in the same Load Special Mode Register command cycle, the data of the Mask and the Color Register will be unknown.

Initialization

SGRAMs must be initialized in a predefined manner to prevent undefined operation. Once power is applied, the SGRAM requires a 100μ s delay prior to activating CKE. All inputs should be held high during this phase of power up. After a delay of 100μ s or more, the CKE pin must be driven high before a positive clock (CLK) edge. The first command will be registered on the clock edge following t_{CKS} .

Both banks must then be precharged by issuing the PREAL command, thereby placing the device in the "all banks idle" state. Once in the idle state, at least two Auto Refresh cycles must be performed. When the Auto Refresh cycles are complete, the SGRAM is ready for Mode Register programming. Because the Mode Register will power up in an unknown state, it should be programmed prior to performing any operational command.

IRM

Register Definition

The following pages describe the Mode Register and Special Mode Register functions.

Mode Register

The Mode Register is used to define burst length, burst type, $\overline{\text{CAS}}$ Latency, and an operating mode as shown in Mode Register Functions on page 16. The mode register is programmed via the Load Mode Register command and will retain the stored information until it is programmed again or the device loses power. The Mode Register must be loaded when both banks are idle and the controller must wait the specified time before initiating the subsequent command. Violating either of these requirements may result in unknown operation.

Burst Length

Read and Write operations to the SGRAM are burst oriented, with the burst length being programmable, as shown in Mode Register Functions on page 16. The burst length determines the maximum number of column locations that can be accessed for a given Read or Write command. Burst lengths of 1, 2, 4, or 8 locations are available for both the sequential and the interleaved burst types and a Full Page Burst is available for the sequential type. The Full Page Burst is used in conjunction with the Burst Terminate command to generate arbitrary burst lengths.

When a Read or Write command is issued, a block of columns equal to the burst length is selected. The block is defined by address bits A_7 - A_1 when the burst length is set to 2, by A_7 - A_2 for burst length is set to 4 and by A_7 - A_3 when the burst length is set to 8. The lower order bit(s) are used to select the starting location within the block. The burst will wrap within the block if a boundary is reached.

Burst Type

Accesses within a given burst may be programmed to be either sequential or interleaved and the type is selected based on the setting of the BT bit in the Mode Register. If BT is set to "0", the burst type is sequential; if BT is "1", the burst type is interleaved.



CAS Latency

The CAS Latency is the delay in clock cycles between the registration of a Read command and the availability of the first piece of output data. The latency can be set to 1, 2, or 3 clocks. If a Read command is registered at clock edge n and the Read Latency is 2 clocks, the data will be available by clock edge n+2. The DQs will start driving as a result of the clock edge one cycle earlier (n+1) and provided the relevant access times are met, the data will be valid by clock edge n+2.

Operation Mode

In normal operation, the M_7 - M_9 bits of Mode Register (MR) are set to "0". The programmed burst length applies to both read and write bursts. If Bit M_7 is set equal to "1", two Color Registers are specified. Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.

Load Special Mode Register (LSMR)

The Load Special Mode Register command is used to load the Mask and Color Registers, which are used in Block Write and Masked Write cycles. The data to be written to either the Color Registers or the Mask Register is applied to the DQs and the control information is applied to the address inputs. During a LSMR cycle, if the address bit A_6 is "1" and all other address inputs are "0", Color Register 0 will be loaded with the data on the DQs. If address bits A_6 and A_7 are both set to "1" and Mode Register bit M_7 was already set to "1", Color Register 1 will be loaded with the data on the DQs. This color data is used for Block Write cycles. Similarly, when input A_5 is "1" and all other address inputs are "0" during a LSMR cycle, the Mask Register will be loaded with the data on the DQs.

Caution:

Never set bit A₅ to "1" when A₆ and/or A₇ are set to "1" in the same Load Special Mode Register cycle to avoid unknown operation. (See Special Mode Register Functions on page 18.)

Color Registers


Two Color Registers (Color Register 0 and Color Register 1) are available in the devices. (See Block Write Illustration on page 19.) Each Color Register is a 32-bit register which supplies data during Block Write cycles. The Color Register is loaded via a Load Special Mode Register command, as shown in the Initialize and Load Mode Register Operation on page 28, and will retain data until loaded again with new data or until power is removed from the SGRAM.

Mask Register

The Mask Register (or the Write-per-Bit Mask Register) is a 32-bit register which acts as a per-bit mask during Masked Write and Masked Block Write cycles. The Mask Register is loaded via the Load Special Mode Register command and will retain data until loaded again or until power is removed from the SGRAM.



Mode Register Functions

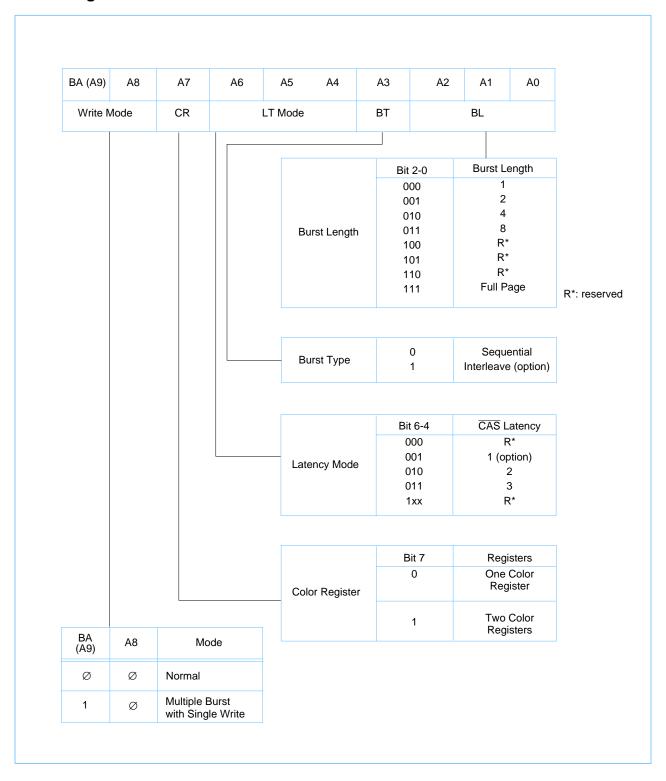



Burst Length and Sequence

Burst of two

Starting Address (Column Address A ₀)	Sequential Addressing Sequence (decimal)	Interleaved Addressing Sequence (decimal)
0	0,1	0,1
1	1,0	1,0

Burst of four

Starting Address (Column Address A ₁ - A ₀)	Sequential Addressing Sequence (decimal)	Interleaved Addressing Sequence (decimal)
0 (00B)	0,1,2,3	0,1,2,3
1 (01B)	1,2,3,0	1,0,3,2
2 (10B)	2,3,0,1	2,3,0,1
3 (11B)	3,0,1,2	3,2,1,0

Burst of eight

Starting Address (Column Address A ₂ - A ₀)	Sequential Addressing Sequence (decimal)	Interleaved Addressing Sequence (decimal)
0 (000B)	0,1,2,3,4,5,6,7	0,1,2,3,4,5,6,7
1 (001B)	1,2,3,4,5,6,7,0	1,0,3,2,5,4,7,6
2 (010B)	2,3,4,5,6,7,0,1	2,3,0,1,6,7,4,5
3 (011B)	3,4,5,6,7,0,1,2	3,2,1,0,7,6,5,4
4 (100B)	4,5,6,7,0,1,2,3	4,5,6,7,0,1,2,3
5 (101B)	5,6,7,0,1,2,3,4	5,4,7,6,1,0,3,2
6 (110B)	6,7,0,1,2,3,4,5	6,7,4,5,2,3,0,1
7 (111B)	7,0,1,2,3,4,5,6	7,6,5,4,3,2,1,0

Full Page Burst

Full Page Burst is an extension of the above tables of Sequential Addressing with the burst length being 256.




Special Mode Register Functions

				Addre	ss Bits					Forestina
BA (A ₉)	A ₈	A ₇	A ₆	A ₅	A ₄	A ₃	A ₂	A ₁	A ₀	Functions
0	0	0	0	0	0	0	0	0	0	Do not load
0	0	0	0	1	0	0	0	0	0	Enable Mask
0	0	0	1	0	0	0	0	0	0	Load Color Register 0
0	0	1	1	0	0	0	0	0	0	Load Color Register 1



Block Write Illustration One of four bytes

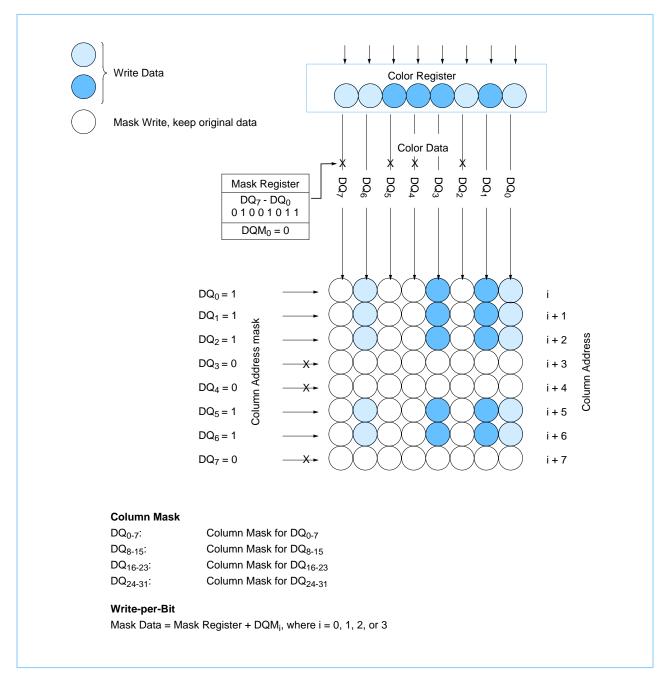

IEM

Commands

The Function Truth Table on page 12 provides a quick reference of available commands.

Device Deselect (INHBT)

The device deselect or inhibit function prevents commands from being executed by the SGRAM, regardless of whether the CLK signal is enabled. The device is effectively deactivated (\overline{CS} is high).

No Operation (NOP)

The NOP command is used to perform a no operation to an SGRAM which is selected (\overline{CS} is low). This prevents unwanted commands from being registered during idle or wait states. The execution of the command(s) already in progress will not be affected.

Load Mode Register (LMR)

The Mode Register is loaded via address input pins BA (A_9) - A_0 . The LMR command can only be issued when both banks are idle, and a subsequent executable command cannot be issued until t_{MTC} (1 CLK latency) is met.

Load Special Mode Register (LSMR)

The LSMR command is used to load either the Color Register or the Mask Register. The control information is provided on inputs BA (A_9) - A_0 , while the data for the Color or Mask Register is provided on the DQs. The LSMR command can be issued when both banks are idle, or one or both banks are active but with no Read, Write or Block Write accesses in progress. *A subsequent command cannot be issued until t_{SML}* (2 CLK latency) is met.

Active (ACT)

The ACT command is used to open (or activate) a row in a particular bank. The value on BA (A_9) selects the bank, and the address provided on input pins A_8 - A_0 selects the row. This row remains open for accesses until a Precharge command is issued to the bank. A Precharge command must be issued before opening a different row in the same bank.

Active with WPB (ACTM)

ACTM command is similar to the ACT command, except that the Write-per-Bit mask is activated. Any Write or Block Write cycles to the selected bank/row, while active, will be masked according to the contents of the Mask Register.

Read (RD)

The Read command is used to initiate a burst read access to an active row. The value on BA (A_9) selects the bank, and the address provided on inputs A_7 - A_0 selects the starting column location. The value on A_8 determines whether or not Auto Precharge is used. If A_8 is "1", Auto Precharge is used. If Auto Precharge is selected, the row being accessed will be precharged at the end of the read burst; if Auto Precharge is not selected, the row will remain open for subsequent accesses. If a particular DQM was registered high, the corresponding DQs appearing 2 clocks later on the output pins will be High-Z.





Write (WR)

The Write command is used to initiate a burst write access to an active row. The value on BA (A_9) selects the bank, and the address provided on inputs A_7 - A_0 selects the starting column location. The value on A_8 determines whether or not Auto Precharge is used. If A_8 is "1", Auto Precharge is used. If Auto Precharge is selected, the row being accessed will be precharged at the end of write burst; if Auto Precharge is not selected, the row will remain open for subsequent accesses. If a particular DQM is registered high, the corresponding data inputs will be ignored and the write will not be executed to that byte location.

Block Write (BW)

The Block Write command is used to write a single data value to the block of eight consecutive column locations addressed by inputs A₇-A₃. The data is provided by the Color Register which must be loaded prior to the Block Write cycle by invoking the LSMR cycle. The input data on the DQs which is registered coincident with the Block Write command is used to mask specific column/byte combinations within the block. *The DQM signals operate the same way as for Write cycles, but are applied to all eight columns in the selected block.*

Precharge (PRE)

The Precharge command is used to deactivate the open row in a particular bank or the open row in both banks. The bank(s) will be available for row access some specified time (t_{RP}) after the Precharge command is issued. Input A_8 determines whether one or both banks are to be precharged, and input BA (A_9) selects the bank. If A_8 is "1", both banks are to be precharged and BA (A_9) is "don't care." Once a bank is precharged (or deactivated), it is in the idle state and must be activated prior to any Read, Write, or Block Write commands being issued to that bank.

Auto Precharge (PREA)

The Auto Precharge feature allows the user to issue a Read, Write, or Block Write command that automatically performs a precharge upon the completion of the Block Write access or Read or Write burst, *except in the Full Page Burst mode, where it has no effect.*

The use of this feature eliminates the need to "manually" issue a Precharge command during the functional operation of the SGRAM.

Burst Terminate (BST)

The Burst Terminate command is used to truncate either fixed-length or Full Page Bursts.

Auto Refresh (REF)

Auto Refresh is used to refresh the various rows in the SGRAM and is analogous to $\overline{\text{CAS}}$ -before- $\overline{\text{RAS}}$ (CBR) Refresh in DRAMs. This command must be issued each time a refresh is required. The addressing is generated by the internal refresh counter; therefore, the address bits are "don't care" during a CBR cycle. The SGRAM requires that 1024 rows be refreshed every 16ms (t_{REF}). This refresh can be accomplished either by providing an Auto Refresh command every 15.6 μ s or all 1024 Auto Refresh commands can be issued in a burst at the minimum cycle rate (t_{RC} =100ns) once every 16ms.



Self Refresh (SREF)

The Self Refresh command can be used to retain data in the SGRAM, even if the rest of the system is powered down. When in the Self Refresh mode, the SGRAM retains data without external clocking. Once the SREF command is registered, all the inputs to the SGRAM become "don't care" with the exception of CKE, which must remain low. Once SREF mode is engaged, the SGRAM provides its own internal clocking, causing it to perform its own Auto Refresh cycles. The SGRAM may remain in Self Refresh mode for an indefinite period. The procedure for exiting requires a sequence of commands. First, the system clock must be stable prior to CKE going high. Once CKE is high, the SGRAM must have NOP commands issued for txSR (100ns), because of the time required for the completion of any bank currently being internally refreshed.





Absolute Maximum Ratings

Parameter	Min	Max	Notes
Voltage on V _{CC} /V _{CCQ} supply relative to V _{SS}	-1V	4.6V	1
Voltage on input/output pins	-1V	4.6V	1
Operating Temperature, T _A (ambient)	0°C	70°C	1
Storage Temperature	-55°C	150°C	1
Power Dissipation		1W	1
Short Circuit Output Current		50mA	1

Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a
stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational
sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect reliability.

DC Operating Specifications and Conditions (0°C \leq T_A \leq 70°C; V_{CC}/V_{CCQ} = 3.3V \pm 0.3V)

Symbol	Parameter	Min	Туре	Max	Unit
V _{CC} /V _{CCQ}	Supply Voltage	3.0	3.3	3.6	V
V _{IH}	Input High (Logic 1) Voltage, all inputs	2.0	-	V _{CC} + 0.3	V
V _{IL}	Input Low (Logic 0) Voltage, all inputs	5	-	0.8	V
V _{OH}	Output High (I _{OUT} = -2mA)	2.4	-	-	V
V _{OL}	Output Low (I _{OUT} = 2mA)	-	-	0.4	V
Ι <u>ι</u>	Input Leakage Current Any Input 0V < V _{IN} < 3.6V (All other pins not under test = 0V)	-3	-	3	μΑ
I _{OZ}	Output Leakage Current (DQs are disabled; 0V < V _{OUT} < 0.4V)	-3	-	3	μΑ

Capacitance

Symbol	Parameter	Max	Unit	Notes
Ci ₁	Input Capacitance: A ₀ - BA (A ₉)	5	pF	1
Ci ₂	Input Capacitance: RAS, CAS, WE, DQM, CKE, CS, DSF	5	pF	1
Ci ₀	Input/Output Capacitance: DQs	5	pF	1
Ci ₃	Input Capacitance: CLK	10	pF	1



$\textbf{I_{CC} Specifications} \quad (0^{\circ}C \leq T_{A} \leq 70^{\circ}C; \ V_{CC}/V_{CCQ} = 3.3V \pm 0.3V)$

Cumbal	Parameter	Test Condition	CAS		Maximum		Unit	Notes
Symbol	Parameter	rest Condition	Latency	-6R7	-7R5	-10	Uniit	notes
		Burst Length = 1	3	300	275	185		
I _{CC1}	Operating Current	$\begin{aligned} t_{RC} &\geq t_{RC}(Min) \\ t_{CK} &\geq t_{CK}(Min) \\ I_{O} &= 0mA \end{aligned}$	2	275	250	175	mA	1
I _{CC2} P	Precharge Standby Current in	CKE ≤ VIL(Max) t _{CK} =15ns		3	3	3	m A	
I _{CC2} PS	Power Down Mode	CKE ≤ VIL(Max) t _{CK} = Infinity		3	3	3	mA	
I _{CC2} N	Precharge Standby Current in	CKE ≥ VIH(Min) t _{CK} =15ns Input change every 30ns		45	45	45	mA	
I _{CC2} NS	Non Power Down Mode	$\label{eq:cke} \begin{split} \text{CKE} &\geq \text{VIH(Min)} \ t_{CK} \text{=Infinity} \\ \text{No input change} \end{split}$		20	20	20	1117	
I _{CC3} P	Active Standby Current in	CKE ≤ VIL(Max) t _{CK} =15ns		3	3	3	mA	
I _{CC3} PS	Power Down Mode	$CKE \le VIL(Max) t_{CK} = Infinity$		3	3	3	mA	
I _{CC3} N	Active Standby Current in	CKE ≥ VIH(Min) t _{CK} =15ns Input change every 30ns		50	50	50	Λ	
I _{CC3} NS	Non Power Down Mode	$\label{eq:cke} \begin{split} \text{CKE} &\geq \text{VIH(Min)} \ t_{\text{CK}} \text{=Infinity} \\ \text{No input change} \end{split}$		25	3 3 m/ 50 50 m/ 25 25	mA		
	On a realize or Commonst	t _{RC} =Infinity	3	225	200	190		
I _{CC4}	Operating Current (Burst Mode)	I _O = 0mA Dual Bank Interleave Continuous	2	175	150	140	mA	1, 2
			3	180	150	135	^	2
I _{CC5}	Auto Refresh Current	$t_{RC} \ge t_{RC}(Min)$	2	150	130	120	mA	3
I _{CC6}	Self Refresh Current	CKE = 0.2V		3	3	3	mA	

^{1.} Measured with outputs open, inputs 0-3V.


^{2.} Assumes minimum column address update cycle.

^{3.} Refresh period is 16ms.




Timing Specifications and Conditions (0°C \leq $t_A \leq$ 70°C; V_{CC}/V_{CCQ} = 3.3V \pm 0.3V)

- 1. All voltages are referenced to V_{SS} (GND).
- 2. Icc depends on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 3. Enables on-chip refresh and address counters.
- The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range (0°C ≤ T_A ≤ 70°C).
- 5. An initial pause of 100ms is required after power up, followed by two Auto Refresh commands to ensure proper device operation.
- 6. The timing specifications assume a transition time $(t_T = 1ns)$.
- 7. AC timing tests have V_{IL} = 0.8V and V_{IH} = 2.0V with timing referenced to 1.4V crossover point.

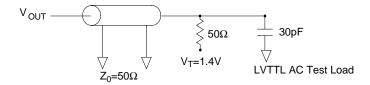

I/O Timing Diagrams

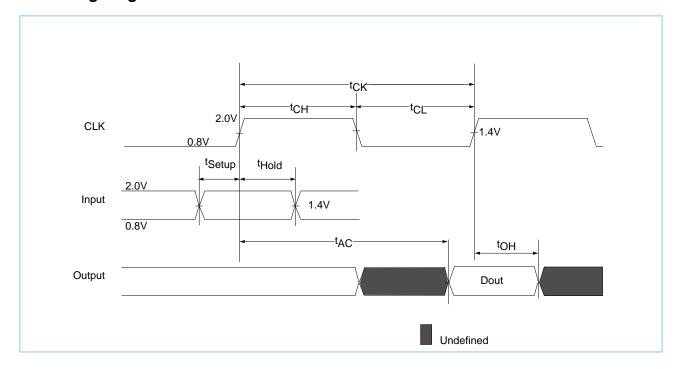



Timing Specifications

Symbol	Parameter	CAS	-6	R7	-7	R5	-1	10	Units
Symbol	Farameter	Latency	Min	Max	Min	Max	Min	Max	Office
t _{AC3}	Access time from CLK (positive edge) for 30 pF load	3	-	6.5	-	7	-	9	ns
t _{AC2}	Access time from CER (positive edge) for 30 pr load	2	-	7.5	-	10	-	12	115
t_{AH}	Address hold time		1.5	-	1.5	-	1.5	-	ns
t_{AS}	Address setup time		2.0	-	2.5	-	2.5	-	ns
t_{BPL}	Block Write to Precharge delay		6.7	-	7.5	-	10	-	ns
t_{BWC}	Block Write cycle time		6.7	-	7.5	-	10	-	ns
t _{CH}	CS, RAS, CAS, WE, DSF, DQM hold time		1.0	-	1.0	-	1.0	-	ns
t _{CHI}	CLK high level width		3.0	-	3	-	3.5	-	ns
t _{CK3}	System clock cycle time	3	6.7	-	7.5	-	10	-	ns
t _{CK2}	System clock cycle time	2	10	-	12	-	15	-	115
t _{CKH}	CKE hold time		1.0	-	1.0	-	1.0	-	ns
t _{CKS}	CKE setup time		2.0	-	2.5	-	2.5	-	ns
t_{CL}	CLK low level width		2.5	-	3	-	3.5	-	ns
t _{CS}	CS, RAS, CAS, WE, DSF, DQM setup time	2.0	-	2.5	-	2.5	-	ns	
t _{DH}	Date-in hold time		1.5	-	1.5	-	1.5	-	ns
t _{DS}	Data-in setup time		2.0	-	2.5	-	2.5	-	ns
t _{HZ}	Data-out high impedance time		3.5	6.7	3.5	7.5	3.5	10	ns
t_{LZ}	Data-out low impedance time		3	-	3	-	3	-	ns
t _{MTC}	Load Mode Register command to command		1	-	1	-	1	-	t _{Cl}
t _{OH}	Data-out hold time		3.5	-	3.5	-	3.5	-	ns
t _{RAS}	Active to Precharge command period		40	120K	45	120K	60	120K	ns
t _{RC}	Auto Refresh and Active to Active command period		60	-	67.5	-	90	-	ns
t _{RCD}	Active to Read, Write or Block Write delay		20	-	22.5	-	30	-	ns
t _{REF}	Refresh Period (1024 cycles) for Non Self-Refresh	parts	-	16	-	16	-	16	ms
t _{RP}	Row Precharge time		20	-	22.5	-	30	-	ns
t _{RRD}	Active bank A to Active bank B command period	6.7	-	7.5	-	10	-	ns	
t _{SML}	Load Special Mode Register command to command	d	2	-	2	-	2	-	t _{Cł}
t _T	Transition time		1	30	1	30	1	30	ns
t _{WR}	Write recovery time		6.7	-	7.5	-	10	-	ns
t _{XSR}	Exit Self Refresh to Active command		100	-	100	-	100	-	ns



Detailed Operation

Initialization and Load Mode Register

The SGRAM must be initialized at power up time to prevent undefined operations. The Initialize and Load Mode Register Operation on page 28 shows this process in detail. The next step is to load the mode register to program the burst length and burst type. The Load Mode Register and Special Mode Register functions have been described earlier.

The initialization of the device and loading of the Mode Register is shown in Initialize and Load Mode Register Operation on page 28. If the device is not initialized prior to issuing a command, it may result in undefined operation. The Mode Register should be loaded to let the device know burst type, length of burst, \overline{CAS} latency, and sequence and number of color registers to be used.

Auto Refresh (REF)

This mode is similar to CBR used in conventional DRAMs to refresh the DRAM rows.

This command is essential to refresh the volatile DRAM cells every 16ms. The device could be refreshed by issuing 1024 Auto Refresh cycles every 16ms or these refresh cycles could be interleaved between various operations as long as each DRAM cell is refreshed every 16ms or less.


Logic Table for Auto Refresh Command Cycle

Mnemonic	CKE	cs	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A ₈	A7-A0
REF	Н	L	L	L	Н	L	Х	Х	Х	Х


IBM038329NL6B IBM038329NP6B **256K x 32 Synchronous Graphics RAM**

|||1111||

Initialize and Load Mode Register Operation

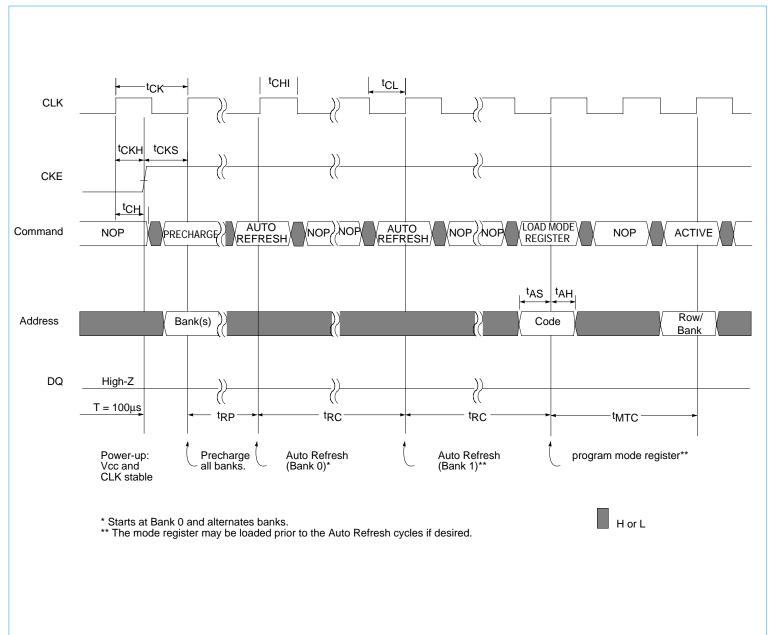

Auto Refresh Mode

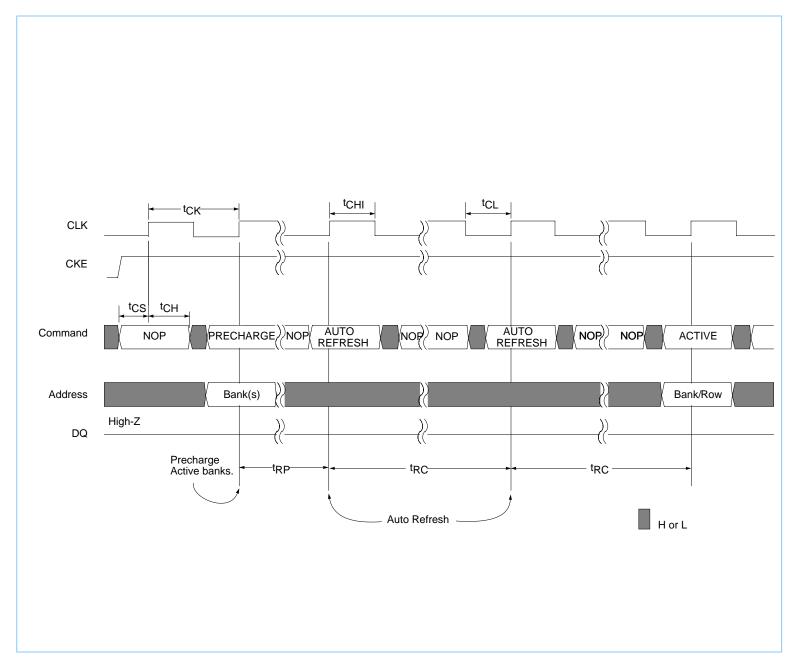



Bank/Row Activation Command (ACT)

Before any Read or Write commands can be issued to a bank within the SGRAM, a row in that bank must be "opened". An Active command is used for this purpose. The Active command is also used to determine whether or not the Write-per-Bit mask is to be applied during Write and Block Write cycles within that row.

A subsequent Active command to a different row in the same bank can only be issued after the previous Active row has been "closed". The minimum time interval between successive Active commands to the same bank is defined by t_{RC} .


A subsequent Active command to the other bank can be issued while the first bank is being accessed, which results in a reduction of total row access overhead. The minimum time interval between successive Active commands to different banks is defined by t_{RRD} .

Logic Table for Active Command

Mnemonic	CKE	CS	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A8	A ₇ -A ₀
ACT	Н	L	L	Н	Н	L	Х	BS	Row Address	
ACTM	Н	L	L	Н	Н	Н	Х	BS	Row Address	

The Example Meeting diagram below shows the Read/Write command delay in the same bank after the Active command has been registered. Also shown are the various timing parameters that are applicable to the Read/Write operations.

Example Meeting t_{RCD} (min) when $2 \le t_{RCD}$ (min)/ $t_{CK} \le 3$

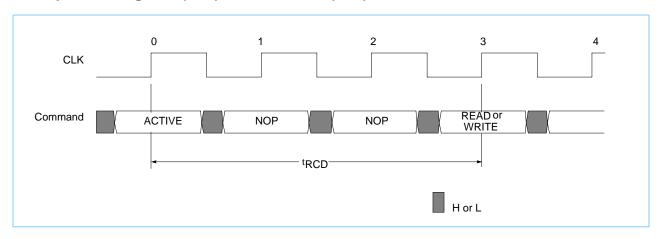



Read Command (RD)

The following pages describe in detail the Read operations with the help of timing diagrams for various cases.

Logic Table for Read Command

Mnemonic	CKE	cs	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A ₈	A ₇ -A ₀
RD	Н	L	Н	L	Н	L	0/1	BS	L	Column
RDA	Н	L	Н	L	Н	L	0/1	BS	Н	Column

A Read bursts is initiated with a Read command. The starting column address and the bank address are provided with the Read command and Auto Precharge is either enabled or disabled for that burst access. Upon completion of a burst, assuming no other commands have been initiated, the DQs will go to High-Z. A Full Page Burst will continue until terminated (at the end of the page it will wrap to column 0 and continue).

Various cases of Reads are shown. The user can use latencies of one, two or three depending upon the system clock. A fixed-length Read Burst may be followed by or truncated with a Write burst or Block Write command (provided that Auto Precharge was not activated) and a Full Page Read burst may be truncated by a Write burst or Block Write command. The Write burst may be initiated on the clock edge immediately following the last (or last desired) data element from the Read burst, provided that I/O contention can be avoided. It is generally a good design practice that a single cycle delay must occur between the last data read and the Write command.


The DQM inputs can be used to avoid I/O contention as shown in the figure labeled Read Followed by a Write with Extra Clock Cycle on page 37. The DQMs must be asserted High at least two clocks (DQM latency is two clocks for output buffers) prior to the Write command to suppress data-out due to the previous Read command. Once the Write command is registered, the output buffers will go to High-Z (or remain High-Z) regardless of the state of DQM signals. The DQM signals must be de-asserted (DQM latency is zero clocks for input buffers) on the same cycle as a Write command to ensure that the written data is not masked. The figure labeled Read Followed by a Write (or Block Write) on page 36 shows the case where the clock frequency allows for bus contention to be avoided without adding a NOP cycle, and the one labeled Read Followed by a Write with Extra Clock Cycle on page 37 shows the case where the additional NOP is needed.

Either a fixed-length or a full-page Read burst can be truncated with a Precharge command to the same bank. Note that the Precharge command should be issued one cycle before the clock edge at which the last desired data is valid. A subsequent command cannot be issued to the same bank until t_{RP} is met. Part of the row precharge time is hidden during the access of the last data element. An Auto Precharge command can be used in place of the Precharge command for fixed length bursts. The disadvantage of the Auto Precharge command is that it does not truncate fixed-length bursts and does not apply to Full Page Bursts. The disadvantage of the Precharge command is that it requires the command and address busses to be available at the appropriate time to issue the command.


Either a fixed-length or a full-page Read burst can be terminated with the Burst Terminate command. The fixed-length Burst with Auto Precharge cannot be truncated by the Burst Terminate command. The Burst Terminate command should be issued one cycle before the positive clock edge at which the last desired data element is valid.



Read Cycle, \overline{CAS} Latency = 1

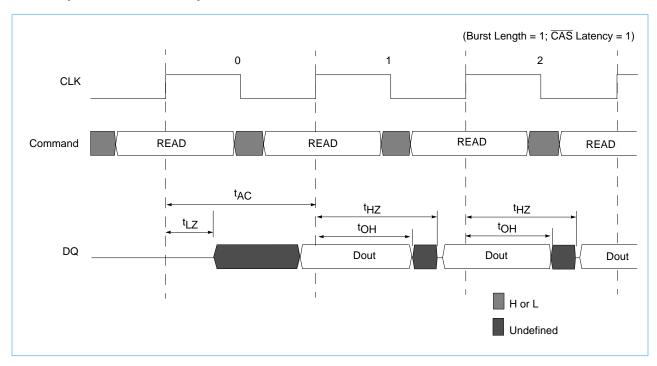


Read Cycle, \overline{CAS} Latency = 2

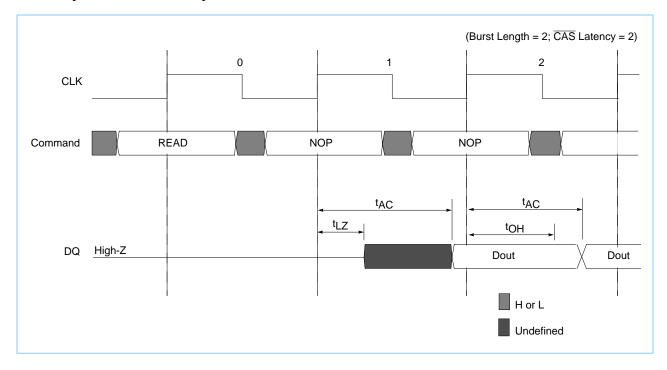




Read Cycle, \overline{CAS} Latency = 3

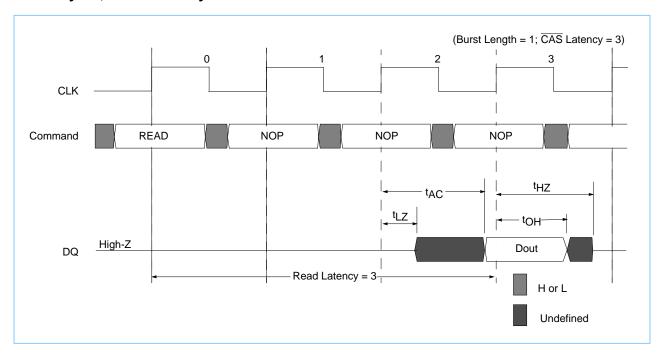




Multiple Read Bursts, CAS Latencies = 1, 2, 3

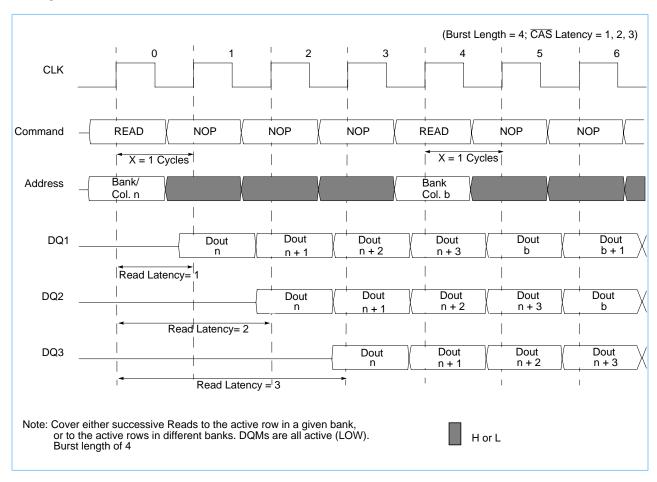




Random Row Reads Within a Page, $\overline{\text{CAS}}$ Latency = 1, 2, 3

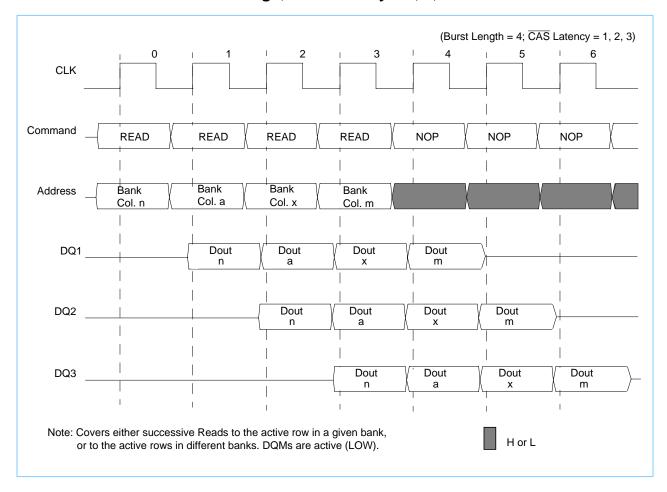




Read Followed by a Write (or Block Write)

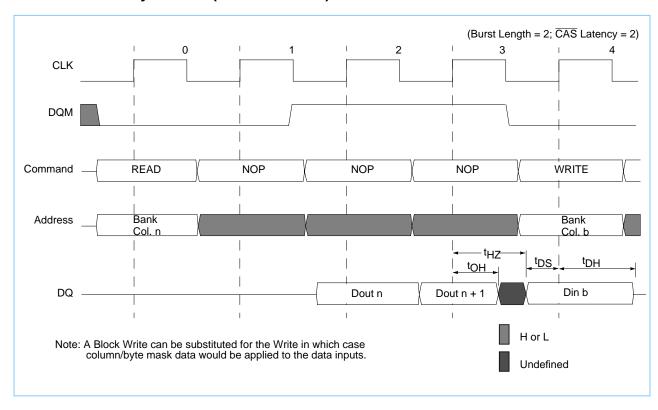




Read Followed by a Write with Extra Clock Cycle

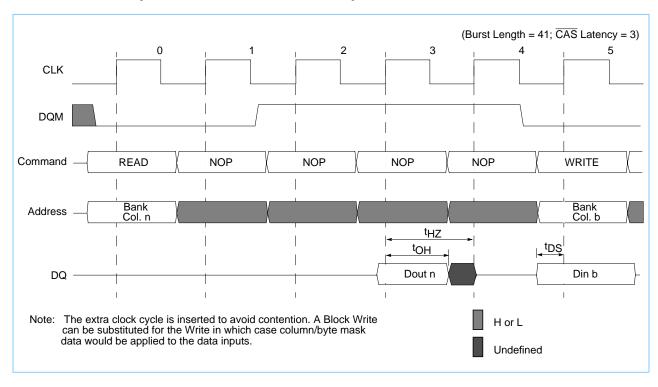




Read Interrupted by a Precharge, CAS Latency = 1, 2, 3

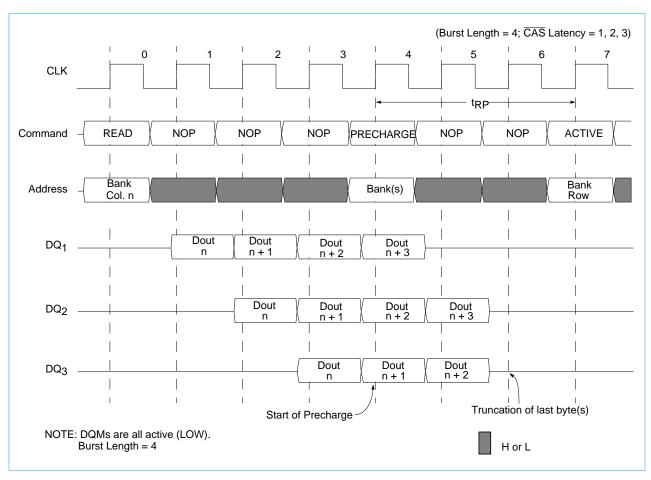


Read Terminated by a Burst Terminate, \overline{CAS} Latency = 1, 2, 3

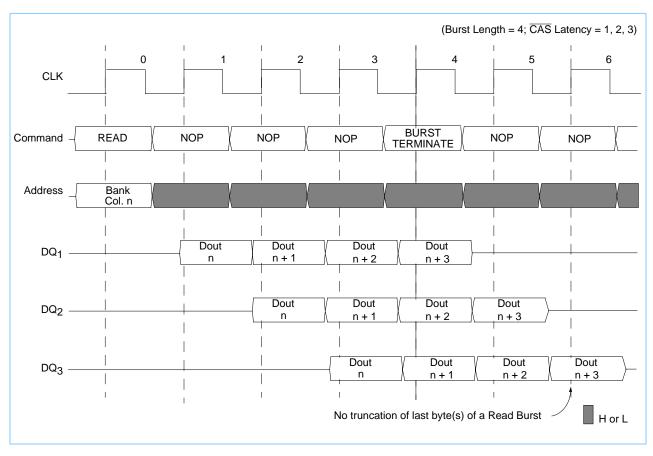


 $\|\mathbf{u}_{\mathbf{u}}\|$

Read with Auto Precharge

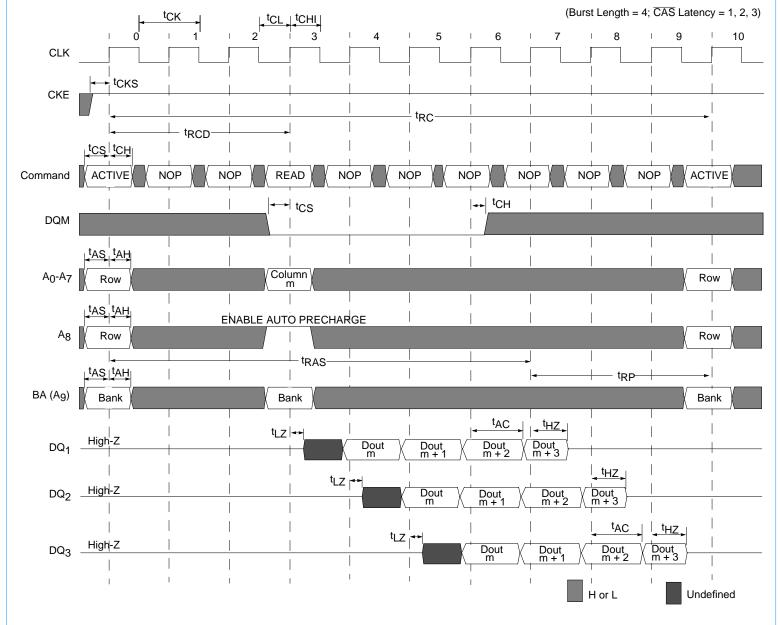


Page 40 of 66

Read without Auto Precharge

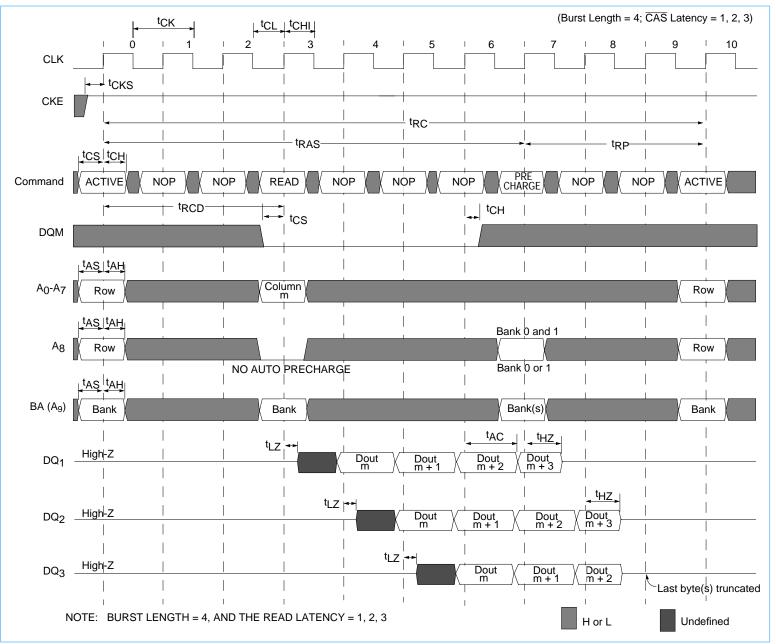


Read without Auto Precharge, Clock Suspend Mode

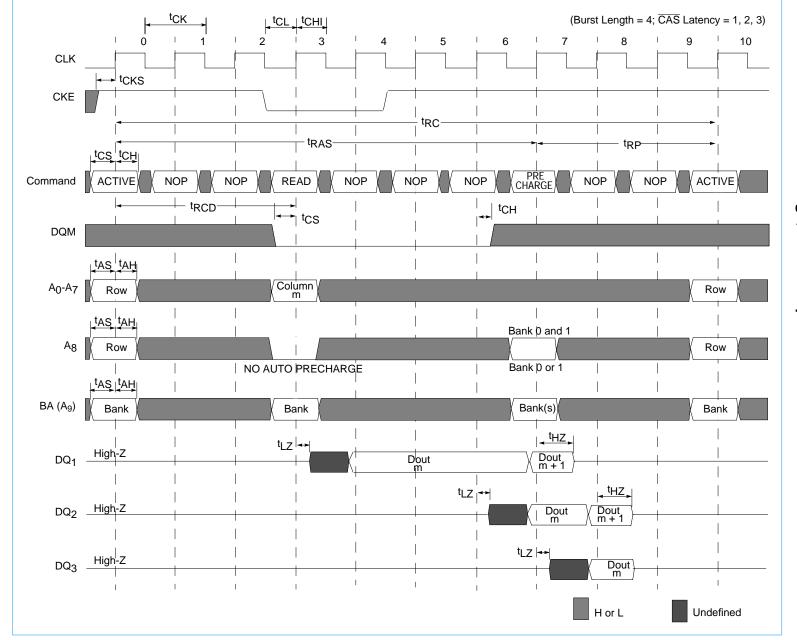


Page 42 of 66


Read Cycle, Full Page Burst Length

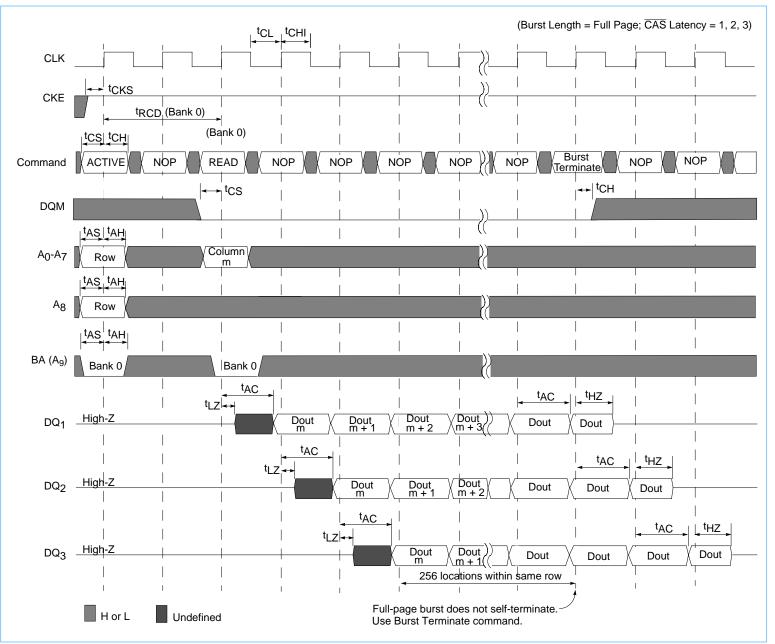

Read Cycle, Interleaving Two Banks

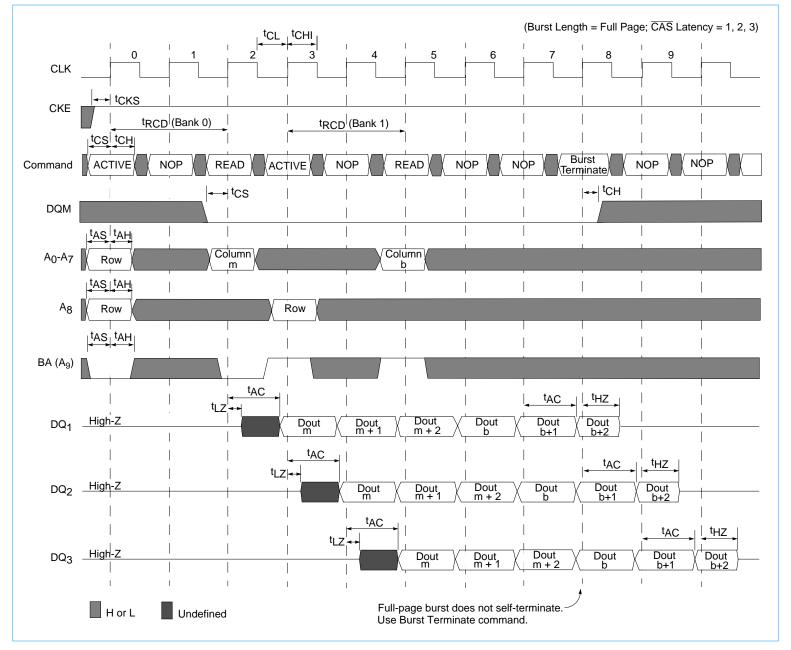

Read DQM Operation

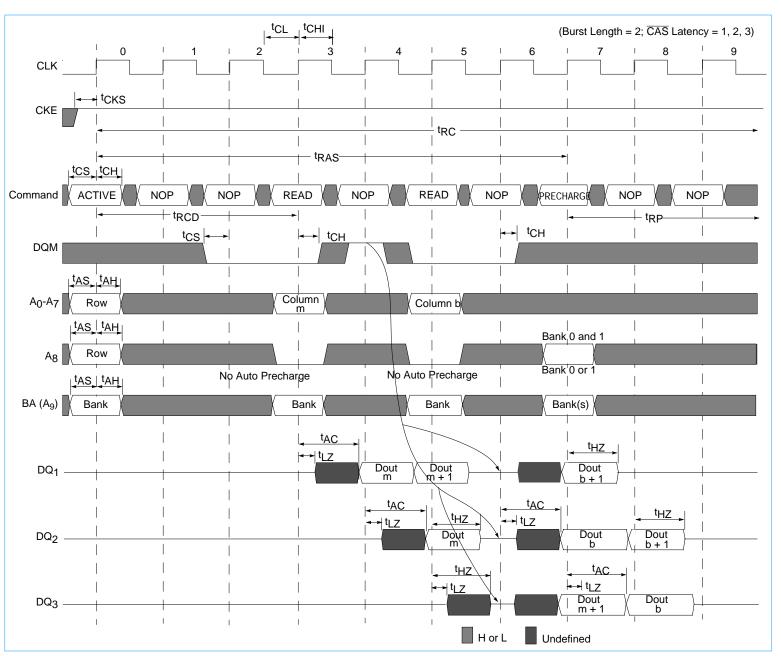

IBM

Write Command (WR)

The following pages illustrate the Write operations for various cases with the help of timing diagrams.

Logic Table for Write Command

Mnemonic	CKE	CS	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A ₈	A7-A0
WR	Н	L	Н	L	L	L	0	BS	L	Column
WRA	Н	L	Н	L	L	L	0	BS	Н	Column
BW	Н	L	Н	L	L	Н	0	BS	L	Column
BWA	Н	L	Н	L	L	Н	0	BS	Н	Column

Note: Input data at DQ pins at Block Write command time is registered as a column mask for that block of columns.

Write bursts are initiated with a Write command. The starting column and bank address is provided with the Write command, normal or Block Write is selected, and Auto Precharge is either enabled or disabled for that access. If Auto Precharge is enabled, the row being accessed is precharged automatically at the completion of the burst.

During Write bursts, the first valid data-in element will be registered coincident with the Write command. Subsequent data elements will be registered on successive positive clock edges. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQs will remain High-Z, and any additional data will be ignored. A full-page burst will continue until terminated (at the end of the page, it will wrap to column 0 and continue).

A fixed-length Write burst may be followed by or truncated with a subsequent Write burst or Block Write command, provided that Auto Precharge was not activated. A full page Write burst can be truncated with a subsequent Write burst or Block Write command. The new Write or Block Write command can be issued on any clock following the previous Write command, and the data from the new command replaces and data remaining from the previous command.

A fixed-length Write burst may be followed by or truncated with a subsequent Read burst, provided that Auto Precharge was not activated. A full-page Write burst can be truncated with a subsequent Read burst. Once the Read command is registered, the data inputs will be ignored and Writes will not be executed.

A fixed-length Write burst may be followed by or truncated with a Precharge command to the same bank, provided that Auto Precharge was not activated. A full-page Write burst may be truncated with a Precharge command to the same bank. The Precharge command should be issued x cycles ($x = t_{WR}/t_{CK}$ rounded up to the next whole number) after the clock edge at which the last desired input data element is registered. In addition, the DQM signals must be used to mask input data, starting with the clock edge following the last desired data element and ending with the clock edge on which the Precharge command is entered. A Precharge command issued at the optimum time provides the same operation that would result from the same fixed-length Burst with Auto Precharge.

Disadvantages of Write Command with Auto Precharge

- 1. Back to back Read/Write bursts cannot be initiated. The Read/Write command with Auto Precharge will automatically initiate a precharge of the row in the selected bank. Most of the applications require subsequent Read/Write bursts in the same page.
- 2. The Auto Precharge command does not allow truncation of fixed-length bursts. It also does not apply to full-page bursts.



Terminating a Write Burst


The fixed-length or full-page Write bursts can be truncated with the Burst Terminate command. When truncating a Write burst, the input data applied one clock edge prior to the Burst Terminate command will be the last data written.

Masked Writes

Any Write performed to a row that was activated via an Active with WPB command is a Write-per-Bit-Mask (WPBM). Data is written to the 32 cells at the selected column location subject to the mask stored in the WPB mask register. The data will be written to the DRAM cell according to the following logic:

DQM	MR	DRAM Cell
0	0	Mask
1	0	Mask
1	1	Mask
0	1	Write

Write Masking Functional Representation

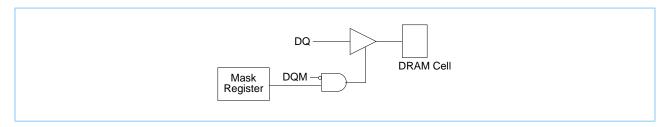

If a particular bit in the WPB mask register is a "0", the data appearing on the corresponding DQ input will be ignored, and the existing data in the corresponding DRAM cell will remain unchanged. If a mask data is a "1", the data appearing on the corresponding DQ input will be written to the corresponding DRAM cell. *The overall Write mask consists of a combination of the DQM inputs, which mask on a per-byte basis, and the WPB mask register, which masks on a per-bit basis.* If a particular DQM signal was registered high, the corresponding byte will be masked. A given bit is written if the corresponding DQM signal registered is "0" and the corresponding WPB mask register bit is "1". Note that the DQM Latency for Write is zero.

IEM

Block Write (BW)

Each Block Write cycle writes a single data value from the color register to the block of eight consecutive column locations addressed by A₇-A₃. The information on the DQs which is registered coincident with the Block Write command is used to mask specific column/byte combinations within the block. Various DQ planes and column addresses are masked according to the following functional logic:

DO:		Column Address	DQ Planes Affected	
DQs	A ₂	A ₁	A ₀	DQ Planes Affected
DQ ₀ - DQ ₇	Х	Y	Z	P ₀ - P ₇
DQ ₈ - DQ ₁₅	Х	Y	Z	P ₈ - P ₁₅
DQ ₁₆ - DQ ₂₃	X	Y	Z	P ₁₆ - P ₂₃
DQ ₂₄ - DQ ₃₁	Х	Y	Z	P ₂₄ - P ₃₁


For example, if DQ_0 is "0", then $\{X,Y,Z\}$ becomes $\{0,0,0\}$ and the column 0 with its planes 0-7 is masked from the selected block of columns. If DQ_{14} is "0", then $\{X,Y,Z\}$ becomes $\{1,1,0\}$ and the column with address 6 with its planes 8-15 is masked from the selected block of columns. When a "0" is registered in a particular DQ signal coincident with a Block Write command, the write to the corresponding column/byte combination is masked. When a "1" is registered, the Color Register data will be written to the corresponding DRAM cells, subject to the DQM and the WPB masking. The overall Block Write mask consists of a combination of the DQM signals, the WPB mask register, and the column/byte mask information.

Block Write Timing Considerations


A Block Write access requires a time period of t_{BWC} to execute. When following a Block Write with a Precharge command to the same bank, t_{BPL} must be met.



Write Burst

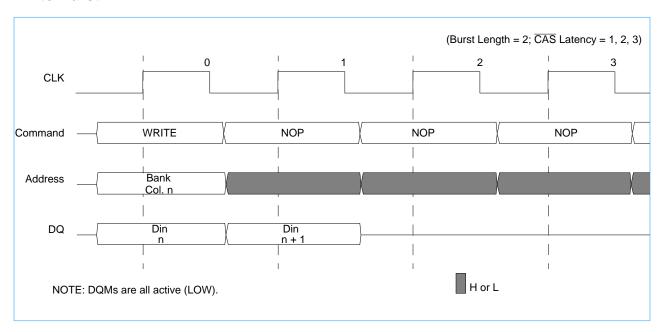


Write to Write (or Block Write)

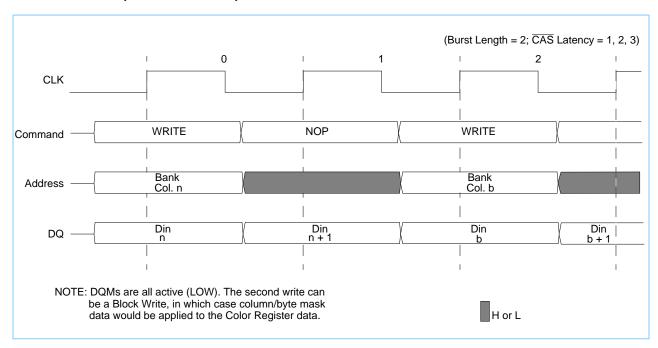




Random Write (or Block Write) Cycles, within a Page

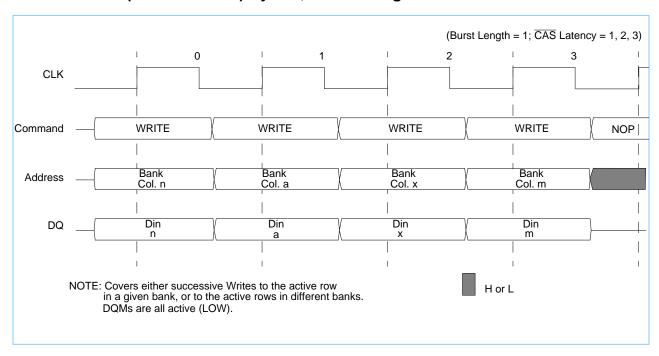


Write to Read

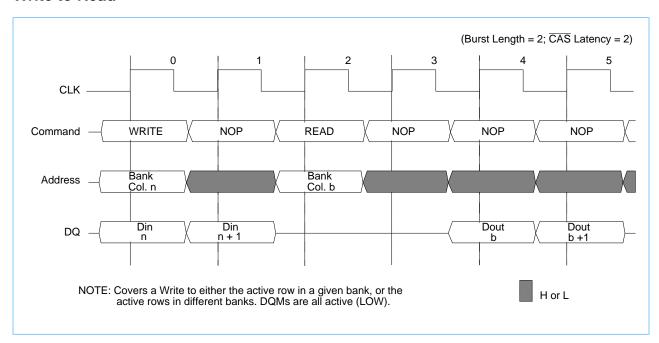




Write to Precharge

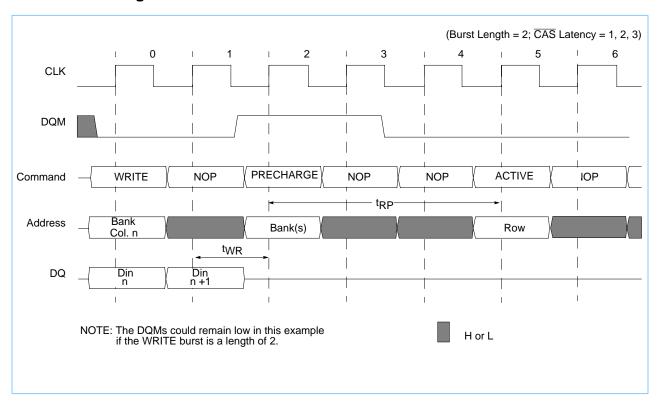


Terminating a Write Burst

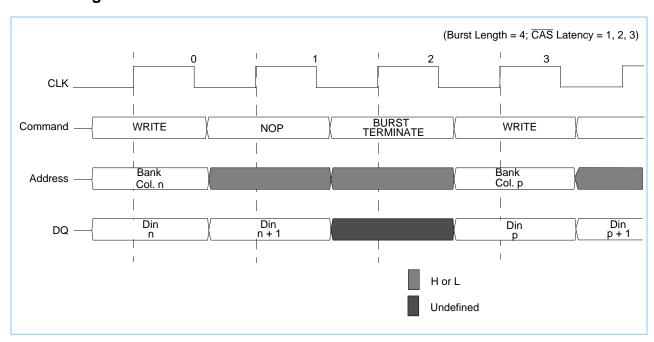


 $\|\mathbf{u}_{\mathbf{u}}\|$

Write with Auto Precharge

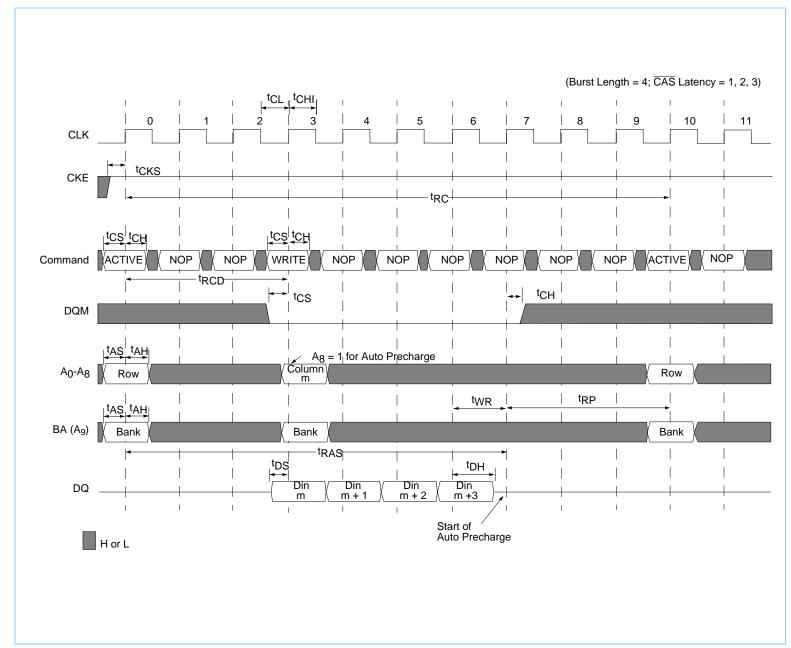


$\|\mathbf{u}_{\mathbf{u}}\|$

Write without Auto Precharge

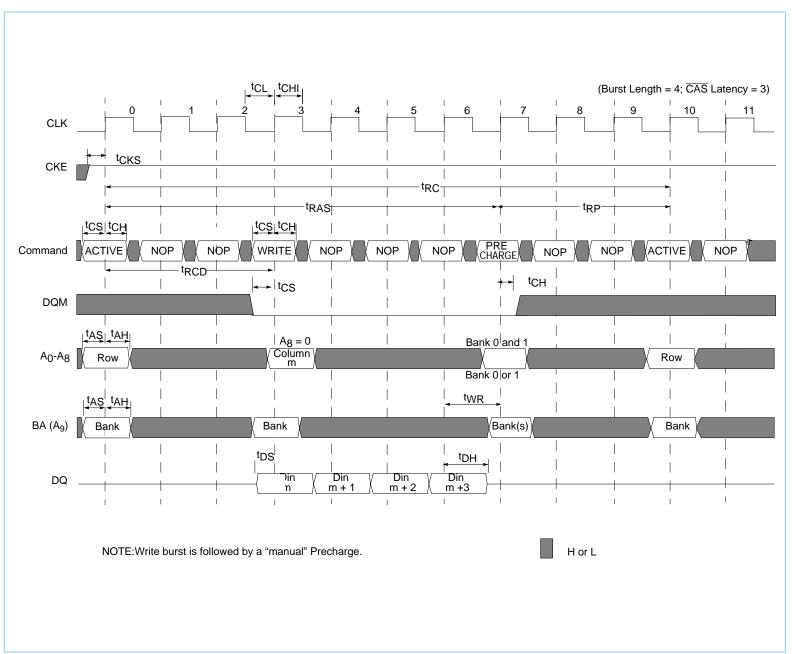


IBM038329NL6B IBM038329NP6B **256K x 32 Synchronous Graphics RAM**

 $\|\mathbf{u}_{\mathbf{u}}\|$

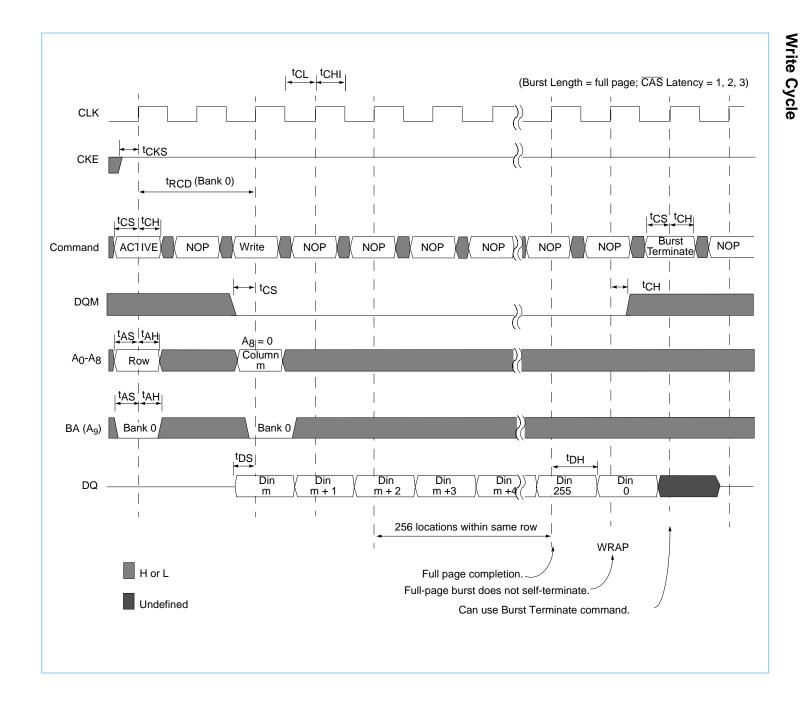




Write DQM Operation

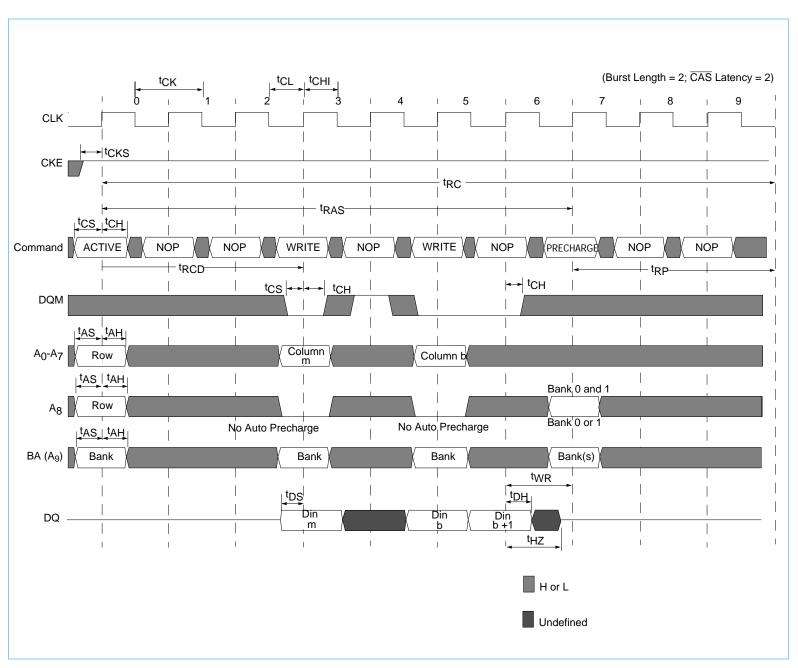


Burst Read Single Write Cycle

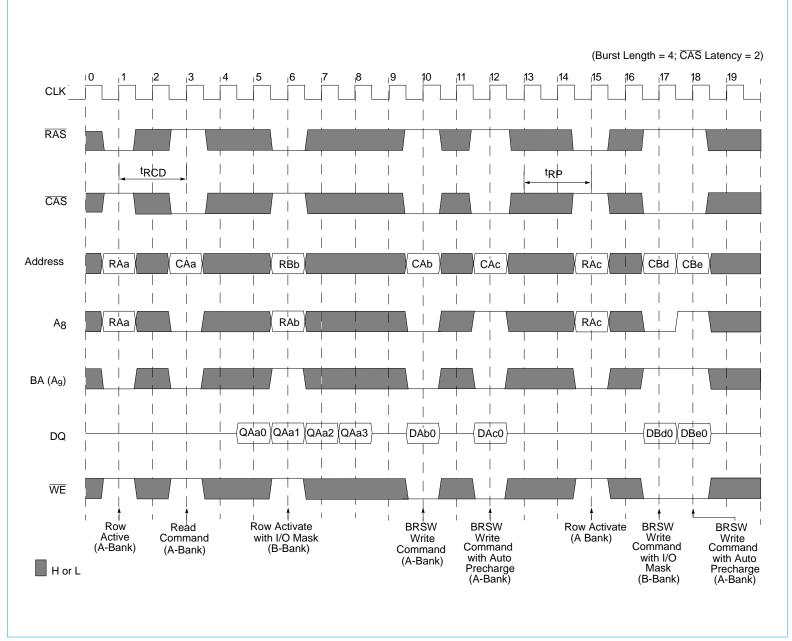


Page 56 of 66

Block Write, 1 Color Register

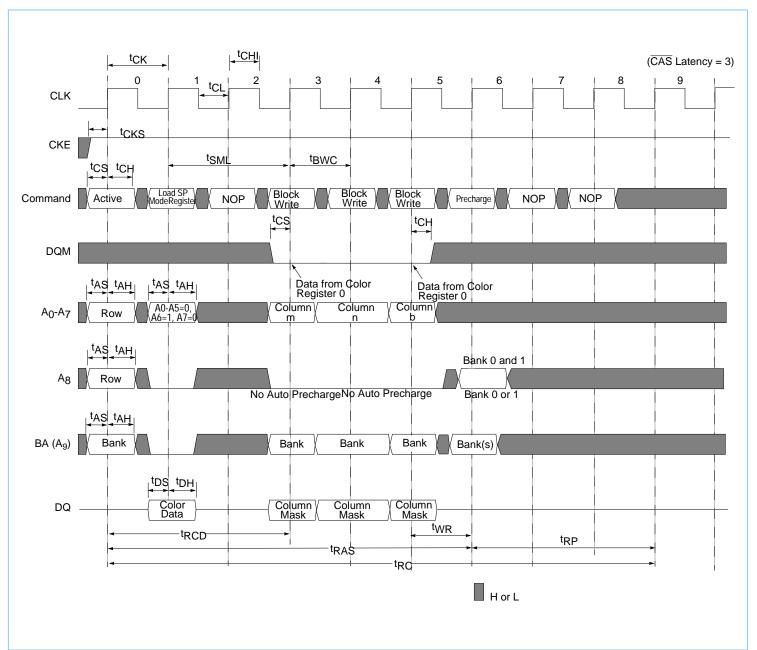

Block Write, Multiple Color Registers

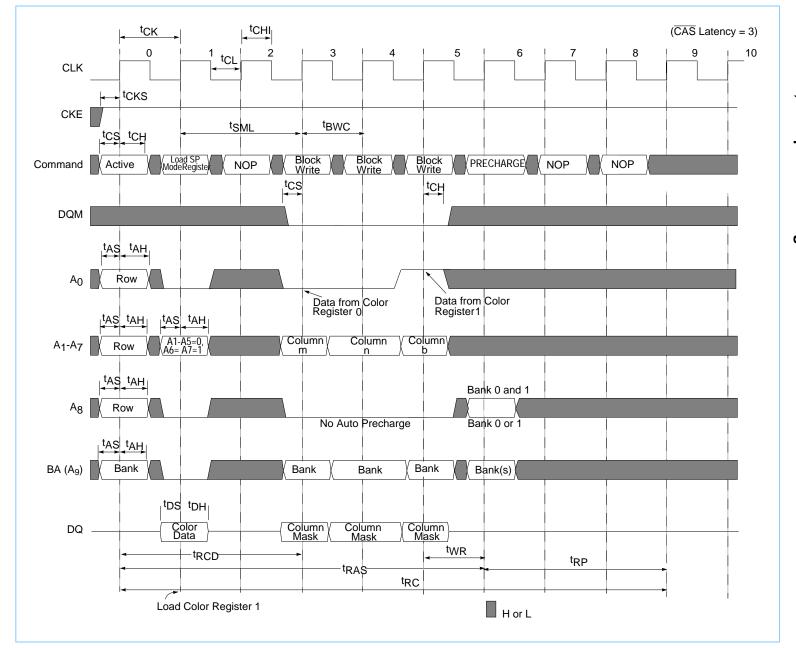



Page 58 of 66



Precharge Command

The Precharge command is used to deactivate the open row in a particular bank, or the open row in both banks. To activate or open another row in the same bank, the user must initiate the Precharge command. This process causes a significant latency known as Row Latency.

Logic Table for Precharge Command

Mnemonic	CKE	cs	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A ₈	A ₇ -A ₀
PRE	Н	L	L	L	L	L	Х	BS	L	Х
PREAL	Н	L	L	L	L	L	Х	Х	Н	Х

The bank(s) will be available for a subsequent row access some specified time (t_{RP}) after the Precharge command is issued. Once a bank has been precharged, it is in an idle state and must be activated prior to any Read, Write, or Block Write commands being issued to the same bank.

Power Down

Logic Table for Power Down

Mnemonic	С	KE	cs	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A ₈	A ₇ -A ₀
	n-1	n							-	_	-
PDN (ENT)	Н	L	Х	Х	Х	Х	Х	X	Х	Х	Х
PDN (EXT)	L	Н	Х	Х	Х	Х	Х	Х	Х	Х	Х

Power Down occurs when both banks are in idle states (precharged) and CKE is registered low. Entering Power Down deactivates the input and output buffers, excluding CKE for maximum power savings while in standby. In this mode the internal clock is suspended to save power. The device should be refreshed every 16ms to keep the DRAMs cells alive by initiating Auto Refresh command cycles. Note that in Power Down Mode no internal refresh operations are being performed.

The Power Down state is exited by taking CKE back high. CKE must go high t_{CKS} before a positive clock edge, after meeting t_{CKH} from the previous clock edge. The first command after exiting Power Down will be registered on the clock edge following t_{CKS} . Exiting Power Down at clock edge n will put the device in the "all banks idle" state in time for clock edge n+1.



Self Refresh Mode (SREF)

The Self Refresh Mode is used to keep the device refreshed during its sleep mode for battery powered systems to conserve power.

SREF (ENT) command will put the device in Self Refresh Mode and the information in the memory cells will be kept alive by refreshing the DRAM cells internally by initiating 1024 cycles every 16ms.


Exiting Self Refresh at clock edge n will put the device in the "all banks idle" state once t_{XSR} is met. NOP commands should be issued on any clock edges occurring during the t_{XSR} period.

Logic Table for Self Refresh


Mnemonic	С	KE	CS	CC	RAS	CAS	WE	DSF	DQM	BA (A ₉)	A ₈	ΔΔο
Milemonic	n-1	n		KAS	CAS	VVL	DSF	DQIVI	DA (Ag)	78	A ₇ -A ₀	
SREF (ENT)	Н	L	L	L	L	Н	L	Х	Х	Х	Х	
SDEE (EVT)	L	Н	Н	Х	Х	Х	Х	Х	Х	Х	Х	
SREF (EXT)	L	Н	L	Н	Н	Н	Х	Х	Х	Х	Х	

The following page shows the timing diagrams for the Power Down Mode and the Self Refresh Mode. Entry into these modes and exit from these modes are also illustrated.

$\|\mathbf{u}\mathbf{u}\|$

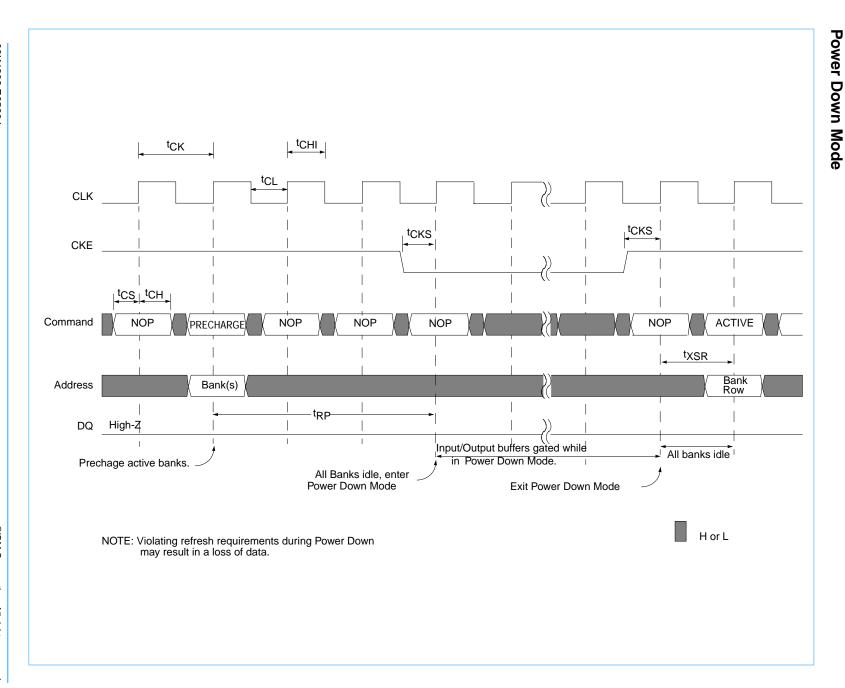


Self Refresh Mode

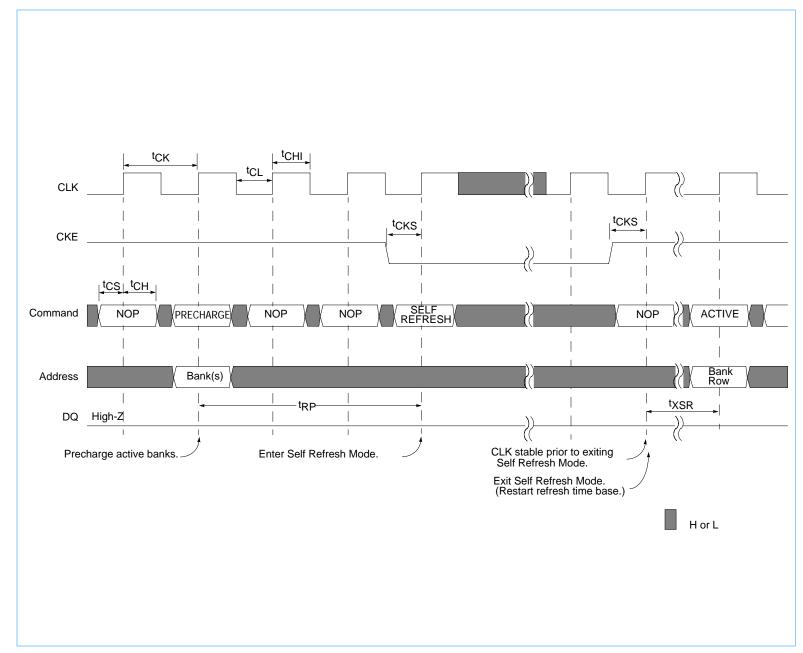




Package Diagram (LQFP)

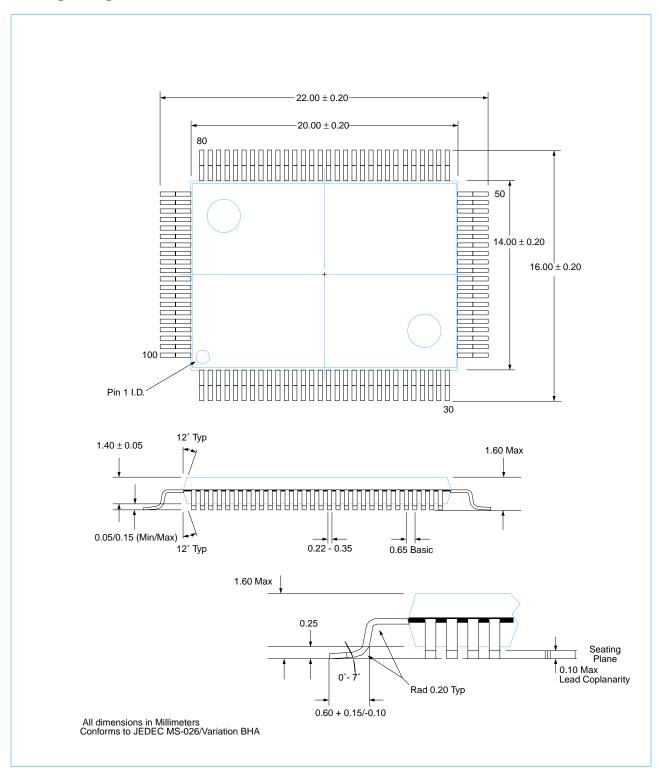



Package Diagram (PQFP)

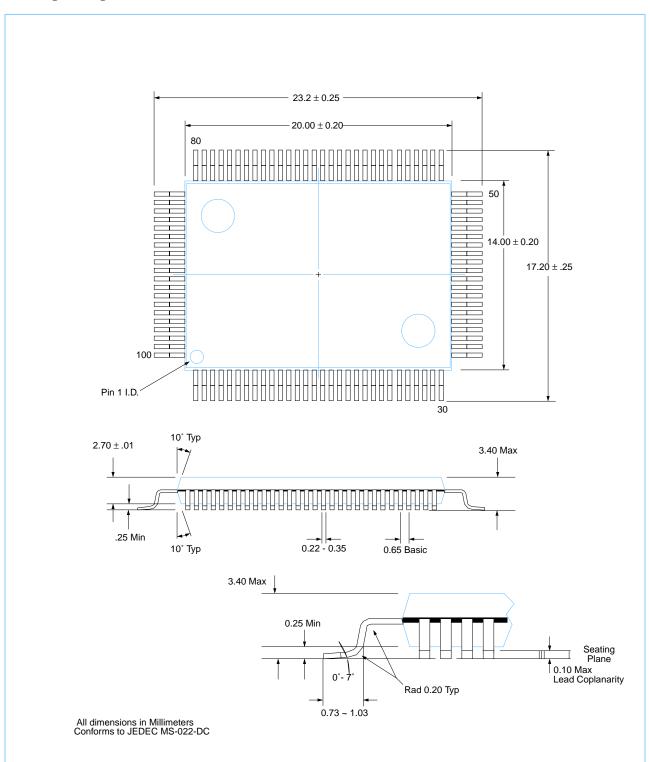



Revision Log

Rev	Contents of Modification
7/97	Initial release.
11/97	Added PQFP package information, updated I_{CC5} Auto Refresh Current (maximum), and updated IBM part numbers.
3/98	Removed SSTL information, updated Clock Input Capacitance, and Auto Refresh Current on -10 parts.



© International Business Machines Corp.1998

Printed in the United States of America All rights reserved

IBM and the IBM logo are registered trademarks of the IBM Corporation.

This document may contain preliminary information and is subject to change by IBM without notice. IBM assumes no responsibility or liability for any use of the information contained herein. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of IBM or third parties. The products described in this document are not intended for use in implantation or other direct life support applications where malfunction may result in direct physical harm or injury to persons. NO WARRANTIES OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE OFFERED IN THIS DOCUMENT.

For more information contact your IBM Microelectronics sales representative or visit us on World Wide Web at http://www.chips.ibm.com

IBM Microelectronics manufacturing is ISO 9000 compliant.