

FEATURES

- Dual Voltage Power -115/230 VAC, pin-selected
- Low Cost —
- Balanced Differential Inputs, 80 dB CMR Noise Rejection
- Autozeroing, Ratiometric Reference for Drift Correction
- 1000 Mn CMOS High Impedance Inputs
- Display .56" High Numerals Red LED
- Compact, Short Depth Case -3.00"W x 2.15"D x 1.76"H (76.2 x 54,6 x 44,7 mm)

APPLICATIONS

- Ammeter Accepts user-supplied shunts for ±20 μA to ±2A Full Scale Ranges
- Voltmeter Accepts user-supplied attenuators for ±2V to ±1 kV Full Scale Ranges
- Ohmmeter 200n to 10Mn Full Scale Range



DESCRIPTION

The DM-3100B is a very low cost, dual AC-powered Digital Panel Meter. Analog voltages over the range of ±1.999 Vdc are displayed with 3½ digits of resolution. The DM-3100B is powered from the AC line; 115 or 230 VAC is pin-selectable. The unit can provide ±5V and −5 Vdc (⊚ 100 milliamps and 5 milliamps respectively) to power customer-supplied external circuitry.


The DM-3100B uses a self-illuminated red LED display with .56" high numerals. It is clearly visible from many feet away in normal or dim light.

Inputs to the DM-3100B are balanced differential (80 dB Common Mode Rejection) so the meter will accurately display small signals even in electrically noisy industrial environments. CMOS circuitry results in an extremely high input impedance (1000 Megohms, typically) and a very low bias current of 5 picoamps - inputs with a source impedance as high as 100 kilohms can be displayed with accuracy. The input circuitry will also safely tolerate overvoltages up to ±250 Vdc (155 VRMS). Inputs are sampled and displayed about four times per second.

Autozeroing and a ratiometric reference in-out loop permit the DM-3100B to be used for drift correction in bridge-type measurement systems. Meter accuracy is adjustable to $\pm 1/10\%$ (± 1 count). Temperature drift of zero is ± 1 count from 0 to 50°C, while temperature drift of gain runs typically ± 50 ppm of Reading/°C.

The AC-powered DM-3100B was designed for installations where existing dc supplies are noisy, inaccessible, or overloaded. This meter may be used wherever a voltage, or a unit which can be made proportional to voltage, must be displayed with accuracy and clarity. The basic input range of ±1.999 Vdc can be expanded with a simple voltage divider to display voltages up to ±1kV or up to ±2A using current shunts. Blank pads on the meter's circuit board can accept user-supplied voltage attenuator resistors, current shunts, or digital ohmmeter components.

The DM-3100B is supplied in Datel's standard short depth black polycarbonate case, measuring only 3.00"W x 2.15"D x 1.76"H. All connections are made on the back panel to an optional 18-pin edge connector. Cutout dimensions are 1.812"H x 3.062"W (46,0 x 77,8 mm), minimum.

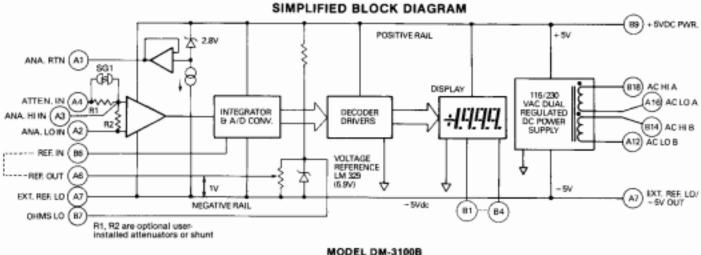

ANALOG INPUT

Input Bias Current

True, balanced differential bipolar

-1.999 Vdc to +1.999 Vdc

Input pad area will accept userinstalled range change 5 pA typical, 50 pA maximum Adjustable to ±0.1% reading.

Displayed Accuracy @ +25°C. ±1 count Resolution...

1 mV

Temperature Drift of Zero.... Autozeroed ±1 count over 0

to +50°C

±50 ppm of Reading/°C typ. Temperature Drift of Gain ±100 ppm of Reading/°C max

Input Impedance..... 100 Megohms, minimum ±250 Volts dc.155 VRMS con-

tinuous max. ±300 Volts intermittent max.

Common Mode Rejection.... 80 dB, DC to 60 Hz, 1 Kilohm un-

balance

Within +Vs - .5V and -Vs +1V Common Mode Voltage Range.

where +Vs is the positive rail (Pin B9) and -Vs is the negative rail (Pin A7)). Vs is approximately equal to -5V

below PWR. COM. (Pin A9) Within 10 minutes

Warm-Up Time...... Internal, referred to the negative rail Reference.....

(-Vs). External, user-supplied reference optional for ratiometric

operation

+100 mV to 2V, referred to -Vs External Ref. Range.....

Ramp-up Time 83.3 mS

(Integration Period)

DISPLAY

3 decimal digits and most significant

1" digit (3½ digits)

Selectable decimal points are in-cluded for scale multipliers.

Red, light-emitting diode (LED) self Display Type.....

illuminated.

Display Height..... 0.56 inches (14,2 mm)

Inputs exceeding the full scale range Overscale.......

blank the display, leaving a "1" MSD

and sign.

A minus sign is automatically dis-played for negative inputs, and may

also be bianked

Sampling Rate.....

Factory set at 3 conversions per second. May be rewired up to 20

conversions/second.

I/O CONNECTIONS

Analog HI Input (Pin A3).

Analog LO Input (Pin A2)

Differential input voltages are connected between these inputs. A bias current path to POWER COMMON (if ±5V-powered) or ANALOG RETURN from both these inputs must be externally provided. External circuits must constrain these inputs to be within the common mode voltage range

Attenuator IN (Pin A4)

Connected in series through R1 (Optional attenuator resistor) to Ana. HI In (Pin A3), Supplied with a jumper

in place of R1

Analog Return (Pln A1)

This pin may be used as a low-noise bias current return for some floating inputs. If not possible, inputs may be referenced to POWER COMMON (if ±5V-powered). Analog Return is approximately -2.8V below +Vs and can sink 30 mA to -Vs.

Reference In/Out (Pins B6/A6).

Normally, REF. IN and REF. OUT should be jumpered together. An external floating source referred to EXT. REF. LO (Pin A7) may be substituted for ratiometric operation.

Connect selected pin to DECIMAL Decimal Points..... POINT COMMON (Pin B5)

Connect this input to +5 Vdc (Pin B9) Display Test (Pin A5).....

to light all display segments. Ground this input to Pin A9 to auto-Polarity Enable (Pin A8)..... matically display a minus sign for

negative inputs.

This connection is used in the ohm-Ohms Lo (Pin B7)..... meter configuration, otherwise do

not use.

POWER CONNECTIONS

For 115 VAC input: (parallel both windings)

1. Connect AC LINE HI A (Pin B18) to AC LINE HI B (Pin B14). Connect both to the hot side of the AC line (mains)

2. Connect AC LINE LO A (Pin A16) to AC LINE LO B (Pin A12). Connect both to the neutral side of the AC line (mains).

For 230 VAC input: (Series both windings)

1. Connect AC LINE HI B (Pin B14) to AC LINE LO A (Pin A16). Make no other connections to these two leads

2. Connect AC LINE HI A (Pin B18) to the the hot side of the AC line (mains).

3. Connect AC LINE LO B (Pin A12) to the neutral side of the AC line

DC Power Ground (Pin A9) may be connected to earth ground if input circuits permit.

For DC-Power Only:

A bipolar ±5V power supply or two isolated single supplies are required Connect +5V to Pin B9, -5V to Pin A7 and Power Ground to Pin A9

POWER REQUIREMENTS

115 or 230 VAC, ±10%, 47 to 440 Hz, 4 watts typical

Users will normally power from AC-only.

DC-only power is optional. Calibration

+5V ±0.25 Vdc @ 250 mA typical, 400 mA max. and −5V Vdc @ 5 mA typ, 25 mA max. Logic spikes must be less than 50 mV. Bypass supplies externally if necessary. A multiturn screwdriver pot adjusts the full scale reading (gain). Zero is automatic (autozeroing). Suggested recalibration in stable conditions is 90 days

PHYSICAL-ENVIRONMENTAL

Short-Depth Case.... Interchangeable with other

Datel cases

3.00"W x 2.15"D x 1.76"H Outline Dimensions..... (76,2 x 54,6 x 44,7 mm) 1.812"H x 3.062"W (46,0 x 77,7 mm)

Through a front panel cutout secured

by (4) 4-40 front access screws which are concealed by the bezel.


Approximately 5 ounces (142g) Weight..... Connector..... Double-sided edgeboard PC type, solder tab, gold-plated fingers, Dual

18-pin, 0.100" centers.

Any 0 to +50°C Operating Temperature Range Storage Temperature Range ...

-25 to +85°C 0 to 15,000 feet (4600m) Altitude. Relative Humidity.... 20% to 80% non-condensing


DM-3100B COMPONENT LOCATIONS *

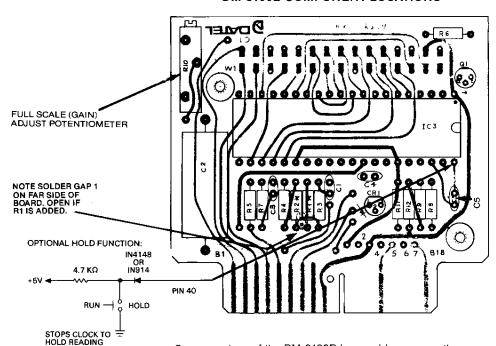

* Refer to DATEL RN-3100/ 4100 Range-Change Accessory Kit data sheet for detailed modification instructions and R1& R2 locations.

Some versions of the DM-3100B have solder gaps on the bottom of the converter board, rather than a jumper at R1. Before attenuating resistors can be added to the DM-3100B, this solder gap must be opened with a soldering iron.


INPUT/OUTPUT CONNECTIONS WITH SINGLE-ENDED INPUT

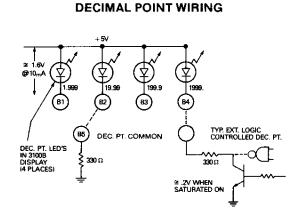


Ordering Information

DM-3100B-1: ± 2Vdc Input Range (Supplied With Free Connector)

RN-3100/4100: Range-Change Accessory Kit for DM-Series Meters

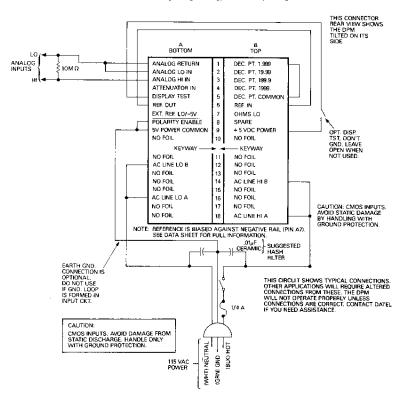


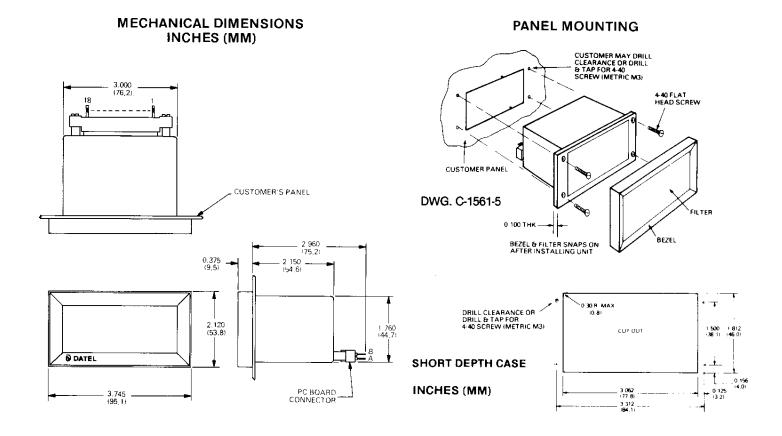

SINGLE-ENDED INPUT WITH GAIN

The internal power supply of the DM-3100B can be used to power external circuitry. The drawing below shows an op amp—user-supplied—in a single-ended configuration to provide gain for a low level input. Power is from the +5V and -5V power in connections (B9 and A7, respectively) on

the DM-3100B. Where low level signals will be amplified, it is important to pay attention to ground routing. A single common ("Mecca") ground point, as indicated in the diagram, is recommended.

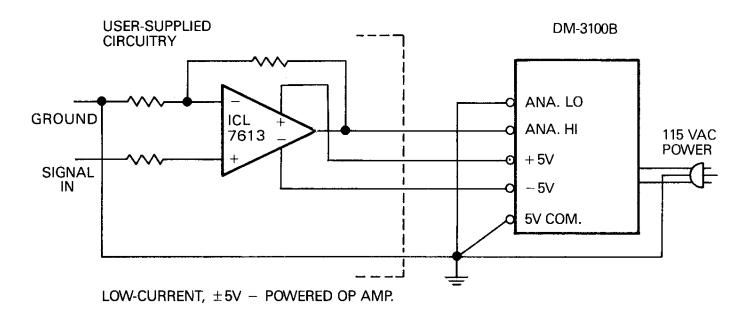

RATIOMETRIC CONNECTIONS WITH BRIDGE INPUTS


The DM-3100B has a reference in-out loop which makes possible ratiometric measurements. Representative connections are illustrated below. Ratiometric operation eliminates changes in the DPM reading due to voltage variations in the Bridge's external excitation source. The input gain on the DM-3100B varies inversely with voltage at Reference In — as REF IN voltage increases, meter gain decreases. Meter input gain thus can be made to compensate for variations in the bridge excitation source voltage. (The DPM is set for unity gain when REF IN V equals $\pm 1V$ as referred to $\pm 1V$.)

For all applications, $V_{IN} = 2$ VREF at full scale (1999 counts). For small values of VREF (100 mV or lower), increased display noise, nonlinearity, rollover and CMR errors will be apparent. Avoid VREF inputs beyond about 2V to prevent inte-

grator saturation with full scale inputs. Variable VREF is not intended for wide gain changes as in multimeter applications. Instead, it should be used for drift correction, scaling to engineering units, or for modest amounts of gain.


A note on grounding: The DM-3100B's internal voltage reference source is biased against the internal negative supply rail (-Vs). Note that this is *not* the same electrical connection as the 5V Power Common connection. Refer to the Simplified Block Diagram.

Because of this configuration, external reference sources should be isolated from the 5V Power Common and should have the Reference Lo Output from the external source connected to the negative supply rail.

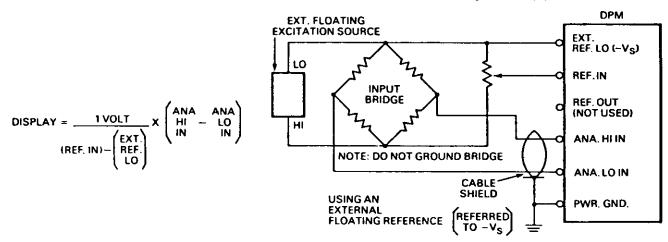

DIGITAL OHMMETER CONNECTIONS

The digital ohmmeter circuit uses the DM-3100B's ratiometric capability. An external reference resistor of known resistance, accuracy, and temperature drift is connected in series with the unknown resistance. A constant, stable volt-

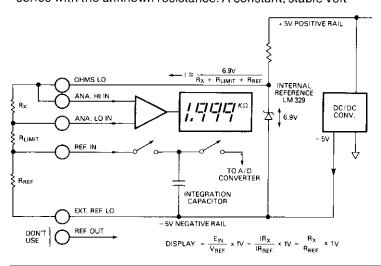

age from the DPM's internal reference diode is applied to the resistor pair to produce a constant current. This current develops two voltage drops across the resistors which are proportional only to the ratio of the resistances since the current through them is identical.

The chart below lists recommended RREF and RLIMIT resistance values corresponding to different ohmmeter ranges. Values of RLIMIT were selected to limit the current through RREF and Rx to 1 milliampere maximum.

RANGE	RESOLUTION	RILIMIT	R _{REF}	DECIMAL POINT
19.99 ΜΩ	10 kΩ	22 ΜΩ	10 ΜΩ	B2 to B5
1.999 MΩ	1 kΩ	3.6 ΜΩ	1 ΜΩ	B1 to B5
199.9 kΩ	100 Ω	360 kΩ	100 kΩ	B3 to B5
19.99 kΩ	10 Ω	36 kΩ	10 kΩ	B2 to B5
1.999 kΩ	1Ω	6.2 kΩ	1 kΩ	B1 to B5

11/81 BULLETIN DMBBJ050111

DATEL, Inc. 11 Cabot Boulevard, Mansfield, MA 02048-1151 Tel: (508) 339-3000 (800) 233-2765 Fax: (508) 339-6356 Internet: www.datel.com Email: sales@datel.com Data sheet fax back: (508) 261-2857

DATEL (UK) LTD. Tadley, England Tel: (01256)-880444 DATEL S.A.R.L. Montigny Le Bretonneux, France Tel: 01-34-60-01-01 DATEL GmbH München, Germany Tel: 89-544334-0 DATEL KK Tokyo, Japan Tel: 3-3779-1031, Osaka Tel: 6-354-2025