64M LVTTL interface SDRAM 125 MHz 1-Mword × 16-bit × 4-bank/2-Mword × 8-bit × 4-bank/ 4-Mword × 4-bit × 4-bank

HITACHI

ADE-203-910A (Z) Rev. 1.0 Dec. 2, 1998

Description

The Hitachi HM5264165D is a 64-Mbit SDRAM organized as 1048576-word \times 16-bit \times 4 bank. The Hitachi HM5264805D is a 64-Mbit SDRAM organized as 2097152-word \times 8-bit \times 4 bank. The Hitachi HM5264405D is a 64-Mbit SDRAM organized as 4194304-word \times 4-bit \times 4 bank. All inputs and outputs are referred to the rising edge of the clock input. It is packaged in standard 54-pin plastic TSOP II.

Features

- 3.3 V power supply
- Clock frequency: 125 MHz (max)
- LVTTL interface
- Single pulsed RAS
- 4 banks can operate simultaneously and independently
- Burst read/write operation and burst read/single write operation capability
- Programmable burst length: 1/2/4/8/full page
- 2 variations of burst sequence
 - Sequential (BL = 1/2/4/8/full page)
 - Interleave (BL = 1/2/4/8)
- Programmable CAS latency: 2/3
- Byte control by DQM: DQM (HM5264805D/HM5264405D)
 - : DQMU/DQML (HM5264165D)
- Refresh cycles: 4096 refresh cycles/64 ms
- 2 variations of refresh
 - Auto refresh
 - Self refresh


<u>HM5264165D Series</u>, <u>HM5264805D Series</u>, <u>HM5264405D Series</u>

- Full page burst length capability
 - Sequential burst
 - Burst stop capability

Ordering Information

Type No.	Frequency	Package
HM5264165DTT-80	125 MHz	400-mil 54-pin plastic TSOP II (TTP-54D)
HM5264165DLTT-80	125 MHz	
HM5264805DTT-80	125 MHz	
HM5264805DLTT-80	125 MHz	
HM5264405DTT-80	125 MHz	
HM5264405DLTT-80	125 MHz	


Pin Arrangement (HM5264165D)

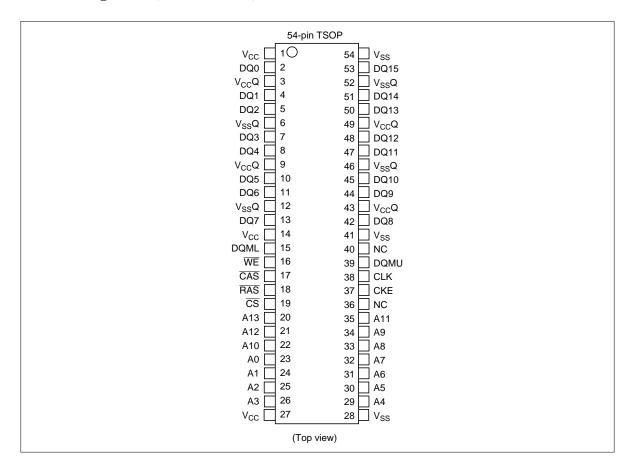

Pin Description

Pin name	Function	Pin name	Function
A0 to A13	Address input	DQMU/DQML	Input/output mask
	Row address A0 to A11	CLK	Clock input
	Column address A0 to A7	CKE	Clock enable
	Bank select address A12/A13 (BS)	V _{cc}	Power for internal circuit
DQ0 to DQ15	Data-input/output	V_{ss}	Ground for internal circuit
CS	Chip select	$V_{cc}Q$	Power for DQ circuit
RAS	Row address strobe command	$V_{ss}Q$	Ground for DQ circuit
CAS	Column address strobe command	NC	No connection
WE	Write enable		


Pin Arrangement (HM5264805D)

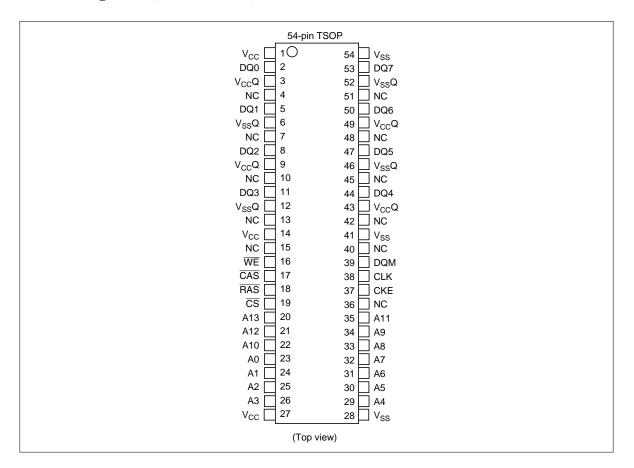

Pin Description

Pin name	Function	Pin name	Function
A0 to A13	Address input	DQM	Input/output mask
	Row address A0 to A11	CLK	Clock input
	Column address A0 to A8	CKE	Clock enable
	Bank select address A12/A13 (BS)	V _{cc}	Power for internal circuit
DQ0 to DQ7	Data-input/output	V _{ss}	Ground for internal circuit
CS	Chip select	$V_{cc}Q$	Power for DQ circuit
RAS	Row address strobe command	V _{ss} Q	Ground for DQ circuit
CAS	Column address strobe command	NC	No connection
WE	Write enable		


Pin Arrangement (HM5264405D)

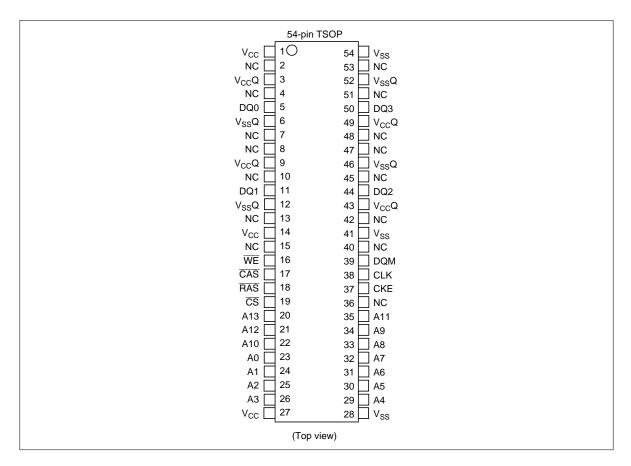


Pin Description

Pin name	Function	Pin name	Function
A0 to A13	Address input	DQM	Input/output mask
	Row address A0 to A11	CLK	Clock input
	Column address A0 to A9	CKE	Clock enable
	Bank select address A12/A13 (BS)	V _{cc}	Power for internal circuit
DQ0 to DQ3	Data-input/output	V _{ss}	Ground for internal circuit
CS	Chip select	$V_{cc}Q$	Power for DQ circuit
RAS	Row address strobe command	V _{ss} Q	Ground for DQ circuit
CAS	Column address strobe command	NC	No connection
WE	Write enable		


Block Diagram (HM5264165D)

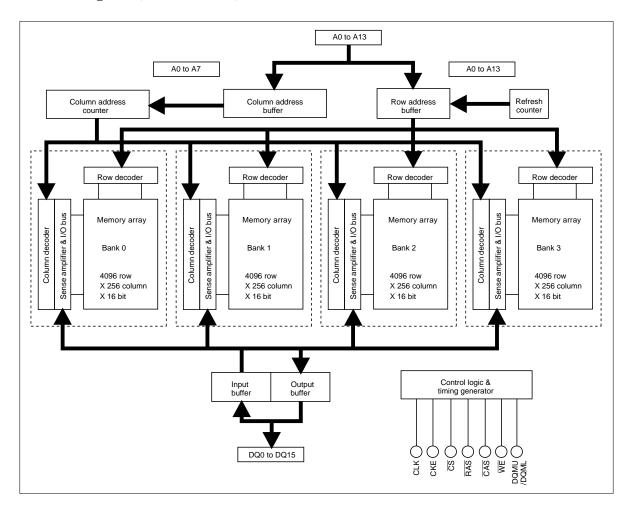

Block Diagram (HM5264805D)

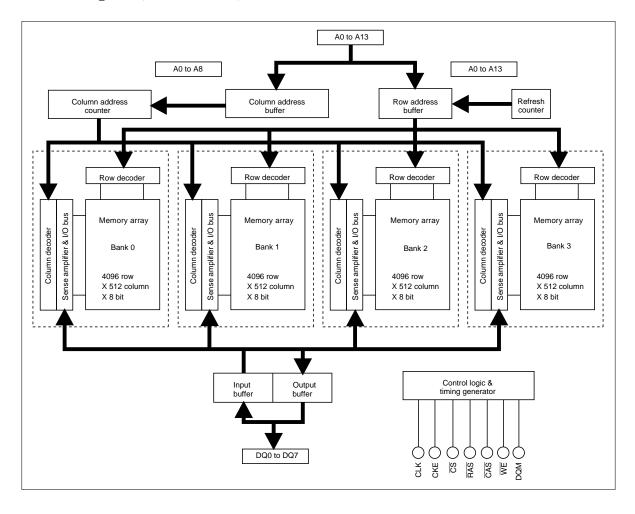

Block Diagram (HM5264405D)

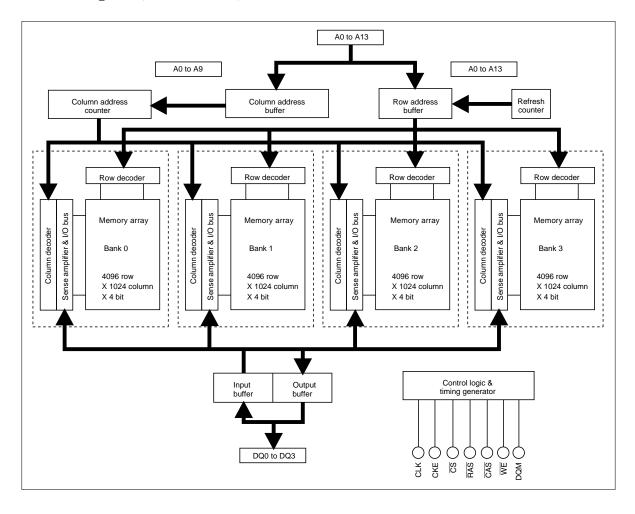

Pin Functions

CLK (**input pin**): CLK is the master clock input to this pin. The other input signals are referred at CLK rising edge.

 $\overline{\text{CS}}$ (input pin): When $\overline{\text{CS}}$ is Low, the command input cycle becomes valid. When $\overline{\text{CS}}$ is High, all inputs are ignored. However, internal operations (bank active, burst operations, etc.) are held.

RAS, CAS, and WE (input pins): Although these pin names are the same as those of conventional DRAMs, they function in a different way. These pins define operation commands (read, write, etc.) depending on the combination of their voltage levels. For details, refer to the command operation section.

A0 to A11 (input pins): Row address (AX0 to AX11) is determined by A0 to A11 level at the bank active command cycle CLK rising edge. Column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) is determined by A0 to A7, A8 or A9 (A7; HM5264165D, A8; HM5264805D, A9; HM5264405D) level at the read or write command cycle CLK rising edge. And this column address becomes burst access start address. A10 defines the precharge mode. When A10 = High at the precharge command cycle, all banks are precharged. But when A10 = Low at the precharge command cycle, only the bank that is selected by A12/A13 (BS) is precharged. For details refer to the command operation section.

A12/A13 (input pin): A12/A13 are bank select signal (BS). The memory array of the HM5264165D, HM5264805D, the HM5264405D is divided into bank 0, bank 1, bank 2 and bank 3. HM5264165D contain 4096-row × 256-column × 16-bit. HM5264805D contain 4096-row × 512-column × 8-bit. HM5264405D contain 4096-row × 1024-column × 4-bit. If A12 is Low and A13 is Low, bank 0 is selected. If A12 is High and A13 is Low, bank 1 is selected. If A12 is Low and A13 is High, bank 2 is selected. If A12 is High and A13 is High, bank 3 is selected.

CKE (**input pin**): This pin determines whether or not the next CLK is valid. If CKE is High, the next CLK rising edge is valid. If CKE is Low, the next CLK rising edge is invalid. This pin is used for power-down mode, clock suspend mode and self refresh mode.

DQM, DQMU/DQML (input pins): DQM, DQMU/DQML controls input/output buffers.

Read operation: If DQM, DQMU/DQML is High, the output buffer becomes High-Z. If the DQM, DQMU/DQML is Low, the output buffer becomes Low-Z. (The latency of DQM, DQMU/DQML during reading is 2 clocks.)

Write operation: If DQM, DQMU/DQML is High, the previous data is held (the new data is not written). If DQM, DQMU/DQML is Low, the data is written. (The latency of DQM, DQMU/DQML during writing is 0 clock.)

DQ0 to DQ15 (DQ pins): Data is input to and output from these pins (DQ0 to DQ15; HM5264165D, DQ0 to DQ7; HM5264805D, DQ0 to DQ3; HM5264405D).

 V_{CC} and $V_{CC}Q$ (power supply pins): 3.3 V is applied. (V_{CC} is for the internal circuit and $V_{CC}Q$ is for the output buffer.)

 V_{ss} and $V_{ss}Q$ (power supply pins): Ground is connected. (V_{ss} is for the internal circuit and $V_{ss}Q$ is for the output buffer.)

Command Operation

Command Truth Table

The SDRAM recognizes the following commands specified by the \overline{CS} , \overline{RAS} , \overline{CAS} , \overline{WE} and address pins.

	CKE								
Symbol	n - 1	n	cs	RAS	CAS	WE	A12/A13	A10	A0 to A11
DESL	Н	×	Н	×	×	×	×	×	×
NOP	Н	×	L	Н	Н	Н	×	×	×
BST	Н	×	L	Н	Н	L	×	×	×
READ	Н	×	L	Н	L	Н	V	L	V
READ A	Н	×	L	Н	L	Н	V	Н	V
WRIT	Н	×	L	Н	L	L	V	L	V
WRIT A	Н	×	L	Н	L	L	V	Н	V
ACTV	Н	×	L	L	Н	Н	V	V	V
PRE	Н	×	L	L	Н	L	V	L	×
PALL	Н	×	L	L	Н	L	×	Н	×
REF/SELF	Н	V	L	L	L	Н	×	×	×
MRS	Н	×	L	L	L	L	V	V	V
	DESL NOP BST READ READ A WRIT WRIT A ACTV PRE PALL REF/SELF	Symbol n - 1 DESL H NOP H BST H READ H READ H WRIT H WRIT A H ACTV H PRE H PALL H REF/SELF H	Symbol n - 1 n DESL H × NOP H × BST H × READ H × WRIT H × WRIT A H × ACTV H × PRE H × PALL H × REF/SELF H V	Symbol n - 1 n CS DESL H × H NOP H × L BST H × L READ H × L WRIT H × L WRIT A H × L ACTV H × L PRE H × L PALL H × L REF/SELF H V L	Symbol n - 1 n CS RAS DESL H × H × NOP H × L H BST H × L H READ H × L H WRIT H × L H WRIT A H × L H ACTV H × L L PRE H × L L PALL H × L L REF/SELF H V L L	Symbol n - 1 n CS RAS CAS DESL H × H × × NOP H × L H H BST H × L H H READ H × L H L WRIT H × L H L WRIT A H × L H L ACTV H × L L H PRE H × L L H PALL H × L L H REF/SELF H V L L L	Symbol n - 1 n CS RAS CAS WE DESL H × H × × × × NOP H × L H H H BST H × L H H L READ H × L H L H READ A H × L H L H WRIT H × L H L L WRIT A H × L H L L ACTV H × L L H H PRE H × L L H L PALL H × L L H L REF/SELF H V L L L H	Symbol n - 1 n CS RAS CAS WE A12/A13 DESL H × H × × × × NOP H × L H H × BST H × L H H × READ H × L H L H V READ A H × L H L H V WRIT H × L H L L V WRIT A H × L H L L V ACTV H × L L H V PRE H × L L H L V PALL H × L L H × REF/SELF H V L L L H ×	Symbol n - 1 n CS RAS CAS WE A12/A13 A10 DESL H × H × × × × × NOP H × L H H H × × BST H × L H H L × × READ H × L H L H V L READ A H × L H L H V H WRIT H × L H L L V H ACTV H × L H L V V PRE H × L L H L V L PALL H × L L H X X X

Note: H: V_{IH} . L: V_{IL} . \times : V_{IH} or V_{IL} . V: Valid address input

Ignore command [DESL]: When this command is set (\overline{CS}) is High), the SDRAM ignore command input at the clock. However, the internal status is held.

No operation [NOP]: This command is not an execution command. However, the internal operations continue.

Burst stop in full-page [BST]: This command stops a full-page burst operation (burst length = full-page (256; HM5264165D, 512; HM5264805D, 1024; HM5264405D)), and is illegal otherwise When data input/output is completed for a full page of data, it automatically returns to the start address, and input/output is performed repeatedly.

Column address strobe and read command [READ]: This command starts a read operation. In addition, the start address of burst read is determined by the column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) and the bank select address (BS). After the read operation, the output buffer becomes High-Z.

Read with auto-precharge [READ A]: This command automatically performs a precharge operation after a burst read with a burst length of 1, 2, 4 or 8. When the burst length is full-page, this command is illegal.

Column address strobe and write command [WRIT]: This command starts a write operation. When the burst write mode is selected, the column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) and the bank select address (A12/A13) become the burst write start address. When the single write mode is selected, data is only written to the location specified by the column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) and the bank select address (A12/A13).

Write with auto-precharge [WRIT A]: This command automatically performs a precharge operation after a burst write with a length of 1, 2, 4 or 8, or after a single write operation. When the burst length is full-page, this command is illegal.

Row address strobe and bank activate [ACTV]: This command activates the bank that is selected by A12/A13 (BS) and determines the row address (AX0 to AX11). When A12 and A13 are Low, bank 0 is activated. When A12 is High and A13 is Low, bank 1 is activated. When A12 is Low and A13 is High, bank 2 is activated. When A12 and A13 are High, bank 3 is activated.

Precharge selected bank [PRE]: This command starts precharge operation for the bank selected by A12/A13. If A12 and A13 are Low, bank 0 is selected. If A12 is High and A13 is Low, bank 1 is selected. If A12 is Low and A13 is High, bank 2 is selected. If A12 and A13 are High, bank 3 is selected.

Precharge all banks [PALL]: This command starts a precharge operation for all banks.

Refresh [**REF/SELF**]: This command starts the refresh operation. There are two types of refresh operation, the one is auto-refresh, and the other is self-refresh. For details, refer to the CKE truth table section.

Mode register set [MRS]: The SDRAM has a mode register that defines how it operates. The mode register is specified by the address pins (A0 to A13) at the mode register set cycle. For details, refer to the mode register configuration. After power on, the contents of the mode register are undefined, execute the mode register set command to set up the mode register.

DQM Truth Table (HM5264165D)

		CKE			
Command	Symbol	n - 1	n	DQMU	DQML
Upper byte (DQ8 to DQ15) write enable/output enable	ENBU	Н	×	L	×
Lower byte (DQ0 to DQ7) write enable/output enable	ENBL	Н	×	×	L
Upper byte (DQ8 to DQ15) write inhibit/output disable	MASKU	Н	×	Н	×
Lower byte (DQ0 to DQ7) write inhibit/output disable	MASKL	Н	×	×	Н

Note: H: V_{IH} . L: V_{IL} . \times : V_{IH} or V_{IL} . Write: I_{DID} is needed.

Read: I_{DOD} is needed.

DQM Truth Table (HM5264805D/HM5264405D)

		CKE		
Command	Symbol	n - 1	n	DQM
Write enable/output enable	ENB	Н	×	L
Write inhibit/output disable	MASK	Н	×	Н

Note: H: V_{IH} . L: V_{IL} . \times : V_{IH} or V_{IL} .

Write: I_{DID} is needed. Read: I_{DOD} is needed.

The SDRAM can mask input/output data by means of DQM, DQMU/DQML.

DQMU masks the upper byte and DQML masks the lower byte. (HM5264165D)

During reading, the output buffer is set to Low-Z by setting DQM, DQMU/DQML to Low, enabling data output. On the other hand, when DQM, DQMU/DQML is set to High, the output buffer becomes High-Z, disabling data output.

During writing, data is written by setting DQM, DQMU/DQML to Low. When DQM, DQMU/DQML is set to High, the previous data is held (the new data is not written). Desired data can be masked during burst read or burst write by setting DQMU/DQML. For details, refer to the DQM, DQMU/DQML control section of the SDRAM operating instructions.

CKE Truth Table

		CKE						
Current state	Command	n - 1	n	CS	RAS	CAS	WE	Address
Active	Clock suspend mode entry	Н	L	Н	×	×	×	×
Any	Clock suspend	L	L	×	×	×	×	×
Clock suspend	Clock suspend mode exit	L	Н	×	×	×	×	×
Idle	Auto-refresh command (REF)	Н	Н	L	L	L	Н	×
Idle	Self-refresh entry (SELF)	Н	L	L	L	L	Н	×
Idle	Power down entry	Н	L	L	Н	Н	Н	×
		Н	L	Н	×	×	×	×
Self refresh	Self refresh exit (SELFX)	L	Н	L	Н	Н	Н	×
		L	Н	Н	×	×	×	×
Power down	Power down exit	L	Н	L	Н	Н	Н	×
		L	Н	Н	×	×	×	×

Note: H: V_{IH} . L: V_{IL} . \times : V_{IH} or V_{IL} .

Clock suspend mode entry: The SDRAM enters clock suspend mode from active mode by setting CKE to Low. The clock suspend mode changes depending on the current status (1 clock before) as shown below.

ACTIVE clock suspend: This suspend mode ignores inputs after the next clock by internally maintaining the bank active status.

READ suspend and READ with Auto-precharge suspend: The data being output is held (and continues to be output).

WRITE suspend and WRIT with Auto-precharge suspend: In this mode, external signals are not accepted. However, the internal state is held.

Clock suspend: During clock suspend mode, keep the CKE to Low.

Clock suspend mode exit: The SDRAM exits from clock suspend mode by setting CKE to High during the clock suspend state.

IDLE: In this state, all banks are not selected, and completed precharge operation.

Auto-refresh command [REF]: When this command is input from the IDLE state, the SDRAM starts auto-refresh operation. (The auto-refresh is the same as the CBR refresh of conventional DRAMs.) During the auto-refresh operation, refresh address and bank select address are generated inside the SDRAM. For every auto-refresh cycle, the internal address counter is updated. Accordingly, 4096 times are required to refresh the entire memory. Before executing the auto-refresh command, all the banks must be in the IDLE state. In addition, since the precharge for all banks is automatically performed after auto-refresh, no precharge command is required after auto-refresh.

Self-refresh entry [SELF]: When this command is input during the IDLE state, the SDRAM starts self-refresh operation. After the execution of this command, self-refresh continues while CKE is Low. Since self-refresh is performed internally and automatically, external refresh operations are unnecessary.

Power down mode entry: When this command is executed during the IDLE state, the SDRAM enters power down mode. In power down mode, power consumption is suppressed by cutting off the initial input circuit.

Self-refresh exit: When this command is executed during self-refresh mode, the SDRAM can exit from self-refresh mode. After exiting from self-refresh mode, the SDRAM enters the IDLE state.

Power down exit: When this command is executed at the power down mode, the SDRAM can exit from power down mode. After exiting from power down mode, the SDRAM enters the IDLE state.

Function Truth Table

The following table shows the operations that are performed when each command is issued in each mode of the SDRAM. The following table assumes that CKE is high.

Current state	CS	RAS	CAS	WE	Address	Command	Operation
Precharge	Н	×	×	×	×	DESL	Enter IDLE after tRP
	L	Н	Н	Н	×	NOP	Enter IDLE after tRP
	L	Н	Н	L	×	BST	NOP
	L	Н	L	Н	BA, CA, A10	READ/READ A	ILLEGAL
	L	Н	L	L	BA, CA, A10	WRIT/WRIT A	ILLEGAL
	L	L	Н	Н	BA, RA	ACTV	ILLEGAL
	L	L	Н	L	BA, A10	PRE, PALL	NOP
	L	L	L	Н	×	REF, SELF	ILLEGAL
	L	L	L	L	MODE	MRS	ILLEGAL
Idle	Н	×	×	×	×	DESL	NOP
	L	Н	Н	Н	×	NOP	NOP
	L	Н	Н	L	×	BST	NOP
	L	Н	L	Н	BA, CA, A10	READ/READ A	ILLEGAL
	L	Н	L	L	BA, CA, A10	WRIT/WRIT A	ILLEGAL
	L	L	Н	Н	BA, RA	ACTV	Bank and row active
	L	L	Н	L	BA, A10	PRE, PALL	NOP
	L	L	L	Н	×	REF, SELF	Refresh
	L	L	L	L	MODE	MRS	Mode register set

Current state	CS	RAS	CAS	WE	Address	Command	Operation
Row active	Н	×	×	×	×	DESL	NOP
	L	Н	Н	Н	×	NOP	NOP
	L	Н	Н	L	×	BST	NOP
	L	Н	L	Н	BA, CA, A10	READ/READ A	Begin read
	L	Н	L	L	BA, CA, A10	WRIT/WRIT A	Begin write
	L	L	Н	Н	BA, RA	ACTV	Other bank active ILLEGAL on same bank*3
	L	L	Н	L	BA, A10	PRE, PALL	Precharge
	L	L	L	Н	×	REF, SELF	ILLEGAL
	L	L	L	L	MODE	MRS	ILLEGAL
Read	Н	×	×	×	×	DESL	Continue burst to end
	L	Н	Н	Н	×	NOP	Continue burst to end
	L	Н	Н	L	×	BST	Burst stop to full page
	L	Н	L	Н	BA, CA, A10	READ/READ A	Continue burst read to CAS latency and New read
	L	Н	L	L	BA, CA, A10	WRIT/WRIT A	Term burst read/start write
	L	L	Н	Н	BA, RA	ACTV	Other bank active ILLEGAL on same bank*3
	L	L	Н	L	BA, A10	PRE, PALL	Term burst read and Precharge
	L	L	L	Н	×	REF, SELF	ILLEGAL
	L	L	L	L	MODE	MRS	ILLEGAL
Read with auto- precharge	Н	×	×	×	×	DESL	Continue burst to end and precharge
	L	Н	Н	Н	×	NOP	Continue burst to end and precharge
	L	Н	Н	L	×	BST	ILLEGAL
	L	Н	L	Н	BA, CA, A10	READ/READ A	ILLEGAL
	L	Н	L	L	BA, CA, A10	WRIT/WRIT A	ILLEGAL
	L	L	Н	Н	BA, RA	ACTV	Other bank active ILLEGAL on same bank*3
	L	L	Н	L	BA, A10	PRE, PALL	ILLEGAL
	L	L	L	Н	×	REF, SELF	ILLEGAL
	L	L	L	L	MODE	MRS	ILLEGAL

<u>HM5264165D Series</u>, <u>HM5264805D Series</u>, <u>HM5264405D Series</u>

Write H X X X X NODE Continue burst to end L H H H X NOP Continue burst to end L H H L X BST Burst stop on full page L H L H BA, CA, A10 READ/READ A Term burst and New read L H L L BA, CA, A10 WRIT/WRIT A Term burst and New read L L H L BA, CA, A10 WRIT/WRIT A Term burst and New read L L L H X REF, SELF ILLEGAL L L L H X REF, SELF ILLEGAL Write with auto-precharge L L H X NOP Continue burst to end and precharge L H H X X SST ILLEGAL L H H X X BST ILLEGAL L H	Current state	CS	RAS	CAS	WE	Address	Command	Operation
	Write	Н	×	×	×	×	DESL	Continue burst to end
L		L	Н	Н	Н	×	NOP	Continue burst to end
		L	Н	Н	L	×	BST	Burst stop on full page
L		L	Н	L	Н	BA, CA, A10	READ/READ A	Term burst and New read
		L	Н	L	L	BA, CA, A10	WRIT/WRIT A	Term burst and New write
		L	L	Н	Н	BA, RA	ACTV	
Write with autoprecharge H		L	L	Н	L	BA, A10	PRE, PALL	
Write with autoprecharge H		L	L	L	Н	×	REF, SELF	ILLEGAL
Precharge		L	L	L	L	MODE	MRS	ILLEGAL
Precharge		Н	×	×	×	×	DESL	
L		L	Н	Н	Н	×	NOP	
L		L	Н	Н	L	×	BST	ILLEGAL
L L H H BA, RA ACTV Other bank active ILLEGAL on same bank*3 L L H L BA, A10 PRE, PALL ILLEGAL L L L H X REF, SELF ILLEGAL L L L MODE MRS ILLEGAL Refresh (autorefresh) H X X X X X DESL Enter IDLE after t _{RC} L H H H X NOP Enter IDLE after t _{RC} L H H L X BST Enter IDLE after t _{RC} L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, CA, A10 WRIT/WRIT A ILLEGAL L H H BA, RA ACTV ILLEGAL L L H BA, A10 PRE, PALL ILLEGAL L L H BA, A10 PRE, PALL ILLEGAL		L	Н	L	Н	BA, CA, A10	READ/READ A	ILLEGAL
L L H L BA, A10 PRE, PALL ILLEGAL on same bank*3		L	Н	L	L	BA, CA, A10	WRIT/WRIT A	ILLEGAL
L L L H X REF, SELF ILLEGAL Refresh (autorefresh) H X X X X X DESL Enter IDLE after t _{RC} L H H H X NOP Enter IDLE after t _{RC} L H H L X BST Enter IDLE after t _{RC} L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, RA ACTV ILLEGAL L L H H BA, A10 PRE, PALL ILLEGAL L L H K REF, SELF ILLEGAL		L	L	Н	Н	BA, RA	ACTV	
Refresh (autorefresh) H × × × × × DESL Enter IDLE after t _{RC} L H H H × NOP Enter IDLE after t _{RC} L H H L × BST Enter IDLE after t _{RC} L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H K REF, SELF ILLEGAL		L	L	Н	L	BA, A10	PRE, PALL	ILLEGAL
Refresh (autorefresh) H × × × × × NOP Enter IDLE after t _{RC} L H H H × NOP Enter IDLE after t _{RC} L H H L × BST Enter IDLE after t _{RC} L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, CA, A10 WRIT/WRIT A ILLEGAL L L H BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H X REF, SELF ILLEGAL		L	L	L	Н	×	REF, SELF	ILLEGAL
refresh) L H H H × NOP Enter IDLE after t _{RC} L H H L × BST Enter IDLE after t _{RC} L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, CA, A10 WRIT/WRIT A ILLEGAL L L H H BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H × REF, SELF ILLEGAL		L	L	L	L	MODE	MRS	ILLEGAL
L H H L × BST Enter IDLE after t _{RC} L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, CA, A10 WRIT/WRIT A ILLEGAL L L H H BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H × REF, SELF ILLEGAL	•	Н	×	×	×	×	DESL	Enter IDLE after t _{RC}
L H L H BA, CA, A10 READ/READ A ILLEGAL L H L BA, CA, A10 WRIT/WRIT A ILLEGAL L L H H BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H × REF, SELF ILLEGAL		L	Н	Н	Н	×	NOP	Enter IDLE after t _{RC}
L H L BA, CA, A10 WRIT/WRIT A ILLEGAL L L H BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H × REF, SELF ILLEGAL		L	Н	Н	L	×	BST	Enter IDLE after t _{RC}
L L H H BA, RA ACTV ILLEGAL L L H L BA, A10 PRE, PALL ILLEGAL L L H × REF, SELF ILLEGAL		L	Н	L	Н	BA, CA, A10	READ/READ A	ILLEGAL
L L H L BA, A10 PRE, PALL ILLEGAL L L H × REF, SELF ILLEGAL		L	Н	L	L	BA, CA, A10	WRIT/WRIT A	ILLEGAL
L L H × REF, SELF ILLEGAL		L	L	Н	Н	BA, RA	ACTV	ILLEGAL
		L	L	Н	L	BA, A10	PRE, PALL	ILLEGAL
L L L MODE MRS ILLEGAL		L	L	L	Н	×	REF, SELF	ILLEGAL
		L	L	L	L	MODE	MRS	ILLEGAL

Notes: 1. H: V_{IH} . L: V_{IL} . \times : V_{IH} or V_{IL} .

The other combinations are inhibit.

- 2. An interval of $t_{\tiny DPL}$ is required between the final valid data input and the precharge command.
- 3. If $\rm t_{RRD}$ is not satisfied, this operation is illegal.

From PRECHARGE state, command operation

To [DESL], [NOP] or [BST]: When these commands are executed, the SDRAM enters the IDLE state after t_{RP} has elapsed from the completion of precharge.

From IDLE state, command operation

To [DESL], [NOP], [BST], [PRE] or [PALL]: These commands result in no operation.

To [ACTV]: The bank specified by the address pins and the ROW address is activated.

To [**REF**], [**SELF**]: The SDRAM enters refresh mode (auto-refresh or self-refresh).

To [MRS]: The SDRAM enters the mode register set cycle.

From ROW ACTIVE state, command operation

To [DESL], [NOP] or [BST]: These commands result in no operation.

To [READ], [READ A]: A read operation starts. (However, an interval of t_{RCD} is required.)

To [WRIT], [WRIT A]: A write operation starts. (However, an interval of t_{RCD} is required.)

To [ACTV]: This command makes the other bank active. (However, an interval of t_{RRD} is required.) Attempting to make the currently active bank active results in an illegal command.

To [PRE], [PALL]: These commands set the SDRAM to precharge mode. (However, an interval of t_{RAS} is required.)

From READ state, command operation

To [DESL], [NOP]: These commands continue read operations until the burst operation is completed.

To [BST]: This command stops a full-page burst.

To [**READ**], [**READ** A]: Data output by the previous read command continues to be output. After \overline{CAS} latency, the data output resulting from the next command will start.

To [WRIT], [WRIT A]: These commands stop a burst read, and start a write cycle.

To [ACTV]: This command makes other banks bank active. (However, an interval of t_{RRD} is required.) Attempting to make the currently active bank active results in an illegal command.

To [PRE], [PALL]: These commands stop a burst read, and the SDRAM enters precharge mode.

From READ with AUTO-PRECHARGE state, command operation

To [DESL], [NOP]: These commands continue read operations until the burst operation is completed, and the SDRAM then enters precharge mode.

To [ACTV]: This command makes other banks bank active. (However, an interval of t_{RRD} is required.) Attempting to make the currently active bank active results in an illegal command.

From WRITE state, command operation

To [DESL], [NOP]: These commands continue write operations until the burst operation is completed.

To [BST]: This command stops a full-page burst.

To [READ], [READ A]: These commands stop a burst and start a read cycle.

To [WRIT], [WRIT A]: These commands stop a burst and start the next write cycle.

To [ACTV]: This command makes the other bank active. (However, an interval of t_{RRD} is required.) Attempting to make the currently active bank active results in an illegal command.

To [PRE], [PALL]: These commands stop burst write and the SDRAM then enters precharge mode.

From WRITE with AUTO-PRECHARGE state, command operation


To [DESL], [NOP]: These commands continue write operations until the burst is completed, and the SDRAM enters precharge mode.

To [ACTV]: This command makes the other bank active. (However, an interval of t_{RRD} is required.) Attempting to make the currently active bank active results in an illegal command.

From REFRESH state, command operation

To [DESL], [NOP], [BST]: After an auto-refresh cycle (after t_{RC}), the SDRAM automatically enters the IDLE state.

Simplified State Diagram

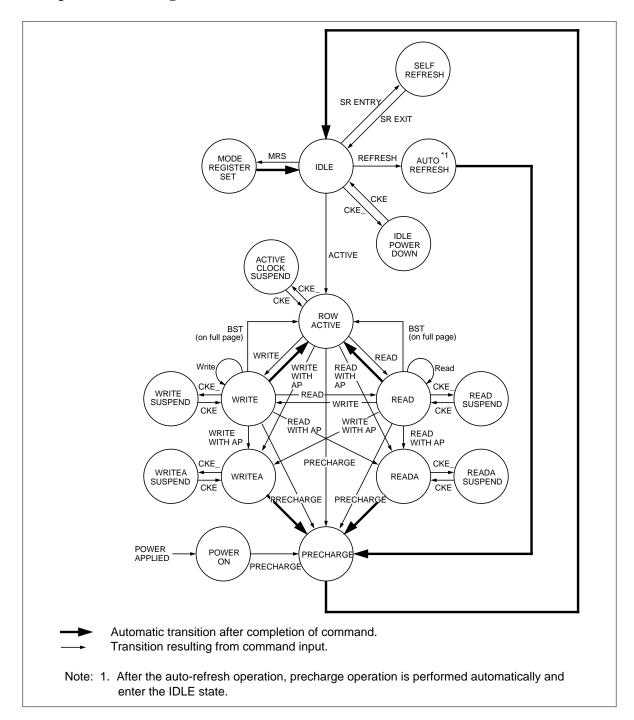

Mode Register Configuration

The mode register is set by the input to the address pins (A0 to A13) during mode register set cycles. The mode register consists of five sections, each of which is assigned to address pins.

A13, A12, A11, A10, A9 A8: (OPCODE): The SDRAM has two types of write modes. One is the burst write mode, and the other is the single write mode. These bits specify write mode.

Burst read and burst write: Burst write is performed for the specified burst length starting from the column address specified in the write cycle.


Burst read and single write: Data is only written to the column address specified during the write cycle, regardless of the burst length.

A7: Keep this bit Low at the mode register set cycle. If this pin is high, the vender test mode is set.

A6, A5, A4: (LMODE): These pins specify the \overline{CAS} latency.

A3: (BT): A burst type is specified. When full-page burst is performed, only "sequential" can be selected.

A2, A1, A0: (BL): These pins specify the burst length.

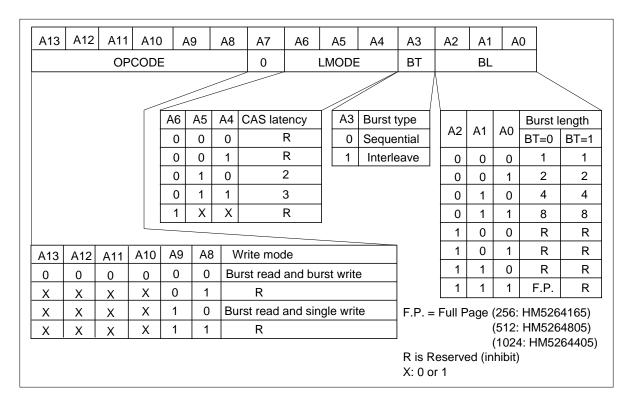

Burst Sequence

Burst length = 2

Starting Ad.	Addressing	(decimal)
A0	Sequential	Interleave
0	0, 1,	0, 1,
1	1, 0,	1, 0,

Burst length = 4

Starting Ad.		Addressing(decimal)			
A1	A0	Sequential Interleave			
0	0	0, 1, 2, 3, 0, 1, 2, 3,			
0	1	1, 2, 3, 0, 1, 0, 3, 2,			
1	0	2, 3, 0, 1, 2, 3, 0, 1,			
1	1	3, 0, 1, 2, 3, 2, 1, 0,			

Burst length = 8

Star	Starting Ad.		Addressing(decimal)		
A2	A1	A0	Sequential	Interleave	
0	0	0	0, 1, 2, 3, 4, 5, 6, 7,	0, 1, 2, 3, 4, 5, 6, 7,	
0	0	1	1, 2, 3, 4, 5, 6, 7, 0,	1, 0, 3, 2, 5, 4, 7, 6,	
0	1	0	2, 3, 4, 5, 6, 7, 0, 1,	2, 3, 0, 1, 6, 7, 4, 5,	
0	1	1	3, 4, 5, 6, 7, 0, 1, 2,	3, 2, 1, 0, 7, 6, 5, 4,	
1	0	0	4, 5, 6, 7, 0, 1, 2, 3,	4, 5, 6, 7, 0, 1, 2, 3,	
1	0	1	5, 6, 7, 0, 1, 2, 3, 4,	5, 4, 7, 6, 1, 0, 3, 2,	
1	1	0	6, 7, 0, 1, 2, 3, 4, 5,	6, 7, 4, 5, 2, 3, 0, 1,	
1	1	1	7, 0, 1, 2, 3, 4, 5, 6,	7, 6, 5, 4, 3, 2, 1, 0,	

Operation of the SDRAM

Read/Write Operations

Bank active: Before executing a read or write operation, the corresponding bank and the row address must be activated by the bank active (ACTV) command. Bank 0, bank 1, bank 2 or bank 3 is activated according to the status of the A12/A13 pin, and the row address (AX0 to AX11) is activated by the A0 to A11 pins at the bank active command cycle. An interval of t_{RCD} is required between the bank active command input and the following read/write command input.


Read operation: A read operation starts when a read command is input. Output buffer becomes Low-Z in the ($\overline{\text{CAS}}$ Latency - 1) cycle after read command set. HM5264165D, HM5264805D series, HM5264405D can perform a burst read operation.

The burst length can be set to 1, 2, 4, 8 or full-page (256; HM5264165D, 512; HM5264805D, 1024; HM5264405D). The start address for a burst read is specified by the column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) and the bank select address (A12/A13) at the read command set cycle. In a read operation, data output starts after the number of clocks specified by the $\overline{\text{CAS}}$ Latency. The $\overline{\text{CAS}}$ Latency can be set to 2 or 3.


When the burst length is 1, 2, 4, 8, the Dout buffer automatically becomes High-Z at the next clock after the successive burst-length data has been output.

The \overline{CAS} latency and burst length must be specified at the mode register.

CAS Latency

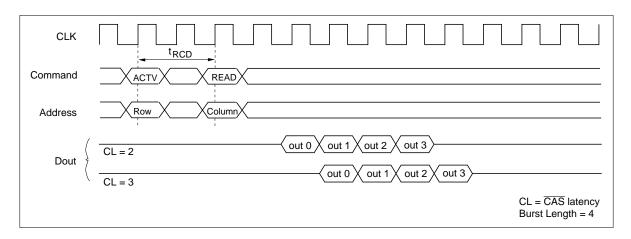


Burst Length

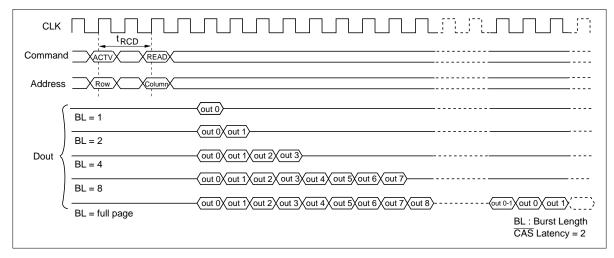


Write operation: Burst write or single write mode is selected by the OPCODE (A13, A12, A11, A10, A9, A8) of the mode register.

1. Burst write: A burst write operation is enabled by setting OPCODE (A9, A8) to (0, 0). A burst write starts in the same clock as a write command set. (The latency of data input is 0 clock.) The burst length can be set to 1, 2, 4, 8, and full-page, like burst read operations. The write start address is specified by the column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) and the bank select address (A12/A13) at the write command set cycle.

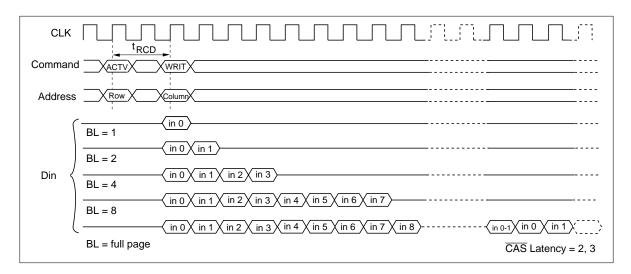

2. Single write: A single write operation is enabled by setting OPCODE (A9, A8) to (1, 0). In a single write operation, data is only written to the column address (AY0 to AY7; HM5264165D, AY0 to AY8; HM5264805D, AY0 to AY9; HM5264405D) and the bank select address (A12/A13) specified by the write command set cycle without regard to the burst length setting. (The latency of data input is 0 clock).

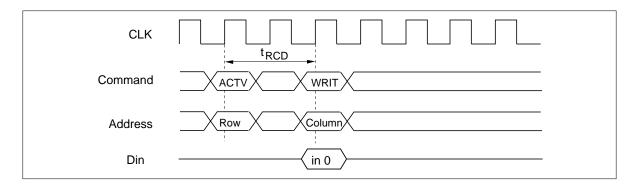


Auto Precharge

Read with auto-precharge: In this operation, since precharge is automatically performed after completing a read operation, a precharge command need not be executed after each read operation. The command executed for the same bank after the execution of this command must be the bank active (ACTV) command. In addition, an interval defined by l_{APR} is required before execution of the next command.


CAS latency	Precharge start cycle
3	2 cycle before the final data is output
2	1 cycle before the final data is output

Burst Read (Burst Length = 4)

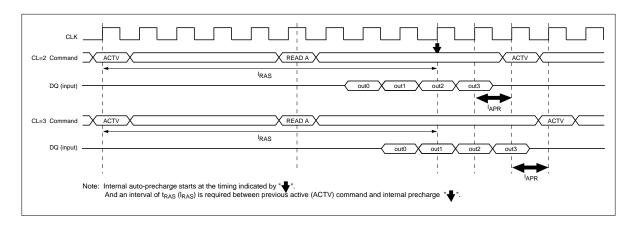


Write with auto-precharge: In this operation, since precharge is automatically performed after completing a burst write or single write operation, a precharge command need not be executed after each write operation. The command executed for the same bank after the execution of this command must be the bank active (ACTV) command. In addition, an interval of l_{APW} is required between the final valid data input and input of next command.

Burst Write (Burst Length = 4)

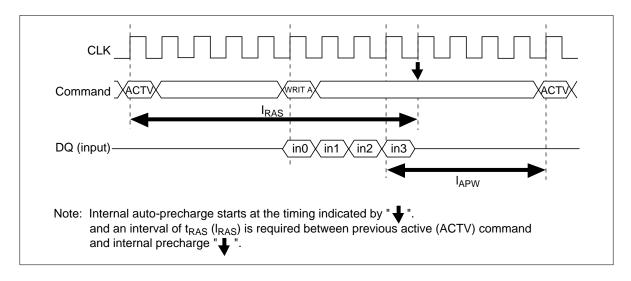

Single Write

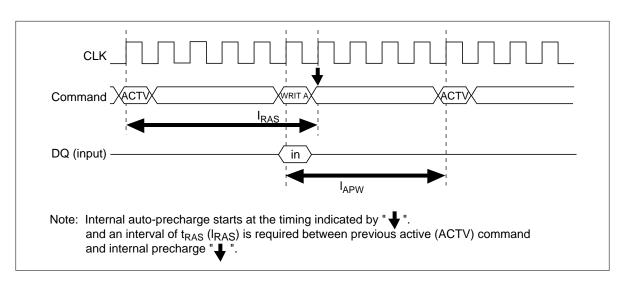


Full-page Burst Stop


Burst stop command during burst read: The burst stop (BST) command is used to stop data output during a full-page burst. The BST command sets the output buffer to High-Z and stops the full-page burst read. The timing from command input to the last data changes depending on the \overline{CAS} latency setting. In addition, the BST command is valid only during full-page burst mode, and is illegal with burst lengths 1, 2, 4 and 8.

CAS latency	BST to valid data	BST to high impedance
2	1	2
3	2	3

$\overline{\text{CAS}}$ Latency = 2, Burst Length = full page

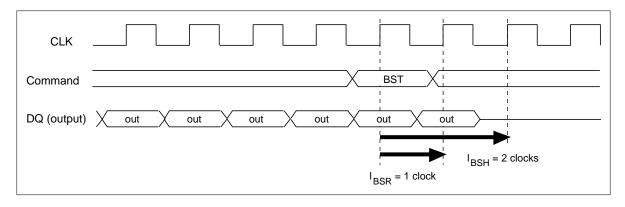


$\overline{\text{CAS}}$ Latency = 3, Burst Length = full page

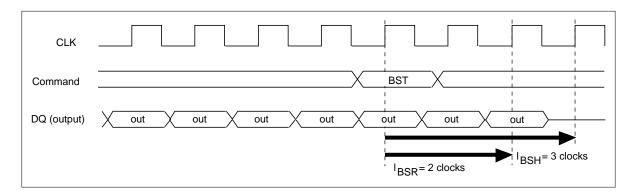

Burst stop command at burst write: The burst stop command (BST command) is used to stop data input during a full-page burst write. No data is written in the same clock as the BST command, and in subsequent clocks. In addition, the BST command is only valid during full-page burst mode, and is illegal with burst lengths of 1, 2, 4 and 8. And an interval of t_{DPL} is required between last data-in and the next precharge command.

Burst Length = full page

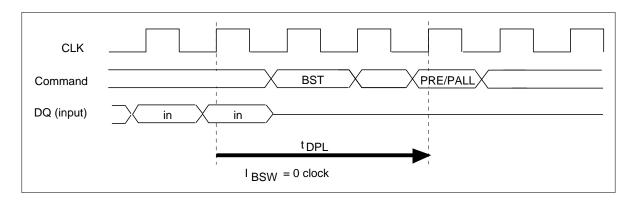


Command Intervals

Read command to Read command interval:


1. Same bank, same ROW address: When another read command is executed at the same ROW address of the same bank as the preceding read command execution, the second read can be performed after an interval of no less than 1 clock. Even when the first command is a burst read that is not yet finished, the data read by the second command will be valid.

READ to READ Command Interval (same ROW address in same bank)

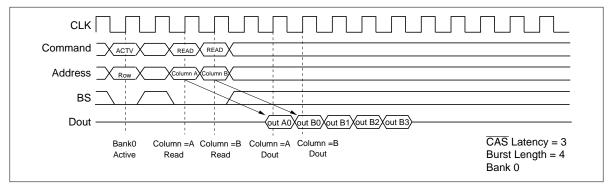

- **2. Same bank, different ROW address:** When the ROW address changes on same bank, consecutive read commands cannot be executed; it is necessary to separate the two read commands with a precharge command and a bank-active command.
- **3. Different bank:** When the bank changes, the second read can be performed after an interval of no less than 1 clock, provided that the other bank is in the bank-active state. Even when the first command is a burst read that is not yet finished, the data read by the second command will be valid.


READ to READ Command Interval (different bank)

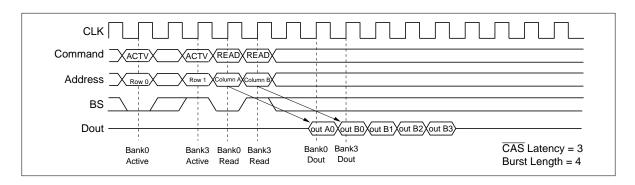

Write command to Write command interval:


1. Same bank, same ROW address: When another write command is executed at the same ROW address of the same bank as the preceding write command, the second write can be performed after an interval of no less than 1 clock. In the case of burst writes, the second write command has priority.

WRITE to WRITE Command Interval (same ROW address in same bank)

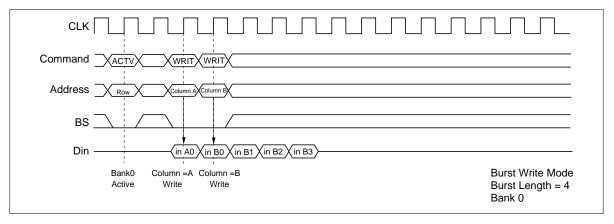

- **2. Same bank, different ROW address:** When the ROW address changes, consecutive write commands cannot be executed; it is necessary to separate the two write commands with a precharge command and a bank-active command.
- **3. Different bank:** When the bank changes, the second write can be performed after an interval of no less than 1 clock, provided that the other bank is in the bank-active state. In the case of burst write, the second write command has priority.


WRITE to WRITE Command Interval (different bank)

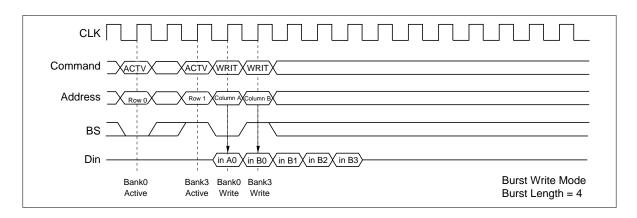


Read command to Write command interval:

1. Same bank, same ROW address: When the write command is executed at the same ROW address of the same bank as the preceding read command, the write command can be performed after an interval of no less than 1 clock. However, DQM, DQMU/DQML must be set High so that the output buffer becomes High-Z before data input.

READ to WRITE Command Interval (1)

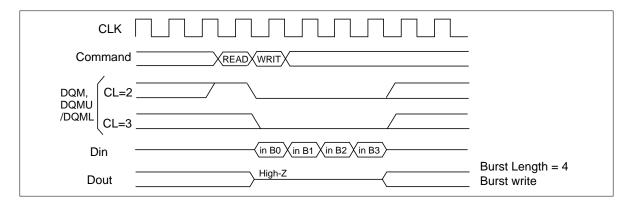

READ to WRITE Command Interval (2)

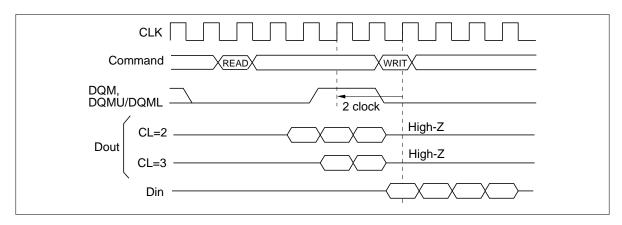


- 2. Same bank, different ROW address: When the ROW address changes, consecutive write commands cannot be executed; it is necessary to separate the two commands with a precharge command and a bank-active command.
- **3. Different bank:** When the bank changes, the write command can be performed after an interval of no less than 1 clock, provided that the other bank is in the bank-active state. However, DQM, DQMU/DQML must be set High so that the output buffer becomes High-Z before data input.


Write command to Read command interval:

1. Same bank, same ROW address: When the read command is executed at the same ROW address of the same bank as the preceding write command, the read command can be performed after an interval of no less than 1 clock. However, in the case of a burst write, data will continue to be written until one cycle before the read command is executed.

WRITE to READ Command Interval (1)

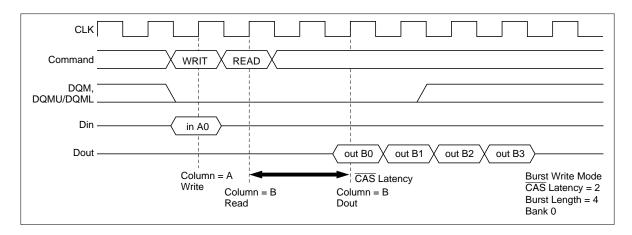

WRITE to READ Command Interval (2)

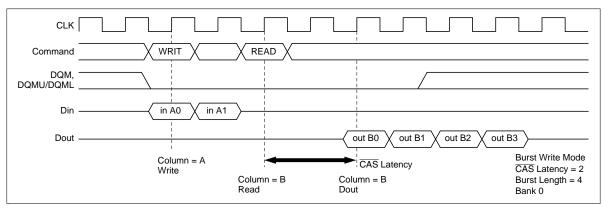


- 2. Same bank, different ROW address: When the ROW address changes, consecutive read commands cannot be executed; it is necessary to separate the two commands with a precharge command and a bank-active command.
- **3. Different bank:** When the bank changes, the read command can be performed after an interval of no less than 1 clock, provided that the other bank is in the bank-active state. However, in the case of a burst write, data will continue to be written until one clock before the read command is executed (as in the case of the same bank and the same address).

Read command to Precharge command interval (same bank):


When the precharge command is executed for the same bank as the read command that preceded it, the minimum interval between the two commands is one clock. However, since the output buffer then becomes High-Z after the clocks defined by l_{HZP} , there is a case of interruption to burst read data output will be interrupted, if the precharge command is input during burst read. To read all data by burst read, the clocks defined by l_{EP} must be assured as an interval from the final data output to precharge command execution.

READ to PRECHARGE Command Interval (same bank): To output all data

$\overline{\text{CAS}}$ Latency = 2, Burst Length = 4

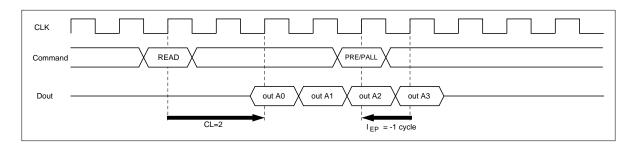


$\overline{\text{CAS}}$ Latency = 3, Burst Length = 4

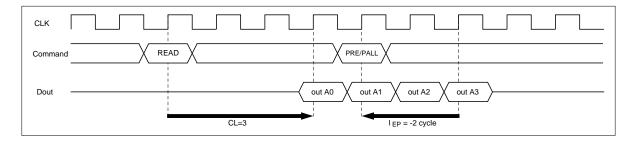


READ to PRECHARGE Command Interval (same bank): To stop output data

 $\overline{\text{CAS}}$ Latency = 2, Burst Length = 1, 2, 4, 8, full page burst

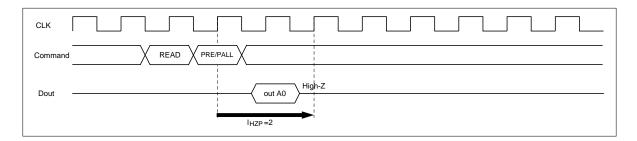


$\overline{\text{CAS}}$ Latency = 3, Burst Length = 1, 2, 4, 8, full page burst

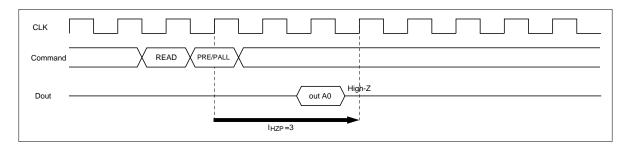


Write command to Precharge command interval (same bank): When the precharge command is executed for the same bank as the write command that preceded it, the minimum interval between the two commands is 1 clock. However, if the burst write operation is unfinished, the input data must be masked by means of DQM, DQMU/DQML for assurance of the clock defined by t_{DPL}.

WRITE to PRECHARGE Command Interval (same bank)

Burst Length = 4 (To stop write operation)

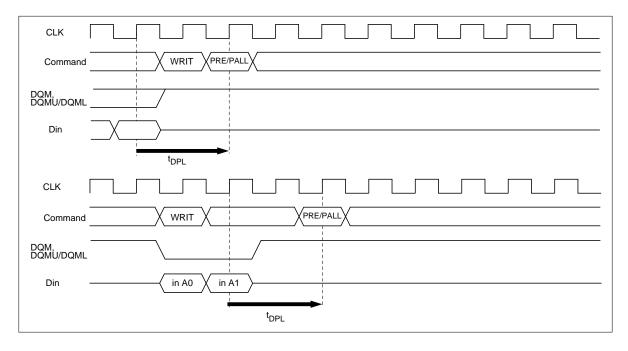


Burst Length = 4 (To write all data)

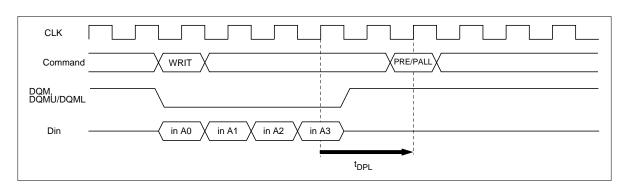


Bank active command interval:

- 1. Same bank: The interval between the two bank-active commands must be no less than t_{RC} .
- 2. In the case of different bank-active commands: The interval between the two bank-active commands must be no less than t_{RRD} .


Bank Active to Bank Active for Same Bank

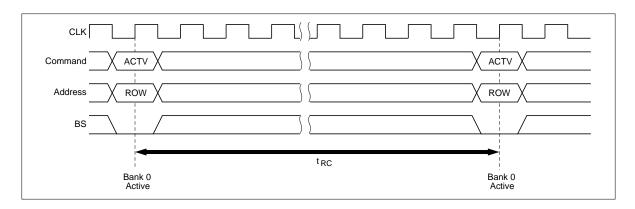

Bank Active to Bank Active for Different Bank

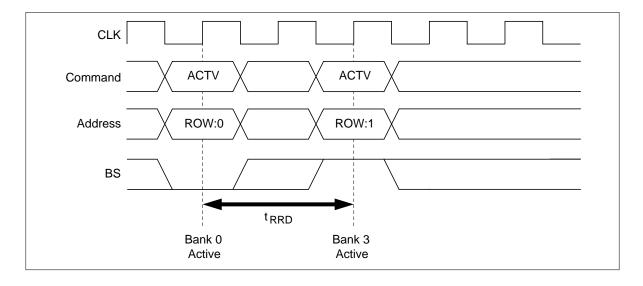

Mode register set to Bank-active command interval: The interval between setting the mode register and executing a bank-active command must be no less than l_{RSA} .

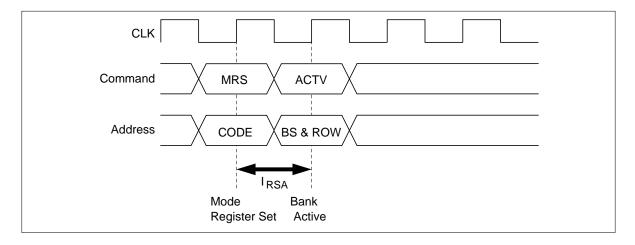


DQM Control

The DQMU and DQML mask the upper and lower bytes of the DQ data, respectively. The timing of DQMU/DQML is different during reading and writing.


Reading: When data is read, the output buffer can be controlled by DQM, DQMU/DQML. By setting DQM, DQMU/DQML to Low, the output buffer becomes Low-Z, enabling data output. By setting DQM, DQMU/DQML to High, the output buffer becomes High-Z, and the corresponding data is not output. However, internal reading operations continue. The latency of DQM, DQMU/DQML during reading is 2 clocks.

Writing: Input data can be masked by DQM, DQMU/DQML. By setting DQM, DQMU/DQML to Low, data can be written. In addition, when DQM, DQMU/DQML is set to High, the corresponding data is not written, and the previous data is held. The latency of DQM, DQMU/DQML during writing is 0 clock.

Reading

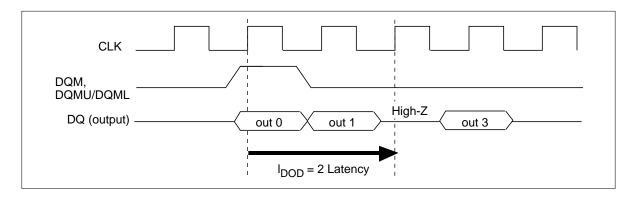

Writing

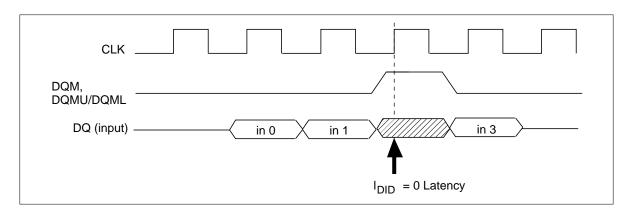

Refresh

Auto-refresh: All the banks must be precharged before executing an auto-refresh command. Since the auto-refresh command updates the internal counter every time it is executed and determines the banks and the ROW addresses to be refreshed, external address specification is not required. The refresh cycle is 4096 cycles/64 ms. (4096 cycles are required to refresh all the ROW addresses.) The output buffer becomes High-Z after auto-refresh start. In addition, since a precharge has been completed by an internal operation after the auto-refresh, an additional precharge operation by the precharge command is not required.

Self-refresh: After executing a self-refresh command, the self-refresh operation continues while CKE is held Low. During self-refresh operation, all ROW addresses are refreshed by the internal refresh timer. A self-refresh is terminated by a self-refresh exit command. Before and after self-refresh mode, execute autorefresh to all refresh addresses in or within 64 ms period on the condition (1) and (2) below.

- (1) Enter self-refresh mode within $15.6 \,\mu s$ after either burst refresh or distributed refresh at equal interval to all refresh addresses are completed.
- (2) Start burst refresh or distributed refresh at equal interval to all refresh addresses within 15.6 μ s after exiting from self-refresh mode.

Others

Power-down mode: The SDRAM enters power-down mode when CKE goes Low in the IDLE state. In power down mode, power consumption is suppressed by deactivating the input initial circuit. Power down mode continues while CKE is held Low. In addition, by setting CKE to High, the SDRAM exits from the power down mode, and command input is enabled from the next clock. In this mode, internal refresh is not performed.

Clock suspend mode: By driving CKE to Low during a bank-active or read/write operation, the SDRAM enters clock suspend mode. During clock suspend mode, external input signals are ignored and the internal state is maintained. When CKE is driven High, the SDRAM terminates clock suspend mode, and command input is enabled from the next clock. For details, refer to the "CKE Truth Table".


Power-up sequence: The SDRAM should be gone on the following sequence with power up.

The CLK, CKE, $\overline{\text{CS}}$, DQM, DQMU/DQML and DQ pins keep low till power stabilizes.

The CLK pin is stabilized within 100 µs after power stabilizes before the following initialization sequence. The CKE and DQM, DQMU/DQML is driven to high between power stabilizes and the initialization sequence.

This SDRAM has V_{CC} clamp diodes for CLK, CKE, \overline{CS} , DQM, DQMU/DQML and DQ pins. If these pins go high before power up, the large current flows from these pins to V_{CC} through the diodes.

Initialization sequence: When 200 μ s or more has past after the above power-up sequence, all banks must be precharged using the precharge command (PALL). After t_{RP} delay, set 8 or more auto refresh commands (REF). Set the mode register set command (MRS) to initialize the mode register. We recommend that by keeping DQM, DQMU/DQML to High, the output buffer becomes High-Z during Initialization sequence, to avoid DQ bus contention on memory system formed with a number of device.

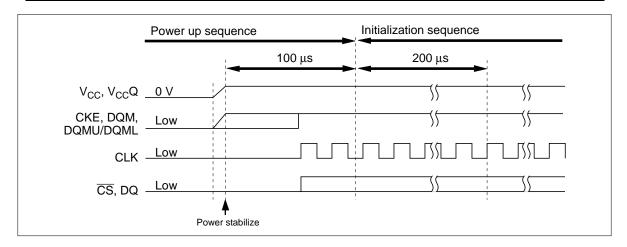

Absolute Maximum Ratings

Parameter	Symbol	Value	Unit	Note
Voltage on any pin relative to V_{ss}	V_{T}	-0.5 to $V_{CC} + 0.5$ (≤ 4.6 (max))	V	1
Supply voltage relative to V _{SS}	V _{cc}	-0.5 to +4.6	V	1
Short circuit output current	lout	50	mA	
Power dissipation	P _T	1.0	W	
Operating temperature	Topr	0 to +70	°C	
Storage temperature	Tstg	-55 to +125	°C	

Note: 1. Respect to V_{ss}

DC Operating Conditions (Ta = $0 \text{ to } +70^{\circ}\text{C}$)

Parameter	Symbol	Min	Max	Unit	Notes
Supply voltage	V _{cc} , V _{cc} Q	3.0	3.6	V	1, 2
	$\overline{V_{SS}, V_{SS}Q}$	0	0	V	3
Input high voltage	V _{IH}	2.0	V _{cc} + 0.3	V	1, 4. 5
Input low voltage	V _{IL}	-0.3	0.8	V	1, 6

Notes: 1. All voltage referred to V_{ss}

- 2. The supply voltage with all V_{CC} and $V_{\text{CC}}Q$ pins must be on the same level.
- 3. The supply voltage with all V_{SS} and $V_{\text{SS}}Q$ pins must be on the same level.
- 4. CLK, CKE, $\overline{\text{CS}}$, DQM, DQMU/DQML, DQ pins: V_{IH} (max) = V_{CC} + 0.5 V for pulse width \leq 5 ns at V_{CC} .
- 5. Others: V_{IH} (max) = 4.6 V for pulse width \leq 5 ns at V_{CC} .
- 6. V_{IL} (min) = -1.0 V for pulse width \leq 5 ns at V_{SS} .

<u>HM5264165D Series</u>, <u>HM5264805D Series</u>, <u>HM5264405D Series</u>

DC Characteristics (Ta = 0 to 70°C, V_{CC} , $V_{CC}Q = 3.3 \text{ V} \pm 0.3 \text{ V}$, V_{SS} , $V_{SS}Q = 0 \text{ V}$) (HM5264165D)

HM5264165D	
------------	--

		-80				
Parameter	Symbol	Min	Max	Unit	Test conditions	Notes
Operating current					Burst length = 1	1, 2, 3
(CAS latency = 2)	I _{CC1}		80	mA	t _{RC} = min	
(CAS latency = 3)	I _{CC1}	_	80	mA		
Standby current in power down	I _{CC2P}	_	3	mA	$CKE = V_{IL}, t_{CK} = 12 \text{ ns}$	6
Standby current in power down (input signal stable)	I _{CC2PS}	_	2	mA	$CKE = V_{IL}, t_{CK} = \infty$	7
Standby current in non power down	I _{CC2N}	_	16	mA	CKE, $\overline{CS} = V_{IH}$, $t_{CK} = 12 \text{ ns}$	4
Standby current in non power down (input signal stable)	I _{CC2NS}	_	9	mA	$CKE = V_{IH}, t_{CK} = \infty$	9
Active standby current in power down	I _{CC3P}	_	4	mA	$CKE = V_{IL}$, $t_{CK} = 12 \text{ ns}$	1, 2, 6
Active standby current in power down (input signal stable)	I _{CC3PS}	_	3	mA	$CKE = V_{IL}, t_{CK} = \infty$	2, 7
Active standby current in non power down	I _{CC3N}	_	20	mA	CKE, $\overline{CS} = V_{IH}$, $t_{CK} = 12 \text{ ns}$	1, 2, 4
Active standby current in non power down (input signal stable)	I _{CC3NS}	_	15	mA	$CKE = V_{IH}, t_{CK} = \infty$	2, 9
Burst operating current (CAS latency = 2)	I _{CC4}	_	80	mA	$t_{CK} = min, BL = 4$	1, 2, 5
$(\overline{CAS} \text{latency} = 3)$	I _{CC4}	_	105	mA	_	
Refresh current	I _{CC5}	_	115	mA	t _{RC} = min	3
Self refresh current	I _{CC6}	_	1	mA	$\begin{aligned} &V_{IH} \geq V_{CC} - 0.2 \ V \\ &V_{IL} \leq 0.2 \ V \end{aligned}$	8
Self refresh current (L-version)	I _{CC6}	_	400	μΑ	_	
Input leakage current	I _{LI}	-1	1	μΑ	0 ≤ Vin ≤ V _{CC}	
Output leakage current	I _{LO}	-1.5	1.5	μΑ	$0 \le Vout \le V_{CC}$ DQ = disable	
Output high voltage	V _{OH}	2.4	_	V	$I_{OH} = -2 \text{ mA}$	
Output low voltage	V _{OL}	_	0.4	V	I _{OL} = 2 mA	

DC Characteristics (Ta = 0 to 70°C, V_{CC} , $V_{CC}Q = 3.3 \text{ V} \pm 0.3 \text{ V}$, V_{SS} , $V_{SS}Q = 0 \text{ V}$) (HM5264805D)

		-80				
Parameter	Symbol	Min	Max	Unit	Test conditions	Notes
Operating current					Burst length = 1	1, 2, 3
(CAS latency = 2)	I _{CC1}	_	75	mA	t _{RC} = min	
(CAS latency = 3)	I _{CC1}	_	75	mA		
Standby current in power down	I _{CC2P}	_	3	mA	$CKE = V_{IL}, t_{CK} = 12 \text{ ns}$	6
Standby current in power down (input signal stable)	I _{CC2PS}	_	2	mA	$CKE = V_{IL}, \ t_{CK} = \infty$	7
Standby current in non power down	I _{CC2N}	_	16	mA	CKE, $\overline{CS} = V_{IH}$, $t_{CK} = 12 \text{ ns}$	4
Standby current in non power down (input signal stable)	I _{CC2NS}		9	mA	$CKE = V_{IH},t_{CK} = \infty$	9
Active standby current in power down	I _{CC3P}	_	4	mA	$CKE = V_{IL}$, $t_{CK} = 12 \text{ ns}$	1, 2, 6
Active standby current in power down (input signal stable)	I _{CC3PS}	_	3	mA	$CKE = V_{IL}, t_{CK} = \infty$	2, 7
Active standby current in non power down	I _{CC3N}	_	20	mA	CKE, $\overline{CS} = V_{IH}$, $t_{CK} = 12 \text{ ns}$	1, 2, 4
Active standby current in non power down (input signal stable)	I _{CC3NS}	_	15	mA	$CKE = V_{IH}, t_{CK} = \infty$	2, 9
Burst operating current (CAS latency = 2)	I _{CC4}	_	70	mA	$t_{CK} = min, BL = 4$	1, 2, 5
(CAS latency = 3)	I _{CC4}		95	mA		
Refresh current	I _{CC5}	_	115	mA	t _{RC} = min	3
Self refresh current	I _{CC6}		1	mA	$V_{IH} \ge V_{CC} - 0.2 \text{ V}$ $V_{IL} \le 0.2 \text{ V}$	8
Self refresh current (L-version)	I _{CC6}	_	400	μΑ	_	
Input leakage current	I _{LI}	-1	1	μΑ	0 ≤ Vin ≤ V _{CC}	
Output leakage current	I _{LO}	-1.5	1.5	μΑ	0 ≤ Vout ≤ V _{CC} DQ = disable	
Output high voltage	V _{OH}	2.4	_	V	$I_{OH} = -2 \text{ mA}$	
Output low voltage	V _{OL}	_	0.4	V	I _{OL} = 2 mA	

<u>HM5264165D Series</u>, <u>HM5264805D Series</u>, <u>HM5264405D Series</u>

DC Characteristics (Ta = 0 to 70°C, V_{CC} , $V_{CC}Q = 3.3 \text{ V} \pm 0.3 \text{ V}$, V_{SS} , $V_{SS}Q = 0 \text{ V}$) (HM5264405D)

		-80				
Parameter	Symbol	Min	Max	Unit	Test conditions	Notes
Operating current					Burst length = 1	1, 2, 3
(CAS latency = 2)	I _{CC1}		75	mA	t _{RC} = min	
(CAS latency = 3)	I _{CC1}	_	75	mA		
Standby current in power down	I _{CC2P}	_	3	mA	$CKE = V_{IL}, t_{CK} = 12 \text{ ns}$	6
Standby current in power down (input signal stable)	I _{CC2PS}	_	2	mA	$CKE = V_{IL}, t_{CK} = \infty$	7
Standby current in non power down	I _{CC2N}		16	mA	CKE, $\overline{CS} = V_{IH}$, $t_{CK} = 12 \text{ ns}$	4
Standby current in non power down (input signal stable)	I _{CC2NS}	_	9	mA	$CKE = V_{IH}, t_{CK} = \infty$	9
Active standby current in power down	I _{CC3P}	_	4	mA	$CKE = V_{IL}$, $t_{CK} = 12 \text{ ns}$	1, 2, 6
Active standby current in power down (input signal stable)	I _{CC3PS}	_	3	mA	$CKE = V_{IL}, t_{CK} = \infty$	2, 7
Active standby current in non power down	I _{CC3N}	_	20	mA	CKE, $\overline{CS} = V_{IH}$, $t_{CK} = 12 \text{ ns}$	1, 2, 4
Active standby current in non power down (input signal stable)	I _{CC3NS}	_	15	mA	$CKE = V_{IH}, t_{CK} = \infty$	2, 9
Burst operating current (CAS latency = 2)	I _{CC4}		65	mA	$t_{CK} = min, BL = 4$	1, 2, 5
(CAS latency = 3)	I _{CC4}	_	85	mA	CK ······, ·	., _, -
Refresh current	I _{CC5}		115	mA	t _{RC} = min	3
Self refresh current	I _{CC6}		1	mA	$V_{IH} \ge V_{CC} - 0.2 \text{ V}$ $V_{IL} \le 0.2 \text{ V}$	8
Self refresh current (L-version)	I _{CC6}	_	400	μΑ	_	
Input leakage current	I _{LI}	-1	1	μΑ	0 ≤ Vin ≤ V _{CC}	
Output leakage current	I _{LO}	-1.5	1.5	μΑ	0 ≤ Vout ≤ V _{CC} DQ = disable	
Output high voltage	V _{OH}	2.4	_	V	I _{OH} = −2 mA	
Output low voltage	V _{OL}	_	0.4	V	I _{OL} = 2 mA	

Notes: 1. I_{cc} depends on output load condition when the device is selected. I_{cc} (max) is specified at the output open condition.

- 2. One bank operation.
- 3. Input signals are changed once per one clock.
- 4. Input signals are changed once per two clocks.
- 5. Input signals are changed once per four clocks.
- 6. After power down mode, CLK operating current.
- 7. After power down mode, no CLK operating current.
- 8. After self refresh mode set, self refresh current.
- 9. Input signals are V_{IH} or V_{IL} fixed.

Capacitance (Ta = 25°C, V_{CC} , V_{CC} Q = 3.3 V \pm 0.3 V)

Parameter	Symbol	Тур	Max	Unit	Notes
Input capacitance (Address)	C _{I1}	_	5	pF	1, 2, 4
Input capacitance (Signals)	C_{12}		5	pF	1, 2, 4
Output capacitance (DQ)	C _o		7	pF	1, 2, 3, 4

Notes: 1. Capacitance measured with Boonton Meter or effective capacitance measuring method.

- 2. Measurement condition: f = 1 MHz, 1.4 V bias, 200 mV swing.
- 3. DQM, DQMU/DQML = V_{IH} to disable Dout.
- 4. This parameter is sampled and not 100% tested.

AC Characteristics (Ta = 0 to 70°C, V_{CC} , V_{CC} , V_{CC} Q = 3.3 V ± 0.3 V, V_{SS} , V_{SS} Q = 0 V)

HM5264165D/HM5264805D /HM5264405D

-80 **Parameter Symbol** Min Max Unit **Notes** System clock cycle time $(\overline{CAS} | \text{latency} = 2)$ 12 ns 1 t_{CK} $(\overline{CAS} | \text{latency} = 3)$ \mathbf{t}_{CK} 8 ns 3 CLK high pulse width 1 ns t_{CKH} 3 1 CLK low pulse width ns t_{CKL} Access time from CLK $(\overline{CAS} | \text{latency} = 2)$ 8 1, 2 ns t_{AC} $(\overline{CAS} | \text{latency} = 3)$ \mathbf{t}_{AC} 6 ns Data-out hold time 2.5 1, 2 ns t_{OH} CLK to Data-out low impedance 2 1, 2, 3 $\boldsymbol{t}_{\scriptscriptstyle{LZ}}$ ns CLK to Data-out high impedance 1, 4 t_{HZ} 6 ns Data-in setup time 2 1 ns t_{DS} Data in hold time 1 1 t_{DH} ns 2 1 Address setup time t_{AS} ns 1 Address hold time 1 t_{AH} ns 2 1, 5 CKE setup time ns t_{CES} 2 CKE setup time for power down exit 1 t_{CESP} ns CKE hold time 1 1 t_{CEH} ns Command (CS, RAS, CAS, WE, DQM) 2 ns 1 t_{cs} setup time Command (CS, RAS, CAS, WE, DQM) 1 ns 1 t_{CH} hold time Ref/Active to Ref/Active command period 72 1 t_{RC} ns 48 Active to Precharge command period 120000 1 t_{RAS} ns Active command to column command 24 ns 1 t_{RCD} (same bank) Precharge to active command period 24 1 t_{RP} ns 1 Write recovery or data-in to precharge 10 ns t_{DPL} lead time Active (a) to Active (b) command period 16 t_{RRD} ns 1 Transition time (rise to fall) t_{T} 5 ns

Refresh period

 t_{REF}

64

ms


Notes: 1. AC measurement assumes $t_T = 1$ ns. Reference level for timing of input signals is 1.4 V.

- 2. Access time is measured at 1.4 V. Load condition is CL = 50 pF with current source.
- 3. t_{LZ} (max) defines the time at which the outputs achieves the low impedance state.
- 4. $t_{\rm HZ}$ (max) defines the time at which the outputs achieves the high impedance state.
- 5. t_{CES} define CKE setup time to CLK rising edge except power down exit command.

Test Conditions

Input and output timing reference levels: 1.4 V

• Input waveform and output load: See following figures

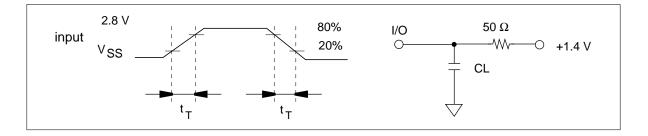

Relationship Between Frequency and Minimum Latency

HM5264165D/	HM5264805D
/HM5264405D	

Parameter		-80		
Frequency (MHz)	_	125	83	
t _{ck} (ns)	Symbol	8	12	Notes
Active command to column command (same bank)	I _{RCD}	3	2	1
Active command to active command (same bank)	I _{RC}	9	6	$= [I_{RAS} + I_{RP}]$ 1
Active command to precharge command (same bank)	I _{RAS}	6	4	1
Precharge command to active command (same bank)	I _{RP}	3	2	1
Write recovery or data-in to precharge command (same bank)	I _{DPL}	2	1	1
Active command to active command (different bank)	I _{RRD}	2	2	1
Self refresh exit time	I _{SREX}	2	2	2
Last data in to active command (Auto precharge, same bank)	I _{APW}	5	3	$= [I_{DPL} + I_{RP}]$
Self refresh exit to command input	I _{SEC}	9	6	= [I _{RC}]
Precharge command to high impedance (CAS latency = 2)	I _{HZP}	2	2	
(CAS latency = 3)	I _{HZP}	3	3	
Last data out to active command (auto precharge) (same bank)	I _{APR}	1	1	
Last data out to precharge (early precharge) (CAS latency = 2)	I _{EP}	-1	-1	
(CAS latency = 3)	I _{EP}	-2	-2	
Column command to column command	I _{CCD}	1	1	
Write command to data in latency	I _{WCD}	0	0	
DQM to data in	I _{DID}	0	0	
DQM to data out	I _{DOD}	2	2	
CKE to CLK disable	I _{CLE}	1	1	
Register set to active command	I _{RSA}	1	1	- "
CS to command disable	I _{CDD}	0	0	-
Power down exit to command input	I _{PEC}	1	1	

HM5264165D/HM5264805D /HM5264405D


Parameter		-80		
Frequency (MHz)	Symbol	125 8	83 12	
t _{ck} (ns)				Notes
Burst stop to output valid data hold (CAS latency = 2)	I _{BSR}	1	1	
(CAS latency = 3)	I _{BSR}	2	2	
Burst stop to output high impedance (CAS latency = 2)	I _{BSH}	2	2	
(CAS latency = 3)	I _{BSH}	3	3	
Burst stop to write data ignore	I _{BSW}	0	0	

Notes: 1. I_{RCD} to I_{RRD} are recommended value.


- 2. Be valid [DSEL] or [NOP] at next command of self refresh exit.
- 3. Except [DSEL] and [NOP]

Timing Waveforms


Read Cycle

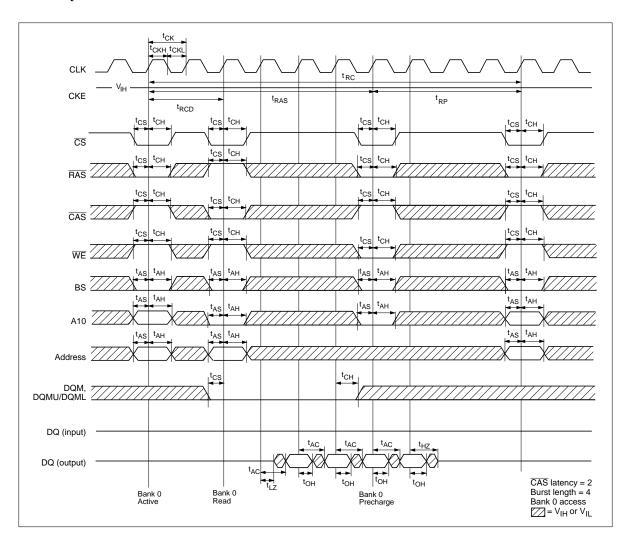


Write Cycle

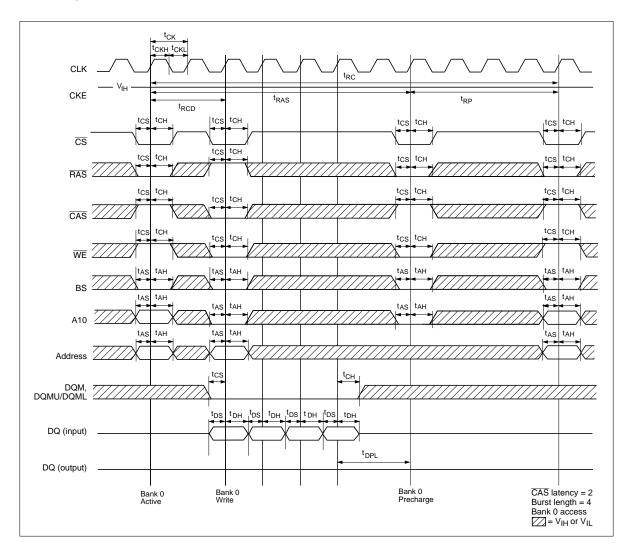


Mode Register Set Cycle

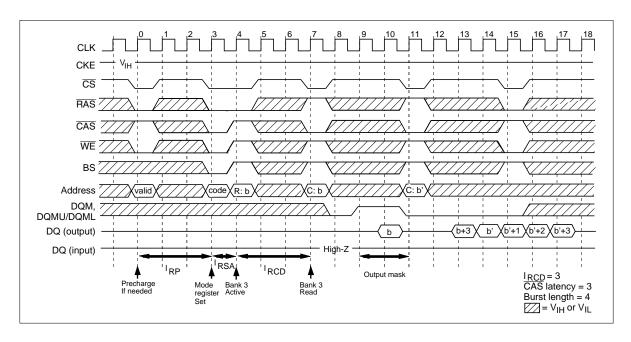


Read Cycle/Write Cycle

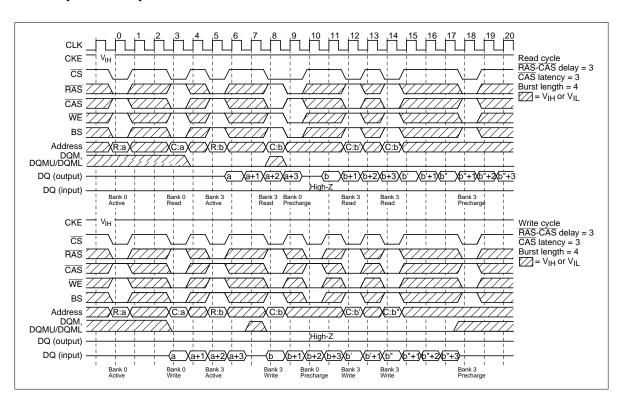


Read/Single Write Cycle

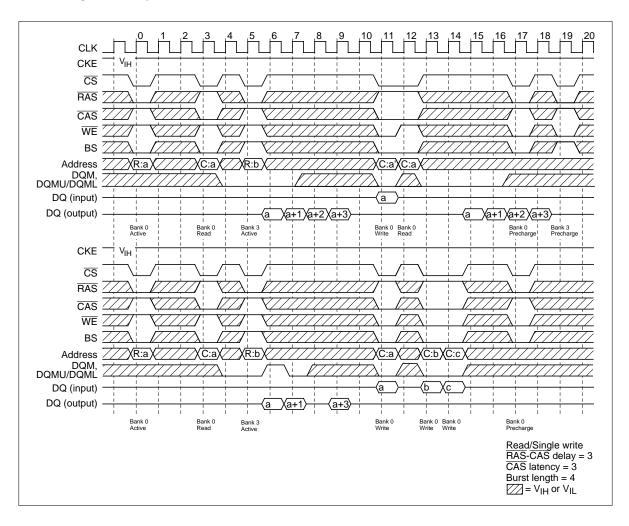


Read/Burst Write Cycle

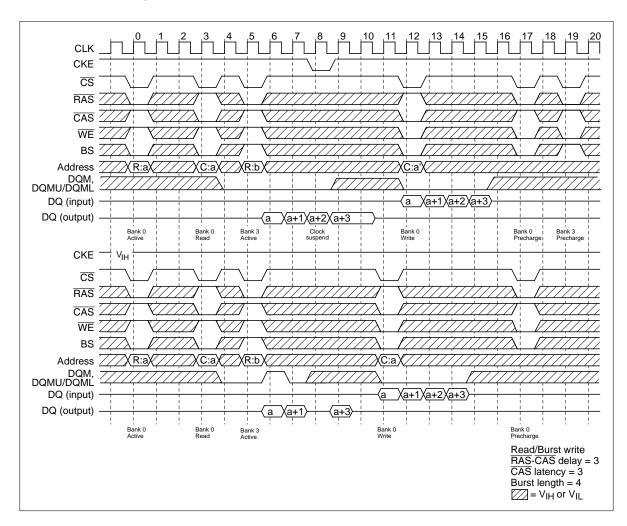


Full Page Read/Write Cycle

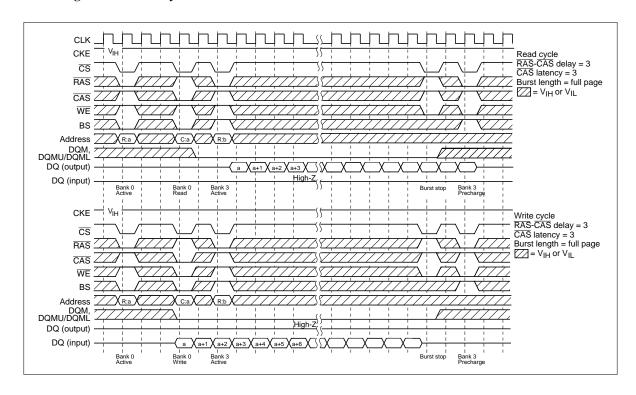


Auto Refresh Cycle

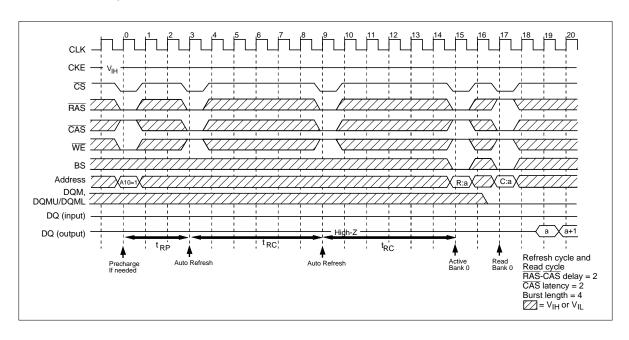


Self Refresh Cycle

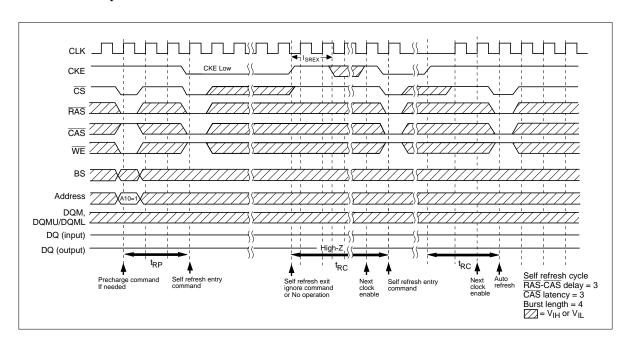


Clock Suspend Mode

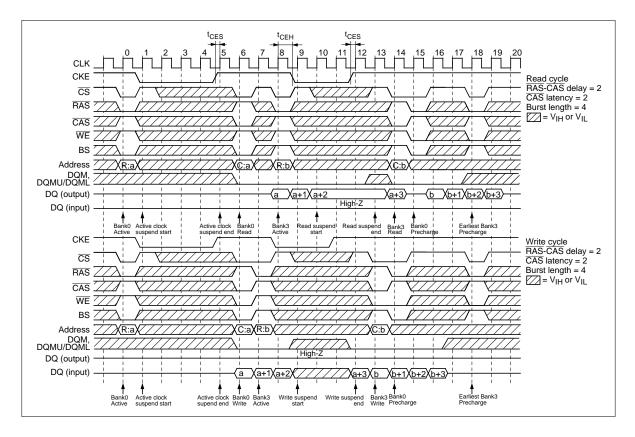

Power Down Mode

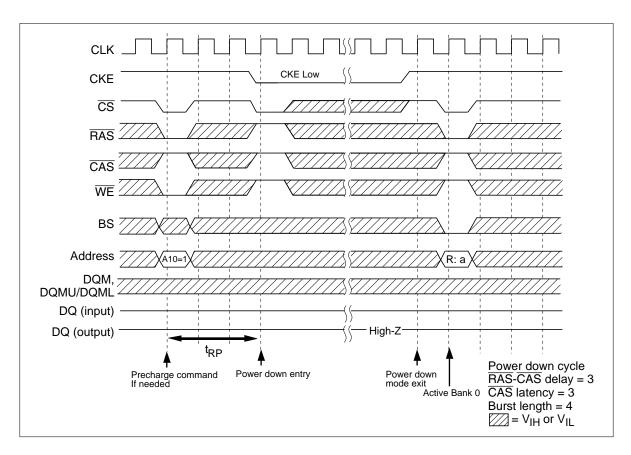


Initialization Sequence

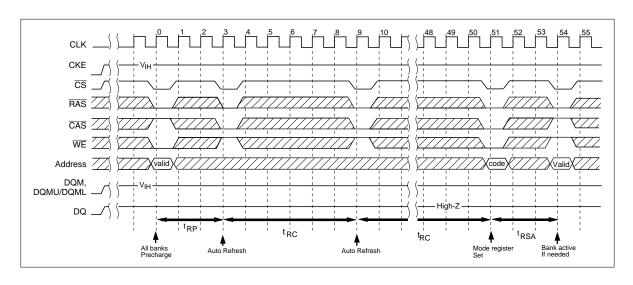

Package Dimensions

HM5264165DTT/DLTT Series HM5264805DTT/DLTT Series HM5264405DTT/DLTT Series (TTP-54D)

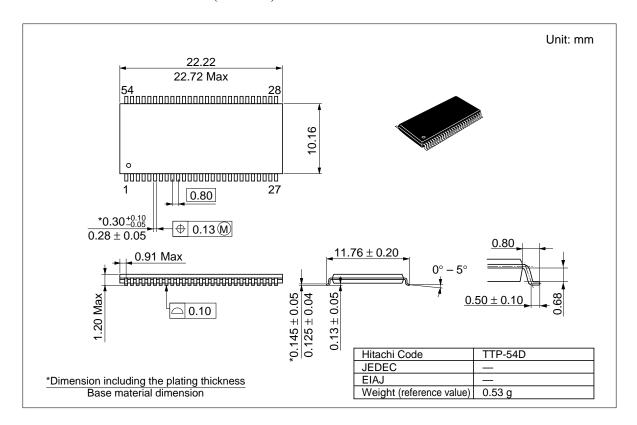

Cautions

- 1. Hitachi neither warrants nor grants licenses of any rights of Hitachi's or any third party's patent, copyright, trademark, or other intellectual property rights for information contained in this document. Hitachi bears no responsibility for problems that may arise with third party's rights, including intellectual property rights, in connection with use of the information contained in this document.
- 2. Products and product specifications may be subject to change without notice. Confirm that you have received the latest product standards or specifications before final design, purchase or use.
- 3. Hitachi makes every attempt to ensure that its products are of high quality and reliability. However, contact Hitachi's sales office before using the product in an application that demands especially high quality and reliability or where its failure or malfunction may directly threaten human life or cause risk of bodily injury, such as aerospace, aeronautics, nuclear power, combustion control, transportation, traffic, safety equipment or medical equipment for life support.
- 4. Design your application so that the product is used within the ranges guaranteed by Hitachi particularly for maximum rating, operating supply voltage range, heat radiation characteristics, installation conditions and other characteristics. Hitachi bears no responsibility for failure or damage when used beyond the guaranteed ranges. Even within the guaranteed ranges, consider normally foreseeable failure rates or failure modes in semiconductor devices and employ systemic measures such as failsafes, so that the equipment incorporating Hitachi product does not cause bodily injury, fire or other consequential damage due to operation of the Hitachi product.
- 5. This product is not designed to be radiation resistant.
- 6. No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without written approval from Hitachi.
- 7. Contact Hitachi's sales office for any questions regarding this document or Hitachi semiconductor products.

IITACHI

Semiconductor & IC Div.

Nippon Bldg., 2-6-2, Ohte-machi, Chiyoda-ku, Tokyo 100-0004, Japan Tel: Tokyo (03) 3270-2111 Fax: (03) 3270-5109

URL NorthAmerica http:semiconductor.hitachi.com/ Europe http://www.hitachi-eu.com/hel/ecg

http://www.has.hitachi.com.sg/grp3/sicd/index.htm http://www.hitachi.com.tw/E/Product/SICD_Frame.htm Asia (Singapore) Asia (Taiwan) Asia (HongKong) http://www.hitachi.com.hk/eng/bo/grp3/index.htm

Japan http://www.hitachi.co.ip/Sicd/indx.htm

For further information write to:

Hitachi Semiconductor (America) Inc. 2000 Sierra Point Parkway Brisbane, CA 94005-1897 Tel: <1> (800) 285-1601 Fax: <1> (303) 297-0447

Hitachi Europe GmbH Electronic components Group Dornacher Straße 3 D-85622 Feldkirchen, Munich Germany

Tel: <49> (89) 9 9180-0 Fax: <49> (89) 9 29 30 00 Hitachi Europe Ltd.

Electronic Components Group. Whitebrook Park Lower Cookham Road Maidenhead

Berkshire SL6 8YA, United Kingdom Tel: <44> (1628) 585000 Fax: <44> (1628) 778322

Hitachi Asia Pte. Ltd. 16 Collyer Quay #20-00 Hitachi Tower Singapore 049318 Tel: 535-2100 Fax: 535-1533

Hitachi Asia Ltd. Taipei Branch Office 3F. Hung Kuo Building, No.167 Tun-Hwa North Road, Taipei (105) Tel: <886> (2) 2718-3666 Fax: <886> (2) 2718-8180

Hitachi Asia (Hong Kong) Ltd. Group III (Electronic Components) 7/F., North Tower, World Finance Centre, Harbour City, Canton Road, Tsim Sha Tsui, Kowloon, Hong Kong

Tel: <852> (2) 735 9218 Fax: <852> (2) 730 0281 Telex: 40815 HITEC HX

Copyright © Hitachi, Ltd., 1998. All rights reserved. Printed in Japan.

Revision Record

Rev.	Date	Contents of Modification	Drawn by	Approved by
0.0	May. 8, 1998	Initial issue	M. Suzuki	M. Mishima
1.0	Dec. 2, 1998	Correct errors: Description (HM5264805 organization)		
		Deletion of HM5264165D/805D/405D-10 Series		
		Change of word: A12/A13 to BS (In figures and timing)		
		Command Truth Table Change of description for Burst stop in full page Auto Precharge: Change of figure for Burst read		
		Command Interval Change of figures for Auto precharge Change of description for Read command to Precharge command interval Change of description for Self-refresh, Power-up sequence and Initialization sequence Change of figures for Power-up sequence		
		Recommended DC Operating Conditions Change of title Recommended DC Operating Conditions to DC Operating Conditions Addition of notes 2 and 3		
		DC Characteristics (common) I _{CC2N} max: 20 mA to 16 mA I _{CC3P} max: TBD to 4 mA I _{CC3P} max: TBD to 3 mA I _{CC3N} max: 30 mA to 20 mA I _{CC3N} max: 20 mA to 15 mA I _{CC5} max: 140mA to 115 mA I _{CC6} max: 2 mA to 1 mA I _{CC6} max (L-version): TBD to 400 μA		
		DC Characteristics (HM5264165D) $I_{CC1} \text{ max (CL = 2): } 90 \text{ mA to } 80 \text{ mA}$ $I_{CC1} \text{ max (CL = 3): } 95 \text{ mA to } 80 \text{ mA}$ $I_{CC4} \text{ max (CL = 2): } 115 \text{ mA to } 80 \text{ mA}$ $I_{CC4} \text{ max (CL = 3): } 150 \text{ mA to } 105 \text{ mA}$		
		DC Characteristics (HM5264805D) $I_{CC1} \text{ max (CL = 2): } 80 \text{ mA to } 75 \text{ mA}$ $I_{CC1} \text{ max (CL = 3): } 85 \text{ mA to } 75 \text{ mA}$ $I_{CC4} \text{ max (CL = 2): } 95 \text{ mA to } 70 \text{ mA}$ $I_{CC4} \text{ max (CL = 3): } 125 \text{ mA to } 95 \text{ mA}$		
		DC Characteristics (HM5264405D) $I_{CC1} \text{ max (CL = 3): } 80 \text{ mA to } 75 \text{ mA}$ $I_{CC4} \text{ max (CL = 2): } 90 \text{ mA to } 65 \text{ mA}$ $I_{CC4} \text{ max (CL = 3): } 115 \text{ mA to } 85 \text{ mA}$		

<u>HM5264165D Series</u>, <u>HM5264805D Series</u>, <u>HM5264405D Series</u>

Revision Record (cont.)

Rev.	Date	Contents of Modification	Drawn by	Approved by
1.0	Dec. 2, 1998	AC Characteristics correct error: Deletion of note 6		
		Relationship Between Frequency and Minimum Latency I_{HZP} (CL = 2): —/2 to 2/2 I_{EP} (CL = 2): —/-1 to -1/-1 I_{BSR} (CL = 2): —/1 to 1/1 I_{BSH} (CL = 2): —/2 to 2/2 Change of notes 2 and addition of notes 3		