



EE-SPX301/401

Light Modulation Effectively
Reduces External Light Interference

- Easy adjustment and optical axis monitoring with a Light-ON indicator
- Wide operating voltage range: 5 to 24 VDC
- Amplifier output can be directly connected to a programmable controller (PLC)
- Easy-to-wire connector type
- Convert to PNP output with EE-2001 conversion connector

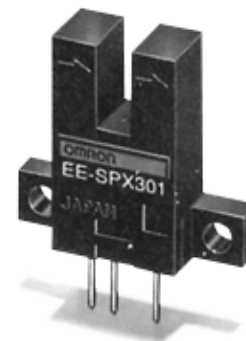

Ordering Information

Appearance	Sensing method	Slot width	Output configuration	Weight	Part Number
	Transmissive	3.6 mm	Dark-ON	Approx. 2.6 g	EE-SPX301
			Light-ON		EE-SPX401

Specifications


RATINGS

Model		Transmissive type	
		EE-SPX301	EE-SPX401
Supply voltage		5 to 24 VDC $\pm 10\%$, ripple (p-p): 5% max.	
Current consumption		Average: 15 mA max.; Peak: 50 mA max.	
Standard reference object		Opaque, 0.5 x 1 mm min.	
Differential distance		0.05 mm max.	
Control output		At 5 to 24 VDC: 80-mA load current (I_C) with a residual voltage of 1.0 V max. When driving TTL: 10-mA load current (I_C) with a residual voltage of 0.4 V max.	
Output configuration	Transistor on output stage without detecting object	OFF	ON
	Transistor on output stage with detecting object	ON	OFF

Model		Transmissive type	
		EE-SPX301	EE-SPX401
Indicator*	Without detecting object	ON	
	With detecting object	OFF	
Response frequency**		500 Hz	
Light source		GaAs infrared LED (pulse modulated) with a wavelength of 940 nm	
Receiver		Si photo-diode with a sensing wavelength of 850 nm max.	
Connecting method		EE-1002/1003 Connectors	

*The indicator is a GaP red LED (peak emission wavelength: 700 nm).

**The response frequency was measured by detecting the following disks rotating.

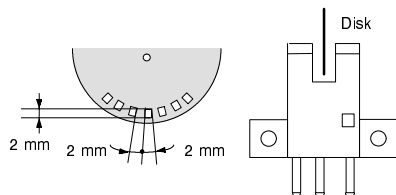



■ CHARACTERISTICS

Ambient illumination		Sensing face: fluorescent light/incandescent light: 3,000 lx max.
Enclosure ratings		IP50
Ambient temperature	Operating	-10° to 55°C
	Storage	-25° to 65°C
Ambient humidity	Operating	35% to 85%
	Storage	35% to 95%
Vibration resistance		Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hrs each in X, Y, and Z directions
Shock resistance		Destruction: 500 m/s ² (approx. 50G's) for 3 times each in X, Y, and Z directions
Cable length		2 m max. by AWG22

Engineering Data

■ SENSING POSITION CHARACTERISTICS

EE-SPX301 (Typical)

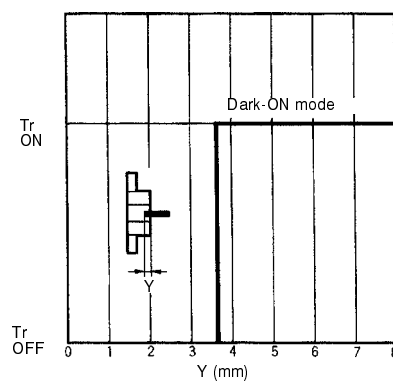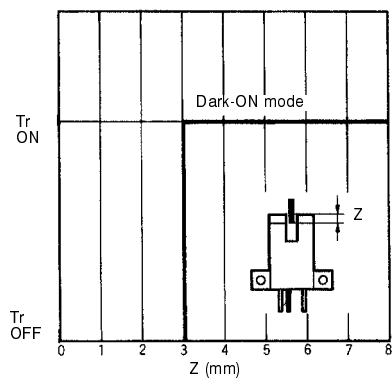


Note: The sensing position characteristics of the EE-SPX401 are opposite those of the EE-SPX301.

Operation


INTERNAL/EXTERNAL CIRCUIT DIAGRAM

Light-ON/Dark-ON

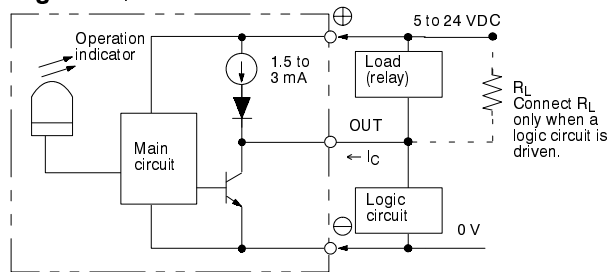


TIMING CHART

Light-ON

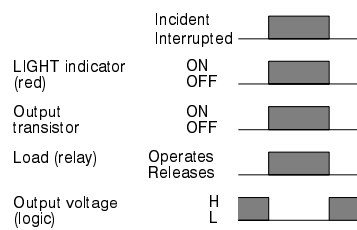


Dark-ON

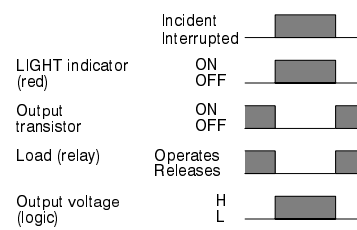

Dimensions

Unit: mm


EE-SPX301, EE-SPX401

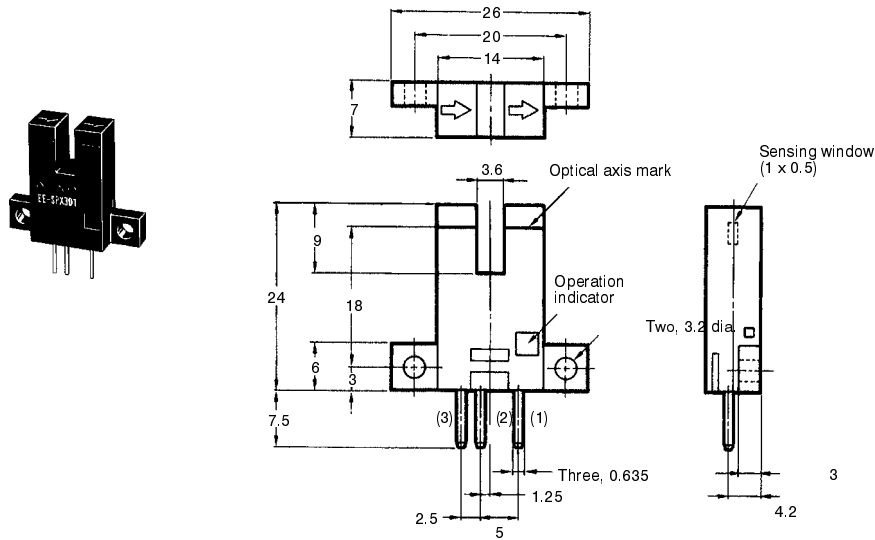


Terminal Arrangement

(1)	⊕	V_{CC}
(2)	OUT	OUTPUT
(3)	⊖	GND (0 V)

■ EE-1002 CONNECTOR

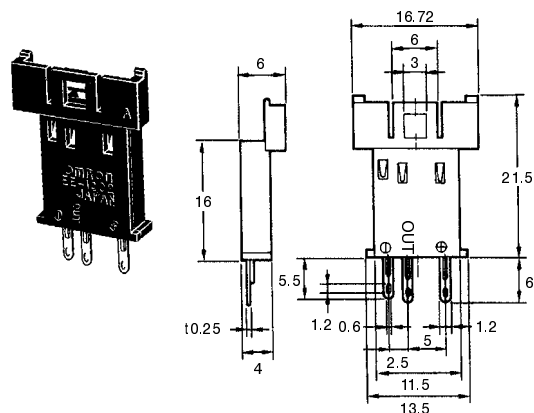


■ EE-SP_ + EE-1003

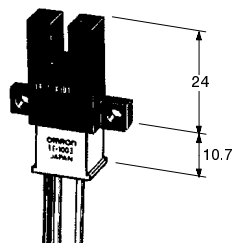

■ EE-1003 CONNECTOR


The connector comes with a 1-m cable.

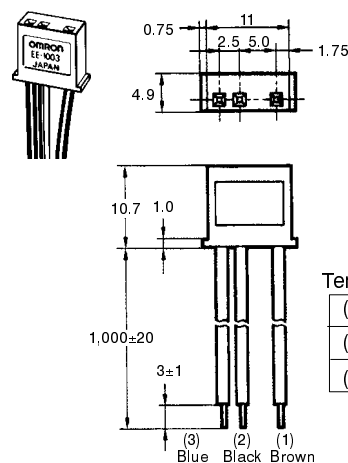

Terminal Arrangement

(1)	⊕	V _{CC}
(2)	OUT	OUTPUT
(3)	⊖	GND (0 V)

■ EE-1003A CONNECTOR HOLDER

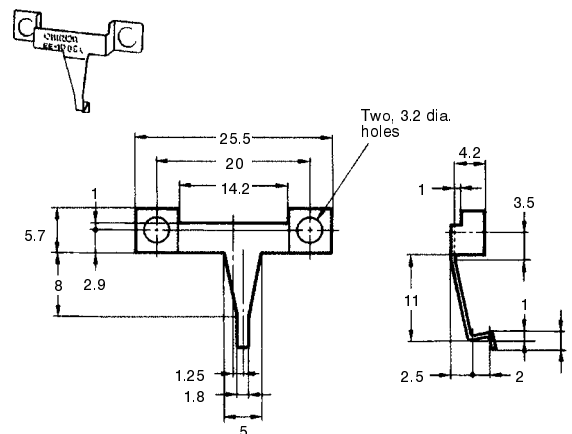


Precautions

Refer to the Technical Information Section for general precautions.

■ WIRING

A cable with a thickness of 0.3 mm² min. or AWG22 and a length of 2 m max. must be connected to the output terminals.


To use a cable longer than 2 m, attach a capacitor with a capacitance of approximately 10 μ F to the wires as shown below (the distance between the terminal and the capacitor must be 2 m or less):

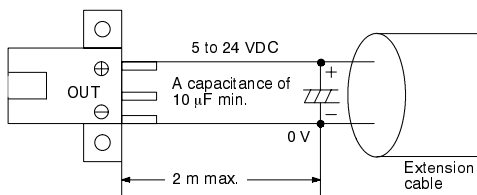

Do not solder the cable to the connectors. Use the EE-1002 Connector or EE-1003 Connector (with a 1-m cable attached) to connect the cable to the output terminals.

Use the EE1003A Connector Holder to prevent accidental disconnection of the EE-1003 Connector from the EE-SPX301/401 Photomicrosensor.

Do not impose excessive force on the terminals (refer to the diagram below). Excess force will damage the terminals.




Do not disconnect the EE-1002 or EE-1003 Connector from the photomicrosensor when power is supplied to the photomicrosensor or the photomicrosensor could be damaged.

If the metal mounting base is subjected to inductive electrical noise, the photomicrosensor can be activated accidentally. If noise is a problem, take the following countermeasures:


1. Connect the negative terminal to the mounting base so that there will be no difference in electric potential between the photomicrosensor and mounting base.
2. Connect the negative terminal to the mounting base through a $0.47\text{-}\mu\text{F}$ capacitor.
3. Insert a plastic insulating plate with a thickness of approximately 10 mm between the photomicrosensor and mounting base.

Wire as shown by the following illustration to connect a small inductive load (a relay for example) to the photomicrosensor. A diode must be connected parallel to the relay to absorb the reverse voltage.

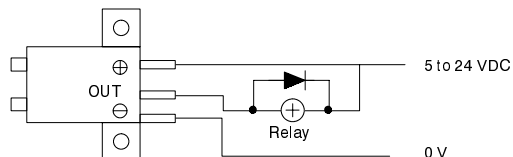

■ POWER SUPPLY

When using a standard switching regulator, ground the FG and G terminal so that the photomicrosensor will be in a stable operating condition.

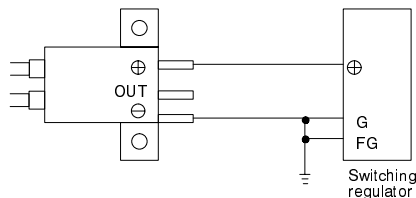

NOTE: DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters to inches divide by 25.4.

OMRON[®]
OMRON ELECTRONICS, INC.
 One East Commerce Drive
 Schaumburg, IL 60173
1-800-55-OMRON

OMRON CANADA, INC.
 885 Milner Avenue
 Scarborough, Ontario M1B 5V8
416-286-6465