

OCX481 Crosspoint Switch Advanced Mini Data Sheet

Features

- 1.6 Gb/s port data bandwidth, >38Gb/s aggregate bandwidth Full Broadcast and multicast capability
- Low power CMOS, 2.5V and 3.3V power supply
- SRAM-based, in-system programmable
- 48 configurable I/O ports
 - 24 dedicated differential input ports
 - 24 dedicated differential output ports
 - Supports LVPECL and LVDS I/O
 - LVTTL control interface
 - Output Enable control for all outputs
- Non-blocking switch matrix
 - Patented ActiveArrayTM matrix for superior performance
 - Double-buffered configuration RAM cells for simultaneous global updates
 - ImpliedDisconnectTM function for single cycle disconnect/ connect

- - One-to-One and One-to-Many connections
 - Special broadcast mode routes one input to all outputs at maximum data rate
- · Low jitter and signal skew
- Low duty cycle distortion
- RapidConfigureTM parallel interface for configuration and readback
- · Serial programming interface for configuration
- 172 BGA package with 1.27mm ball spacing
- Integrated Termination Resistors

Description

The OCX481 SRAM-based device is a non-blocking 24 X 24 digital crosspoint switch capable of data rates of 1.6 Gigabits per second per port. The I/O ports are fixed as either input or output ports. The input and output ports operate in flow-through (asynchronous) mode.

The patented ActiveArray provides greater density, superior performance, and greater flexibility compared to a traditional n:1 multiplexer architecture. The OCXTM devices support various operating modes covering one input to one output at a time as well as one input to many outputs, plus a special broadcast mode to program one input to all outputs while maintaining maximum data rates. In all modes data integrity and connections are maintained on all unchanged data paths.

The RapidConfigure parallel interface allows fast configuration of the Output Buffers and the switch matrix. Readback is supported for device test and verification purposes. A functional block diagram of the OCX481 is shown in Figure 1.

Applications

- SONET/SDH and DWDM
- Digital Cross-Connects
- System Backplanes and Interconnects
- High Speed Test Equipment
- ATM Switch Cores
- Video Switching

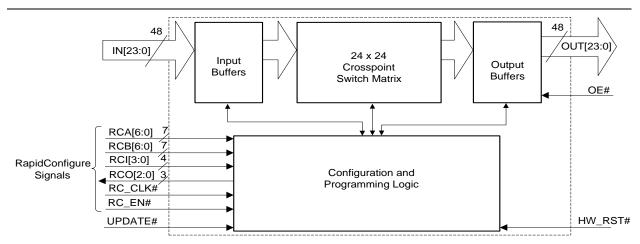


Figure 1 OCX481 Functional Block Diagram




(This page intentionally left blank)



Contents

1.	Introduction	7
1.1	Input and Output Buffers	8
1	1.1.1 Input and Output Port Function Mode	8
1	1.1.2 Broadcast Mode	8
1.2	2 Output Control Signals	9
1.3	RapidConfigure Interface	9
1.	1.3.1 RapidConfigure Programming Instructions	9
1.4	4 ImpliedDisconnect	11
1.5	5 Device Reset Options	12
2.	Pin Description	13
3.	Differential I/O Standards	14
3.1	l LVPECL	14
3.2	2 LVDS	14
4.	Electrical Specifications	15
4.1	Absolute Maximum Ratings	15
4.2	2 Recommended Operating Conditions	15
4.3	Pin Capacitance	15
4.4	4 DC Electrical Specifications	16
4.5	5 LVPECL AC Electrical Specifications	17
4.6	5 Timing Diagrams	18
5.	Power Consumption	21
5.1	Power for LVPECL I/O	21
6.	Component Availability and Ordering Information	22
7.	Glossary	22
R	Product Status Definition	24








Figures

Figure 1	OCX481 Functional Block Diagram	
Figure 2	OCX481 Switch Matrix	7
Figure 3	Input and Output Buffer Configuration	8
Figure 4	OCX481 Operating in LVPECL Mode	. 14
Figure 5	Flow-Through Mode Timing	. 18
Figure 6	Output Enable Timing	. 18
Figure 7	Duty Cycle Distortion	. 18
Figure 8	RapidConfigure Write Cycle	. 19
Figure 9	RapidConfigure Read Cycle	. 19
Figure 10	Typical Performance at 1.6Gb/s with PRBS Data	. 20
Figure 11	Power Consumption Diagram for the OCX481 using LVPECL	. 21





Tables

Table 1	Summary for Programmable I/O Attributes for OCX481	8
Table 2	RapidConfigure Programming Instructions	9
Table 3	RCO[2:0] Readback Pin Assignment	11
Table 4	Programming an Output Buffer using RapidConfigure	11
Table 5	Device Reset Options	12
Table 6	OCX481 Pin Description	13
Table 7	Absolute Maximum Ratings	15
Table 8	Recommended Operating Conditions	15
Table 9	Pin Capacitance	15
Table 10	LVTTL DC Electrical Specifications	16
Table 11	LVPECL DC Electrical Specifications	16
Table 12	LVPECL AC Electrical Specifications	17

6



1. Introduction

The OCX481 is a differential crosspoint-switching device. The main functional block of the device is a Switch Matrix as shown in Figure 1. The Switch Matrix is a *x-y* structure supporting an input-to-output data flow. Figure 2 shows a conceptual view of the switch matrix with inputs connected to the horizontal trace and outputs to the vertical trace. Connections between vertical and horizontal lines are implemented with a proprietary high-performance buffering circuit. Signal path delays through the Switch Matrix are very well balanced, resulting in predictable and uniform pin-to-pin delays.

Note – For the purpose of clarity, the logic diagrams within this data sheet are conceptual representations only and do not show actual circuit implementation.

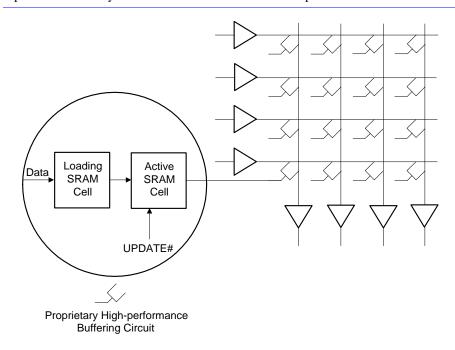


Figure 2 OCX481 Switch Matrix

The Active SRAM cells are responsible for establishing connections in the switch matrix by turning on the interconnect circuit, while the Loading SRAM cell can be used to store a second configuration that can be transferred to the Active SRAM cell at a later time. The two SRAM cells are arranged so that a double buffered scheme can be employed. Through the use of an internal signal (generated automatically during a programming cycle) it is possible to store a second configuration map in the Loading SRAM while the Active SRAM maintains its present connection status. When the UPDATE# signal is asserted low, the contents of the Loading SRAM cell are transferred to the Active SRAM cell and the switch matrix connection is either made or broken.

The UPDATE# signal can be used to control when the switch matrix is reconfigured. For instance, as long as the UPDATE# signal is asserted high, the Loading SRAM cells for the entire switch matrix could be changed without affecting the current configuration of the switch. When the UPDATE# signal is asserted low, the entire switch matrix would be reconfigured simultaneously. If the UPDATE# signal is asserted continuously, all crosspoint programming commands (generated by RapidConfigure or Serial programming cycles) will take effect immediately, since the Loading SRAM cell's contents will be transferred directly to the Active SRAM cell.



1.1 Input and Output Buffers

All of the I/O buffers are differential with flow-through mode. Figure 3 shows the basic block diagram of the input and output blocks with the sources for the output control signals (OE#). The control signals are explained in more details in the following sections.

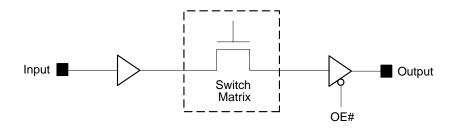


Figure 3 Input and Output Buffer Configuration

1.1.1 Input and Output Port Function Mode

The following legend describes the various modes of the Input and Output Ports and the specification used by the OCXProTM Software.

Legend:

Ax-Switch Matrix Signal

Px-Port Signal

OE#-Output Enable (# means "Active Low")

Symbol **I/O Port Function** Mnemonic **Input** – The external signal is buffered from the Input Port pin IN Αx to the corresponding Switch Matrix line. **Output** – The internal signal is buffered from the OP Рx Ax corresponding Switch Matrix line to the Output Port pin. In this mode an optional output enable (OE#) can be selected. The default state is logic high with enable set to ON. OE# **No Connect** – In this mode, the output Port pin is isolated NC from the Switch Matrix.

Table 1 Summary for Programmable I/O Attributes for OCX481

1.1.2 Broadcast Mode

The OCX481 has a special Broadcast Mode which connects any input to all outputs without performance degradation. The input is selected using RapidConfigure or Serial interface and disconnects all other inputs. The Global Update pin (UPDATE#) must be held high during Broadcast Mode. Asserting the UPDATE# pin returns the array to the previous program condition.

OCX481 Crosspoint Switch—Advanced Mini Data Sheet

1.2 Output Control Signals

Every output port of the OCX481 has a global Output Enable signal (OE#). All output buffers have output enables that have programmable polarity and are individually configurable.

Additionally each output can be permanently enabled (always ON) or disabled (always OFF) which is useful for applications which need to tri-state outputs (for example when using multiple chips in expansion mode) or for power saving in designs that do not need to use all the outputs available.

Two control bits are used to control the function of the output enable.

1.3 RapidConfigure Interface

RapidConfigure (RC) is a 23 signal parallel interface that is used to program the OCX481 device. The 23 pins are allocated as follows:

RCA[6:0] = RapidConfigure Address A. RCA are input pins.

RCB[6:0] = RapidConfigure Address B. RCB are input pins.

RCI[3:0] = RapidConfigure Instruction Bits

RCO[2:0] = RapidConfigure Readback. RCO are output pins.

RC_CLK#= RapidConfigure Clock

RC_EN# = RapidConfigure Cycle Enable (state is sensed on negative edge of clock)

1.3.1 RapidConfigure Programming Instructions

The RC interface supports both write and read types of operations:

- 1. Write Operations (reset crosspoint and Input or Output Buffer (IOB), configure an Output Buffer, connect/disconnect crosspoint)
- 2. Read Operations (Output Buffer and crosspoint configuration read).

Table 2 RapidConfigure Programming Instructions

RCI[3:0]	RCA[6:0]	RCB[6:0]	RCO[2:0]	Instruction	Description
0000				Reserved	
0001				Reserved	
0010	X	X		Reset Crosspoint Array	Reset, along with an Update operation (UPDATE# pin or Update command) resets the entire crosspoint array to no connect. All Output Buffers remain unchanged by this operation.
0011	Х	Input Port Address		Set Array to Broadcast mode	Connects the input selected by RCB[6:0] to all output ports and disconnects all other inputs. The Global Update (UPDATE#) pin must be held high during Broadcast mode. Activating the Global Update pin returns the array to the previous program condition.
0100	Output Port Address	Data		Configure an Output Buffer	Program an Output Buffer specified by RCA[6:0]. See Table 4 for RCB[6:0] bit assignment and buffer functionality.



 $Table\ 2 \qquad Rapid Configure\ Programming\ Instructions\ \ ({\it Continued})$

Output Port Address Address Address Output Data Readback Crosspoint, Output Buffer status Specify the crosspoint connect status at output location specified by RCA[6:0] to the input location specified by RCA[6:0]. Ho output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0] and the crosspoint connect status. See Table 3 for RCO[2:0] readback prin assignment. Output Port Address Disconnect Input Disconnect Input assignment Disconnect Input and Coutput Disconnect Input and Coutput Disconnect Input address Disconnect Input and Coutput Disconnect Input address Disconnect Input Disconnect Input address Disconnect Input address Disconnect Input Disconnect Input Disconnect Input Disconnect Input address Disconnect Input Disconnect Inpu	D CITIZ AI	D.C.A.F.C. A.J.	D CDIC AI	D.C.O.C.		
Output Port Address Address Address Address Specify the crosspoint connect status at output location specified by RCA[6:0] to the input lour buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], and the crosspoint cells of the input location specified by RCA[6:0]. Output Port Address Disconnect Input and Output Disconnect the crosspoint cells of the input location specified by RCA[6:0]. All other connections from the source input address or to the same output address are set to no connect (NC). Input Port Address Address Connect, without ImpliedDisconnect Connect the crosspoint cell at the output location specified by RCA[6:0] to the input location specified by RCA[6:0] to t	RCI[3:0]	RCA[6:0]	RCB[6:0]	RCO[2:0]	Instruction	Description
Address Address Address Output Data Output location specified by RCA[6:0] to the input location specified by RCB[6:0]. Cycle 2 X X X Output Data Readback (using RCO[2:0]) the status of the input buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCA[6:0]. The output buffer specified by RCA[6:0] in the input location specified by RCA[6:0]. The output location specified by RCA[6:0] to the input location specified by RCA[6:0] to the input location specified by RCA[6:0]. All other connections from the source input address or to the same output address remain the same as before. 1001 Output Port Address Addres	0101					This is a two-cycle instruction.
the input buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCO[2:0] and the crosspoint connect status. See Table 3 for RCO[2:0] readback pin assignment. Oli X X X Update Program the Global Update function without the use of the UPDATE# pin. Oli X X Input Port Address Disconnect Input Disconnect the crosspoint cells of the input row location specified by RCA[6:0]. I 000 Output Port Address Address Output Disconnect Input and Output Output of the input location specified by RCA[6:0]. Output Port Address Address Address Address Output Address or to the same output	Cycle 1	•	-	X		output location specified by RCA[6:0] to
Disconnect Input Disconnect the crosspoint cells of the input row location specified by RCA[6:0].	Cycle 2	X	X	Output Data		the input buffer specified in Cycle 1 by RCA[6:0], the output buffer specified in Cycle 1 by RCO[2:0] and the crosspoint connect status. See Table 3 for RCO[2:0] readback pin
Address Input row location specified by RCA[6:0].	0110	X	X		Update	-
Address Address Address Output output location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections from the source input address remain the same as before. 1001	0111	X	-		Disconnect Input	
input address or to the same output address remain the same as before. Connect, with ImpliedDisconnect Connect the crosspoint cell at the output location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections from the same input address or to the same output address are set to no connect (NC). Connect, without ImpliedDisconnect Connect, without ImpliedDisconnect Connect the crosspoint cell at the output location specified by RCA[6:0] to the input location specified by RCA[6:0] to the input location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections to the same output address are set to "no connect" while all other connections from the same input address remain the same as before. Reserved Reserved Reserved Reset the switch matrix to no connects (NC). Update is forced internally. Sets the Output buffer to Flow-through mode with Output Enabled.	1000	_	-		_	output location specified by RCA[6:0] to
Address Address ImpliedDisconnect location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections from the same input address or to the same output address are set to no connect (NC). Connect, without ImpliedDisconnect location specified by RCA[6:0] to the input location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections to the same output address are set to "no connect" while all other connections from the same input address remain the same as before. Reserved Reserved Reserved Reset the switch matrix to no connects (NC). Update is forced internally. Sets the Output buffer to Flow-through mode with Output Enabled.						input address or to the same output
1010 Output Port Address Input Port Address ImpliedDisconnect Connect, without ImpliedDisconnect ImpliedDisconnect Connect the crosspoint cell at the output location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections to the same output address are set to "no connect" while all other connections from the same input address remain the same as before.	1001	_	-			location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections from the same input address or to the same output address are
other connections from the same input address remain the same as before. Reserved Reserved Reserved Reset the switch matrix to no connects (NC). Update is forced internally. Sets the Output buffer to Flow-through mode with Output Enabled. Reserved	1010	_	•			Connect the crosspoint cell at the output location specified by RCA[6:0] to the input location specified by RCB[6:0]. All other connections to the same output
1100 Reserved 1101 X X X Reset All Reset the switch matrix to no connects (NC). Update is forced internally. Sets the Output buffer to Flow-through mode with Output Enabled. 1110 Reserved						other connections from the same input
1101 X X X Reset All Reset the switch matrix to no connects (NC). Update is forced internally. Sets the Output buffer to Flow-through mode with Output Enabled. 1110 Reserved	1011				Reserved	
(NC). Update is forced internally. Sets the Output buffer to Flow-through mode with Output Enabled. Reserved	1100				Reserved	
	1101	X	X		Reset All	(NC). Update is forced internally. Sets the Output buffer to Flow-through mode with
1111 Reserved	1110				Reserved	
	1111				Reserved	

Note - X = Don't care.

Readback Location RCO[2:0] Signal/Function Crosspoint O2 **Connection Status:** 0 = No connection (NC) — (default state at reset) 1 = ConnectedO1, O0 Output Buffer **Output Enable:** 0,0 Output enabled (ON) - this is the default state at reset 0,1Output disabled (OFF) 1,0 Output controlled by OE (active high) 1,1 Output controlled by OE# (active low)

Table 3 RCO[2:0] Readback Pin Assignment

Table 4 Programming an Output Buffer using RapidConfigure

RCB[6:0]	Signal/Function
B6, B5, B4, B3, B2	Don't care
B1, B0	Output Enable:
0,0	Output enabled (ON) – this is the default state at reset
0,1	Output disabled (OFF)
1,0	Output controlled by OE (active high)
1,1	Output controlled by OE# (active low)

1.4 ImpliedDisconnect

ImpliedDisconnect is a feature that provides the ability to make fast switch connection changes. When using the normal "Connect" command, all other connection to the specified output are set to "no connect". However, the specified input remains connected to any other outputs to which it was connected before.

The "Connect with ImpliedDisconnect" commands allow the user to disconnect the specified input from all other outputs as well. This enables the user to make a complete connection change in one RapidConfigure cycle.



1.5 Device Reset Options

The power-on reset, RapidConfigure reset, and hardware reset will program the output buffers to flow-through mode (with Global Clock selected), and Output Enabled (ON). The hardware reset pin can be done accomplished through the HW_RST# pin (active low). RC reset can be accomplished by applying the RC instruction 1101 to the RCI[3:0] pins.

Table 5 Device Reset Options

Programming Interface	Reset Method	Output Ports	Switch Matrix	RCE Mode Control	ТАР
Hardware Reset	Power-on Reset	OP	NC	1 (RC Enabled)	TLR ¹
Haruware Reset	HW_RST# (low pulse)	OP	NC	1 (RC Enabled)	1
RapidConfigure	1. Device reset (instruction 1101)	OP	NC	1 (RC Enabled)	Unchanged
Reset	2. Reset Crosspoint Array (instruction 0010)	Unchanged	NC	Unchanged	Unchanged

^{1.} TLR = Test Logic Reset state.

OCX481 Crosspoint Switch—Advanced Mini Data Sheet

2. Pin Description

Table 6 OCX481 Pin Description

Pin Name	# of Pins	Type	Description	
INP[23:0]	24	Input	Non-inverting differential input signals	
INN[23:0]	24	Input	Inverting differential input signals	
OUTP[23:0]	24	Output	Non-inverting differential input signals	
OUTN[23:0]	24	Output	Inverting differential input signals	
OE#	1	Input	Global Output Enable	
HW_RST#	1	Input	Hardware Reset	
UPDATE#	1	Input	Global Update	
]	RC Pins	
RCA[6:0]	7	Input	RapidConfigure Address A	
RCB[6:0]	7	Input	RapidConfigure Address B	
RCO[2:0]	3	Output	RapidConfigure Readback	
RCI[3:0]	4	Input	RapidConfigure Instruction Bits	
RC_CLK#	1	Input	RapidConfigure Clock	
RC_EN#	1	Input	RapidConfigure Cycle Enable	
		Power a	nd Ground Pins	
V _{DD} .CORE	12	2.5V Power	Core Voltage	
V _{DD} .PAD ⁽²⁾	8	3.3V Power	Differential Output Buffer Voltage	
V _{DD} .IN ^(1, 3)	8	3.3V Power	LVTTL Control pins Voltage and Differential Input Buffer Voltage	
V _{SS}	38	Ground	Ground	
NC	3	No Connect	No Connect	

NOTES:

- 1. Dedicated differential input buffers can receive both LVPECL and LVDS voltage levels using 3.3V supply.
- $2.V_{DD}$.PAD is 3.3V for LVPECL outputs.
- 3. The LVTTL control, Serial pins, and differential input ports are 3.3V—they are not 5V tolerant.



3. Differential I/O Standards

The OCX481 support the two most popular differential signaling standards: Low Voltage Positive Emitter Coupled Logic (LVPECL) and Low Voltage Differential Signaling (LVDS).

LVPECL is commonly used in video switching applications or those designs requiring transmission of high-speed clock signals. This is the default I/O supported by the OCX481 device.

LVDS is typically used in communication systems as high speed, low noise point-to-point links. The OCX481 conforms to the ANSI/TIA/EIA-644 standard covering electrical specifications for output drivers and receiver inputs.

3.1 LVPECL

LVPECL is a differential signaling standard that specifies two pins per input or output. The voltage swing between these two signal lines is approximately 850 mV. The use of a reference voltage or a board termination voltage is not required.

Transmitting and receiving circuits for LVPECL are shown in Figure 4 with termination resistors integrated on-chip, thus, removing the need for any external resistors. Integrated Output Attenuation resistors produce the required LVPECL output swing while providing a 100 ohm output impedance to minimize return reflections.

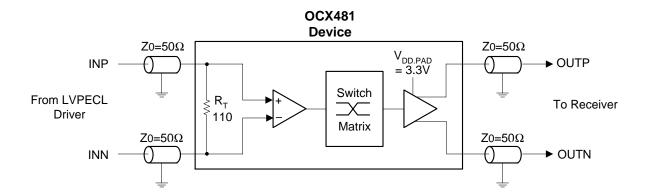


Figure 4 OCX481 Operating in LVPECL Mode

3.2 LVDS

LVDS is a differential signaling standard that requires the use of two pins per input or output. It requires that one data bit is carried through two signal lines. As with all differential signaling standards, LVDS has an inherent noise immunity over single-ended standards. The voltage swing between two signal lines is approximately 350mV. The use of a reference voltage or a board termination voltage is not required.

Note – It is possible to operate the OCX481 device with V_{DD} PAD = 2.5V that will allow the outputs to closely approximate "true LVDS" levels. Refer to the application note "Operating the OCX1601 in LVDS Applications" for further details.



4. Electrical Specifications

4.1 Absolute Maximum Ratings

Table 7 Absolute Maximum Ratings¹

Symbol	Parameter	Limits	Units
V _{DD} .CORE	Supply Voltage (core)	-0.3 to +3.0	V
V _{DD} .IN	Supply Voltage (inputs)	-0.3 to +3.6	V
V _{DD} .PAD	Supply Voltage (differential outputs)	-0.3 to +3.6	V
V_{IN}^2	Input Voltage	$-0.3 \text{ to } +3.6^3$	V
T_{J}	Junction Temperature	+150	°C
T _{STG}	Storage Temperature	-65 to +150	°C
P_{MAX}	Maximum Power Dissipation	6	W
ESD ⁶	Electrostatic Discharge	2000	V

4.2 Recommended Operating Conditions

Table 8 Recommended Operating Conditions

Symbol	Parameter	Limits	Units
V _{DD} .CORE	Supply Voltage (core)	+2.375 to +2.625	V
V _{DD} .PAD ⁴	Supply Voltage (differential output buffers)	3.3V ±10%	V
V _{DD} .IN	Supply Voltage (inputs)	+3.0 to +3.6	V
T _A	Operating Temperature: Commercial Operating Temperature: Industrial	0 to +70 -40 to +85	°C

4.3 Pin Capacitance

Table 9 Pin Capacitance⁵

Symbol	Parameter	Max	Units
CPIN	Signal Pin Capacitance	10	pF

- 1. Exposure to absolute maximum rated conditions for extended periods may affect device reliability.
- 2. A maximum undershoot of 2V for a maximum duration of 20 ns is acceptable. Overshoot to 3.6V is acceptable.
- 3. All inputs are 3.3V tolerant with the $V_{\mbox{\scriptsize DD}}$ pin at 2.5V or 3.3V.
- 4. Note that min and max values for $V_{\mbox{\scriptsize DD}}$ for differential outputs are I/O Standard dependent.
- 5. Capacitance measured at 25°C. Sample tested only.
- 6. Measured using Human Body Model.



4.4 DC Electrical Specifications

 $(T_A = -40^{\circ}\text{C to } 85^{\circ}\text{C}, \ V_{DD}.\text{IN} = 3.3\text{V} \pm 10\%, \ V_{DD}.\text{CORE} = 2.5\text{V} \pm 5\%)$

Table 10 LVTTL DC Electrical Specifications

Symbol	Parameter	Conditions	Min	Max	Units			
V_{IH}	High-level Input	Ports are 3.3V tolerant	2.0	3.6	V			
V _{IL}	Low-level Input	Ports are 3.3V tolerant	-0.3	0.8	V			
V _{OH}	High-level Output	V_{DD} .PAD = Min I_{OH} = -4mA	2.4	V _{DD} .PAD+ 0.3	V			
V _{OL}	Low-level Output	V_{DD} .PAD = Min I_{OL} = 8mA		0.4	V			
IL _{IH} , IL _{IL} (1)	Input Pin Leakage Current (2)	$\begin{aligned} &V_{DD}.IN = Max\\ &0.0 < In < V_{DD.PAD} \end{aligned}$		+5 -50	μΑ			
IL _{OZ}	Tristate Leakage Output OFF State (2)	$\begin{aligned} &V_{DD}.PAD = Max\\ &0.0 < In < V_{DD.PAD} \end{aligned}$		+5 -5	μА			
	Power							
P _{DDQ} (3)	Quiescent Power	All $V_{DD} = Max$		0.5	W			

Table 11 LVPECL DC Electrical Specifications

Symbol	DC Parameters	Min	Max	Units
V _{IN_DIFF}	Input Differential Voltage	±100		mV
V _{IN_COM}	Input Common Mode Voltage	0.25	2.25	V
V _{OUT_DIFF}	Output Differential Voltage	±650	±900	mV
V _{OUT_COM}	Output Common Mode Voltage	$\frac{V_{DD}.PAD}{2}$	$\frac{V_{DD}.PAD}{2}$	V
		Z		
Z_{IN}	Termination Impedance	80	120	Ω

^{1.} All LVTTL input pins have pull-up resistors.

The V_{OH} levels are 200mV below standard single-ended LVPECL levels and are compatible with devices tolerant of lower common-mode ranges. The above table summarizes the DC output specifications of LVPECL.

^{2.} Input leakage only valid when both positive and negative inputs/outputs area equal (i.e. both high or both low).

 $^{{\}bf 3.}\quad \hbox{See section 5 for dynamic power consumption calculation}.$

^{4.} Maximum capacitive load is 12 pF.

OCX481 Crosspoint Switch—Advanced Mini Data Sheet

4.5 LVPECL AC Electrical Specifications

 $(V_{DD}.IN = 3.3V \pm 10\%, \, V_{DD}.CORE = 2.5V \pm 5\%, \, V_{DD}.PAD = 3.3V \pm 10\%)$

Table 12 LVPECL AC Electrical Specifications

			0°C to 70°C		-40°C to +85°C	
Symbol	Parameter	Min	Max	Min	Max	Units
R_{DATA}	NRZ Data Rate (1)		1.6		1.6	Gb/s
t _{PHL} , t _{PLH}	One Way Signal Propagation Delay, Fanout = 1		3.0		3.5	ns
t_{W^+}	Input Flow-through Positive Pulse Width	0.6		0.6		ns
$t_{W_{-}}$	Input Flow-through Negative Pulse Width	0.6		0.6		ns
t_{DCD+}, t_{DCD-}	Duty Cycle Distortion		50		60	ps
t _{JITTER}	Output Jitter		50		60	ps
t _{SK}	Skew between Output Ports (1)		0.2		0.25	ns
t _{PHZ_OT} ,	Output Enable to Valid Data		5		5	ns
t _{PLZ_OT}			_		_	
$t_{ m PZH_OT}, \ t_{ m PZL_OT}$	Output Enable to High Z State		5		5	ns
t_{RC}	RapidConfigure Clock Period	12		12		ns
t _{W+_RC} t _{WRC}	RapidConfigure Clock Pulse Width	5		5		ns
t _{S_RC}	RapidConfigure Address Setup to RC_CLK#	3		4		ns
t _{H_RC}	RapidConfigure Address and Enable Hold Time to RC_CLK#	3		4		ns
t _{P_UD}	Update of Crosspoint to Data Out		10		10	ns

NOTES:

1. These parameters are guaranteed but not tested in production.



4.6 Timing Diagrams

Note – For the purpose of clarity, the timing diagrams within this data sheet are conceptual representations only and do not show actual circuit implementation.

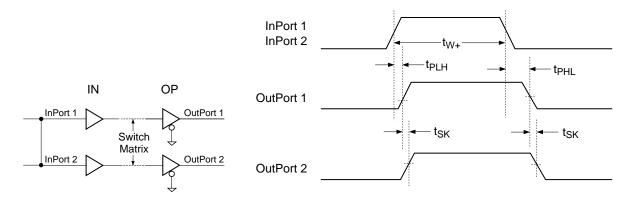


Figure 5 Flow-Through Mode Timing

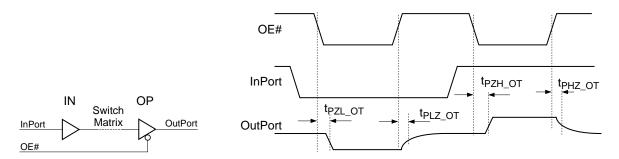


Figure 6 Output Enable Timing

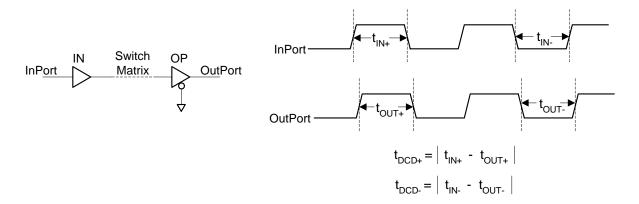


Figure 7 Duty Cycle Distortion



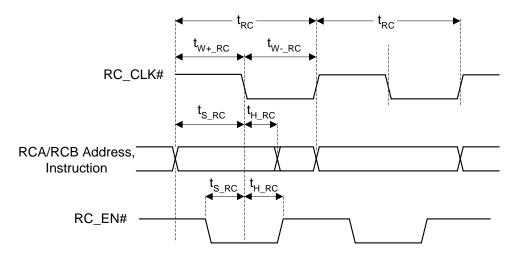


Figure 8 RapidConfigure Write Cycle

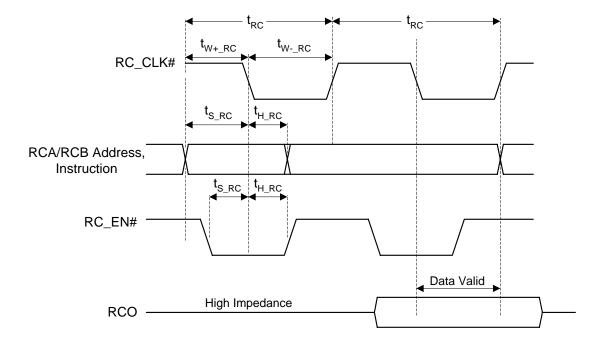


Figure 9 RapidConfigure Read Cycle



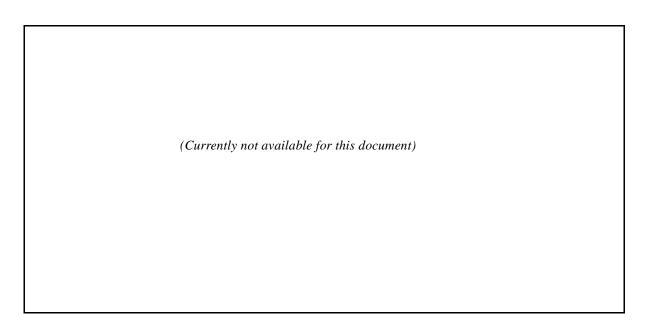


Figure 10 Typical Performance at 1.6Gb/s with PRBS Data




5. Power Consumption

Chip power, consists of three integral elements (refer to Figure 11):

- 1. **Input Power**—This element has two components:
 - a steady state component that is always ON, and
 - a component that is based on the number of inputs being used.
- **2. Core Power**—This element is the same for LVPECL or LVDS outputs. Core power is a function of data rate (Mb/s) and the number of connection paths through the switch matrix.
- **3. Output Power**—This element is a fixed amount for each differential output. The value is zero if the Output Enable (OE#) is disabled or set to OFF.

5.1 Power for LVPECL I/O

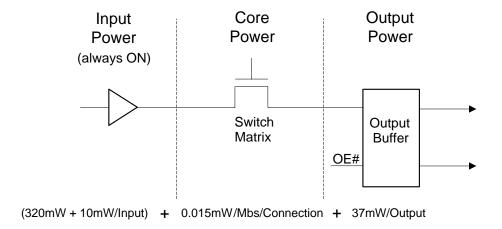


Example: Worst Case =
$$(320\text{mW} + 240\text{mW}) + (0.015 \text{ mW} \times 1600 \times 24) + (37\text{mW} \times 24)$$

 $560\text{mW} + 576\text{mW} + 888\text{mW}$
= 2.02 watts

Figure 11 Power Consumption Diagram for the OCX481 using LVPECL



6. Component Availability and Ordering Information

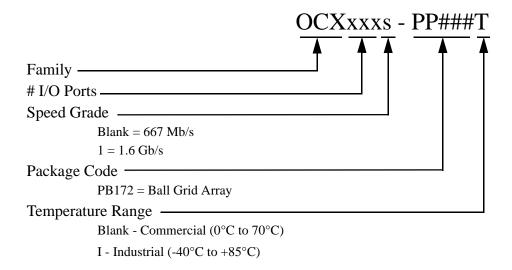

7. Glossary

CROSSPOINT: A single cell controlled by two RAM bits. The RAM bits are connected in a master-slave configuration to provide an update for programming and changing program information all at once.

CROSSPOINT ARRAY: An array of Crosspoint cells used to connect any input port to any output port.

INPUT OR OUTPUT PATH: The signal flow from pin to array and array to pin. Each path has a register with selectable clocks, drivers for the loaded outputs with selectable enables, and sense circuits to detect changes on either side of the IO Buffer.

PORT: A name followed by a number to identify a pin on the device.

RAPIDCONFIGURE: A parallel programming method for the OCX devices. The RC mode uses 23 dedicated pins to program the Crosspoint Array and the IO Buffers. The 23 pins consist of an enable, a clock, four instruction bits, two seven-bit address fields, and a three-bit data field.



OCX481 Crosspoint Switch—Advanced Mini Data Sheet

Revision History

Date/	Version No.	Description	
4/25/2001	Revision 1.0	Preliminary release of "Advanced" mini data sheet.	
5/21/2001	Revision 1.1	Changes to LVPECL power consumption diagram and Input power.	
7/27/01	Revision 1.2	Changes to LVPECL DC Electrical Specs table; added termination impedance.	



8. Product Status Definition

Data Sheet Identification	Product Status	Definition
Advanced	Formative or In Design	This data sheet contains the design specifications for product development. Specification may change in any manner without notice.
Preliminary	Preproduction Product	This data sheet contains the preliminary data, and supplementary data will be published at a later date. I-Cube reserves the right to make changes at any time without notice in order to improve design and supply the best possible product.
No Identification	Full Production	This data sheet contains final specifications. I-Cube reserves the right to make changes at any time without notice in order to improve design and supply the best possible product.
Obsolete	No longer in Production	This data sheet contains specifications for a product that has been discontinued by I-Cube. The data sheet is provided for reference information only.

I-Cube[®] is a registered trademark and RapidConnect, RapidConfigure, ActiveArray, ImpliedDisconnect, IQ, IQX, MSX, MSXPro, OCX, OCXPro, and PSX are trademarks of I-Cube, Inc. All other trademarks or registered trademarks are the property of their respective holders. I-Cube, Inc., does not assume any liability arising out of the applications or use of the product described herein; nor does it convey any license under its patents, copyright rights or any rights of others.

The information contained in this document is believed to be current and accurate as of the publication date. I-Cube reserves the right to make changes, at any time, in order to improve reliability, function, performance or design in order to supply the best product possible.

I-Cube assumes no obligation to correct any errors contained herein or to advise any user of this text of any correction if such be made.

This product is protected under the U.S. patents: 5202593, 5282271, 5426738, 5428750, 5428800, 5465056, 5530814, 5559971, 5625780, 5710550, 5717871, 5734334, 5781717, 5790048. Additional patents pending.

OCX481 Crosspoint Switch Advanced Mini Data Sheet—Rev 1.3, September 2001

Copyright © 1992-2001 I-Cube, Inc. All rights reserved. Unpublished—rights reserved under the copyright laws of the United States. Use of copyright notices is precautionary and does not imply publication or disclosure.

I-Cube®, Inc.

2605 S. Winchester Blvd. Campbell, CA 95008 USA

Phone: +(408) 341-1888 OCX481 Crosspoint Switch—Advanced Mini Data Sheet

Fax: +(408) 341-1899 Revision 1.3, September 2001 Email: marketing@icube.com Document#: OCX481 DS 1.3

Internet: http://www.icube.com