

L		

# **ICs for Communications**

Multichannel Network Interface Controller for HDLC/PPP with 256 Channels, 28 T1 or 21 E1 Framers, M13 Multiplexer and T3 Framer
MUNICH256FM

PEB 20256M E Version 1.1

PEF 20256M E Version 1.1

Preliminary Data Sheet 11.99

	PEB 20256M E PEF 20256M E		
Revision His	story:	Current Version: 11.99	
Previous Ver	Previous Version:		
Page (in previous Version)	Page (in current Version)	Subjects (major changes since last revision)	

For questions on technology, delivery and prices please contact the Infineon Technologies Offices in Germany or the Infineon Technologies Companies and Representatives worldwide: see our webpage at http://www.infineon.com

ABM®, AOP®, ARCOFI®, ARCOFI®-BA, ARCOFI®-SP, DigiTape®, EPIC®-1, EPIC®-S, ELIC®, FALC®54, FALC®56, FALC®-E1, FALC®-LH, IDEC®, IOM®, IOM®-1, IOM®-2, IPAT®-2, ISAC®-P, ISAC®-S, ISAC®-S TE, ISAC®-P TE, ITAC®, IWE®, MUSAC®-A, OCTAT®-P, QUAT®-S, SICAT®, SICOFI®, SICOFI®-2, SICOFI®-4, SICOFI®-4μC, SLICOFI® are registered trademarks of Infineon Technologies AG.

ACE™, ASM™, ASP™, POTSWIRE™, QuadFALC™, SCOUT™ are trademarks of Infineon Technologies AG.

#### Edition 11.99

Published by Infineon Technologies AG, SC, Balanstraße 73, 81541 München

© Infineon Technologies AG 1999. All Rights Reserved.

#### Attention please!

As far as patents or other rights of third parties are concerned, liability is only assumed for components, not for applications, processes and circuits implemented within components or assemblies.

The information describes the type of component and shall not be considered as assured characteristics.

Terms of delivery and rights to change design reserved.

Due to technical requirements components may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies Office.

Infineon Technologies AG is an approved CECC manufacturer.

#### **Packing**

Please use the recycling operators known to you. We can also help you – get in touch with your nearest sales office. By agreement we will take packing material back, if it is sorted. You must bear the costs of transport.

For packing material that is returned to us unsorted or which we are not obliged to accept, we shall have to invoice you for any costs incurred.

#### Components used in life-support devices or systems must be expressly authorized for such purpose!

Critical components<sup>1</sup> of the Infineon Technologies AG, may only be used in life-support devices or systems<sup>2</sup> with the express written approval of the Infineon Technologies AG.

- 1 A critical component is a component used in a life-support device or system whose failure can reasonably be expected to cause the failure of that life-support device or system, or to affect its safety or effectiveness of that device or system.
- 2 Life support devices or systems are intended (a) to be implanted in the human body, or (b) to support and/or maintain and sustain human life. If they fail, it is reasonable to assume that the health of the user may be endangered.



#### **Preface**

The Multichannel Network Interface Controller for HDLC is a Multichannel Protocol Controller for a wide area of telecommunication and and data communication applications.

### **Organization of this Document**

This Preliminary Data Sheet is divided into ten chapters. It is organized as follows:

- Chapter 1, MUNICH256FM Overview
   Gives a general description of the product, lists the key features, and presents some typical applications.
- Chapter 2, Pin Description
   Lists pin locations with associated signals, categorizes signals according to function, and describes signals.
- Chapter 3, General Overview
   This chapter provides short descriptions of all MUNICH256FM internal function blocks.
- Chapter 4, Functional Description
   Gives a detailed description about all functions supported by the MUNICH256FM.
- Chapter 5, Interface Description
   This chapter provides functional diagrams of all interfaces.
- Chapter 6, Channel Programming / Reprogramming Concept
   This chapter provides a detailed description of the channel programming concept.
- Chapter 7, Reset and Initialization procedure
   Gives examples for MUNICH256FM initialization procedure and operation.
- Chapter 8, Register Description
   Gives a detailed description about all MUNICH256FM on-chip registers.
- Chapter 9, Electrical Characteristics
   Gives a detailed description of all electrical DC and AC characteristics and provides timing diagrams and values for all interfaces.
- Chapter 10, Package Outline





1	MUNICH256FM Overview	15
1.1	General Features	_
1.1.1	M12 Multiplexer and DS2 Framer	16
1.1.2	M23 Multiplexer and DS3 Framer	16
1.1.3	Frame Alignment T1 Features	17
1.1.4	Signaling Controller T1 Features	17
1.1.5	Frame Alignment E1 Features	
1.1.6	Signaling Controller E1 Features	
1.1.7	Bit Error Rate Tester	
1.2	Logic Symbol	
1.3	General System Integration	20
2	Pin Description	21
2.1	PCI Bus Interface	
2.2	SPI Interface	
2.3	Local Microprocessor Interface	
2.4	Serial Interface	
2.5	Test Interface	
2.6	Power Supply, Reserved Pins and No-connect Pins	
_		
3	General Overview	
3.1	Functional Overview	
3.2	Block Diagram	
3.3	Internal Interface	
3.4	Block Description	43
4	Functional Description	47
4.1	Port Handler	
4.1.1	Local Port Loop	
4.1.2	Remote Line Loops	
4.1.3	Test Breakout	50
4.2	Time slot Handler	51
4.2.1	Channelized Modes	51
4.2.2	Unchannelized Mode	52
4.3	Data Management Unit	53
4.3.1	Descriptor Concept	53
4.3.2	Receive Descriptor	54
4.3.3	Data Management Unit Receive	58
4.3.4	Transmit Descriptor	60
4.3.5	Data Management Unit Transmit	63
4.3.6	Byte Swapping	
4.3.7	Transmission Bit/Byte Ordering	66
4.4	Buffer Management	67
4.4.1	Internal Receive Buffer	67



4.4.2	Internal Transmit Buffer	68
4.5	Protocol Description	71
4.5.1	HDLC Mode	71
4.5.2	Bit Synchronous PPP with HDLC Framing Structure	72
4.5.3	Octet Synchronous PPP	72
4.5.4	Transparent Mode	73
4.6	T1 Framer and FDL Function	74
4.6.1	4-Frame Multiframe	74
4.6.2	ESF Mode	75
4.6.2.1	Multiframe Synchronization Procedure of the Receiver	76
4.6.2.2	CRC-6 Generation / Check according to ITU-T G.706	76
4.6.2.3	Remote Alarm (Yellow Alarm) Generation / Detection	77
4.6.2.4	Facility Data Link	77
4.6.3	SF Mode	80
4.6.3.1	Synchronization Procedure of the Receiver	80
4.6.3.2	Remote Alarm (Yellow Alarm) Generation / Detection	81
4.6.4	Common Features for SF and ESF	
4.6.4.1	AIS (Blue Alarm) Generation/Detection	82
4.6.4.2	Loss of Signal (Red Alarm) Detection	
4.6.4.3	In-Band Loop Generation and Detection	83
4.6.4.4	Pulse Density Detection	83
4.6.4.5	Error Performance Monitoring	83
4.6.4.6	Pseudo-random Bit Sequence Generator and Monitor	84
4.7	E1 Framing and Signaling	85
4.7.1	Doubleframe Format	86
4.7.1.1	Synchronization Procedure of the Receiver	86
4.7.1.2	A-bit Access	87
4.7.1.3	Sa-bit Access	87
4.7.2	CRC-4 Multiframe	88
4.7.2.1	Synchronization Procedure of the Receiver	
4.7.2.2	CRC-4 Performance Monitoring	
4.7.2.3	A-Bit Access	90
4.7.2.4	Sa-bit Access	92
4.7.2.5	E-Bit Access	
4.7.3	Common Features for E1 Doubleframe and CRC-4 Multiframe .	
4.7.3.1	Error Performance Monitoring and Alarm Handling	
4.7.3.2	Loss of Signal Detection	
4.7.3.3	In-Band Loop Generation and Detection	
4.7.3.4	Pseudo-random Bit Sequence Generator and Monitor	
4.8	Signaling Controller Protocol Modes	
4.8.1	HDLC Mode	
4.8.2	Transparent Mode	
4.8.3	BOM Mode	99



4.8.4	Sa-bit Access	.100
4.8.5	Signalling Controller FIFO Operations	.101
4.9	M12 Multiplexer/Demultiplexer and DS2 framer	.105
4.9.1	M12 multiplex format	.105
4.9.1.1	Synchronization Procedure	.106
4.9.1.2	Multiplexer/Demultiplexer	.106
4.9.1.3	Loopback Control	.106
4.9.1.4	Alarm Indication Signal	.107
4.9.2	ITU-T G.747 format	.108
4.9.2.1	Synchronization Procedure	.108
4.9.2.2	Multiplexer/Demultiplexer	.108
4.9.2.3	Parity Bit	
4.9.2.4	Remote Alarm Indication	.109
4.9.2.5	Alarm Indication Signal	.109
4.10	M23 multiplexer and DS3 framer	.110
4.10.1	M23 multiplex format	.110
4.10.1.1	Synchronization Procedure	.111
4.10.1.2	Multiplexer/Demultiplexer	.111
4.10.1.3	X-bit	.111
4.10.1.4	Alarm Indication Signal, Idle Signal	.112
4.10.1.5	Loss of Signal	.112
4.10.1.6	Performance Monitor	.112
4.10.2	C-bit parity format	.113
4.10.2.1	Synchronization Procedure	.114
4.10.2.2	Multiplexer/Demultiplexer	
4.10.2.3	X-bit	.114
4.10.2.4	Far End Alarm and Control Channel	.115
4.10.2.5	Path Maintenance Data Link Channel	.115
4.10.2.6	Loopback Control	.115
4.10.2.7	Alarm Indication Signal, Idle Signal	.115
4.10.2.8	Loss of Signal	
4.10.2.9	Performance Monitor	.116
4.10.3	Full Payload Rate Format	.117
4.11	Test Unit	.118
4.12	Mailbox	.120
4.13	Interrupt Controller	.122
4.13.1	Layer Two interrupts	
4.13.1.1	General Interrupt Vector Structure	.124
4.13.1.2	System Interrupts	.126
4.13.1.3	Port Interrupts	.127
4.13.1.4	Channel Interrupts	.129
4.13.1.5	Command Interrupts	
4.13.2	Layer One Interrupts	.136



4.13.2.1	General Interrupt Vector Structure	.137
4.13.2.2	T1/E1 Framer Interrupts	138
4.13.2.3	Facility Data Link Interrupts	140
4.13.2.4	DS3, DS2 and Test Unit Interrupts	
4.13.2.5	Mailbox Interrupts	145
5	Interface Description	146
5.1	PCI Interface	146
5.1.1	PCI Read Transaction	
5.1.2	PCI Write Transaction	
5.2	SPI Interface (ROM Load Unit)	
5.2.1	Accesses to a SPI EEPROM	
5.2.2	SPI Read Sequence	
5.2.3	SPI Write Sequence	
5.3	Local Microprocessor Interface	
5.3.1	Intel Mode	
5.3.1.1	Slave Mode	
5.3.1.2	Master Mode	
5.3.2 5.3.2.1	Motorola Mode	
5.3.2.1 5.3.2.2		
5.3.2.2 5.4	Master Mode	
5. <del>4</del> 5.5	JTAG Interface	
6	Channel Programming / Reprogramming Concept	
6.1	Channel Commands	
6.2	Transmit Channel Commands	
6.3	Receive Channel Commands	165
7	Reset and Initialization procedure	
7.1	Chip Initialization	
7.2	Mode Initialization	169
8	Register Description	170
8.1	Register Overview	
8.1.1	PCI Configuration Register Set (Direct Access)	
8.1.2	PCI Slave Register Set (Direct Access)	
8.1.3	PCI and Local Bus Register Set (Direct Access)	
8.1.4	Transmit T1/E1 Framer Registers (Indirect Access)	
8.1.5	Receive T1/E1 Framer Registers (Indirect Access)	
8.1.6	Facility Data Link Registers (Indirect Access)	
8.2	Detailed Register Description	
8.2.1	PCI Configuration Register	
8.2.2	PCI Slave Register	
8.2.3	PCI and Local Bus Slave Register Set	246

11.99



8.2.3.1	M13 Transmit Registers	262
8.2.3.2	DS2 Control and Status Registers	
8.2.4	Test Unit Registers	
8.2.5	Transmit Framer Register	
8.2.6	Receive Framer Registers	335
8.2.7	Facility Data Link Registers	359
9	Electrical Characteristics	388
9.1	Important Electrical Requirements	388
9.2	Absolute Maximum Ratings	388
9.3	DC Characteristics	388
9.4	AC Characteristics	390
9.4.1	PCI Bus Interface Timing	391
9.4.2	SPI Interface Timing	393
9.4.3	Local Microprocessor Interface Timing	394
9.4.3.1	Intel Bus Interface Timing (Slave Mode)	394
9.4.3.2	Intel Bus Interface Timing (Master Mode)	
9.4.3.3	Motorola Bus Interface Timing (Slave Mode)	399
9.4.3.4	Motorola Bus Interface Timing (Master Mode)	401
9.4.4	Serial Interface Timing	
9.4.4.1	DS3 Serial Interface Timing	
9.4.4.2	Overhead Bit Timing	409
9.4.4.3	Stuff Bit Timing	411
9.4.4.4	T1/E1 Tributary Timing	
9.4.4.5	Test Port Timing	414
9.4.5	JTAG Interface Timing	
9.4.6	Reset Timing	418
10	Package Outline	419





Figure 1-1	MUNICH256FM Logic Symbol	
Figure 1-2	System Integration of the MUNICH256FM	.20
Figure 3-1	MUNICH256FM Block Diagram	42
Figure 4-1	Port configuration in M13 mode	
Figure 4-2	Local Port Loops in M13 mode	48
Figure 4-3	Remote Line Loops	.49
Figure 4-4	Test Breakout	.50
Figure 4-5	Time slot Assignment in Channelized Modes	52
Figure 4-6	Descriptor Structure	
Figure 4-7	Receive Buffer Thresholds	.68
Figure 4-8	Transmit Buffer Thresholds	
Figure 4-9	HDLC Frame Format	
Figure 4-10	Bit Synchronous PPP with HDLC Framing Structure	
Figure 4-11	CRC-4 Multiframe Alignment Recovery Algorithms	
Figure 4-12	Interrupt Driven Reception Sequence Example	
Figure 4-13	Interrupt Driven Transmit Sequence Example	.104
Figure 4-14	Test Unit Access Points	
Figure 4-15	Pattern Generator	119
Figure 4-16	Mailbox Structure	
Figure 4-17	Layer Two Interrupts (Channel, command, port and system interrupts	8
Figure 4-18	Interrupt Queue Structure in System Memory	
Figure 4-19	Framer, M13 and Facility Data Link and Mailbox Interrupt Notification	
Figure 5-1	PCI Read Transaction	
Figure 5-2	PCI Write Transaction	148
Figure 5-3	SPI Read Sequence	150
Figure 5-4	SPI Write Sequence	
Figure 5-5	Intel Bus Mode	
Figure 5-6	Intel Bus Arbitration	
Figure 5-7	Motorola Bus Mode	
Figure 5-8	Motorola Bus Arbitration	
Figure 5-9	Receive Overhead Access	
Figure 5-10	Transmit Overhead Access	
Figure 5-11	Block Diagram of Test Access Port and Boundary Scan Unit	
Figure 9-1	Input/Output Waveform for AC Tests	
Figure 9-2	PCI Clock Cycle Timing	
Figure 9-3	PCI Input Timing Measurement Conditions	
Figure 9-4	PCI Output Timing Measurement Conditions	.392
Figure 9-5	SPI Interface Timing	
Figure 9-6	Intel Read Cycle Timing (Slave Mode)	
Figure 9-7	Intel Write Cycle Timing (Slave Mode)	.394
Figure 9-8	Intel Read Cycle Timing (Master Mode, LRDY controlled)	.396
Figure 9-9	Intel Write Cycle Timing (Master Mode, LRDY controlled)	.396



Figure 9-10	Intel Read Cycle Timing (Master Mode, Wait state controlled) 3	397
Figure 9-11	Intel Write Cycle Timing (Master Mode, Wait state controlled) 3	397
Figure 9-12	Intel Bus Arbitration Timing	398
Figure 9-13	Motorola Read Cycle Timing (Slave Mode)	399
Figure 9-14	Motorola Write Cycle Timing (Slave Mode)	
Figure 9-15	Motorola Read Cycle Timing (Master Mode, LDTACK controlled) 4	101
Figure 9-16	Motorola Write Cycle Timing (Master Mode, LDTACK controlled) 4	
Figure 9-17	Motorola Read Cycle Timing (Master Mode, Wait state controlled) 4	102
Figure 9-18	Motorola Write Cycle Timing (Master Mode, Wait state controlled) 4	102
Figure 9-19	Motorola Bus Arbitration Timing4	103
Figure 9-20	Clock Input Timing	105
Figure 9-21	DS3 Transmit Cycle Timing	106
Figure 9-22	DS3 Transmit Data Timing4	106
Figure 9-23	DS3 Receive Cycle Timing	107
Figure 9-24	DS3 Status Signal Timing	108
Figure 9-25	DS3 Transmit Overhead Timing4	109
Figure 9-26	DS3 Transmit Overhead Synchronization Timing	109
Figure 9-27	DS3 Receive Overhead Timing	110
Figure 9-28	DS3 Transmit Stuff Bit Timing	111
Figure 9-29	DS3 Receive Stuff Bit Timing4	111
Figure 9-30	T1/E1 Tributary Clock Input Timing	112
Figure 9-31	T1/E1 Tributary Synchronization Timing	113
Figure 9-32	T1/E1 Test Transmit Clock Timing	114
Figure 9-33	T1/E1 Test Transmit Data Timing	115
Figure 9-34	T1/E1 Test Receive Clock Timing	115
Figure 9-35	T1/E1 Test Receive Data Timing4	116
Figure 9-36	JTAG Interface Timing4	117
Figure 9-37	Reset Timing	118



Table 4-1	Receive Descriptor Structure	
Table 4-2	Transmit Descriptor Structure	
Table 4-3	Example for little/big Endian with BNO = 3	. 66
Table 4-4	Example for little big Endian with BNO = 7	. 66
Table 4-5	4-Frame Multiframe Structure	. 74
Table 4-6	ESF Multiframe Structure	. 75
Table 4-7	SF Multiframe Structure	. 80
Table 4-8	Allocation of Bits 1 to 8 of Time slot 0	. 86
Table 4-9	CRC-4 Multiframe Structure	. 88
Table 4-10	Summary of Alarm Detection and Alarm Release	. 94
Table 4-11	M12 multiplex format	105
Table 4-12	ITU-T G.747 format	108
Table 4-13	M23 multiplex format	110
Table 4-14	C-bit parity format	113
Table 4-15	Interrupt Vector Structure	
Table 5-1	Correspondence between PCI memory space and chip select	151
Table 5-2	C/BE to LA/LBHE mapping in Intel bus mode (8 bit port mode)	154
Table 5-3	C/BE to LA/LBHE mapping in Intel bus mode (16 bit port mode)	154
Table 5-4	C/BE to LA/LSIZE0 mapping in Motorola bus mode (8 bit port mode	) 157
Table 5-5	C/BE to LA/LSIZE0 mapping in Motorola bus mode (16 bit port mod	e)
Table 6-1	Channel Specification Registers and Channel Commands	
Table 8-1	PCI Configuration Register Set	
Table 8-2	PCI Slave Register Set	
Table 8-3	PCI and Local Bus Slave Register Set	
Table 8-4	Transmit T1/E1 Framer Registers	
Table 8-5	Receive T1/E1 Framer Registers	
Table 8-6	Facility Data Link Registers	
Table 8-7	Threshold Codings	
Table 8-8	Signalling Controller Transmit Commands	
Table 9-1	Absolute Maximum Ratings	
Table 9-2	DC Characteristics	
Table 9-3	DC Characteristics (Non-PCI Interface Pins)	
Table 9-4	DC Characteristics (PCI Interface Pins)	
Table 9-5	PCI Clock Characteristics	
Table 9-6	PCI Interface Signal Characteristics	
Table 9-7	SPI Interface Timing	
Table 9-8	Intel Bus Interface Timing	
Table 9-9	Intel Bus Interface Timing (Master Mode)	
Table 9-10	Motorola Bus Interface Timing	
Table 9-11	Motorola Bus Interface Timing (Master Mode)	
Table 9-12	Clock Input Timing	
Table 9-13	DS3 Transmit Cycle Timing	406

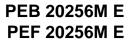




Table 9-14	DS3 Receive Cycle Timing	407
Table 9-15	DS3 Status Signal Timing	408
Table 9-16	DS3 Transmit Overhead Timing	409
Table 9-17	DS3 Receive Overhead Timing	410
Table 9-18	DS3 Transmit Stuff Timing	411
Table 9-19	DS3 Receive Stuff Bit Timing	411
Table 9-20	T1/E1 Tributary Clock Input Timing	412
Table 9-21	T1/E1 Tributary Synchronization Timing	413
Table 9-22	T1/E1 Test Transmit Clock Timing	414
Table 9-23	T1/E1 Test Transmit Data Timing	415
Table 9-24	T1/E1 Test Receive Clock Timing	415
Table 9-25	Test T1/E1 Receive Data Timing	416
Table 9-26	JTAG Interface Timing	417
Table 9-27	Reset Timing	418




# Multichannel Network Interface Controller for HDLC/PPP PEB 20256M E MUNICH256FM

Version 1.1 CMOS

## 1 MUNICH256FM Overview

The MUNICH256FM is a highly integrated protocol controller that implements HDLC, PPP and transparent (TMA) protocol processing for 256 channels as well as frame alignment for up to 28 T1 signals or 21 E1 signals. An integrated M13 multiplexer together with a DS3 framer concentrates the data links for direct connection to a DS3 line interface unit. Optionally the device supports unchannelized DS3 applications. An

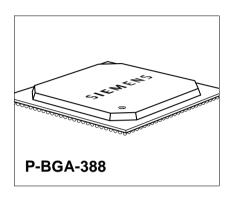

internal bit error rate tester can be attached to different test points and provides flexible PRBS and fixed pattern tests. An on-chip data management unit is optimized to transfer data packets via a PCI interface by minimizing the bus load.

Note: The MUNICH256FM does not contain DS3 Line Interface Units.

#### 1.1 General Features

- Protocol processing on a channelized or unchannelized DS3 link for frame relay or router applications
- Direct connection to DS3 line interface unit or DS3 to STS-1 mapper
- Support of 256 bidirectional channels, which can be assigned arbitrarily to a maximum of 28 links, for HDLC, PPP or transparent mode (TMA) processing
- Concatenation of any, not necessarily consecutive, time slots to logical channels on each physical link. Supports DS0, fractional T1/E1 or T1/E1 channels
- Provides 32kB data buffer in transmit direction and 12kB data buffer in receive direction
- Integrates 28T1/21E1 framers (frame alignment function) and 28T1/21E1 signalling controllers
- Integrates a DS2/DS3 multiplexer and framer
- Remote loopbacks selectable for either DS3 signal, DS2 signal or T1/E1 signal/ payload

Туре	Package
PEB 20256M E	P-BGA-388



- System interface is a PCI 32 bit, 66 MHz Rev. 2.1 compliant bus interface, which supports configuration of subsystem ID / subsystem vendor ID via a serial EEPROM interface. PCI bus interface can be operated in the range of 33 MHz to 66 MHz
- Integrates a local microprocessor master and slave interface (demultiplexed 16 bit address and data bus in Intel mode or Motorola mode) which allows access to the local bus via the PCI bus or which can communicate with a PCI host processor through an on-chip mailbox
- For debugging purposes optional access to the framer and signalling controller functions via the PCI interface
- JTAG boundary scan according to IEEE1149.1 (5 pins).
- 0.25 µm, 2.5V core technology
- I/Os are 3.3V tolerant and have 3.3V driving capability
- Package P-BGA 388 (35mm x 35mm; pitch 1.27mm)
- Full scan path and BIST of on-chip RAMs for production test
- Performance: 45Mbit/s (DS3) throughput per direction
- Estimated power consumption: 2W
- Also available as device with extended temperature range -40..+85°C

## 1.1.1 M12 Multiplexer and DS2 Framer

- Multiplexing/Demultiplexing of four asynchronous DS1 bit streams into/from M13 asynchronous format
- Multiplexing/Demultiplexing of 3 E1 signals into/from ITU G.747 compliant DS2 signal.
- DS2 line loopback detection/generation
- Framing according to ANSI T1.107, T1.107a or ITU-T G.747
- Insertion and extraction of X-bit
- Insertion and Extraction of alarms (remote alarm, AIS)
- Detection of AIS in presence of BER 10<sup>-3</sup>
- Alarm and performance monitoring (framing bit errors, parity errors)
- Reframe time below 7ms (TR-TSY-000009) for DS2 format and below 1 ms for ITU G.747 format
- Bit Stuffing/Destuffing in M12 multiplex format or C-bit parity format

## 1.1.2 M23 Multiplexer and DS3 Framer

- Multiplexing/demultiplexing of seven DS2 into/from M13 asynchronous format according to ANSI T1.107, ANSI T1.107a
- Multiplexing/demultiplexing of seven DS2 into/from C-bit parity format according to ANSI T1.107, ITU-T G.704
- DS3 framing according to ANSI T1.107, T1.107a, ITU-T G.704
- Support of unipolar and B3ZS encoded signals
- Provides access to the DS3 overhead bits and the DS3 stuffing bits via a serial clock and data interface (overhead interface)



- Insertion and Extraction of alarms according to ANSI T1.404 (remote alarm, AIS, far end receive failure)
- Supports HDLC (Path Maintenance Data Link) and bit oriented message mode (Far End Alarm and Control Channel) in C-bit parity mode. An integrated signalling controller provides 2x32 byte deep FIFO's for each direction of both channels
- Detection of AIS and idle signal in presence of BER 10<sup>-3</sup>
- Detection of excessive zeroes and LOS
- Alarm and performance monitoring with 16-bit counters for line code violations, excessive zeroes, parity error (P-bit), framing errors (F-bit errors with or without M-bit errors, far end block error (FEBE-bit) and CP-bit errors.
- Automatic insertion of severely errored frame and AIS defect indication

## 1.1.3 Frame Alignment T1 Features

- Frame alignment/synthesis for 1544 kbit/s according to ITU-T G.704
- Supports T1 frame alignment for F4, SF (F12) and ESF (F24) mode
- Error checking via CRC-6 procedures according to ITU-T G.706
- Performance monitor: 16 bit counter for CRC, framing errors, loss of frame alignment, loss of signal AIS
- Insertion and extraction of alarms (AIS, Remote (Yellow) Alarm)
- Detection of LOS (Red Alarm)
- Pseudo-random bit sequence generator and monitor for one logical channel according to ITU-T 0.151
- Programmable in-band loop code detection/generation according to TR 62411

## 1.1.4 Signaling Controller T1 Features

- FDL-channel protocol for ESF format according to ANSI T1.403 specification or according to AT&T TR54016
- Supports HDLC mode with address recognition
- Supports BOM mode
- FIFO Buffers (64 bytes deep) for efficient transfer of data packets

# 1.1.5 Frame Alignment E1 Features

- Frame alignment/synthesis for 2048 kbit/s according to ITU-T G.704
- Programmable formats: Doubleframe, CRC-4 Multiframe Selectable conditions for recover / loss of frame alignment
- CRC-4 to Non-CRC-4 Interworking of ITU-T G.706 Annex B
- Error checking via CRC-4 procedures according to ITU-T G.706
- Performance monitor: 16 bit counter for CRC-, framing errors, error monitoring via Ebit and S<sub>a6</sub> bit
- Insertion and extraction of alarms (AIS, Remote (Yellow) Alarm, ...)
- Pseudo-random bit sequence (PRBS) generator and monitor for one logical channel



Programmable in-band loop code detection / generation according to TR 62411

## 1.1.6 Signaling Controller E1 Features

- HDLC controller with address recognition and programmable preamble
- Time slot 0 S<sub>a8-4</sub> HDLC handling via FIFOs
- HDLC access to any S<sub>a</sub>-bit combination
- FIFO Buffers (64 byte deep) for efficient transfer of data packets

#### 1.1.7 Bit Error Rate Tester

- User specified PRBS/Fixed Pattern with programmable length of 1 to 32 bits
- · Optional Bit Inversion
- Two error insertion modes: Single or programmable bit rates
- · Optional zero suppression
- · 32-bit counters for errors and received bits
- · Programmable bit intervals for receive measurements



## 1.2 Logic Symbol

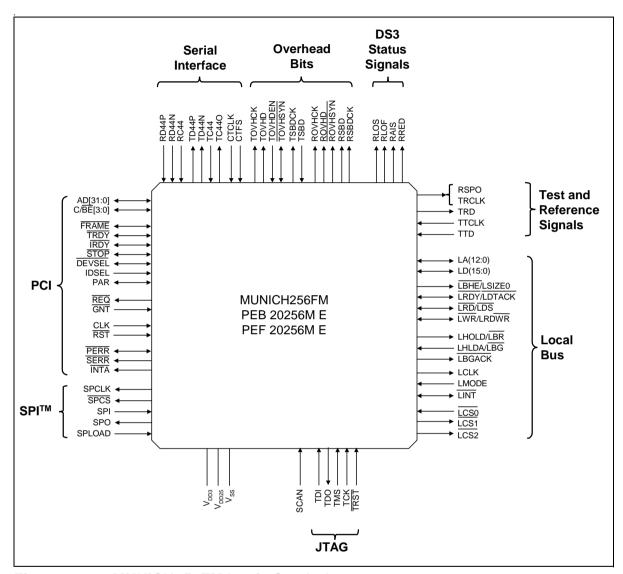


Figure 1-1 MUNICH256FM Logic Symbol



### 1.3 General System Integration

The MUNICH256FM provides the HDLC/PPP protocol handling, T1/E1 framing and signalling functions, an integrated M13 multiplexer and a DS3 framer. The line interface of the MUNICH256FM directly connects to a DS3 line interface unit. Protocol data is transferred to the packet RAM via the PCI bus and handled (e.g. for layer3 protocol handling) by the line card processor. An external processor provides control of the integrated T1/E1 framer, M13 multiplexer, DS3 framer and the signalling channels. A mailbox allows the transfer of information between both CPUs.

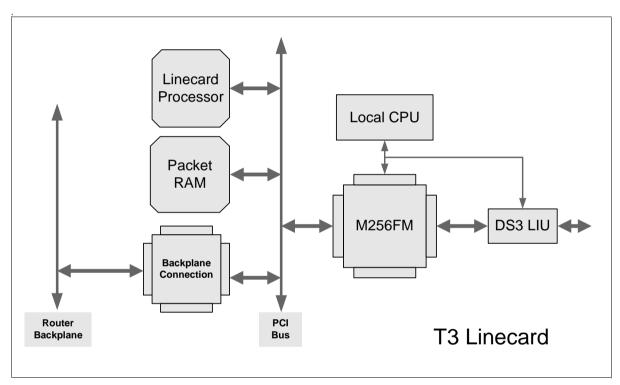


Figure 1-2 System Integration of the MUNICH256FM



# 2 Pin Description

### **Signal Type Definitions:**

The following signal type definitions are partly taken from the PCI Specification Rev. 2. 1:

I Input is a standard input- only signal.

O Totem Pole Output is a standard active driver.

t/s, I/O Tri-State or I/O is a bidirectional, tri-state input/output pin.

s/t/s Sustained Tri-State is an active low tri-state signal owned and driven by

one and only agent at a time. The agent that drives an s/t/s pin low must drive it high for at least one clock before letting it float. A new agent cannot start driving a s/t/s signal any sooner than one clock after the previous owner tri-states it. A pullup is required to sustain the inactive

state until another agent drives it, and must be provided by the central

resource.

**Open Drain** allows multiple devices to share a line as a wire-OR. A pull-

up is required to sustain the inactive state until another agent drives it,

and must be provided by the central resource.

## **Signal Name Conventions:**

NCn No-connect Pin n

Such pins are not bonded with the silicon. Although any potential at these pins will not impact the device it is recommended to leave them unconnected. No-connect pins might be used for additional functionality in later versions of the device. Leaving them unconnected will guarantee

hardware compatibility to later device versions.

**Reserved** Reserved pins are for vendor specific use only and should be connected

as recommended to guarantee normal operation.

Note: The signal type definition specifies the functional usage of a pin. This does not reflect necessarily the implementation of a pin, e.g. a pin defined of signal type 'Input' may be implemented with a bidirectional pad.



# 2.1 PCI Bus Interface

Pin No.	Symbol	Input (I) Output (O)	Function
T3, T4, U1, U3, V2, W1, W2, V4, AA2, W4, AC1, AB2, Y3, Y4, AD1, AC2, AC8, AE6, AD8, AF6, AC9, AE8, AF7, AD10, AC11, AF8, AF10, AD11, AC12, AE11, AD12, AF11	AD(31:0)	t/s	Address/Data Bus A bus transaction consists of an address phase followed by one or more data phases. When the MUNICH256FM is the bus master, AD(31:0) are outputs in the address phase of a transaction. During the data phases, AD(31:0) remain outputs for write transactions, and become inputs for read transactions. When the MUNICH256FM is bus slave, AD(31:0) are inputs in the address phase of a transaction. During the data phases, AD(31:0) remain inputs for write transactions, and become outputs for read transactions. AD(31:0) are tri-state when the MUNICH256FM is not involved in the current transaction. AD(31:0) are updated and sampled on the rising edge of CLK.



Pin No.	Symbol	Input (I) Output (O)	Function
V3, AA4, AD7, AE9	C/BE(3:0)	t/s	Command/Byte Enable  During the address phase of a transaction, C/BE(3:0) define the bus command. During the data phase, C/BE(3:0) are used as byte enable lines. The byte enable lines are valid for the entire data phase and determine which byte lanes carry meaningful data. C/BE(0) applies to byte 0 (LSB) and C/BE(3) applies to byte 3 (MSB).  When the MUNICH256FM is bus master, C/BE(3:0) are outputs.  When the MUNICH256FM is bus slave, C/BE(3:0) are inputs.  C/BE(3:0) are tri-stated when the MUNICH256FM is not involved in the current transaction.  C/BE(3:0) are updated and sampled on the rising edge of CLK.
AF4	PAR	t/s	Parity  PAR is even parity across AD(31:0) and C/BE(3:0). PAR is stable and valid one clock after the address phase. PAR has the same timing as AD(31:0) but delayed by one clock.  When the MUNICH256FM is Master, PAR is output during address phase and write data phases and input during read data phase. When the MUNICH256FM is Slave, PAR is output during read data phase and input during write data phase. PAR is tri-stated when the MUNICH256FM is not involved in the current transaction.  Parity errors detected by the MUNICH256FM are indicated on PERR output.  PAR is updated and sampled on the rising edge of CLK.



Pin No.	Symbol	Input (I) Output (O)	Function
AB3	FRAME	s/t/s	Frame FRAME indicates the beginning and end of an access. FRAME is asserted to indicate a bus transaction is beginning. While FRAME is asserted, data transfers continue. When FRAME is deasserted, the transaction is in the final phase. When the MUNICH256FM is bus master, FRAME is an output. When the MUNICH256FM is bus slave, FRAME is an input. FRAME is tri-stated when the MUNICH256FM is not involved in the current transaction. FRAME is updated and sampled on the rising edge of CLK.
AC6	IRDY	s/t/s	Initiator Ready IRDY indicates the bus master's ability to complete the current data phase of the transaction. It is used in conjunction with TRDY. A data phase is completed on any clock where both IRDY and TRDY are sampled asserted. During a write, IRDY indicates that valid data is present on AD(31:0). During a read, it indicates the master is prepared to accept data. Wait cycles are inserted until both IRDY and TRDY are asserted together.  When the MUNICH256FM is bus master, IRDY is an output. When the MUNICH256FM is bus slave, IRDY is an input. IRDY is tri-stated, when the MUNICH256FM is not involved in the current transaction.  IRDY is updated and sampled on the rising edge of CLK.



Pin No.	Symbol	Input (I) Output (O)	Function
AD5	TRDY	s/t/s	Target Ready TRDY indicates a slave's ability to complete the current data phase of the transaction. During a read, TRDY indicates that valid data is present on AD(31:0). During a write, it indicates the target is prepared to accept data.  When the MUNICH256FM is Master, TRDY is an input. When the MUNICH256FM is Slave, TRDY is an output. TRDY is tri-stated, when the MUNICH256FM is not involved in the current transaction.  TRDY is updated and sampled on the rising edge of CLK.
AF3	STOP	s/t/s	Stop STOP is used by a slave to request the current master to stop the current bus transaction.  When the MUNICH256FM is bus master, STOP is an input. When the MUNICH256FM is bus slave, STOP is an output. STOP is tri-stated, when the MUNICH256FM is not involved in the current transaction.  STOP is updated and sampled on the rising edge of CLK.
AA1	IDSEL	I	Initialization Device Select When the MUNICH256FM is slave in a transaction, where IDSEL is active in the address phase and C/BE(3:0) indicates an configuration read or write, the MUNICH256FM assumes a read or write to a configuration register. In response, the MUNICH256FM asserts DEVSEL during the subsequent CLK cycle.  IDSEL is sampled on the rising edge of CLK.



Pin No.	Symbol	Input (I) Output (O)	Function
AE4	DEVSEL	s/t/s	Device Select When activated by a slave, it indicates to the current bus master that the slave has decoded its address as the target of the current transaction. If no bus slave activates DEVSEL within six bus CLK cycles, the master should abort the transaction.  When the MUNICH256FM is bus master, DEVSEL is input. If DEVSEL is not activated within six clock cycles after an address is output on AD(31:0), the MUNICH256FM aborts the transaction.  When the MUNICH256FM is bus slave, DEVSEL is output. DEVSEL is tri-stated, when the MUNICH256FM is not involved in the current transaction.
AC7	PERR	s/t/s	Parity Error When activated, indicates a parity error over the AD(31:0) and C/BE(3:0) signals (compared to the PAR input). It has a delay of two CLK cycles with respect to AD and C/BE(3:0) (i.e., it is valid for the cycle immediately following the corresponding PAR cycle).  PERR is asserted relative to the rising edge of CLK.
AE5	SERR	o/d	System Error The MUNICH256FM asserts this signal to indicate an address parity error and report a fatal system error.  SERR is an open drain output activated on the rising edge of CLK.
T2	REQ	t/s	Request Used by the MUNICH256FM to request control of the PCI bus. It is tri-state during reset.  REQ is activated on the rising edge of CLK.



Pin No.	Symbol	Input (I) Output (O)	Function
T1	GNT	I	Grant This signal is asserted by the arbiter to grant control of the PCI to the MUNICH256FM in response to a bus request via REQ. After GNT is asserted, the MUNICH256FM will begin a bus transaction only after the current bus Master has deasserted the FRAME signal.  GNT is sampled on the rising edge of CLK.
R4	CLK	I	Clock Provides timing for all PCI transactions. Most PCI signals are sampled or output relative to the rising edge of CLK. The PCI clock is used as internal system clock. The maximum CLK frequency is 66 MHz.
R3	RST	I	Reset An active RST signal brings all PCI registers, sequencers and signals into a consistent state. All PCI output signals are driven to high impedance.
AC13	INTA	o/d	Interrupt Request When an interrupt status is active and unmasked, the MUNICH256FM activates this open-drain output.



# 2.2 SPI Interface

Pin No.	Symbol	Input (I) Output (O)	Function
P2	SPI	I	SPI Serial Input SPI is a data input pin, where data coming from an external EEPROM is shifted in. SPI is sampled on the rising edge of SPCLK. A pull-up resistor is recommended if the SPI interface is not used.
P1	SPO	O	SPI Serial Output SPO is a push/pull serial data output pin. Opcodes, byte addresses and data is updated on the falling edge of SPCLK. It is tri-state during reset.
N4	SPCLK	O	SPI Clock Signal SPCLK controls the serial bus timing of the SPI bus. SPCLK is derived from the PCI bus clock with a frequency of 1/78 of the PCI bus clock. It is tri-state during reset.
N3	SPCS	0	SPI Chip Select SPCS is used to select an external EEPROM. It is tri-state during reset.
P4	SPLOAD	I	Enable SPI Load Functionality Connecting SPLOAD to $V_{\rm DD3}$ enables the SPI bus after reset. In this case parts of the PCI configuration space can be configured via an external EEPROM.



# 2.3 Local Microprocessor Interface

Pin No.	Symbol	Input (I) Output (O)	Function
W24	LMODE	I	<b>Local Bus Mode</b> By connecting this pin to either $V_{\rm SS}$ or $V_{\rm DD3}$ the bus interface can be adapted to either Intel or Motorola environment.  LMODE = $V_{\rm SS}$ selects Intel bus mode.  LMODE = $V_{\rm DD3}$ selects Motorola bus mode.
Y24	LCLK	0	Local Clock Reference output clock derived from the PCI clock.
AE13, AF13, AF14, AE14, AF16, AC14, AD15, AE16, AF17, AC15, AD16, AF19, AE18	LA(12:0)	I/O	Address bus These input address lines select one of the internal registers for read or write access.  Note: Only LA(7:0) are evaluated during read/write accesses to the MUNICH256FM.  In local bus master mode the address lines are output. If local bus master functionality is disabled these pins are input only.
AC16, AD17, AF20, AE19, AF21, AC18, AD19, AE21, AD20, AC19, AF23, AE24, AF25, AE26, AD25, AB23	LD(15:0)	I/O	Data Bus Bidirectional tri-state data lines.
Y23	LCS0	I	Chip Select This active low signal selects the MUNICH256FM as bus slave for read/write operations.



Pin No.	Symbol	Input (I) Output (O)	Function
AC24	or LDS	I/O I/O	Read (Intel Bus Mode) This active low signal selects a read transaction.  Data strobe (Motorola Bus Mode) This active low signal indicates that valid data has to be placed on the data bus (read cycle) or that valid data has been placed on the data bus (write cycle).
AB24	or LRDWR	I/O I/O	Write Enable (Intel Bus Mode) This active low signal selects a write cycle. Read Write Signal (Motorola Bus Mode) This input signal distinguishes write from read operations.
AA23	or DTACK	I/O	Ready (Intel bus mode) This signal indicates that the current bus cycle is complete. The MUNICH256FM asserts LRDY during a read cycle if valid output data has been placed on the data bus. In write direction LRDY will be asserted when input data has been latched. In local bus master mode MUNICH256FM evaluates LRDY to finish a transaction.  Data Transfer Acknowledge (Motorola bus mode)
			This active low input indicates that a data transfer may be performed. During a read cycle data becomes valid at the falling edge of DTACK. The data is latched internally and the bus cycle is terminated. During a write cycle the falling edge of DTACK marks the latching of data and the bus cycle is terminated.



Pin No.	Symbol	Input (I) Output (O)	Function
AC26	LINT	I/od	Interrupt Request This line indicates general interrupt requests of the layer one functions or the mailbox. The interrupt sources can be masked via registers. In local bus master mode the MUNICH256FM can monitor external interrupts indicated via LINT.
AC25, W23	LCS2, LCS1	0	Chip Select 2, 1 These signals select external peripherals when MUNICH256FM is the local bus master. As long as the local bus master functionality is disabled these outputs are set to tri-state.
AD13	or LSIZE0	0	Byte High Enable (Intel Bus Mode) In local bus master mode this signal indicates a data transfer on the upper byte of the data bus LD(15:8). This signal has no function in slave mode. When local bus master functionality is disabled this output is tri-state. Byte Access (Motorola Bus Mode) In local bus master mode this signal indicates byte transfers. This signal has no function when the MUNICH256FM is local bus slave. When local bus master functionality is disabled this output is tri-state.
AA25	or  LBR	0	Bus Request (Intel Bus Mode) This pin indicates a requests to become local bus master. When local bus master functionality is disabled this output is tri-state. Bus Request (Motorola Bus Mode) LBR indicates a request to become local bus master. When local bus master functionality is disabled this output is set to tri-state.



Pin No.	Symbol	Input (I) Output (O)	Function
AB25	LHLDA	I	Hold (Intel Bus Mode) LHLDA indicates that the external processor has released control of the
	or		local bus.
	LBG	I	Bus Grant (Motorola Bus Mode) LBG indicates that the MUNICH256FM may access the local bus.
V23	LBGACK	0	Bus Grant Acknowledge (Motorola Bus Mode)  LBGACK is driven low when the MUNICH256FM has become bus master. When local bus master functionality is disabled this output is tri-state.



## 2.4 Serial Interface

Pin No.	Symbol	Input (I) Output (O)	Function
D12	CTCLK	I	Common Transmit Clock CTCLK is the external transmit clock for the T1 or E1 tributaries configured in external timing mode.
A11	CTFS	I	
C15	or TRCLK	0	Regenerated Sync Pulse RSPO supports debugging of the on-chip T1/E1 framing function. If the T1/E1 framer achieved synchronization, the internal synchronization pulse of one selected T1/E1 framer can be monitored on RSPO. Test Receive Clock In serial test mode the receive clock of one selected T1/E1 interface is directly
M24	TRD	0	feeded to this output.  Test Receive Data In serial test mode the incoming data stream of one T1/E1 tributary is directly feeded to this output. Test receive data is updated on the falling edge of the TRCLK.
N26	TTCLK	I	Test Transmit Clock In serial test mode this clock provides the clock reference for the tributary provided via TTD.
C12	TTD	I	Test Transmit Data In serial test mode the data stream provided via TTD replaces the E1/T1 data stream of the selected tributary. TTD is sampled on the rising edge of the TTCLK.



Pin No.	Symbol	Input (I) Output (O)	Function
C14	TC44	I	DS3 Transmit Clock Input This clock provides a reference clock for the DS3 interface. The frequency of this clock is nominally 44.736 MHz.
D14	TC44O	0	DS3 Transmit Clock Output This output is a buffered version of the selected transmit clock which can be set to RC44 or TC44.
B16	TD44	0	DS3 Transmit Data This unipolar serial data output represents the DS3 signal. TD44 is updated on the falling or rising edge of TC44.
	TD44P	O	DS3 Transmit Positive Pulse In dual-rail mode this pin represents the positive pulse of the B3ZS encoded DS3 signal. TD44P is updated on the falling edge or rising edge of TC44O.
C16	TD44N	0	DS3 Transmit Negative Pulse In dual-rail mode this pin represents the negative pulse of the B3ZS encoded DS3 signal. TD44N is updated on the falling or rising edge of TC44O.
B14	RC44	I	DS3 Receive Clock Input The frequency of this clock is nominally 44.736 MHz.
D13	or RD44P	I	DS3 Receive Data This unipolar serial data input represents the DS3 signal. RD44 is sampled on the falling or rising edge of RC44. DS3 Receive Positive Pulse In dual-rail mode this pin represents the positive pulse of the B3ZS encoded DS3 signal. RD44P is sampled on the falling or rising edge of RC44.



Pin No.	Symbol	Input (I) Output (O)	Function
A14	RD44N	I	DS3 Receive Negative Pulse In dual-rail mode this pin represents the negative pulse of the B3ZS encoded DS3 signal. RD44 is sampled on the falling or rising edge of RC44.
A21	RRED	0	Received RED This signal is asserted whenever the DS3 receive framer is in RED alarm state.
B21	RLOS	0	Received LOS This signal is asserted whenever the received DS3 bit stream contained at least 175 consecutive '0's.
D19	RLOF	0	Receive LOF This signal is asserted whenever the DS3 receive framer is in 'Loss of frame' state.
C19	RAIS	0	Received AIS This signal is asserted whenever the DS3 receive framer is in AIS state.
B8	TOVHCK	0	Transmit Overhead Bit Clock This signal provides the bit clock for the DS3 overhead bits of the outgoing DS3 frame. TOVHCK is nominally a 526 kHz clock.
C8	TOVHD	I	Transmit Overhead Data The overhead bits of the outgoing DS3 frame can be provided via TOVHD. Transmit overhead data is sampled on the rising edge of TOVHCK and those bits which are enabled by TOVHEN are inserted in the overhead bit positions of the DS3 frame.
D8	TOVHEN	I	Enable Transmit Overhead Data The asserted TOVHEN signal marks the bits to be inserted in the DS3 frame. TOVHEN is sampled together with TOVHD on the rising edge of TOVHD.



Pin No.	Symbol	Input (I) Output (O)	Function
A8	TOVHSYN	I/O	Transmit Overhead Synchronization TOVHSYN provides the means to align TOVHD to the first M-frame of the DS3 signal. If operated in output mode TOVHSYN it is asserted when the X-bit of the 1 <sup>st</sup> subframe of the DS3 overhead bits has to be inserted via TOVHD. TOVHSYN is updated on the rising edge of TOVHCK. If operated in input mode TOVHSYN must be asserted together with the X-bit of the 1 <sup>st</sup> subframe of the DS3 signal which is input on TOVHD. TOVHSYN is sampled on the rising edge of TOVHCK.
D9	TSBCK	0	Transmit Stuff Bit Clock This signal provides the bit clock for DS3 stuff bit data. Transmit stuff bit data is sampled on the rising edge of TSBCK.
A7	TSBD	I	Transmit Stuff Bit Data  Data provided via TSBD is optionally inserted in the stuffed bit positions of the DS3 signal. TSBD is sampled on the rising edge of TSBD. This function is available in M13 asynchronous format only.
B9	ROVHCK	0	Receive Overhead Bit Clock This signal provides the bit clock for the received DS3 overhead bits. ROVHCK is nominally a 526 kHz clock.
C9	ROVHD	0	Receive Overhead Data ROVHD contains the extracted overhead bits of the DS3 frame. It is updated on the rising edge of ROVHCK.
C10	ROVHSYN	0	Receive Overhead Synchronization ROVHSYN is asserted while the X-bit of the 1 <sup>st</sup> subframe of the DS3 overhead bits is provided via ROVHD. It is sampled on the rising edge of ROVHCK.



Pin No.	Symbol	Input (I) Output (O)	Function
D11	RSBCK	0	Receive Stuff Bit Clock This signal provides the bit clock for DS3 stuff bit data. Transmit stuff bit data is sampled on the rising edge of TSBCK.
A10	RSBD	O	Receive Stuff Bit Data ROVHD provides data which was inserted in the stuffed bit positions of the DS3 signal. RSBD is updated on the rising edge of RSBD. This function is available in M13 asynchronous format only.



# 2.5 Test Interface

Pin No.	Symbol	Input (I) Output (O)	Function
C25	TCK	I	JTAG Test Clock This pin is connected with an internal pull- up resistor.
F23	TMS	I	JTAG Test Mode Select This pin is connected with an internal pull- up resistor.
A24	TDI	l	JTAG Test Data Input This pin is connected with an internal pull- up resistor.
D24	TDO	0	JTAG Test Data Output
B26	TRST	I	JTAG Test Reset This pin is connected with an internal pull-down resistor.
E24	SCAN	l	Full Scan Path Test When connected to $V_{\rm DD3}$ the MUNICH256FM works in a vendor specific test mode. It is recommended to connect this pin to $V_{\rm SS}$ .



# 2.6 Power Supply, Reserved Pins and No-connect Pins

Pin No.	Symbol	Input (I)	Function
	,	Output (O)	
AF1, AE7, AF9, AE12, AE15, AF18, AE20, AF26, AD3, AD24, AD26, Y2, Y25, V1, V26, R2, T12, T11, R12, R11, T14, T13, R14, R13, T16, T15, R16, R15, R25, P12, P11, N12, N11, P14, P13, N14, N13, P16, P15, N16, N15, M2, M12, M11, L12, L11, M14, M13, L14, L13, M16, M15, L16, L15, M25, J1, J26, G2, G25, C3, C24, D25, A1, B7, A9, B12, B15, A18, B20, A26, B23, A25	V <sub>SS</sub>		Ground 0V All pins must have the same level.
AE2, AF5, AE10, AF12, AF15, AE17, AF22, AE25, AB1, AB26, Y1, Y26, U2, U25, R1, R26, M1, M26, K2, K25, G1, G26, E1, E26, B2, A5, B10, A12, A15, B17, A22, B25, C22, D21	$V_{DD25}$	I	Supply Voltage 2.5V ± 0.25V All pins must have the same level.
AC4, AD6, AD9, AC10, AD14, AD18, AC17, AD21, AC23, AA3, AA24, W3, U4, V24, U23, P3, P23, N24, L24, J3, K23, J24, H23, F3, F24, D4, C6, D10, C13, D17, C18, C21, D23	$V_{DD3}$	I	Supply Voltage $3.3V \pm 0.3V$ All pins must have the same level.



Pin No.	Symbol	Input (I) Output (O)	Function
B5, C5, D5, A4, B4, C4, E3, D2, H3, H2, J4, H1, J2, K4, K3, K1, F4, D1, E2, G4, F2, G3, F1, H4, L3, L4, L2, L1, M3, M4, N1, N2, AA26, W25, W26, T23, U24, T24, R23, V25, U26, R24, T25, P24, T26, P25, P26, N25, N23, L26, K26, M23, L25, H26, L23, J25, K24, H25, F26, J23, H24, F25, G24, D26, G23, E25, C26, D20, B22, A23, C20, D18, B19, A20, B18, C17, A19, A17, D16, D15, A16, B13, A13, B11, C11, C7, D7, A6, B6, D6	RES116, RES2093		Reserved Pins 116, 2093 $ \begin{tabular}{ll} A pull-up resistor to $V_{\rm DD3}$ is recommended. \end{tabular} $
E4, C1, B1, C2, A3, A2, B3, D3, E23, B24, C23, D22, AC22, AD23, AD22, AC21, AE22, AC20, AF24, AE23, AF2, AE3, AC5, AD4, AE1, AD2, AB4, AC3	NC07 NC1231		No-connect Pins 07, 1231  It is recommended not to connect these pins.



## 3 General Overview

#### 3.1 Functional Overview

The MUNICH256FM is a highly integrated WAN protocol controller that performs HDLC, PPP and transparent (TMA) protocol processing on 256 full duplex serial channels for a channelized or unchannelized DS3 link. The device provides the framing functions for 28 T1 links or 21 E1 links. Signalling controller functions for DS3, T1 and E1 mode are integrated as well.

The following operating modes are provided (assuming a PCI clock frequency of 33 MHz or more):

- 28 times T1 signals operating at 1.544 MBit/s mapped into M13 asynchronous format or C-bit parity format
- 21 times E1 signals operating at 2.048 MBit/s mapped into ITU-T G.747 compliant signal.
- Full payload rate DS3 signal in C-bit parity format

The serial interface operates in unipolar or dual-rail mode and connects directly to available DS3 LIUs.

Each T1 or E1 tributary can be operated in external timing mode, where the tributary is clocked with the common transmit clock CTCLK, or in looped timing mode, where data of the selected tributaries is sent synchronous to the incoming receive clock.

A variety of loop modes is provided to support remote as well as inloop testing of the device. Remote loops are provided on DS3-, DS2-, DS1- or payload level.

Two bus interfaces, a PCI Rev. 2.1 compliant bus interface and a 16 bit Intel/Motorola style bus interface, connect the device to system environment. Device configuration and channel operation is provided through the PCI bus interface, whereas the 16 bit bus interface provides access to the framing functions and the signalling controller. The MUNICH256FM supports PCI PnP capability by loading the subsystem ID and the subsystem vendor ID via a SPI<sup>TM</sup> interface into the PCI configuration space.



## 3.2 Block Diagram

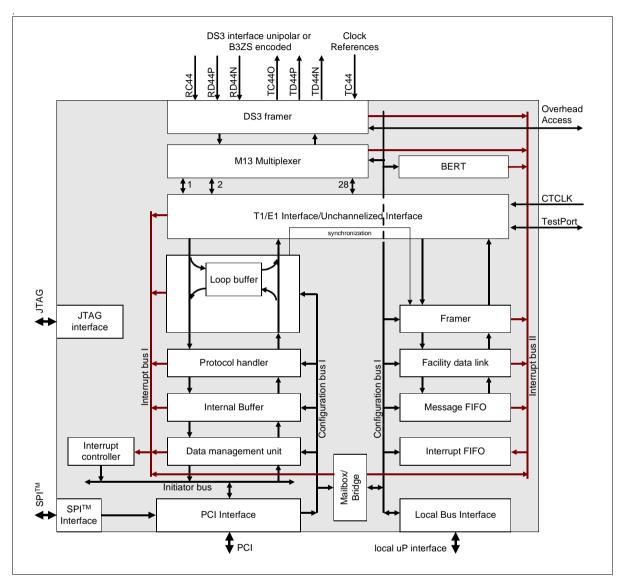


Figure 3-1 MUNICH256FM Block Diagram

#### 3.3 Internal Interface

The device consists of several macro functions as shown in **Figure 3-1**. The internal modules are connected by busses/signals according to Infineons on-chip bus.

The main busses are:

• The initiator bus, on which the DMA requests of the data management units and the interrupt controller are arbitrated and funneled into the PCI interface.



- The configuration busses, which serve as the standard programming interface to access the chip internal registers and functions either via PCI bus or via the local bus interface.
- The interrupt busses, which collect all interrupt information and forward them to the corresponding interrupt handler.

The chip's core functions are all operated with the PCI clock. Transfers between clocking regions (serial clocks and system clock) are implemented only in the serial interface.

## 3.4 Block Description

The following section gives a brief overview to the function of each block. For a detailed description of each function refer to "Functional Description" on page 47.

#### T1/E1 Interface/Unchannelized Interface

The T1/E1 interface consists of the subfunctions receive and transmit. This block provides the function of serial/parallel and parallel/serial conversion for up to 28 incoming and up to 28 tributaries of the DS3 signal. Serial data is transferred between the internal clocking system, which is derived from the PCI clock, and the various line clocks. This provides a unique clocking scheme on the internal interfaces. The aggregate bandwidth of all enabled tributaries can be up to 45 Mbit/s in each direction.

## Time slot assigner

The time slot assigner exchanges data with the serial interface on a 8 bit parallel bus, thus funneling all data of up to 28 interfaces. The time slot assigner provides freely programmable mapping of any time slot or any combination of time slots to 256 logical channels. A programmable mask can be provided to allow subchanneling of the available time slots which allows channel data rates starting at 8kbit/s.

At the protocol machine interface the time slot assigner and the protocol machine exchanges channel oriented data (8 bit) together with the time slots masks.

#### **Protocol handler**

Two protocol machines, one for receive direction and one for transmit direction, provide protocol handling for up to 256 logical channels and a maximum serial aggregate data rate of up to 45 Mbit/s per direction. The protocol machines implement four modes, which can be programmed independently for each logical channel: HDLC, bit-synchronous PPP, octet-synchronous PPP and Transparent Mode A, including frame synchronous TMA.

#### Internal buffer

The internal buffers provides channelwise buffering of raw (unformatted/deformatted) data for 256 logical channels. Channel specific thresholds can be programmed



independently in transmit and receive direction. In order to avoid transmit underrun conditions each transmit channel has two control parameters for smoothing the filling/emptying process (transmit forward threshold, transmit refill threshold). In receive direction each channel has a receive burst threshold. To avoid unnecessary waste of bus bandwidth, e.g. in case of transmission errors, the receive buffer provides the capability to discard frames which are smaller than a programmable threshold.

#### Data management units

The data management units provide direct data transfer between the system memory and the internal buffers. Each channel has an associated linked list of descriptors, which is located in system memory and handled by the data management units. This linked list is the interface between the system processor and the MUNICH256FM for exchange of data packets. The descriptors and the data packets can be stored arbitrarily in 32 bit address space of system memory, thus allowing full scatter/gather assembly of packets. In order to optimize PCI bus utilization, each descriptor is read in one burst and hold on-chip afterwards.

#### Interrupt controller

Two interrupt controller manage internal interrupts. Interrupts from the mailbox, the framing engines and the signalling controller are passed in form of interrupt vectors to an internal interrupt FIFO which can be read from the local bus. All system, port and channel related interrupt informations are passed to the main interrupt controller which is connected to the PCI system. A programmable DMA with nine channels stores these interrupts in form of interrupt vectors in different interrupt queues in system memory.

#### **PCI** interface

The PCI interface unit combines all DMA requests from the internal data management unit and the interrupt controller and translates them into PCI Rev. 2.1 compliant bus accesses. The PCI interface optionally includes the function of loading the subsystem vendor ID and the subsystem ID from an external SPI compliant EEPROM.

## Mailbox, internal bridge and global registers

The mailbox is used to exchange data between the PCI attached microprocessor and the local bus microprocessor and provides a doorbell function between the two interfaces.

Controlled by an arbiter an internal bridge connects the configuration bus I and the configuration bus II. It is therefore possible to access the "layer one" registers from the PCI interface directly. Thus the device could also be operated without a local microprocessor connected to it, e.g. for debugging purposes. It is NOT possible to access the configuration bus I and therefore the 'HDLC' registers or the PCI bridge from the local bus.



#### Local bus interface

The local bus interface builds the interface between the local microprocessor and the onchip configuration bus II in order to access the registers of the on-chip M13 multiplexer, DS2/DS3 framer, T1/E1 framer, the registers of the signalling controller and the mailbox. The local bus interface provides a switchable Intel-style or Motorola-style processor interface.

## M23 multiplexer/demultiplexer and DS3 framer

In channelized operating modes the M23 multiplexer/demultiplexer maps/demaps seven DS2 signals into/from M13 asynchronous format or C-bit parity format. In unchannelized mode one logical input stream is mapped into the information bits of the DS3 stream according to ANSI T1.107. The DS3 framer performs frame and multiframe alignment in receive direction and inserts the frame and multiframe alignment bits. Performance monitors provide for counting of framing bit errors, parity errors, CP-bit errors, far end block errors, excessive zeroes or line code violations. The framer detects loopback requests and allows insertion of loopback requests under microprocessor control.

## M12 multiplexer/demultiplexer and DS2 framer

The M12 multiplexer/demultiplexer operates in two modes. It maps either 28 T1 signals or 21 E1 signals into/from seven ANSI T1.107 or ITU-T G.747 compliant DS2 signals. It performs inversion of the second and fourth DS1 signal. The DS2 framer performs frame and multiframe alignment in receive direction and vice versa inserts the framing bits according to ANSI T1.107 or ITU-T G.704. It detects loopback requests or enables insertion of loopback requests under microprocessor control.

#### T1/E1 framer

Synchronization is achieved with the on-chip framing function. T1/E1 mode is supported for up to 28 ports. Once the framer achieved synchronization for a line, that is the frame alignment information in the incoming bit stream has been identified correctly, it informs the port interface and the facility data link about the frame position. In transmit direction the framing bits are inserted according to T1 F4 format, T1 SF (F12) format, T1 ESF (F24) format, E1 doubleframe format or E1 CRC-4 multiframe format. Performance monitors provide for counting framing errors, CRC errors, block errors, E-bit errors or PRBS bit errors. The framer detects loopback requests and allows insertion of loopback requests or pseudo-random bit sequences under microprocessor control.

#### Facility data link, Signaling controller

The facility data link exchanges the 'F-bits' of the T1 links or the S<sub>a</sub>-bits of time slot zero of the E1 links with the framer block and it provides the function of HDLC formatting or BOM mode in receive and transmit direction.



The signalling controller also provides access to the DS3 signalling bits (Far End Alarm and Control Channel, Path Maintenance Data Link Channel).

## **Message FIFO**

For intermediate buffering of data link messages two FIFOs are integrated, one for transmit and one for receive direction. Each FIFO provides two pages of 32 bytes buffer per line and direction.

#### **JTAG**

Boundary Scan logic according to IEEE 1149.1.



# 4 Functional Description

#### 4.1 Port Handler

The port handler is the interface between the serial ports and the chip internal protocol and framing functions. It converts incoming serial data into parallel data for further internal processing and in the outgoing direction it converts parallel data into a serial bit stream.

The MUNICH256FM provides one port for operation at DS3 signal speeds. It provides unipolar data transmission or B3ZS encoded data transmission.

The system interface consists of one receive clock input and either one receive data input in unipolar mode or two receive data inputs in dual-rail mode, one for the positive pulse and one for the negative pulse. In transmit direction the system interface is build of one transmit clock input and one or two transmit data outputs.

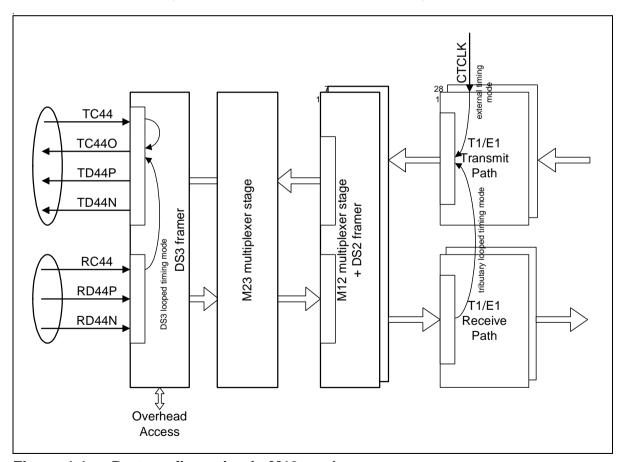


Figure 4-1 Port configuration in M13 mode



## 4.1.1 Local Port Loop

Local port loops are provided on DS3, DS2 and DS1 level on a per port/tributary basis. In the local loop the outgoing bit stream of a port/tributary is mirrored to the receive data path. This allows to prepare data in system memory, which is processed by the MUNICH256FM in transmit direction, mirrored to the respective receiver and stored in system memory again. In order to ensure that the local port loop works even without incoming receive clock, each receiver looped uses the corresponding transmit clock.

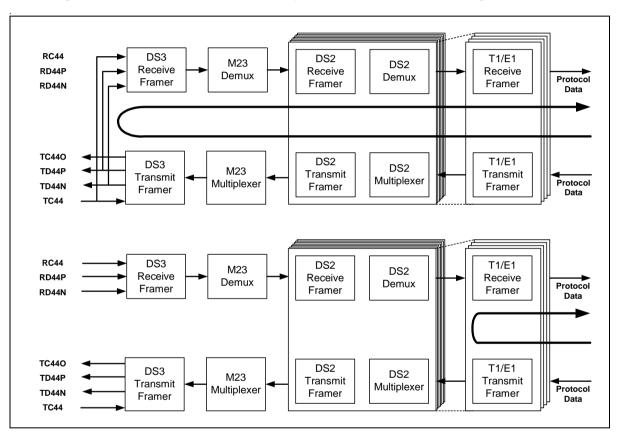


Figure 4-2 Local Port Loops in M13 mode

# 4.1.2 Remote Line Loops

The MUNICH256FM supports remote line loops in different stages of the M13 data path. In DS3 line loopback mode the incoming DS3 signal is mirrored and placed on the DS3 signal output. While operating in DS3 line loopback mode, the incoming receive clock RCLK is used to update outgoing transmit data. In DS2 line loopback mode one arbitrarily selectable DS2 signals is looped in the M12 stage of the MUNICH256FM. The T1/E1 line loopback mode mirrors one or more incoming lines. Transmit data coming from the transmit data path is replaced with the mirrored data stream.



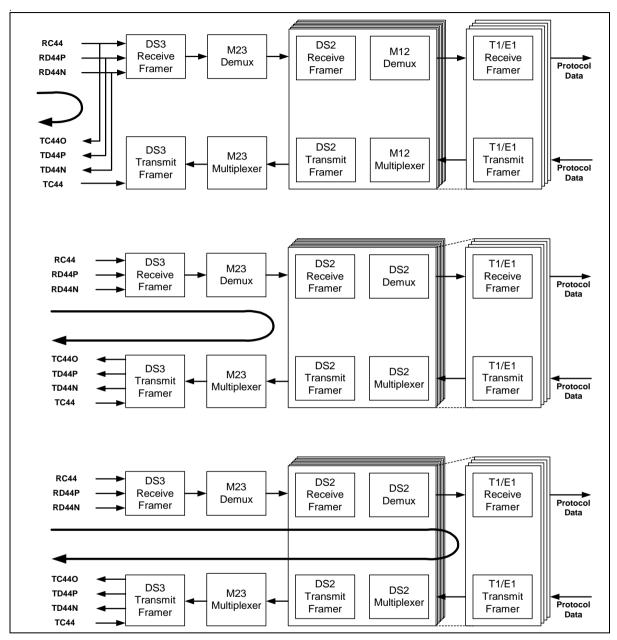


Figure 4-3 Remote Line Loops

The T1/E1 line loopback mode mirrors one or more incoming lines. Transmit data coming from the transmit data path is replaced with the mirrored data stream. While T1/E1 line loop is closed the transmit framer and the protocol machines are disabled.



#### 4.1.3 Test Breakout

The test breakout function provides the capability to multiplex one of the incoming 28 receive tributaries to the outgoing test receive port, where an external T1/E1 analyzer can be easily connected to. A selectable incoming tributary signal can be mapped to the test receive port where RCLK(x) is mapped to TRCLK and RD(x) to TRD. TRD is updated on the falling edge of TRCLK. In the opposite direction one of the 28 transmit tributaries can be replaced with the incoming test transmit data input TTD and the test transmit clock input TTCLK. TTD is sampled on the rising edge of TTCLK.

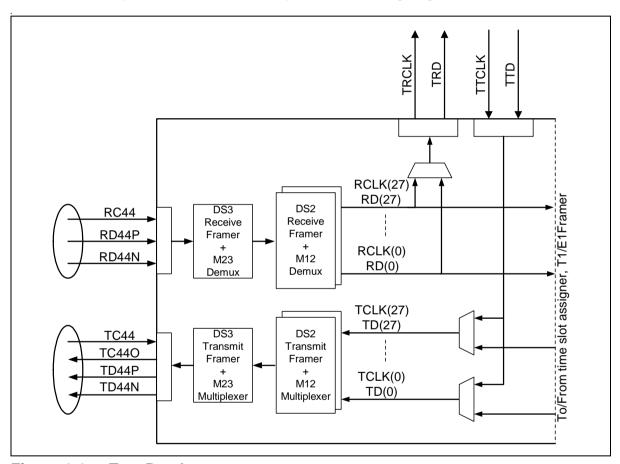


Figure 4-4 Test Breakout



#### 4.2 Time slot Handler

#### 4.2.1 Channelized Modes

The time slot handler assigns any combination of time slots of ports configured in T1 or E1 mode to logical channels. The assigned time slots are connected internally and the bit stream of one logical channel is mapped continuously over the selected time slots. Since the receiver and the transmitter operate independently of each other, the assignment of time slots to logical channels can be done separately in receive and transmit direction. Any time slot can be assigned to any channel and any sequence of time slots can be assigned to one channel.

In normal operation each time slot consists of eight bits and all bits are used for data transmission. An available mask function provides the capability to mask selected bits, which in turn are disabled for data transmission. This provides the possibility to operate time slots with less than 64 kBit/s throughput. So, instead of mapping the bit stream of one logical channel over all bits of the assigned time slots, the bit stream is mapped continuously over all unmasked bits of the time slots belonging to that channel.

**Figure 4-5** shows a simple assignment process. In this case one port is configured in E1 mode and time slots two and three are assigned to logical channel 5. The bit mask of time slot two is set to  $FE_H$ , which disables bit zero of that time slot, and the bit mask of the third time slot is set to  $FD_H$ , which disables bit one.



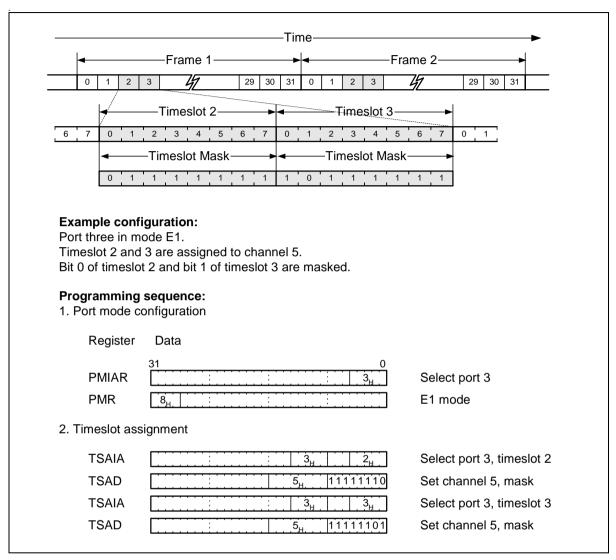


Figure 4-5 Time slot Assignment in Channelized Modes

#### 4.2.2 Unchannelized Mode

In unchannelized mode the complete incoming and outgoing serial bit stream belongs to one logical DS3 channel. To operate the link in unchannelized mode tributary zero (port zero) has to be programmed for unchannelized operation and all 'time slots', that is time slot 0 to 23 must be assigned to one channel. Additionally the M13 multiplexer must be switched into unchannelized DS3 mode. The function of bit masks, which is available for the T1/E1 tributaries, is not available in unchannelized mode.



## 4.3 Data Management Unit

Each packet or part of a packet is referenced by a descriptor. The descriptors form a link list, thus connecting all packets together. Packet data as well as descriptors are located in system memory. Both the MUNICH256FM and the system CPU operate on these data structures.

Each logical channel has its dedicated linked list of descriptors, one for receive direction and one for transmit direction. This type of data structure allows channel specific memory organization which can be specified by the system processor. It provides an optimized way to transfer data packets between the system processor and the MUNICH256FM.

The MUNICH256FM has a flexible DMA controller to transfer data either from the internal receive buffer to the shared memory (receive direction) or from the shared memory to the internal transmit buffer (transmit direction). Each DMA works on one linked list. Each linked list located in system memory is associated with one of the 256 transmit channels or one of 256 receive channels.

The address generator of the DMA controller supports full link list handling. Descriptors are stored independently from the data buffers, thus allowing full scatter/gather assembly and disassembly of data packets.

# 4.3.1 Descriptor Concept

A descriptor is used to build a linked list, where each member of the linked list points to a data section. A descriptor consists of four DWORDS<sup>1)</sup>. The first three DWORDS, containing link and packet information, are provided by the system CPU and the last DWORD contains status information, which is written when the MUNICH256FM has finished operation on a descriptor.

The data section itself can be of any size up to the maximum size of 65535 bytes per descriptor and is defined in the first DWORD of a descriptor. Each logical data packet can be split into one or multiple parts, where each part is referenced by one descriptor, and all parts are referenced by a linked list of descriptors. The descriptor containing the last part of a data packet is marked with a frame end bit. The descriptor following the marked descriptor therefore contains the beginning of the next data packet (**Figure 4-6**). The last descriptor in a linked list is marked with a hold indication.

For ease of programming the transmit descriptor and the receive descriptor are structured the same way, thus allowing to link a receive descriptor directly into the linked list of the transmit queues with minimum descriptor processing.



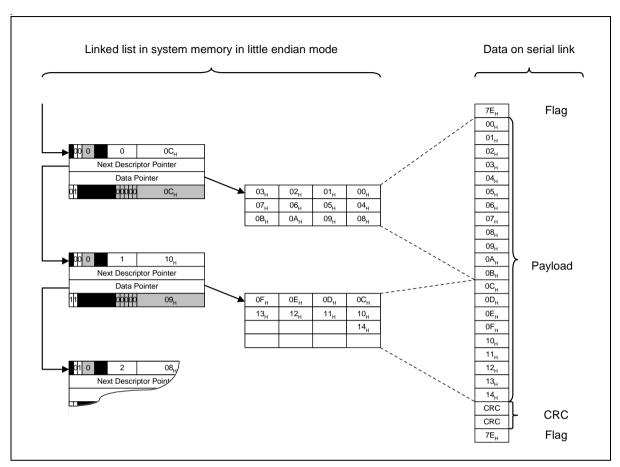


Figure 4-6 Descriptor Structure

Although the data management unit works 32-bit oriented, it is possible to begin a transmit data section at an uneven address. The two least significant bits of the transmit data pointer determine the beginning of the data section and the number of bytes in the first DWORD of the data section, respectively. In receive direction the address of the data sections must be DWORD aligned.

# 4.3.2 Receive Descriptor

Each receive descriptor is initialized by the host CPU and stored in system memory as part of a linked list. The MUNICH256FM reads a descriptor, when requested so from the host by a receive command or after branching from one receive descriptor to the next receive descriptor. Each receive descriptor contains four DWORDs, where the first three DWORDs contain link and packet information and the last DWORD contains status information. Once the descriptor is processed the status information will be written back to system memory by the MUNICH256FM (Receive status update). When the



MUNICH256FM branches to a new descriptor it reads the link and packet information entirely and stores it in its on-chip channel database.

Table 4-1 Receive Descriptor Structure

DWORD ADDR.	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
00 <sub>H</sub>	0	HOLD	RHI	OFF	SET(	2:0)	0	0	0	0		De	escripto	orID(5	:0)	
04 <sub>H</sub>						NextR	eceive	eDesc	riptorF	Pointe	(31:2)					
08 <sub>H</sub>						F	Receiv	eData	Pointe	er(31:2	?)					
0C <sub>H</sub>	FE	С	0	0	0	0	0	0	0	0	0	MFL	RFOD	CRC	ILEN	RAB

DWORD ADDR.	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
00 <sub>H</sub>								NO(	15:0)							
04 <sub>H</sub>					NextR	eceive	eDesc	riptorF	Pointe	r(31:2)	)				0	0
08 <sub>H</sub>					F	Receiv	eData	Pointe	er(31:2	2)					0	0
0C <sub>H</sub>								BNO	(15:0)							·

## HOLD Hold indication

HOLD indicates that a descriptor is the last element of a linked list containing valid information.

- Next descriptor is available in the shared memory. After checking the HOLD bit the data management unit branches to the next receive descriptor.
- This descriptor is the last one that is available for a channel. This means that the data section where this descriptor points to is the last data section which is available for data storage. After processing of descriptor has finished, the data management unit repolls the descriptor one time to check if HOLD has already been cleared. If HOLD is still set the corresponding receive channel is deactivated as long as the system CPU does not request a new activation via a 'Receive Hold Reset' command or forces the MUNICH256FM to branch to a new linked list via a 'Receive Abort/Branch' command.

Note: When repolling a descriptor the MUNICH256FM checks the HOLD bit and the bit field NextReceiveDescriptorPointer. All other information are NOT updated in the internal channel database.



#### RHI Receive Host Initiated Interrupt

This bit indicates that the MUNICH256FM shall generate a 'Receive Host Initiated' interrupt vector after it has finished processing the descriptor.

- O Data management unit does not generate an interrupt vector after it has processed the receive descriptor.
- Data management unit generates an interrupt vector, as soon as all data bytes are transferred into the current data section and the status information is updated.

#### OFFSET Offset of unused data section.

This bit field allows to reserve memory space in increments of DWORDs for an additional header. If the marked descriptor is the first one of a new packet the data management unit will write data at the address ReceiveDataPointer+4xOFFSET.

Note: Offset x 4 must be smaller than NO.

Note: This option is not available in transparent mode.

#### DescriptorID

This bit field is read by the data management unit and written back in the corresponding interrupt status of a channel interrupt vector which is generated by the data management unit. This value provides a link between the descriptor and the corresponding interrupt vector.

#### NO Byte Number

This bit field defines the size of the receive data section allocated by the host. The maximum buffer length is 65535 bytes and it has to be a multiple of 4 bytes. Data bytes are stored in the receive data section according to the selected mode (little endian or big endian).

Note: Please note that the device handles the status (CRC, flag and frame status) of frame based protocols (HDLC, PPP) internally in the same way as payload data. Therefore byte number should include four bytes more than the maximum length of incoming frames. Nevertheless, the frame status will be deleted from the end of the data stream and be attached as a status word to the receive descriptor. The frame status will not be written to the data section.



#### **NextReceiveDescriptorPointer**

This pointer contains the start address of the next valid receive descriptor. After completion of the current receive descriptor the data management unit branches to the next receive descriptor to continue data reception.

System CPU can force the MUNICH256FM to branch to the beginning of a new linked list via the command 'Receive Abort/Branch'. In this case the receive descriptor address provided via register CSPEC\_FRDA is used as the next receive descriptor pointer to be branched to.

#### ReceiveDataPointer

This pointer contains the start address of the receive data section. The start address must be DWORD aligned.

#### FE Frame End

It indicates that the current receive data section (addressed by ReceiveDataPointer) contains the end of a frame. This bit is set by the data management unit after transferring the last data of a frame from the internal receive buffer into the receive data section which is located in the shared memory. Moreover the bit field BNO and the status bits are updated, the complete (C) bit is set and a 'Frame End' interrupt vector is generated.

## C Complete

This bit indicates that

- •filling the data section has completed (with or without errors),
- processing of this descriptor was aborted by a 'Receive Abort/Branch' command,
- •or the end of frame (PPP, HDLC) was stored in the receive data section.

The complete bit releases the descriptor.

#### BNO Byte Number of Received Data

The data management unit writes the number of data bytes stored in the current data section into bit field BNO.



When the MUNICH256FM completes a data section, which included the end of a frame (C bit and FE bit are set), or when the MUNICH256FM branches to a new linked list due to a 'Receive Abort/Branch' command the status information bits RAB, ILEN, CRC, RFOD and MFL are updated as part of the receive status update. In the abort scenario, the C bit will always be set. Bit FE will be set only, if the particular channel operates in HDI C or PPP mode.

RAB Receive Abort

This bit is set when

•the incoming serial data stream contained an abort sequence, or

•an incoming frame was aborted by the command 'Receive Abort/ Branch', or

•when a channel is switched off while a frame is being received.

ILEN Illegal length

This bit is set, when the length of the incoming data packet was not a

multiple of eight bits.

CRC CRC Error

This bit is set, when the checksum of an incoming data packet was

different to the internally calculated checksum.

RFOD Receive Frame Overflow

This bit is set, when a receive buffer overflow occurred during data

reception.

MFL Maximum Frame Length

This bit is set, when the length of the incoming data packet exceeded the

value programmed in CONF1.MFL.

# 4.3.3 Data Management Unit Receive

The data management unit receive transfers data for each of the 256 logical receive channels from the internal receive buffer to the data sections of the corresponding channel. To fulfill the task it has to be initialized for operation, which is described in "Channel Programming / Reprogramming Concept" on page 162. Relevant part of the channel information for the data management unit is the address pointer to the first receive descriptor, the channel interrupt queue and the channel interrupt mask.

The first receive descriptor of a channel is fetched from system memory and stored in the chip internal channel database the first time the receive buffer requests a data transfer for the channel. The descriptor contains a pointer to the data section, the size of the provided data section and a pointer to the next receive descriptor.

The data transfer is requested as soon as a programmed receive buffer threshold is reached. This threshold is programmed during channel setup on a per channel basis. Task of the data management unit is to calculate the maximum number of bytes that can



be stored in the receive data section and to compare this with the length of the requested data transfer.

In case that the requested transfer length from the receive buffer fits into the provided data section the data management unit transfers the data block to system memory in one single burst. If the requested transfer length exceeds the available space of the data section the transfer is divided into two or more parts. Data packets are written to the data section until the given data section is filled or the end of a packet is reached.

If the data section in the shared memory is completely filled with data, the data management unit updates the status word of the receive descriptor by setting the complete (C) bit and the number of bytes (BNO), which are stored in the data section. In this case the number of bytes written to the data section equals the size of the data section.

If the data packet, which is written to system memory, contains the remaining part of a completely received packet, the data management unit updates the status word of the receive descriptor by setting the complete bit together with the frame end (FE) bit. The BNO field is updated on the actual value of bytes written to the data section. If enabled, the data management unit generates a 'Frame End' channel interrupt vector.

With the next receive buffer request the data management unit branches to the next receive descriptor, which was referenced in the next descriptor field of the current processed descriptor. To keep track of the linked list the data management unit provides the possibility to issue a 'Receive Host Initiated' interrupt vector, which is generated after the status word was updated. To enable this interrupt vector the bit RHI must be set in a descriptor.

#### **Descriptor hold operation**

Processing of the descriptor list is controlled by the HOLD bit, which is located in the first DWORD of each receive descriptor. The HOLD bit indicates that the marked descriptor is the last descriptor containing a valid data buffer. The data management unit will not branch to a next descriptor until the hold condition is removed or a 'Receive Abort' command forces the MUNICH256FM to branch to the beginning of a new linked list. Since the HOLD bit marks the last descriptor in a linked list, it may prevent that further received data packets can be written to system memory.

When a given data section is filled, does not contain the end of a frame (frame based protocols) and the requested transfer length could not be satisfied, the data management unit polls the HOLD bit of the current receive descriptor once more. If the HOLD bit is removed, it branches to the next descriptor. When the HOLD bit is still '1', an internal poll bit is set and the data management unit does not branch to the next descriptor. Additionally a 'Hold Caused Receive Abort' interrupt vector is generated. The status of the descriptor in the shared memory is aborted (RAB bit set) and the complete bit and the frame end bit are set in the receive descriptor. The rest of the frame will be discarded. As long as the HOLD bit remains set further data of the same channel is



discarded and for each discarded frame a 'Silent Discard' interrupt vector with the bits HRAB and RAB set is generated.

If the current data section was filled and does contain the end of frame a 'Frame End' interrupt vector is generated and the descriptor is updated on the FE bit and the C bit. Therefore the status of this receive descriptor is error free. With the next request of the receive buffer, the data management unit repolls the HOLD bit of the current receive descriptor. If the hold bit is removed, it branches to the next descriptor. If the HOLD bit is still '1', an internal poll bit is set. As long as the HOLD bit remains set, further data of the same channel is discarded and for each discarded frame a 'Silent Discard' interrupt vector with bits HRAB and RAB set is generated.

When the receive buffer request matches exactly the remaining size of the data section and the data block does not contain the end of a packet, it is stored completely in the data section. The descriptor is updated immediately (C bit set). With the next receive buffer request, the data management unit repolls the HOLD bit of the current receive descriptor. If the HOLD bit is removed, it branches to the next descriptor. If the HOLD Bit is still '1', an internal poll bit is set. Additionally a 'Hold Caused Receive Abort' interrupt vector is generated and the rest of the frame is discarded. As long as the HOLD bit remains set further data of the same channel is discarded and for each discarded frame a 'Silent Discard' interrupt vector is generated.

The system CPU can remove the hold condition, when the next receive descriptor is available in shared memory. Therefore the CPU has to execute a 'Receive Hold Reset' command, which will reactivate the channel. When the receive buffer requests a new data transfer, the data management unit will repoll the last receive descriptor. If the HOLD bit was removed, the data management unit branches to the next receive descriptor pointed to by bit field NextReceiveDescriptor.

Note: In protocol modes HDLC and PPP data from receive buffer is discarded until the end of a received frame is reached. As soon as the beginning of a new frame is received, the data management unit starts to fill the data section.

Note: In transparent mode data transferred from receive buffer is written immediately to the data section of the next receive descriptor.

If the CPU issues a 'Receive Hold Reset' command and does not remove the HOLD bit (erroneous programming), no action will take place.

# 4.3.4 Transmit Descriptor

The transmit descriptor in shared memory is initialized by the host CPU and is read afterwards by the MUNICH256FM. The address pointer to the first transmit descriptor is stored in the on-chip channel database, when requested to do so by the host CPU via the 'Transmit Init' command. The first three DWORDs of a transmit descriptor are read when the transmit buffer requests a data transfer for this channel and then they are stored in the on-chip memory. Also they are read when branching from one transmit



descriptor to the next transmit descriptor. Therefore all information in the next descriptor must be valid when the data management unit branches to a descriptor. The last DWORD of a transmit descriptor optionally is written by the MUNICH256FM when processing of a descriptor has finished.

Table 4-2 Transmit Descriptor Structure

DWORD ADDR.	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
00 <sub>H</sub>	FE	HOLD	THI	CEN	0	0	0	0	0	0		De	script	orID(5	:0)	
04 <sub>H</sub>					1	VextTr	ansm	itDesc	riptorF	Pointe	r(31:2)	)				
08 <sub>H</sub>						Т	ransm	itData	Pointe	er(31:0	))					
0C <sub>H</sub>	0	С	0	0	0	0	0	0	0	0	0	0	0	0	0	0

DWORD ADDR.	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
00 <sub>H</sub>								NO(	5:0)							
04 <sub>H</sub>				1	NextTr	ansmi	itDesc	riptorF	Pointe	r(31:2)	)				0	0
08 <sub>H</sub>						Т	ransm	itData	Pointe	er(31:0	))					
0C <sub>H</sub>	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

#### FE Frame end

It indicates that the current transmit data section (addressed by transmit data pointer) contains the end of a frame. After the last byte is read from system memory this bit is passed to the transmit buffer and to the protocol machine. The bit FE informs the transmit buffer to move a stored frame to the protocol machine even if the programmed transmit forward threshold is not reached (see "Internal Transmit Buffer" on page 68). The protocol machine is informed to append the checksum (HDLC, PPP) and then to send the interframe time-fill. Providing a transmit descriptor with FE = '0' and HOLD = '1' is an error.

#### HOLD Hold indication

It indicates that this descriptor is the last valid element of a linked list.

- Next descriptor is available in the shared memory. The data management unit branches to the next descriptor as soon as processing of the current descriptor has finished.
- The current descriptor is the last descriptor containing valid data in the data section. As soon as the data management unit has transferred the data contained in the data section to the internal buffer, it tries one more time to read the descriptor. In case that



the hold indication is still set, it stores further requests of the receive buffer in its channel database. The channel can be reactivated by issuing a 'Transmit Hold Reset' command or by providing a new linked list via the 'Transmit Abort/Branch' command, in which case not served requests are processed.

Note: When repolling a descriptor the MUNICH256FM checks the HOLD bit and the bit field NextTransmitDescriptorPointer. All other information are NOT updated in the internal channel database.

## NO Byte Number

The byte number defines the number of bytes stored in the data section to be transmitted. Thus the maximum length of data buffer is 65535 bytes. In order to provide dummy transmit descriptors NO = 0 is allowed in conjunction with the FE bit set. In this case (NO = 0) a 'Transmit Host Initiated' interrupt vector and/or the C-bit will be generated/set when the data management unit recognizes this condition. It is an error to set NO = 0 without FE bit set.

#### THI Transmit Host Initiated Interrupt

This bit indicates that the MUNICH256FM shall generate a 'Transmit Host Initiated' interrupt vector after it has finished operating on the descriptor.

- O Data management unit does not generate an interrupt vector after it has processed the transmit descriptor.
- Data management unit generates an interrupt vector, as soon as all data bytes are transferred to the internal transmit buffer and the status information is updated.

## DescriptorID

This bit field is read by the data management unit and written back in the corresponding interrupt status of a channel interrupt vector which is generated by data management unit. This value provides a link between the descriptor and the corresponding interrupt vector.

#### NextTransmitDescriptorPointer

This pointer contains the start address of the next transmit descriptor. It has to be DWORD aligned. After sending the indicated number of data bytes, the data management unit branches to the next transmit descriptor. The transmit descriptor is read entirely at the beginning of transmission and stored in on-chip memory. Therefore all informations in the descriptor must be valid.

System CPU can force the MUNICH256FM to branch to the beginning of a new linked list via the command 'Transmit Abort/Branch'. In this case the transmit descriptor address provided via register



CSPEC\_FTDA is used as the next transmit descriptor pointer to be branched to.

#### TransmitDataPointer

This 32-bit pointer contains the start address of the transmit data section. Although the data management unit works DWORD oriented, it is possible to begin transmit data section at byte addresses.

## CEN Complete Enable

This bit is set by the CPU if the complete bit mechanism is desired:

- The data management unit will NOT update the transmit descriptor with the C bit. In this mode the use of the THI interrupt is recommended.
- 1 The data management unit will set the C bit.

## C Complete

This bit is set by the data management unit, when the bit CEN of a descriptor is set and when it

- completed reading a data section normally, or
- •it was aborted by a 'Transmit Off' command or by a 'Transmit Abort/ Branch' command.

The complete bit releases the descriptor.

# 4.3.5 Data Management Unit Transmit

The data management unit transmit provides the interface between system memory on one side and the internal transmit buffer on the other side. The data management unit handles requests of the transmit buffer, controls the address and burst length calculation, initiates data transfers from system memory to the transmit buffer and handles the linked lists on a per channel basis.

For initialization the CPU programs the first transmit descriptor address, the interrupt mask, the interrupt queue and starts the channel with the 'Transmit Init' command. For detailed description of channel commands refer to "Channel Commands" on page 163. The data management unit then fetches the given information and stores them in its on-chip channel database.

The first transmit descriptor is fetched from system memory and stored in the chip internal channel database the first time the transmit buffer requests data for a channel. It contains a pointer to the data buffer, the length of the data section as well as a pointer to the next transmit descriptor. After the first descriptor is stored internally a 'Transmit Command Complete' interrupt vector is generated.

Data transfers are requested as long as the number of empty locations is below a programmable refill threshold. The number of empty locations is reported from the transmit buffer to the data management unit. Task of the data management unit is to



calculate the number of bytes that can be loaded from the data section based on the NO field of the transmit descriptor and to compare this with the number of bytes requested by the transmit buffer.

Depending on the bit field NO in the transmit descriptor several read accesses must be performed by the data management unit. It stops serving the request as soon as the requested amount of data was transferred to the transmit buffer, when a Frame End bit (FE) in the processed transmit descriptor is set or when the channel was aborted using a 'Transmit Abort' command. Serving the request can also be suspended, when the programmed transmit burst length (CONF3.TPBL) is reached. All these events may result in open transmit buffer locations, but the data management unit stores this information as open requests in the channel database and processes these requests continuously.

The data management unit alternately serves requests issued by the transmit buffer or open requests stored in its internal channel database. If there are open requests for a channel, data transmission will be initiated. The procedure is the same as described above. It stops, if the requested amount of data is served or when the FE bit field is set.

If a transmit descriptor has its FE bit set and all data of the data section is moved to the transmit buffer, the data management unit serves requests of further channels or looks for open requests in its database. Therefore open requests from other channels are served faster and possible underruns can be avoided. The next transmit descriptor will be retrieved with the next data transfer of the channel.

When the data management unit completed reading a data section associated with a transmit descriptor, it updates the complete (C) bit in the status word of the transmit descriptor if the complete enable (CEN) bit is set. Additionally a 'Transmit Host Initiated' interrupt vector is generated if the THI bit is set in the transmit descriptor. Afterwards the data management unit the MUNICH256FM branches to the next transmit descriptor.

#### **Descriptor hold operation**

The data transfer is controlled by the HOLD bit, which is located in the first DWORD of a transmit descriptor. The HOLD bit indicates that the marked descriptor is the last descriptor in a linked list. The data management unit will not branch to the next descriptor until the hold condition is removed or a 'Transmit Abort' command forces the MUNICH256FM to branch to a new linked list.

If the HOLD bit and the frame end bit are set together in a descriptor, the data management unit transfers all data of the belonging data section to the transmit buffer and optionally sets the C-bit in the current transmit descriptor. When a new data transfer is requested (either from the transmit buffer or an open request) the data management unit repolls the descriptor. If the HOLD bit is removed, it will branch to the next transmit descriptor. If the HOLD bit is still set, that channel is suspended for further operation. Following requests from the transmit buffer will not be served, but the number of requested data is stored in the open request registers.



If the HOLD bit is detected in a descriptor and the frame end bit is not set, the data management unit will transfer all data of the belonging data section to the transmit buffer. Afterwards it generates a 'Hold Caused Transmit Abort' interrupt vector in order to inform the host CPU about the erroneous descriptor structure. In PPP and HDLC mode the abort status is propagated to the transmit buffer and the protocol machine, so that a abort sequence is sent on the serial side. In TMA mode the data management unit generates a 'Hold Caused Transmit Abort' interrupt vector every time it recognizes the HOLD bit. Then it reads the transmit descriptor once more. If the HOLD bit is removed it branches to the next transmit descriptor and proceeds with normal operation. Otherwise, when the HOLD bit is still set, the channel is suspended for further operation and an internal poll bit is set. Following requests from the transmit buffer will not be served, but the number of requested data is stored in the open request register.

The host CPU can remove the hold condition, when the next transmit descriptor is available in system memory. Therefore the CPU has to execute a 'Transmit Hold Reset' command, which will reactive the channel. When the transmit buffer requests a new data transfer or when open request are stored in the on-chip database the data management unit repolls the transmit descriptor and checks the HOLD bit again. If the HOLD bit is removed it branches to next transmit descriptor.

If the CPU issues a 'Transmit Hold Reset' command and does not remove the HOLD bit (erroneous programming), no action will take place. Nevertheless, the CPU always has to issue a 'Transmit Hold Reset' command when it removes the HOLD bit in a descriptor, no matter the data management unit has already seen the HOLD bit or not.

# 4.3.6 Byte Swapping

The MUNICH256FM operates per default as a little endian device. To support integration into big endian environments, the data management unit provides an internal byte swapping mechanism, which can be enabled via bit CONF1.LBE.

The big endian swapping applies only to the data section pointed to by the receive and transmit descriptors in the shared memory.

Note: Byte swapping only effects the organization of packet data in system memory. All internal registers, as well as the descriptors, address pointers or interrupt vectors are handled with little endian byte ordering.



Table 4-3 Example for little/big Endian with BNO = 3

BNO		Little I	Endian			Big E	ndian	
3	-	Byte 2	Byte 1	Byte 0	Byte 0	Byte 1	Byte 2	-

Table 4-4 Example for little big Endian with BNO = 7

BNO	Little Endian Big Endian							
7	Byte3	Byte 2	Byte 1	Byte 0	Byte 0	Byte 1	Byte 2	Byte3
	-	Byte 6	Byte 5	Byte 4	Byte 4	Byte 5	Byte 6	-

# 4.3.7 Transmission Bit/Byte Ordering

Data is transmitted beginning with byte zero in increasing order. Vice versa data received is stored starting with byte zero. The position of byte zero depends on the selected endian mode.

Each byte itself consists of eight bits starting with bit zero (LSB) up to bit seven (MSB). Data on the serial line is transmitted starting with the LSB. The first bit received is stored in bit zero.



## 4.4 Buffer Management

#### 4.4.1 Internal Receive Buffer

The internal receive buffer provides buffering of frame data and status between the protocol handler and the receive data management units. Internal buffers are essential to avoid data loss due to the PCI bus latency, especially in the presence of multiple devices on the same PCI bus, and to enable a minimized bus utilization through burst accesses.

The incoming data from the protocol handler is stored in a receive central buffer shared by all the 256 channels. The buffer is written by the protocol handler every time a complete DWORD is ready or the last byte of a frame has been received. Each channel has an individual programmable threshold code, which determines after how many DWORDs a data transfer into the shared memory is generated. The threshold therefore defines the maximum burst length for a particular channel in receive direction. A data transfer is also requested as soon as a frame end has been reached. Programming the burst length to be greater than 1 DWORD avoids too frequent accesses to the PCI bus, thereby optimizing use of this resource.

For real time channels with lowest possible latency (example: constant bit rate) a value of one DWORD can be selected for the burst length.

The total size of the internal receive buffer is 12 kByte. If all the 256 channels are active, the average burst threshold should be programmed with 8 DWORDs, so that 4 DWORDs are available on the average to compensate for PCI latency and avoid data loss. However if less than 256 channels are active or if only 64 KBit/s channels are used, the burst threshold may be programmed to a higher value. In other words, the sum of all channel thresholds shall not exceed the maximum receive buffer locations.

In order to prevent an overload condition from one particular channel (e.g. receiving only small or invalid frames), the receive buffer provides the capability to delete frames which are smaller or equal than a programmable threshold. All frames that have been dropped will be counted and an interrupt vector will be generated as soon as a programmable threshold has been reached. The actual value of the counter can be read in the small frame dropped counter register.



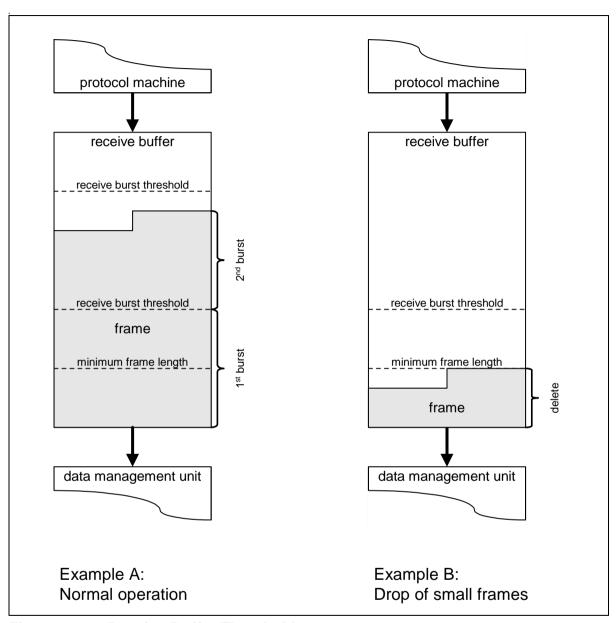


Figure 4-7 Receive Buffer Thresholds

For performance monitoring the receive buffer provides the capability to monitor the receive buffer utilization and to generate interrupts when certain fill thresholds have been reached.

#### 4.4.2 Internal Transmit Buffer

The internal transmit buffer with a total size of 32 kByte stores protocol data before it is processed by the protocol machine. The transmit buffer is essential to ensure that enough data is available during transmission, since PCI latency and usage of multiple



channels limit access to system memory for a particular channel. A programmable transmit buffer size and two programmable threshold are configurable by the host CPU for each channel.

Note: The sum of both thresholds must be smaller than the transmit buffer size of a particular channel.

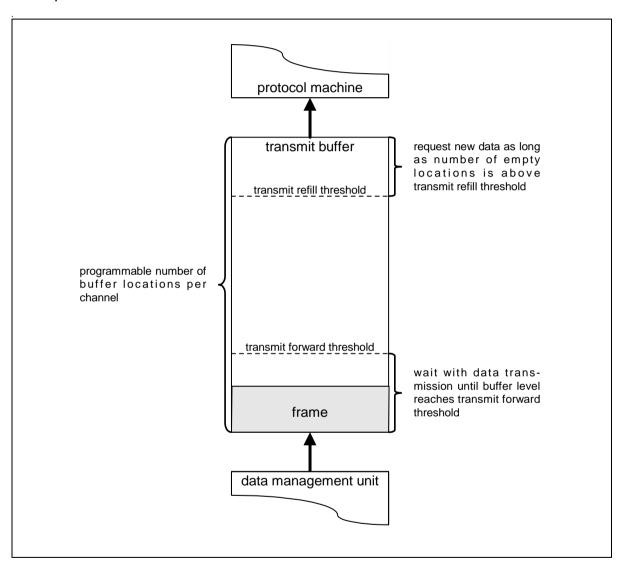


Figure 4-8 Transmit Buffer Thresholds

The threshold values have the following effect:

 Data belonging to one channel stored in the internal transmit buffer will only be transferred to the protocol machine when the transmit forward threshold is reached or if a complete frame is stored inside the transmit buffer. This mechanism avoids data underrun conditions.



As long as the amount of data stored in the transmit buffer is below the transmit refill
threshold the data management unit will keep filling the buffer by initiating PCI burst
transfers.

Note: Since there is a delay between the time the transmit buffer requests data from the data management unit and the time the data management unit serves the request, the actual number of empty locations may be higher than the transmit refill threshold. To determine the maximum PCI burst length an additional parameter is available which limits these requests up to a maximum of 64 DWORDs.



## 4.5 Protocol Description

The protocol machines provide protocol handling for up to 256 channels. The protocol machines implement 4 modes, which can be programmed independently for each channel: HDLC, bit-synchronous PPP, octet-synchronous PPP and transparent mode A.

The configuration of each logical channel is programmed via the PCI bus and will be stored inside the protocol machines. Furthermore the current state for the protocol processing (CRC check, 1 bit count,...) is also stored inside the protocol machines.

Each protocol machine (receive, transmit) handles a maximum of 256 channels and a maximum aggregate bit rate of up to 45 Mbit/s.

#### 4.5.1 HDLC Mode

Flag	Address	Control	Information	CRC	Flag
0111 1110	8 bits	8 bits	<=0 Bits	16/32 bits	0111 1110

Figure 4-9 HDLC Frame Format

The frame begin and frame end synchronization is performed with the flag character  $7E_{\rm H}$ . Shared opening and closing flag is supported in receive direction and can be programmed in the channel configuration register for transmit direction. Shared '0' bit between two flags is only supported in receive direction. Interframe time-fill can be programmed to either flag  $7E_{\rm H}$  or  $FF_{\rm H}$  indicating idle.

In receive operation, prior to FCS computation, any '0' bit that directly follows five contiguous '1' bits is discarded. When closing flag is recognized, a CRC check, octet boundary check, MFL (maximum frame length) check, a short frame check and an additional small frame check are performed. Short frames have less than 4 octets if CRC16 is used or less than 6 octets if CRC32 is used. An aborted frame is recognized if 7 or more '1's are received.

In transmit operation after the CRC computation a '0' bit is inserted after every sequence of five contiguous '1' bits. When frame end is indicated in the belonging transmit descriptor the calculated CRC is transmitted and a flag is generated. If an underrun occurs in the internal transmit buffer (because of PCI latency e.g.) an abort sequence with 7 '1's is transmitted and an underrun interrupt is generated. The abort sequence is also generated if the host CPU resets or aborts a channel during the transmission of a frame.

An invert option is provided to invert all the data output or data input between serial line and protocol machines or vice versa.

The following CRC modes are supported:

• 16 bit CRC  $1+x^5+x^{12}+x^{16}$ 



• 32 bit CRC  $1+x+x^2+x^4+x^5+x^7+x^8+x^{10}+x^{11}+x^{12}+x^{16}+x^{22}+x^{23}+x^{26}+x^{32}$ Optionally CRC transfer and check can be disabled.

# 4.5.2 Bit Synchronous PPP with HDLC Framing Structure

Flag	Address	Control	Protocol	Information	Daddina	FCS	Flag
0111 1110	1111 1111	0000 0011	8/16 bits	information	Padding	16/32 bits	0111 1110

Figure 4-10 Bit Synchronous PPP with HDLC Framing Structure

Same as HDLC. The handling of the abort sequence differs from that in HDLC mode. If  $7E_H$  is programmed as interframe time fill character, the abort sequence consists of 7 "1"s. If  $FF_H$  is programmed as interframe time fill character, the abort sequence consists of 15 "1"s.

The same programmable parameters as in HDLC mode apply to bit synchronous PPP.

## 4.5.3 Octet Synchronous PPP

This mode uses a frame structure similar to the bit synchronous PPP mode. The frame begin and end synchronization is performed with the flag character  $(7E_H)$ . Use of a shared opening and closing flag is supported if programmed in the channel configuration register. Use of a shared '0' bit between two flags is not supported. A 16 or 32 bit CRC is computed over all service data read from the transmit buffer and appended to the end of the frame.

The octet synchronous PPP mode uses octet stuffing instead of '0' bit stuffing in order to replace control characters used by intervening hardware equipment. This allows transparent transmission and also recognition and removal of spurious characters inserted by such equipment.

A 32 bit per channel asynchronous control character map (ACCM) specifies characters in the range  $00_{H}$ -1F<sub>H</sub> to be stuffed/destuffed in service data and FCS field. In addition, the DEL control character and any of 4 ACCM extension characters stored in a programmable 32 bit register can be selected for character stuffing/destuffing. When a character specified to be mapped is found in service data or the FCS field, it is replaced by a 2 octet sequence consisting of  $7D_{H}$  (Control Escape) followed by the character EXORed with  $20_{H}$  (e.g.  $13_{H}$  is mapped to  $7D_{H}$   $33_{H}$ ). In addition to the per channel specification of characters to be mapped, the control escape sequence  $7D_{H}$  and  $7E_{H}$  in the service data stream are always mapped. Opening and closing flags are not affected.

The abort sequence consists of the control escape character followed by a flag character  $7E_H$  (not stuffed).

Between two frames, the interframe time fill character is always 7E<sub>H</sub>.



If in the transmit direction a data underrun occurs during transmission of a frame and the frame has not finished, an abort sequence is automatically sent (escape character followed by a flag) and an underrun interrupt vector will generated. If the transmit buffer indicates an empty condition for a channel between two frames (idle or interframe fill), the protocol machine will continue to send interframe time fill characters. Also an abort sequence will be generated if a channel is reset or an abort command is issued during transmission of a frame.

The following CRC modes are supported:

• 16 bit CRC 1+x<sup>5</sup>+x<sup>12</sup>+x<sup>16</sup>

• 32 bit CRC  $1+x+x^2+x^4+x^5+x^7+x^8+x^{10}+x^{11}+x^{12}+x^{16}+x^{22}+x^{23}+x^{26}+x^{32}$ 

CRC computation/check or removing can be disabled.

# 4.5.4 Transparent Mode

When programmed in transparent mode, the protocol machine performs fully transparent data transmission/reception without HDLC framing, i.e. without

- Flag insertion/removing
- CRC generation/CRC check
- Bit stuffing/destuffing (0 bit insertion/removal).

An option 'Transparent Mode Pack' is provided to support subchanneling. If subchanneling is used (logical channels of less than 64 kbit/s), masked bits in the protocol data are set high and each bit in shared memory maps directly to enabled (not masked) bits on the serial line. Otherwise they contain protocol data, that is each byte in shared memory maps directly to a time slot.

A programmable transparent flag can be programmed which will be inserted between payload data or is removed during reception of a payload data.

An invert option is provided to invert the outgoing or incoming data stream.



### 4.6 T1 Framer and FDL Function

The T1 framer includes frame alignment, CRC-6 check/generation, facility data link (FDL) support and bit error rate test. Three modes can be programmed for each T1 link: F4, ESF (F24), SF (F12).

#### 4.6.1 4-Frame Multiframe

The allocation of the FT bits (bit 1 of frames 1 and 3) for frame alignment signal is shown in **Table 4-5**.

The FS bit may be used for signaling.

Remote alarm (yellow alarm) is indicated by setting bit(2) to '0' in each channel.

Table 4-5 4-Frame Multiframe Structure.

Frame Number	F <sub>T</sub>	F <sub>s</sub>
1	1	
2	_	Service bit
3	0	
4	_	Service bit

# **Synchronization Procedure**

For multiframe synchronization, the terminal framing bits (FT bits) are observed. The synchronous state is reached if at least one terminal framing candidate is definitely found, or the synchronizer is forced to lock onto the next available candidate (RCMDR.FRS).



# **4.6.2 ESF Mode**

The ESF multiframe consists of 24 consecutive frames. The first bit of each frame (F bit) is used as frame alignment, data link channel and CRC-6 channel (see **Table 4-6**).

Table 4-6 ESF Multiframe Structure

	F bits			
Frame number	Superframe bit number	Framing Pattern Sequence (FPS)	Data link (DL)	Cyclic redundancy check (CRC-6)
1	0	-	m	-
2	193	-	-	c1
3	386	-	m	-
4	579	0	-	-
5	772	-	m	-
6	965	-	-	c2
7	1158	-	m	-
8	1351	0	-	-
9	1544	-	m	-
10	1737	-	-	сЗ
11	1930	-	m	-
12	2123	1	-	-
13	2316	-	m	-
14	2509	-	-	c4
15	2702	-	m	-
16	2895	0	-	-
17	3088	-	m	-
18	3281	-	-	c5
19	3474	-	m	-
20	3667	1	-	-
21	3860	-	m	-
22	4053	-	-	c6



23	4246	-	m	-
24	4439	1	-	-

Frame 1 is transmitted first. Bit 1 (most significant bit) of each frame is transmitted first.

# 4.6.2.1 Multiframe Synchronization Procedure of the Receiver

The F-bit of every fourth frame forms the pattern 001011. This multiframe alignment allows to identify where each particular frame is located within the multiframe in order to extract the cyclic redundancy check code (CRC-6) and the data link information.

In the synchronous state two errors within 4 or 5 framing bits, two or more erroneous framing bits within one ESF multiframe or 4 consecutive errored multiframes will lead to the asynchronous state.

There are two multiframe synchronization modes selectable via RFMR.SSP:

- In the synchronous state, the setting of RCMDR.FRS resets the synchronizer and initiates a new frame search. The synchronous state will be reached again, if there is only one definite framing candidate. In the case of repeated apparent simulated candidates, the synchronizer remains in the asynchronous state. In asynchronous state, setting bit RCMDR.FRS induces the synchronizer to lock onto the next available framing candidate if there is one. At the same time the internal framing pattern memory will be cleared and other possible framing candidates are lost.
- In the synchronous state, the setting of RCMR.FRS resets the synchronizer and initiates a new frame search. Synchronization is achieved if there is only one definite framing candidate AND the CRC-6 checksum is received without an error. If the CRC-6 check failed on the assumed framing pattern the MUNICH256FM will stay in the asynchronous state, searching for an alternate framing pattern.

In case no alternate framing pattern can be found, setting bit RCMDR.FRS starts a totally new multiframe search. At the same time the internal framing pattern memory will be cleared and other possible framing candidates are lost.

# 4.6.2.2 CRC-6 Generation / Check according to ITU-T G.706

#### Generation

In calculating the CRC-6 bits, the F-bits are replaced by binary 1s. All information in the other bit positions will be identical to the information in the corresponding multiframe bit positions.

The CRC-6 bit sequence c1, c2, c3, c4, c5, c5 and c6 calculated on multiframe N is transmitted in multiframe N+1. This CRC polynomial is defined as the remainder after



multiplication by x6 and then division (modulo 2) by the generator polynomial x6+x+1 of the polynomial corresponding to multiframe N. The first check bit c1 is the most significant bit of the remainder; the last check bit c6 is the least significant bit of the remainder.

#### Check

At the receiver, the received multiframe, with each F-bit having first been replaced by a binary 1, is acted upon by the multiplication/division process described above. The resulting remainder is compared on a bit-by-bit basis, with the CRC-6 check bits contained in the subsequently received multiframe.

In synchronous state a received CRC-6 error may generate an interrupt status and will increment a CRC-6 counter.

# 4.6.2.3 Remote Alarm (Yellow Alarm) Generation / Detection

#### Generation

If TFMR.AXRA=1, the remote alarm sequence will be automatically sent in the outgoing data stream when the receiver is in asynchronous state (FRS.LFA bit is set). Remote Alarm is also sent unconditionally when TCMDR.XRA='1'. ESF RA is sent by repeating the pattern '1111 1111 0000 0000' in the Data Link (DL).

#### **Detection**

Remote Alarm (yellow alarm) is detected and flagged with bit FRS.RRA when the pattern '1111 1111 0000 0000' is received in the DL bits if RFMR.SRAF=0. If RFMR.SRAF=1, yellow alarm is detected when every bit2 of each time slot is 0. If RFMR.RRAM is set, Remote Alarm can be detected even in the presence of BER 1/1000. FRS.RRA will be reset automatically when the alarm condition is no longer detected.

# 4.6.2.4 Facility Data Link

The Facility Data Link (FDL) contains bit oriented messages (priority or command/response) or HDLC-based message oriented signals that are processed by a HDLC machine. Each T1 port has its dedicated FDL controller. In HDLC mode CRC16 is supported. Additionally one or two byte address comparison is supported.

Note: CAS - BR (Channel Associated Signalling - bit robbing) is not supported. The protocol machines support access to 56 kBit/s or 64 kBit/s data channels with their bit masking function. If CCS (Common Channel Signalling) is used, the corresponding channel (usually time slot 24) is handled as a standard data time slot by the HDLC/PPP machine and the data is transferred via the PCI bus.



In transmit and receive direction 64 byte deep FIFOs divided into two pages of 32 bytes are provided for the intermediate storage of data between the HDLC machine and the CPU interface.

# **Receive Signaling Controller**

Each of the signaling controllers may be programmed to operate in various signaling modes. The MUNICH256FM will perform the following signaling and data link methods on the DL-Channel of the ESF format:

#### HDLC/SDLC Access

In case of common channel signaling the signaling procedure HDLC/SDLC will be supported. The signaling controller of the MUNICH256FM performs the flag detection, CRC checking, address comparison and zero bit-removing. Depending on the selected address mode, the MUNICH256FM may perform a 1 or 2 byte address recognition. If a 2-byte address field is selected, the high address byte is compared with two individually programmable values in register RAH. Buffering of receive data is done in the RFIFO. Refer also to **Chapter 4.8.1**.

# Transparent Access

In signaling controller transparent mode, fully transparent data reception without HDLC framing is performed, i.e. without flag recognition, CRC checking or bit-stuffing. This allows the user specific protocol variations.

### Bit Oriented Messages in ESF-DL Channel

The MUNICH256FM supports the DL-channel protocol for ESF format according to ANSI T1.403 specification or according to AT&T TR54016. The Bit Oriented Message (BOM) receiver may be switched on/off separately. If the MUNICH256FM is used for HDLC formats only, the BOM receiver has to be switched off. If BOM-receiver has been switched on, an automatic switching between HDLC and BOM mode is enabled. If eight or more consecutive ones are detected, the BOM mode is entered. Upon detection of a flag in the data stream, the MUNICH256FM switches back to HDLC-mode. In BOM-mode, the following byte format is assumed (the left most bit is received first).

#### 111111110xxxxxx0

The MUNICH256FM uses the FF<sub>H</sub> byte for synchronization, the next byte is stored in RFIFO (first bit received: LSB) if it starts and ends with a '0'. Bytes starting or ending with a '1' are not stored. If there are no 8 consecutive one's detected within 32 bits and the MUNICH256FM is currently in the BOM mode, an interrupt is generated. However, byte sampling is not stopped.

### **Transmit Signaling Controller**

Similar to the receive signaling controller the same signaling method is provided. The MUNICH256FM will perform the following signaling and data link methods on the DL-channel of the ESF format:



#### HDLC access

The transmit signaling controller of the MUNICH256FM performs the FLAG generation, CRC generation, zero bit-stuffing and programmable IDLE code generation. Buffering of transmit data is done in the 2x32 byte deep transmit FIFO. The signaling information will be internally multiplexed with the data applied to the outgoing ports.

# Transparent/BOM mode

In signaling controller transparent mode, fully transparent data transmission without HDLC framing is performed. Optionally the MUNICH256FM supports the continuous transmission of the XFF.XFIFO contents with a maximum of 32 bytes.

Operating in HDLC or BOM mode "flags" or "idle" may be transmitted as interframe timefill.



#### 4.6.3 **SF Mode**

The SF multiframe consists of 12 consecutive frames. The first bit of each frame (F-bit) the MUNICH256FMis used as frame alignment (see following table).

Table 4-7 SF Multiframe Structure

	F-bits		
Frame number	Superframe bit number	Terminal Framing (Ft)	Signaling Framing (Fs)
1	0	1	-
2	193	-	0
3	386	0	-
4	579	-	0
5	772	1	-
6	965	-	1
7	1158	0	-
8	1351	-	1
9	1544	1	-
10	1737	-	1
11	1930	0	-
12	2123	-	0

The Fs-bits are used to get a higher synchronization probability but no CAS - BR (Channel Associated Signalling - bit robbing) is supported. Only frame alignment is provided in this mode.

# 4.6.3.1 Synchronization Procedure of the Receiver

In the synchronous state terminal framing (Ft-bits) and multiframing (Fs-bits) are observed, independently. Further reaction on framing errors depends on the selected synchronization/resynchronization procedure (via bit RFMR0.SSP):

Terminal frame and multiframe synchronization are combined. Two errors within 4/5/6 Ft-bits or two errors within 4/5/6 in Fs-bits (via bits RFMR.SSC) will lead to the asynchronous state for terminal framing and multiframing. Additionally to the bit FRS.LFA, loss of multiframe alignment is reported via bit FRS.LMFA. The resynchronization procedure starts with synchronizing upon the terminal framing. If the pulseframing has been regained, the search for



multiframe alignment is initiated. Multiframe synchronization has been regained after two consecutive correct multiframe patterns have been received.

Terminal frame and multiframe synchronization are separated. Two errors within 4/5/6 terminal framing bits will lead to the same reaction as described above for the 'combined' mode. Two errors within 4/5/6 multiframing bits will lead to the asynchronous state only for the multiframing. Loss of multiframe alignment is reported via bit FRS.LMFA. The state of terminal framing is not influenced. Now, the resynchronization procedure includes only the search for multiframe alignment. Multiframe synchronization has been regained after two consecutive correct multiframe patterns have been received.

# 4.6.3.2 Remote Alarm (Yellow Alarm) Generation / Detection

There are two possibilities of remote alarm (yellow alarm) indication:

- Bit 2 = '0' in each time slot of the frame, selected with bit R/TFMR.SRAF = 0
- The last bit of the multiframe alignment signal (bit 1 of frame 12) changes from '0' to '1', selected with bit R/TFMR.SRAF = 1.

#### Generation

If TFMR.AXRA=1, the remote alarm sequence will be automatically sent in the outgoing data stream when the receiver is in asynchronous state (FRS.LFA bit is set). Remote Alarm is also sent unconditionally when TCMDR.XRA = 1.

#### **Detection**

Remote alarm (yellow alarm) is detected and flagged with bit FRS.RRA which will be reset automatically when the alarm condition is no longer detected.



### 4.6.4 Common Features for SF and ESF

# 4.6.4.1 AIS (Blue Alarm) Generation/Detection

#### Generation

The alarm indication signal is an all one unframed signal and will be transmitted if enabled via bit TCMDR.XAIS.

#### **Detection**

The detection of AIS is done, if 2 or less '0's are detected in a multiframe. This condition is flagged by bit FRS.AIS. AIS detection can also only be enabled in asynchronous state by bit RFMR0.AIS3. In this case AIS is indicated if three or less zeros within a time interval of 12 frames (in SF mode), or if five or less zeros within a time interval of 24 frames (ESF mode) are detected in the received bit stream.

# 4.6.4.2 Loss of Signal (Red Alarm) Detection

The MUNICH256FM can be programmed to satisfy the different definitions for detecting Loss of Signal (LOS) alarms in ITU-T G.775 and AT&T TR54016. Loss of signal is indicated by a flag in the receive framer's status register (FRS.LOS). In addition, a 'Loss of Signal Status' interrupt vector is generated, if not masked.

LOS detection and recovery conditions are set by a flag RFMR.LOSR and the two parameters PCD and PCR.

#### **Detection**

'Loss of Signal' alarm will be generated, if the incoming data stream has no pulses (no '1') for a certain number N of consecutive bits. 'No pulse' in the receive interface means a logical zero octet on receive data inputs. The number N can be set via register PCD and is calculated as 8\*(PCD+1).

#### Recovery

The recovery procedure starts after detecting a logical '1' in the received bit stream. The value via register PCR defines the number of pulses, which must occur during the time interval 8\*(PCD+1), to clear the LOS alarm.

Additionally, if selected via RFMR.LOSR, any pulse density violation resets the measurement interval. I.e. in addition to the basic pulse density required for recovery, a density of at least N '1's in every N+1 octets (0 < N < 24) is required during 8\*(PCD+1) bit intervals.



# 4.6.4.3 In-Band Loop Generation and Detection

The MUNICH256FM generates and detects a framed or unframed in-band loop up/actuate (00001) and down/deactuate (001) pattern according to ANSI T1.403 even in the presence of bit error rates as high as 1/100. Replacing the transmit data with the in-band loop codes is done by TCMDR.XLD / XLU for actuate or deactuate loop code.

The CPU must reset this bit to 0 for normal operation (no loop-back code). The MUNICH256FM also offers the ability to generate and detect a flexible in-band loop up/actuate and down/deactuate pattern. The loop up and down pattern is individual programmable in the Loop Code Register from 5 to 8 bits in length.

Status and interrupt-status bits will inform the user whether Loop Actuate- or Deactuate code was detected, but the CPU must activate the loop-back.

# 4.6.4.4 Pulse Density Detection

The framer examines the receive data stream of each port on the pulse density requirement defined by ANSI T1. 403. More than 15 consecutive zeros or less than N ones in each and every time window of 8(N+1) data bits, where N=23 will be detected. Violations of these rules are indicated by setting the status bit FRS.PDEN. Moreover the PDEN bit in the interrupt vector will be set.

# 4.6.4.5 Error Performance Monitoring

The MUNICH256FM supports the error performance monitoring by detecting following alarms in the received data.

- Framing errors
- CRC errors
- · Loss of frame alignment
- · Loss of signal
- · Alarm indication signal

Loss of frame alignment, Loss of signal and AIS are indicated with interrupt status bits. With a programmable interrupt mask (register IMR) all these error events could generate an Errored Second interrupt (ES) if enabled. Additionally a one Second interrupt could be generated to indicate that the ES interrupt has to be read. If the ES interrupt is set the enabled alarm status bits or the error counters have to be examined.

The following counters are implemented in the T1 framer:

- Framing Error Counter: This counter will be incremented when incorrect FT and FS bits in SF mode or incorrect FPS bits in ESF format are received. Framing errors will not be counted during asynchronous state.
- CRC Error Counter (Only ESF mode): The counter will be incremented when a
  multiframe has been received with a CRC error. CRC errors will not be counted during
  asynchronous state.



• Errored block counter: This counter will be incremented, if a multiframe has been received with framing errors or CRC errors (ESF only).

Clearing and updating of the counters is done according to bit RFMR1.ECM. If this bit is reset, the error counter is permanently updated. Reading of actual error counter status is always possible. The error counters are reset by reading the corresponding status register. If RFMR1.ECM is set, every second the error counter will be latched and then automatically reset. The latched error counter state should be read within the next second.

# 4.6.4.6 Pseudo-random Bit Sequence Generator and Monitor

A Pseudo-random bit sequence (PRBS) generator and monitor according to ITU O.151 can be activated for one particular logical channel. The PRBS pattern type can be selected as 2<sup>15</sup>-1 or 2<sup>20</sup>-1 via R/TPRBSC.PRP. Moreover, the number of the time slots which should be used for PRBS can be defined in R/TPTSL register.

Additionally a fixed pattern can be programmed via registers R/TFPR0 and R/TFPR1 with length up to 32 bit to be defined in R/TPRBSC.FPL.

The PRBS monitor searches synchronization on the inverted and non-inverted PRBS pattern. The current synchronization status is reported in status and interrupt status registers. Each PRBS bit error will increment an error counter. An additional counter will accumulate the total number of received bits. Synchronization will be reached within 400 ms with a probability of 99.9% and a BER of 1/10.



# 4.7 E1 Framing and Signaling

The operating mode of the MUNICH256FM is selected by programming the carrier data rate and characteristics, multiframe structure, and signaling scheme.

The MUNICH256FM implements the standard framing structures for E1 or PCM 30 (CEPT, 2048 Kbit/s) carriers. The internal HDLC controller supports signaling procedures like signaling frame synchronization/synthesis and signaling alarm detection in all framing formats.

Summary of E1- Framing Modes:

- Doubleframe format according to ITU-T G. 704.
- Multiframe format according to ITU-T G. 704 CRC-4 processing according to ITU-T G. 706.
- Multiframe format with CRC-4 to non CRC-4 interworking according to ITU-T G. 706.

After reset, the MUNICH256FM is switched into doubleframe format automatically. Switching between the framing formats is done via bit T/RFMR.FM



#### 4.7.1 Doubleframe Format

The framing structure is defined by the contents of time-slot 0 (refer to **Table 4-8**).

Table 4-8 Allocation of Bits 1 to 8 of Time slot 0

Bit Alternate Number Frames	1	2	3	4	5	6	7	8
Frame Containing the Frame Alignment Signal	Si	0	0	1	1	0	1	1
	1)	Frame	Alignme	ent Sign	al		1	1
Frame not Containing the Frame Alignment Signal	Si	1 2)	A 3)	S <sub>a4</sub>	S <sub>a5</sub>	S <sub>a6</sub>	S <sub>a7</sub>	S <sub>a8</sub>

Si-bits: Reserved for international use.-They are fixed to '1'.

4) S<sub>a</sub>-bits:

Reserved for national use. If not used, they should be fixed at '1'. Access to received information via registers RSAW1-3. Transmission via registers XSAW1-XSAW3. HDLC signalling in bits  $S_{a4}$  -  $S_{a8}$  is selectable.

# 4.7.1.1 Synchronization Procedure of the Receiver

Synchronization status is reported via bit FRS.LFA. Framing errors are counted by the Framing Error Counter (FEC). Asynchronous state is reached after detecting 3 or 4 consecutive incorrect FAS words or 3 or 4 consecutive incorrect service words (bit 2 = 0 in time-slot 0 of every other frame not containing the frame alignment word), the selection is done via bit RFMR.SSC. Additionally, the service word condition can be disabled. When the framer lost its synchronization an status bit FRS.LFA is generated.

In asynchronous state, counting of framing errors will be stopped.

The resynchronization procedure starts automatically after reaching the asynchronous state. Additionally, it may be invoked user controlled via bit RCMDR.FRS (Force Resynchronization: the FAS word detection is interrupted. In connection with the above conditions this will lead to asynchronous state. After that, resynchronization starts automatically).

<sup>2)</sup> Fixed to '1'. Used for synchronization.

<sup>3)</sup> Remote alarm indication: In undisturbed operation '0'; in alarm condition '1'.



Synchronous state is established after detecting:

- a correct FAS word in frame n,
- the presence of the correct service word (bit 2 = 1) in frame n + 1,
- a correct FAS word in frame n + 2.

If the service word in frame n + 1 or the FAS word in frame n + 2 or both are not found searching for the next FAS word will be start in frame n + 2 just after the previous frame alignment signal.

Reaching the asynchronous state causes the removal of FSR.LFA and additionally an interrupt vector with LFA bit reset (if not masked). Undisturbed operation starts with the beginning of the next doubleframe.

### 4.7.1.2 A-bit Access

If the MUNICH256FM detects a remote alarm indication in the received data stream the interrupt status bit FRS.RRA will be set.

By setting TFMR.AXRA the MUNICH256FM automatically transmits the remote alarm bit = 1 in the outgoing data stream if the receiver detects a loss of frame alignment FRS.LFA = 1. If the receiver is in synchronous state FRS.LFA = 0 the remote alarm bit will be reset.

# 4.7.1.3 S<sub>a</sub>-bit Access

The MUNICH256FM allows access to the S<sub>a</sub>-bits via registers RSAW1-3 and XSAW1-3.



#### 4.7.2 CRC-4 Multiframe

The multiframe structure shown in **Table 4-9** is enabled by setting TFMR.FM for the transmitter and RFMR.FM for the receiver.

Multiframe : 2 submultiframes =  $2 \times 8$  frames

Frame alignment: refer to Chapter 4.7.1 Doubleframe Format

Multiframe alignment: bit 1 of frames 1, 3, 5, 7, 9, 11 with the pattern '001011'

CRC bits : bit 1 of frames 0, 2, 4, 6, 8, 10, 12, 14

CRC block size: 2048 bit (length of a submultiframe)

CRC procedure: CRC-4, according to ITU-T G.704, G.706

Table 4-9 CRC-4 Multiframe Structure

	Sub-	Frame			Bits 1	to 8 d	of the	Frame		
	Multiframe	Number	1	2	3	4	5	6	7	8
Multiframe	I	0	$C_1$	0	0	1	1	0	1	1
		1	0	1	Α	$S_{a4}$	$S_{a5}$	S <sub>a61</sub>	S <sub>a7</sub>	S <sub>a8</sub>
		2	$C_2$	0	0	1	1	0	1	1
		3	0	1	Α	$S_{a4}$	$S_{a5}$	S <sub>a62</sub>	S <sub>a7</sub>	$S_{a8}$
		4	$C_3$	0	0	1	1	0	1	1
		5	1	1	Α	S <sub>a4</sub>	$S_{a5}$	S <sub>a63</sub>	S <sub>a7</sub>	$S_{a8}$
		6	$C_4$	0	0	1	1	0	1	1
		7	0	1	Α	$S_{a4}$	$S_{a5}$	S <sub>a64</sub>	S <sub>a7</sub>	$S_{a8}$
	II	8	$C_1$	0	0	1	1	0	1	1
		9	1	1	Α	$S_{a4}$	$S_{a5}$	S <sub>a61</sub>	S <sub>a7</sub>	$S_{a8}$
		10	$C_2$	0	0	1	1	0	1	1
		11	1	1	Α	$S_{a4}$	$S_{a5}$	S <sub>a62</sub>	S <sub>a7</sub>	$S_{a8}$
		12	$C_3$	0	0	1	1	0	1	1
		13	E	1	Α	$S_{a4}$	$S_{a5}$	S <sub>a63</sub>	S <sub>a7</sub>	$S_{a8}$
		14	$C_4$	0	0	1	1	0	1	1
		15	Е	1	Α	$S_{a4}$	S <sub>a5</sub>	$S_{a64}$	S <sub>a7</sub>	$S_{a8}$

Spare bits for international use. E bits are replaced by XSP.XS13 and XSP.XS15 or automatic transmission for submultiframe error indication.

Remote alarm indication. Automatic transmission of the A-bit is selectable.

Ε

 $S_a$  Spare bits for national use.  $S_a$ -bit access via registers RSAW1-3 and XSAW1-3 is provided. HDLC-signaling in bits  $S_{a4}$  -  $S_{a8}$  is selectable.

C<sub>1</sub> ... C<sub>4</sub>
Cyclic redundancy check bits.



The CRC procedure is automatically invoked when the multiframe structure is enabled. CRC errors in the received data stream are counted by the 16 bit CRC Error Counter CEC (one error per submultiframe, maximum).

Additionally a CRC error interrupt vector with CRC set can be generated if enabled.

# 4.7.2.1 Synchronization Procedure of the Receiver

Multiframe alignment is assumed to have been lost if doubleframe alignment has been lost (flagged at status bits FRS.LFA and FRS.LMFA). Either edge of these bits will cause an LFA interrupt.

The multiframe resynchronization procedure starts when Doubleframe alignment has been regained which is indicated by a FAS interrupt vector. For Doubleframe synchronization refer to **Chapter 4.7.1**. It may also be invoked by the user by setting bit RFMR.FRS for complete doubleframe **and** multiframe resynchronization.

The CRC checking mechanism will be enabled after the first correct multiframe pattern has been found. However, CRC errors will not be counted in asynchronous state.

The multiframe synchronous state is established after detecting two correct multiframe alignment signals at an interval of  $n \times 2$  ms (n = 1, 2, 3 ...). The loss of multiframe alignment flag FRS.LMFA will be reset. Additionally a multiframe alignment status interrupt MFAS is generated on the falling edge of bit FRS.LMFA.

# **Automatic Force Resynchronization**

In addition, a search for Doubleframe alignment is automatically initiated if two multiframe pattern with a distance of  $n \times 2$  ms have not been found within a time interval of 8 ms after doubleframe alignment has been regained. The new search for frame alignment will be started just after the previous frame alignment signal.

### **CRC-4 Interworking Mode**

CRC-4 interworking is implemented according to ITU-T G.706 Appendix B. For operational description refer to **Figure 4-11**.

# 4.7.2.2 CRC-4 Performance Monitoring

In the synchronous state checking of multiframe pattern is disabled. However, with bit RFMR.ALMF an automatic multiframe resynchronization mode can be activated. If 915 out of 1000 errored CRC submultiframes are found then a false frame alignment will be assumed and a search for double- and multiframe pattern is initiated. The new search for frame alignment will be started just after the previous basic frame alignment signal. The internal CRC-4 resynchronization counter will be reset when the multiframe synchronization has been regained.



#### 4.7.2.3 A-Bit Access

If the MUNICH256FM detects a remote alarm indication (bit 2 in TS0 not containing the FAS word) in the received data stream a RAS interrupt will be generated. With the deactivation of the remote alarm the remote alarm status interrupt with RAS='0' is generated.

By setting TFMR.AXRA the MUNICH256FM automatically transmits the remote alarm bit = '1' in the outgoing data stream if the receiver detects a loss of frame alignment (FRS.LFA = '1'). If the receiver is in synchronous state (FRS.LFA = '0') the remote alarm bit will be reset in the outgoing data stream.



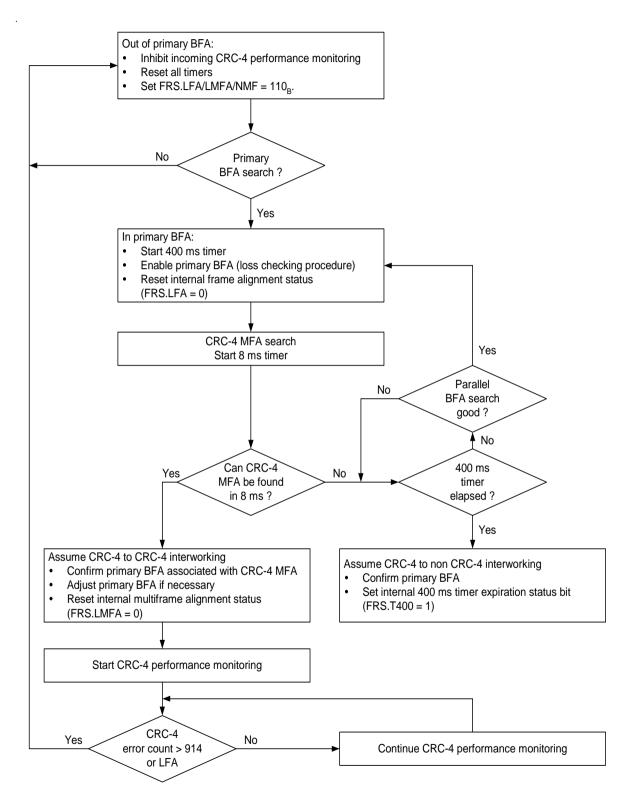


Figure 4-11 CRC-4 Multiframe Alignment Recovery Algorithms



# 4.7.2.4 S<sub>a</sub>-bit Access

Due to signaling procedures using the five  $S_a$ -bits ( $S_{a4} \dots S_{a8}$ ) of every other frame of the CRC-4 multiframe structure, two possibilities of access via the microprocessor are implemented.

- The standard procedure, allows reading/writing the S<sub>a</sub>-bit registers RSAW1 to RSAW3 and XSAW1 through XSAW3.
  - Registers RSAW1-3 contains the service word information of the previously received CRC-4 multiframe or 8 doubleframes (bit slots 4-8 of every service word). These registers will be updated on every multiframe. Optionally MUNICH256FM provides the possibility to check the received S<sub>a</sub>-data with the S<sub>a</sub>-data received earlier. An interrupt vector is generated on S<sub>a</sub>-data change in order to reduce microprocessor bus load. With the transmit multiframe begin the contents of this registers XSAW1-3 will be copied into shadow registers. The contents will subsequently sent out in the service words of the next outgoing CRC-4 multiframe (or doubleframes). The TXSA interrupt request that these registers should be serviced. If requests for new information will be ignored, current contents will be repeated.
- The extended access via the receive and transmit FIFOs of the signaling controller. In this mode it is possible to transmit / receive a HDLC frame or a transparent bit stream in any combination of the S<sub>a</sub>-bits.

# S<sub>a</sub>-bit Detection according to ETS 300233

Four consecutive received  $S_a$ -bits are checked on the by ETS 300233 defined  $S_a$ -bit combinations. The MUNICH256FM can be programmed to detect any bit combination on one  $S_a$ -bit out of  $S_{a4}$  through  $S_{a8}$ . Enabling of specific bit combination can be done via register RCR2.SASSM. A valid  $S_a$ -bit combination must occur three times in a row. The corresponding status in register RSAW4 will be set. Register RSAW4 is from type "Clear on Read". With any change of state of the selected  $S_a$ -bit combinations a 'SSM Data Valid' interrupt vector will be generated.

During the basic frame asynchronous state updating of register RSAW4 and interrupt vector generation is disabled. In CRC-4 multiframe format the detection of the  $S_a$ -bit combinations can be done either synchronous or asynchronous to the submultiframe. In synchronous detection mode updating of register RSAW4 is done in the multiframe synch. state. In asynchronous detection mode updating is independent to the multiframe synchronous state.

### S<sub>a</sub>-bit Error Indication Counters

The  $S_a$ -bit error indication counter CRC1 (16 bits) counts either the received bit sequence  $0001_B$  and  $0011_B$  or two user programmable values defined in register VCRC in every submultiframe on a selectable  $S_a$ -bit. In the primary rate access digital section CRC errors are reported from the TE via  $S_{a6}$ . Incrementing is only possible in the multiframe synchronous state.



The  $S_a$ -bit error indication counter CRC2 (16 bits) counts either the received bit sequence  $0010_B$  and  $0011_B$  or two user programmable values defined in register VCRC in every submultiframe on a selectable  $S_a$ -bit. In the primary rate access digital section CRC errors detected at T-reference points are reported via  $S_{a6}$ . Incrementing is only possible in the multiframe synchronous state.

# 4.7.2.5 E-Bit Access

Due to signalling procedures, the E-bits of frame 13 and frame 15 of the CRC-4 multiframe can be used to indicate received errored submultiframes:

no CRC error : E = '1'CRC error : E = '0'

#### **Standard Procedure**

E-bits of the service word are replaced by values of bit XSP.XS13 and XSP.XS15.

#### **Automatic Procedure**

Values programmed in register Status information of received submultiframes is automatically inserted in E-bit position of the outgoing CRC-4 Multiframe without any further interventions of the microprocessor.

In the double- and multiframe asynchronous state the E-bits are set to zero. In the multiframe synchronous state the E-bits are processed according to ITU-T G.704.

#### **Submultiframe Error Indication Counter**

The Error Bit Counter counts zeros in E-bit position of frame 13 and 15 of every received CRC-4 multiframe. This counter option gives information about the outgoing transmit line if the E-bits are used by the remote end for submultiframe error indication. Incrementing is only possible in the multiframe synchronous state.



### 4.7.3 Common Features for E1 Doubleframe and CRC-4 Multiframe

# 4.7.3.1 Error Performance Monitoring and Alarm Handling

# Alarm detection and generation

Alarm Indication Signal:

Detection and recovery is flagged by bit FRS.AIS and the 'Alarm Indication Signal Status' interrupt vector. Transmission is enabled via bit TFMR.XAIS.

#### Loss of Signal:

Detection and recovery is flagged via bit FRS.LOS and a 'Loss of Signal Status' interrupt vector.

#### Remote Alarm Indication:

Detection and release is flagged by bit FRS.RRA and a 'Remote Alarm Status' interrupt vector. Transmission is enabled via bit TCMDR.XRA.

Table 4-10 Summary of Alarm Detection and Alarm Release

Alarm	<b>Detection Condition</b>	Clear Condition
Loss of Signal (LOS)	PCD Register No transitions (log. zero octets) in a programmable time interval of 16 - 512 consecutive pulse periods.	_
Alarm Indication Signal (AIS)	FMR0.ALM = 0: less than 3 zeros in 250 μs and loss of frame alignment declared FMR0.ALM = 1: less than 3 zeros in each of two consecutive double frame periods	FMR0.ALM = 1: more than 2 zeros in each of two
Remote Alarm (RRA)	bit 3 = 1 in time-slot 0 not containing the FAS word	set conditions no longer detected.



#### Automatic remote alarm access

If the receiver has lost its synchronization a remote alarm could be sent if enabled via TFMR.AXRA to the distant end. The remote alarm bit will be automatically set in the outgoing data stream if the receiver is in asynchronous state (FRS.LFA bit is set). In synchronous state the remote alarm bit will be removed.

#### **Error Counter**

The MUNICH256FM framer offers four error counters, each of them has a length of 16 bit. They record framing bit errors, CRC-4 bit errors. Updating the buffer is done in two modes:

- one second boundary
- clear on read

In the one second mode an internal one second timer will update these buffers and reset the counter to accumulating the error events. The error counter can not overflow. Error events occurring during reset will not be lost.

#### **Status: Errored Second**

MUNICH256FM supports the error performance monitoring by detecting alarms or error events in the received data.

Loss of frame alignment, including alarm indication signal and loss of signal, as well as CRC errors could generate an Errored Second interrupt if enabled.

#### **Second Timer**

An one-second timer interrupt could be internally generated to indicate that the enabled alarm status bits or the error counters have to be checked.

# 4.7.3.2 Loss of Signal Detection

The MUNICH256FM can be programmed to satisfy the different definitions for detecting Loss of Signal (LOS) alarms in ITU-T G.775 and ETS 300233. Loss of signal is indicated by a flag in the receive framer's status register (FRS.LOS). In addition, a 'Loss of Signal Status' interrupt vector is generated, if not masked.

#### **Detection**

'Loss of Signal' alarm will be generated, if the incoming data stream has no pulses (no '1') for a certain number N of consecutive pulse periods. 'No pulse' in the receive interface means a logical zero on receive data inputs. The number N can be set via register PCD and is calculated as 8\*(PCD+1).



### Recovery

The recovery procedure starts after detecting a logical '1' in the received bit stream. The value via register PCR defines the number of pulses, which must occur during the time interval 8\*(PCD+1), to clear the LOS alarm.

# 4.7.3.3 In-Band Loop Generation and Detection

The MUNICH256FM generates and detects a framed or unframed in-band loop up/actuate (00001) and down/deactuate (001) pattern according to ANSI T1.403 with bit error rates as high as 1/100. Replacing the transmit data with the in-band loop codes is done by TCMDR.XLD / XLU for actuate or deactuate loop code.

The CPU must reset this bit to 0 for normal operation (no loop-back code). The MUNICH256FM also offers the ability to generate and detect a flexible in-band loop up/actuate and down/deactuate pattern. The loop up and down pattern is individual programmable in the Loop Code Register from 5 to 8 bits in length.

Status and interrupt-status bits will inform the user whether Loop Up - or Loop Down code was detected, but the CPU must activate the loop-back.

# 4.7.3.4 Pseudo-random Bit Sequence Generator and Monitor

A Pseudo-random bit sequence (PRBS) generator and monitor according to ITU O.151 can be activated for one particular logical channel. The PRBS pattern type can be selected as 2<sup>15</sup>-1 or 2<sup>20</sup>-1 via R/TPRBSC.PRP. Moreover, the number of the time slots which should be used for PRBS can be defined in R/TPTSL register.

Additionally a fixed pattern can be programmed via registers R/TFPR0 and R/TFPR1 with length up to 32 bit to be defined in R/TPRBSC.FPL.

The PRBS monitor searches synchronization on the inverted and non-inverted PRBS pattern. The current synchronization status is reported in status and interrupt status registers. Each PRBS bit error will increment an error counter. An additional counter will accumulate the total number of received bits. Synchronization will be reached within 400 ms with a probability of 99.9% and a BER of 1/10.



#### **Alarm Simulation**

Alarm simulation does not affect the normal operation of the device, i.e. all channels remain available for transmission. However, possible 'real' alarm conditions are not reported to the processor or to the remote end when the device is in the alarm simulation mode.

The alarm simulation is initiated by setting different code words in bit field FMR0.SIM. The following alarms are simulated:

- · Loss of Signal
- Alarm Indication Signal (AIS)
- Auxiliary pattern
- · Loss of pulse frame
- · Remote alarm indication
- · Framing error counter
- CRC-4 error counter
- · E-Bit error counter

Some of the above indications are only simulated if the MUNICH256FM is configured in a mode where the alarm is applicable (e.g. no CRC-4 error simulation when doubleframe format is enabled).

Setting a code word in bit field FMR0.SIM initiates alarm simulation. Error counting and indication will occurs while this bit is set. After it is reset all simulated error conditions disappear.



# 4.8 Signaling Controller Protocol Modes

The signalling controller provides access to the data link and  $S_a$  bits of the T1/E1 signaland it provides access to the far end alarm and control channel (FEAC) and the C-bit parity path maintenance data link channel. It operates in HDLC, BOM or automatic modes.

#### 4.8.1 HDLC Mode

In HDLC mode the transmit signaling controller of the MUNICH256FM performs the FLAG generation, CRC generation, zero bit-stuffing and programmable IDLE code generation. Buffering of transmit data is done in the 2x32 byte deep transmit FIFO. The signaling information will be internally multiplexed with the data applied to the outgoing ports and is inserted in or extracted from the DL-Bits in T1 ESF mode or the  $S_a$ -bits in E1 modes. Any sequence of  $S_a$ -bits can be specified for protocol insertion.

# **Shared Flags**

The closing flag of a previously transmitted frame simultaneously becomes the opening flag of the following frame if there is one to be transmitted. The Shared Flag feature is enabled by setting XCR1.SF.

#### **CRC** check

As an option in HDLC mode the internal handling of received and transmitted CRC checksum can be influenced via control bits RCR1.XCRC and XCR1.DISCRC.

- Receive Direction
  - The received CRC checksum is always assumed to be in the last two bytes of a frame, immediately preceding a closing flag. If RCR1.XCRC is set, the received CRC checksum will be written to RFIFO where it precedes the frame status byte. The received CRC checksum is additionally checked for correctness.
- Transmit Direction
   If XCR1.DISCRC is set, the CRC checksum is not generated internally. The checksum has to be provided via the transmit FIFO (XFF.XFIFO) as the last two bytes. The transmitted frame will only be closed automatically with a (closing) flag.

The MUNICH256FM does not check whether the length of the frame, i.e. the number of bytes to be transmitted makes sense or not.

### Address comparison

An optional address comparison feature forwards all frames which match a programmable address to the receive FIFO. Frames not matching the address are discarded.



If a 2-byte address field is selected, the high address byte is compared with two individually programmable values defined in register RAH. Similarly, two values can be programmed in register RAL for the low address byte. A valid address is recognized when the high byte and the low byte of the address field correspond to one of the compare values. Thus, the MUNICH256FM can be called (addressed) with 4 different address combinations.

In case of a 1-byte address, RAL will be used as compare registers. The HDLC control field, data in the I-field and an additional status byte are temporarily stored in the receive FIFO.

#### **Preamble Transmission**

If enabled, a programmable 8-bit pattern XCR1.PBYTE is transmitted with a selectable number of repetitions after interframe time-fill transmission is stopped and a new frame is ready to be sent out.

Zero Bit Insertion is disabled during preamble transmission. To guarantee correct function the programmed preamble value should be different from Receive Address Byte values.

# 4.8.2 Transparent Mode

In transparent mode, fully transparent data transmission/reception without HDLC framing is performed, i.e. without FLAG generation/recognition, CRC generation/check, or bit-stuffing. This feature can be profitably used e.g for:

- Specific protocol variations
- Test purposes

Data transmission is always performed out of the transmit FIFO (XFF.XFIFO). In transparent mode receive data is shifted into the receive FIFO without protocol processing.

If the transparent mode is selected, the MUNICH256FM supports the continuous transmission of the contents of the transmit FIFO.

After having written 1 to 32 bytes to transmit FIFO, the command HND via the CMDR register forces the MUNICH256FM to repeatedly transmit the data stored in transmit FIFO to the remote end.

The cyclic transmission continues until a reset command (HND. SRES) is issued or with resetting CMDR.XREP, after which continuous '1'-s are transmitted.

#### 4.8.3 **BOM Mode**

The signalling controller supports the DL channel protocol for ESF format according to ANSI T1.403 or according to AT&T TR54016. The Bit Oriented Message (BOM) receiver can be switched on or off separately. If the signalling controller is used for HDLC formats



only, the BOM receiver has to be switched off (RCR1.BRAC = '0'). If HDLC and BOM receiver are switched on, an automatic switching between HDLC and BOM mode is done, which depends on the received bit sequence ( $01111110_B$  or  $11111111_B$ ). If eight or more consecutive ones are detected, the BOM mode is entered automatically. Upon detection of a flag in the data stream, the FDL-Macro switches back to HDLC-mode.

Once in BOM mode, if eight consecutive ones are not detected in 32 bits, a BOM header error will be declared.

Transmission of BOM data is done via the transparent mode of the signalling controller.

# **BOM Regular Mode**

The following byte format is assumed (the left most bit is received first):

1111111110xxxxxx0<sub>B</sub>

The signalling controller uses the FF<sub>H</sub> byte for synchronization, the next byte is stored in the receive FIFO (first bit received: LSB) if it starts and ends with a '0'. Bytes starting or ending with a '1' are not stored. If there are no 8 consecutive one's detected within 32 bits and the FDL-Macro is currently in the BOM mode, an 'Incorrect Synchronization Format' interrupt vector is generated. However, byte sampling is not stopped.

After detecting an HDLC flag, byte sampling is stopped, the receive status byte marking a BOM frame is stored in the receive FIFO and a 'Receive Message End' interrupt vector is generated.

Byte sampling may be stopped by deactivating the BOM receiver (RCR1.BRAC). In this case the receive status byte marking a BOM frame is added, a 'Receive Message End' interrupt vector is generated and HDLC mode is entered.

#### **BOM Filter Mode**

In BOM filter mode the received BOM data is validated and then filtered. If same valid BOM pattern is received for 7 out of 10 patterns, then BOM data is written to the receive FIFO along with the status byte indicating that filtered BOM data was received.

Filtered BOM mode will be exited if one of the following conditions occurs:

- 4 valid BOM patterns are consecutively received but none of these equals the BOM data received earlier.
- 4 times idle pattern is received.
- A HDLC flag is received.

# 4.8.4 S<sub>a</sub>-bit Access

The MUNICH256FM supports the  $S_a$ -bit signaling of time-slot 0 of the T1/E1 signals in several ways. The access via registers RSAW and XSAW, capable of storing the information for a complete multiframe, and the most effective one is the access via the receive/transmit FIFOS of the integrated signaling controller.



The extended  $S_a$ -bit access gives the opportunity to transmit/receive a transparent bit stream as well as HDLC frames where the signaling controller automatically processes the HDLC protocol.

Data written to the transmit FIFO will subsequently be transmitted in the selected  $S_a$ -bit positions. Any combination of  $S_a$ -bits can be selected. After the data have been completely sent out an "all ones" or flags will be transmitted. The continuous transmission of a transparent bit stream, which is stored in the XFF.XFIFO, can be enabled.

The access to and from the FIFOs is supported by status and interrupts.

### S<sub>a</sub>-Bit Detection according to ETS 300233

Four consecutive received  $S_a$ -bits are checked on the by ETS 300233 defined  $S_a$ -bit combinations. The MUNICH256FM can be programmed to detect any bit combination on one  $S_a$ -bit out of  $S_{a4}$  through  $S_{a8}$ . Enabling of specific bit combination can be done via register RCR2.SASSM. A valid  $S_a$ -bit combination must occur three times in a row. The corresponding status in register RSAW4 will be set. Register RSAW4 is from type "Clear on Read". With any change of state of the selected  $S_a$ -bit combinations a 'SSM Data Valid' interrupt vector will be generated.

During the basic frame asynchronous state updating of register RSAW4 and interrupt vector generation is disabled. In CRC-4 multiframe format the detection of the  $S_a$ -bit combinations can be done either synchronous or asynchronous to the submultiframe. In synchronous detection mode updating of register RSAW4 is done in the multiframe synch. state. In asynchronous detection mode updating is independent to the multiframe synchronous state.

# S<sub>a</sub>-bit Error Indication Counters

The  $S_a$ -bit error indication counter CRC1 (16 bits) counts either the received bit sequence  $0001_B$  or  $0011_B$  or user programmable values in every submultiframe on a selectable  $S_a$ -bit. In the primary rate access digital section CRC errors are reported from the TE via  $S_{a6}$ . Incrementing is only possible in the multiframe synchronous state.

The  $S_a$ -bit error indication counter CRC2 (16 bits) counts either the received bit sequence  $0010_B$  or  $0011_B$  or user programmable values in every submultiframe on a selectable  $S_a$ -bit. In the primary rate access digital section CRC errors detected at T-reference points are reported via  $S_{a6}$ . Incrementing is only possible in the multiframe synchronous state.

# 4.8.5 Signalling Controller FIFO Operations

Access to the FIFO's of the signalling controllers is handled via registers RFF and XFF. FIFO status and commands are exchanged using the port status registers PSR and the



handshake register HND. Additional facility data link interrupt vectors inform system software about protocol and FIFO status.

#### **Receive FIFO**

In receive direction there are different interrupt indications associated with the reception of data:

- A 'Receive Pool Full' (RPF) interrupt vector is indicating that a data block can be read
  from the receive FIFO and the received message is not yet complete. It is generated,
  when the amount of data bytes has reached the programmed threshold.
- A 'Receive Message End' (RME) interrupt vector is indicating that the reception of one message is completed. After this interrupt system software has to read the PSR register in order to get the number of bytes stored in the receive FIFO. This number includes the status byte which is written into the receive FIFO as the last byte after the received frame. The status byte includes information about the CRC result, valid frame indication, abort sequence or data overflow. The format of the status byte is shown in the table below:

7	6	5	4		0
SMOD	E(1:0)	BRFO		STAT(4:0)	

SMODE Receiver Status Mode

This bit indicates the type of data received.

10<sub>B</sub> HDLC data

01<sub>B</sub> BOM data

BRFO BOM Receive FIFO Overflow

0 No overflow

1 Receive FIFO overflow

STAT Receive FIFO Status

This bit field reports the status of the data stored in the receive FIFO.

	HDLC mode	BOM MODE
00000 <sub>B</sub>	Valid HDLC Frame	BOM Filtered data declared
00001 <sub>B</sub>	Receive Data Overflow	BOM data available
00010 <sub>B</sub>	Receive Abort	BOM End
00011 <sub>B</sub>	Not Octet	BOM filtered data undeclared
00100 <sub>B</sub>	CRC Error	BOM header error (ISF, incorrect synchronization format)
00101 <sub>B</sub>	Channel Off	



After the received data has been read from the FIFO, the receive FIFO can be released by the CPU by issuing a 'Receive Message Complete' (HND.RMC) command. The CPU has to process a 'Receive Pool Full' interrupt vector and issue the 'Receive Message Complete' command before the second page of the FIFO becomes full. Otherwise a 'Receive Data Overflow' condition will occur. This time is dependent on the threshold programmed (smaller threshold results in shorter time).

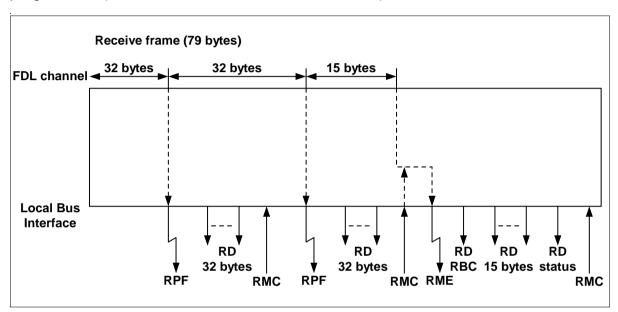


Figure 4-12 Interrupt Driven Reception Sequence Example

#### Transmit FIFO

In the transmit direction after checking the transmit FIFO status by polling the transmit FIFO write enable bit (PSR.XFW) or after a 'Transmit Pool Ready' (XPR) interrupt vector, up to 32 bytes may be written to the transmit FIFO (bit field XFF.XFIFO) by the CPU. Transmission of a frame can be started by issuing a 'Transmit Transparent Frame' (XTF) or 'Transmit HDLC Frame' (XHF) command via register HND. If the transmit command does not include a 'Transmit Message End' indication (HND.XME), the signalling controller will repeatedly request for the next data block by means of a XPR interrupt vector as soon as the transmit FIFO becomes free. This process will be repeated until the local CPU writes the last bytes to the transmit FIFO. The end of message is then indicated per HND.XME command, after which frame transmission is finished correctly by appending the CRC and closing flag sequence. Consecutive frames may share a flag (enabled via bit XCR1.SF) or may be transmitted as back-to-back frames, if service of transmit FIFO is quick enough. In case that no more data is available in the transmit FIFO prior to the arrival of HND.XME, the transmission of the frame is terminated with an abort sequence and the CPU is notified via a 'Transmit Data Underrun' interrupt vector (XDU). The frame may also be aborted per software by setting the XAB bit in the handshake register HND.



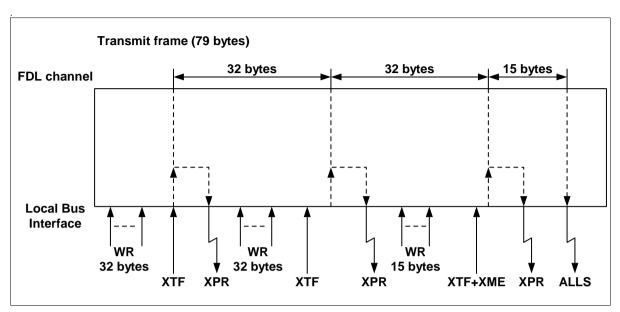


Figure 4-13 Interrupt Driven Transmit Sequence Example

Note: Transmit FIFO is 16 bit wide. In the given example writing 32 bytes requires 16 write accesses. Writing 15 byte requires 8 accesses.



# 4.9 M12 Multiplexer/Demultiplexer and DS2 framer

The M12 multiplexer and the DS2 framer can be operated in two modes:

- M12 multiplex format according to ANSI T1.107
- ITU-T G.747 format

# 4.9.1 M12 multiplex format

The framing structure of the M12 signal is shown in **Table 4-11**. A DS2 multiframe consists of four subframes. Each subframe combines 6 blocks with 49 bits each. The first bit of each block contains an overhead (OH) bit and 48 information bits. The 48 information bits are divided into four time slots of 12 bits each. The first time slot is assigned to the 1<sup>st</sup> tributary DS1 signal, the second time slot is assigned to the 2<sup>nd</sup> tributary DS1 signal and so forth.

Table 4-11 M12 multiplex format

	Subframe		Block 1 through 6 of a subframe										
		,	1	:	2	;	3		4	;	5		6
	1	$0_{M}$	[48]	C <sub>11</sub>	[48]	$F_0$	[48]	C <sub>12</sub>	[48]	C <sub>13</sub>	[48]	F <sub>1</sub>	[48]
DS2-	2	1 <sub>M</sub>	[48]	C <sub>21</sub>	[48]	$F_0$	[48]	C <sub>22</sub>	[48]	C <sub>23</sub>	[48]	F <sub>1</sub>	[48]
Multiframe	3	1 <sub>M</sub>	[48]	C <sub>31</sub>	[48]	F <sub>0</sub>	[48]	C <sub>32</sub>	[48]	C <sub>33</sub>	[48]	F <sub>1</sub>	[48]
•	4	Χ	[48]	C <sub>41</sub>	[48]	F <sub>0</sub>	[48]	C <sub>42</sub>	[48]	C <sub>43</sub>	[48]	F <sub>1</sub>	[48]

 $F_0, F_1$ 

 $F_0$  and  $F_1$  form the frame alignment pattern. Each DS2 frame consists of eight F-bits, two per subframe in block 3 and 6.  $F_0$  and  $F_1$  form the pattern '01'. This pattern is repeated in every subframe.

Χ

This bit is the forth bit of the multiframe alignment signal and can be set to either '0' or '1'. It is accessible via an internal register.

 $M_0, M_1, M_X$ 

 $M_0$  and  $M_1$  and  $M_X$  form the multiframe alignment signal. Each subframe consists of four M-bits and they are located in bit 0 of each subframe. The multiframe alignment signal is '011-'.

 $C_{11}..C_{43}$ 

The C-bits control the bit stuffing procedure of the multipexed DS1 signals.

[48]

These bits represent a data block, which consists of 48 bits. [48] consists of four time slots of 12 bit and each time slot is assigned to one of four participating DS1 signals.



# 4.9.1.1 Synchronization Procedure

The integrated DS2 framer searches for the frame alignment pattern '01' and the multiframe alignment pattern in each of the seven DS2 frames which are contained in a DS3 signal. Frame alignment is declared, when the DS2 framer has found the basic frame alignment pattern (F-bit) and the multiframe alignment pattern (M-bit).

Loss of frame is declared, when 2 out of 4 or 3 out of 5 incorrect F-bits are found or when one or more incorrect M-bits are found in 3 out of 4 subframes.

# 4.9.1.2 Multiplexer/Demultiplexer

### **Demultiplexer**

The demultiplexer extracts four DS1 signals out of each DS2 signal. If two out of three bits of  $C_{i1}$ ,  $C_{i2}$ ,  $C_{i3}$  are set to '1' the first information bit in the i<sup>th</sup> subframe and the 6<sup>th</sup> block which is assigned to the i<sup>th</sup> DS1 signal is discarded.

The demultiplexer performs inversion of the 2<sup>nd</sup> and 4<sup>th</sup> tributary DS1 signal.

### Multiplexer

The multiplexer combines four DS1 signals to form a DS2 signal. Stuffing bits are inserted and the  $C_{i1}$ -,  $C_{i2}$ -,  $C_{i3}$ -bits, which are assigned to the i<sup>th</sup> DS1 signal, are set to '1' in case that not enough data is available.

The 2<sup>nd</sup> and 4<sup>th</sup> DS1 signal are automatically inverted in transmit direction.

# 4.9.1.3 Loopback Control

### **Detection**

Loopback requests encoded in the C-bits of the DS2 signal are flagged when they are repeated for at least five DS2 multiframes. Loops must be initiated by an external microprocessor.

#### Generation

A loopback request, which is transmitted in lieu of the C-bits, can be placed in each DS2 signal.



# 4.9.1.4 Alarm Indication Signal

#### **Detection**

AIS is declared, when the AIS condition (the received DS2 data stream contains an all '1' signal with less then 3/9 zeros within 3156 bits while the DS2 framer is out of frame) is present within a time interval that is determined by register D2RAP.

#### Generation

The alarm indication signal is an all '1' unframed signal and will be transmitted if enabled.



#### 4.9.2 ITU-T G.747 format

The multiplexing frame structure is shown in **Table 4-12**.

Table 4-12 ITU-T G.747 format

	Set	Content	Bit
	I	Frame Alignment Signal 111010000	1 to 9
		Bits from tributaries	10 to 168
	II	Alarm indication to the remote multiplex equipment	1
		Parity Bit	2
		Reserved	3
ITU-T		Bits from tributaries	4 to 168
G.747 Frame	Ш	Justification control bits C <sub>j1</sub>	1 to 3
Trame		Bits from tributaries	4 to 168
	IV	Justification control bits C <sub>j2</sub>	1 to 3
		Bits from tributaries	4 to 168
	V	Justification control bits C <sub>j3</sub>	1 to 3
		Bits from tributaries available for justification	4 to 6
		Bits from tributaries	7 to 168

# 4.9.2.1 Synchronization Procedure

The integrated framer searches for the frame alignment pattern '111010000' in each of the seven frames which are contained in a DS3 signal. Frame alignment is declared, when the framer has found three consecutive correct frame alignment signals. If the frame alignment signal has been received incorrectly in one of the following frames after the receiver found the first correct frame alignment signal a new search is started.

Loss of frame is declared, when four consecutive frame alignment signals have been received incorrectly.

# 4.9.2.2 Multiplexer/Demultiplexer

### **Demultiplexer**

The demultiplexer extracts three E1 signals from each 6.312 MHz signal. If two out of three bits of  $C_{j1}$ ,  $C_{j2}$ ,  $C_{j3}$  are set to '1' the available justification bit of the j<sup>th</sup> E1 signal is discarded.



#### Multiplexer

The multiplexer combines three E1 signals to form a DS2 signal. Stuffing bits are inserted and the  $C_{j1}$ -,  $C_{j2}$ -,  $C_{j3}$ -bits, which are assigned to the  $j^{th}$  E1 signal, are set to '1' in case that not enough data is available.

## **4.9.2.3** Parity Bit

#### **Detection**

The receiver optionally calculates the parity of all tributary bits and compares this value with the received parity bit. Differences are counted in the parity error counter.

#### Generation

The parity bit is automatically calculated according to ITU-T G.747 or programmable to a fixed value under microprocessor control.

#### 4.9.2.4 Remote Alarm Indication

#### **Detection**

Remote alarm is reported when bit 1 of set II changes and when the change persists for at least three multiframes.

#### Generation

Remote alarm is transmitted in bit 2 of "set II" and can be inserted under microprocessor control.

# 4.9.2.5 Alarm Indication Signal

#### **Detection**

AIS is declared, when the AIS condition (the received DS2 data stream contains an all '1' signal with less then 5/9 zeros within two consecutive multiframes while the DS2 framer is out of frame) is present within a time interval that is determined by register D2RAP.

#### Generation

The alarm indication signal is an all '1' unframed signal and will be transmitted if enabled.



## 4.10 M23 multiplexer and DS3 framer

The M23 multiplexer and the DS3 framer can be operated in three modes:

- M23 multiplex format
- C-bit parity format with modified M23 multiplex operation
- C-bit parity format with non-M23 multiplex operation (Full payload rate format)

# 4.10.1 M23 multiplex format

The framing structure of the M23 multiplex signal is shown in **Table 4-13**. Each DS3 multiframe consists of 7 subframes and each subframe of eight blocks. One block consists of 85 bits, where the first bit is the overhead (OH) bit and the remaining 84 bits are the information bits. The 84 information bits are divided into seven time slots of 12 bits each. The first time slot is assigned to the 1<sup>st</sup> tributary DS2 signal, the second time slot is assigned to the 2<sup>nd</sup> tributary DS2 signal and so forth.

Table 4-13 M23 multiplex format

	Sub-					Blo	ock 1	thro	ough	8 of	a su	ıbfra	ame				
	frame		1		2	,	3		4	;	5	(	6	7	7	:	8
	1	Χ	[84]	F <sub>1</sub>	[84]	C <sub>11</sub>	[84]	F <sub>0</sub>	[84]	C <sub>12</sub>	[84]	F <sub>0</sub>	[84]	C <sub>13</sub>	[84]	F <sub>1</sub>	[84]
	2	Χ	[84]	F <sub>1</sub>	[84]	C <sub>21</sub>	[84]	$F_0$	[84]	C <sub>22</sub>	[84]	$F_0$	[84]	C <sub>23</sub>	[84]	F <sub>1</sub>	[84]
DS3-	3	Р	[84]	F <sub>1</sub>	[84]	C <sub>31</sub>	[84]	$F_0$	[84]	C <sub>32</sub>	[84]	$F_0$	[84]	C <sub>33</sub>	[84]	F <sub>1</sub>	[84]
Multi-		Р	[84]	F <sub>1</sub>	[84]	C <sub>41</sub>	[84]	$F_0$	[84]	C <sub>42</sub>	[84]	$F_0$	[84]	C <sub>43</sub>	[84]	F <sub>1</sub>	[84]
frame	5	$M_0$	[84]	F <sub>1</sub>	[84]	C <sub>51</sub>	[84]	$F_0$	[84]	C <sub>52</sub>	[84]	$F_0$	[84]	C <sub>53</sub>	[84]	F <sub>1</sub>	[84]
	6	$M_1$	[84]	F <sub>1</sub>	[84]	C <sub>61</sub>	[84]	F <sub>0</sub>	[84]	C <sub>62</sub>	[84]	F <sub>0</sub>	[84]	C <sub>63</sub>	[84]	F <sub>1</sub>	[84]
	7	$M_0$	[84]	$F_1$	[84]	C <sub>71</sub>	[84]	$F_0$	[84]	C <sub>72</sub>	[84]	$F_0$	[84]	C <sub>73</sub>	[84]	F <sub>1</sub>	[84]

 $F_0, F$ 

 $\rm F_0$  and  $\rm F_1$  form the frame alignment pattern. Each DS3 frame consists of 28 F-bits, four per subframe in block 2, 4, 6 and 8.  $\rm F_0$  and  $\rm F_1$  form the pattern '1001'. This pattern is repeated in every subframe.

#### $M_0$ , M

 $\rm M_0$  and  $\rm M_1$  form the multiframe alignment signal. The M-bit is contained in the OH-bit of the first block in subframe 5,6 and 7. The multiframe alignment signal is '010'.

### C<sub>11</sub>..C<sub>73</sub>

The C-bits control the bit stuffing procedure of the multipexed DS2 signals.

Ρ

The P-bits contain parity information and are calculated as even parity on all information bits of the previous DS3 frame. Both P-bits are identical.



Χ

The X-bits are used for transmission of asynchronous in-service messages. Both X-bits must be identical and may not change more than once every second.

[84]

These bits represent a data block, which consists of 84 bits.

[84] consists of seven time slots with 12 bits each and they are assigned to one of the seven participating DS2 signals.

## 4.10.1.1 Synchronization Procedure

The integrated DS3 framer searches for the frame alignment pattern '1001' and when found for the multiframe alignment pattern in each of the seven DS3 subframes. When the multiframe alignment pattern is found in three consecutive DS3 frames while frame alignment is still valid frame alignment is declared. The P-bits and the X-bits are ignored during synchronization.

Loss of frame is declared, when 3 out of 8 or 3 out of 16 incorrect F-bits are found or when one or more incorrect M-bits are found in 3 out of 4 subframes.

## 4.10.1.2 Multiplexer/Demultiplexer

### **Demultiplexer**

The demultiplexer extracts seven DS2 signals from the incoming DS3 signal. If two or three bits out of  $C_{i1}$ ,  $C_{i2}$ ,  $C_{i3}$  are set to '1' the first bit following the  $F_1$  bit in the i<sup>th</sup> subframe which is assigned to the i<sup>th</sup> DS2 signal is discarded.

### Multiplexer

The multiplexer combines seven DS2 signals to form a DS3 signal. If not sufficient data is available for a DS2 signal, it automatically inserts a stuffing bit and sets the bits  $C_{i1}$ ,  $C_{i2}$ ,  $C_{i3}$  assigned to the i<sup>th</sup> DS2 signal to '1'.

#### 4.10.1.3 X-bit

The MUNICH256FM provides access to the X-bit of each tributary via an internal registers. Data written to the X-bit register is copied to an internal shadow register which is then locked for one second after each write access.



## 4.10.1.4 Alarm Indication Signal, Idle Signal

#### **Detection**

Alarm indication signal or Idle signal is declared, when the selected signal format was received with less than 8/15 bit errors (selectable via bit D3RAP.AIS) for at least one multiframe. The alarm indication signal can be selected as:

- Unframed all '1's
- Framed '1010' sequence, starting with a binary '1' after each OH-bit. C-bits are set to '0'. X-bit can be checked as '1' or X-bit check can be disabled.

The idle signal is a

• Framed '1100' sequence, starting with a binary '11' after each OH-bit. C-bits are set to '0' in M-subframe 3. X-bit can be checked as '1' or X-bit check can be disabled.

#### Generation

The alarm indication signal or idle signal will be generated according to the selected signal format. X-bit needs to be set seperately to '1'.

## 4.10.1.5 Loss of Signal

#### **Detection**

Loss of signal is declared, when the incoming data stream contains more than 1022 consecutive '0's.

## Recovery

Loss of signal is removed, when two or more ones are detected in the incoming data stream.

#### 4.10.1.6 Performance Monitor

The following conditions are counted:

- · Line code violations
- Excessive zeroes
- P-bit errors, CP-bit errors
- Framing bit errors
- Multiframe bit errors
- Far end block errors



## 4.10.2 C-bit parity format

The framing structure of the C-bit parity format is shown in **Table 4-13**. The assignment of the information bits [84] is identical to the M23 multiplex format, but the function of the C-bits is redefined for path maintenance and data link channels.

Table 4-14 C-bit parity format

	Sub-					Blo	ck 1	thro	ough	8 of	a su	bfra	me				
	frame		1		2	;	3		4	į	5	(	6	7	7	1	В
	1	Χ	[84]	F <sub>1</sub>	[84]	AIC	[84]	$F_0$	[84]	N <sub>r</sub>	[84]	$F_0$	[84]	FEAC	[84]	F <sub>1</sub>	[84]
	2	Χ	[84]	F <sub>1</sub>	[84]	DL	[84]	$F_0$	[84]	DL	[84]	$F_0$	[84]	DL	[84]	F <sub>1</sub>	[84]
DS3-	3	Р	[84]	F <sub>1</sub>	[84]	СР	[84]	$F_0$	[84]	СР	[84]	$F_0$	[84]	СР	[84]	F <sub>1</sub>	[84]
Multi-	-	Р	[84]	F <sub>1</sub>	[84]	FEBE	[84]	$F_0$	[84]	FEBE	[84]	$F_0$	[84]	FEBE	[84]	F <sub>1</sub>	[84]
frame	5	$M_0$	[84]	F <sub>1</sub>	[84]	$DL_t$	[84]	$F_0$	[84]	$DL_t$	[84]	$F_0$	[84]	$DL_t$	[84]	F <sub>1</sub>	[84]
	6	$M_1$	[84]	F <sub>1</sub>	[84]	DL	[84]	$F_0$	[84]	DL	[84]	$F_0$	[84]	DL	[84]	F <sub>1</sub>	[84]
	7	$M_0$	[84]	F <sub>1</sub>	[84]	DL	[84]	$F_0$	[84]	DL	[84]	$F_0$	[84]	DL	[84]	F <sub>1</sub>	[84]

 $F_0, F_1$ 

 $F_0$  and  $F_1$  form the frame alignment pattern. Each DS3 frame consists of 28 F-bits, four per subframe in block 2, 4, 6 and 8.  $F_0$  and  $F_1$  form the pattern '1001'. This pattern is repeated in every subframe.

#### $M_0$ , M

 $M_0$  and  $M_1$  form the multiframe alignment signal. The M-bit is contained in the OH-bit of the first block in subframe 5,6 and 7. The multiframe alignment signal is '010'.

 $N_r$ 

Reserved. Set to '1' in transmit direction.

#### AIC

Application Identification Channel.

#### DL,

The terminal-to-terminal path maintenance data link uses the HDLC protocol. Access to the DL<sub>t</sub> bits is possible via the DS3 transmit and receive FIFO.

#### DL

Reserved. Set to '1' in transmit direction.

#### **FEAC**

The alarm or status information of a far end terminal is sent back over the far end and control channel. This bit also contains DS3 or DS1 line loopback requests. Messages are sent in bit oriented mode. Message codes can be accessed via an internal register.

#### **FEBE**

The far end block error bits indicate a CP-bit parity error or a framing error. They are used to



monitor the performance of a DS3 signal. Upon detection of either error in the incoming data stream the FEBE-bits are set automatically to '000' in the outgoing direction. Received far end block errors are counted.

CP

The CP-bits are used to carry path parity information and are set to the same value as the P-bits. In receive direction the CP-bits are checked against the calculated parity and differences are counted.

Ρ

The P-bits contain parity information and are automatically calculated as even parity on all information bits of the previous DS3 frame.

Χ

The X-bits are used for transmission of asynchronous in-service messages. Both X-bits must be identical and may not change more than once every second. Access to the X-bits is possible via a register.

[84]

These bits represent a data block, which consists of 84 bits. [84] consists of seven time slots with 12 bits each and they are assigned to one of the seven participating DS2 signals.

## 4.10.2.1 Synchronization Procedure

The integrated DS3 framer searches for the frame alignment pattern '1001' and when found for the multiframe alignment pattern in each of the seven DS3 subframes. Frame alignment is declared when the multiframe alignment pattern is found in three consecutive DS3 frames. The P-bits and the X-bits are ignored during synchronization.

Loss of frame is declared, when 3 out of 8 or 3 out of 16 incorrect F-bits are found or when one or more incorrect M-bits are found in 3 out of 4 subframes.

# 4.10.2.2 Multiplexer/Demultiplexer

### **Demultiplexer**

The demultiplexer extracts seven DS2 signals from the incoming DS3 signal. Since the DS3 signal is always stuffed the stuffing bit assigned to each DS2 signal is discarded.

#### Multiplexer

The multiplexer combines seven DS2 signals to form a DS3 signal and automatically inserts a stuffing bit for each DS2 signal.

#### 4.10.2.3 X-bit

The MUNICH256FM provides access to the X-bits via internal registers.



### 4.10.2.4 Far End Alarm and Control Channel

The far end alarm and control channel is accessible via the signalling controller in BOM mode.

#### 4.10.2.5 Path Maintenance Data Link Channel

The path maintenance data link channel is accessible via the signalling controller in HDLC mode.

### 4.10.2.6 Loopback Control

#### **Detection**

Loopback requests are encoded in the messages of the far end alarm and control channel. The microprocessor has access to the messages as described in **Chapter 4.10.2.4**.

#### Generation

A loopback request can be initiated via the far end alarm and control channel.

# 4.10.2.7 Alarm Indication Signal, Idle Signal

#### **Detection**

Alarm indication signal or Idle signal is declared, when the selected signal format was received with less than 8/15 bit errors (selectable via bit D3RAP.AIS) for at least one multiframe. The alarm indication signal can be selected as:

- Unframed all '1's
- Framed '1010' sequence, starting with a binary '1' after each OH-bit. C-bits are set to '0'. X-bit can be checked as '1' or X-bit check can be disabled.

The idle signal is a

• Framed '1100' sequence, starting with a binary '11' after each OH-bit. C-bits are set to '0' in M-subframe 3. X-bit can be checked as '1' or X-bit check can be disabled.

#### Generation

The alarm indication signal or idle signal will be generated according to the selected signal format. X-bit needs to be set seperately to '1'.



# 4.10.2.8 Loss of Signal

#### **Detection**

Loss of signal is declared, when the incoming data stream contains more than 1022 consecutive '0's.

#### Recovery

Loss of signal is removed, when two or more ones are detected in the incoming data stream.

#### 4.10.2.9 Performance Monitor

The following conditions are counted:

- Line code violations
- Excessive zeroes
- P-bit errors, CP-bit errors
- · Framing bit errors
- Multiframe bit errors
- · Far end block errors



# 4.10.3 Full Payload Rate Format

In full payload rate format the DS3 multiframe structure can be selected according to the M13 multiplex structure or the C-bit parity structure. In either case the data blocks [84] carry one continuous data stream which is provided via the tributary interface one.

Multiplexing/Demultiplexing of the data block [84] does NOT apply.



#### 4.11 Test Unit

The test unit of the MUNICH256FM incorporates a test pattern generator and a test pattern synchronizer which can be attached to different test points as shown in **Figure 4-14**. Controlled by a small set of registers it can generate and synchronize to polynomial pseudorandom test patterns or repetitive fixed length test patterns.

Test patterns can be generated in the following modes:

- Framed DS3
- Unframed DS2
- Framed DS2
- Unframed DS1/F1

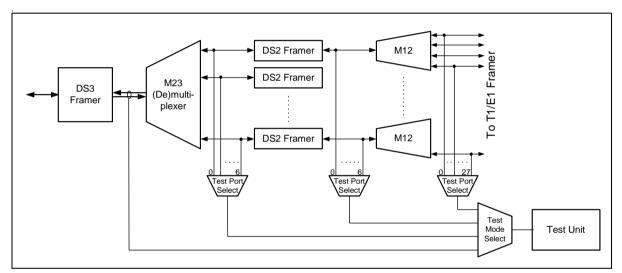


Figure 4-14 Test Unit Access Points

In pseudorandom test mode the receiver tries to achieve synchronization to a test pattern which satisfies the programmed receiver polynomial. In fixed pattern mode it synchronizes to a repetitive pattern with a programmable length. An all '1' pattern or an all '0' pattern, which satisfies this condition, is flagged. Measurement intervals as well as receiver synchronization can be controlled by the user. When a test is finished an interrupt is generated and the bit count and the bit error count are readable.



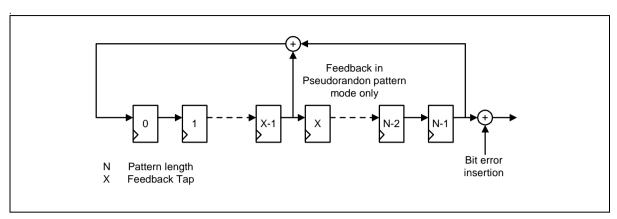


Figure 4-15 Pattern Generator

#### **Bit Error Insertion**

The test unit provides the optional capability to insert bit errors in the range of 10<sup>-7</sup> (1 error in 10.000.000 bits) up to 10<sup>-1</sup> bit errors (1 error in 10 bits).



#### 4.12 Mailbox

The MUNICH256FM contains a mailbox to allow communication between two intelligent peripherals connected to the PCI bus and the local microprocessor bus. The mailbox is organized in two pages of eight registers. The first page is used to store information from the PCI side and to read the information from the local microprocessor side. The second page is used for the opposite direction, from the local microprocessor side to the PCI side. Each page consists of one status register and seven data registers.

The mailbox provides a 'doorbell' capability. In this case an interrupt vector can be generated to inform the addressed intelligent peripheral that new information has been stored in the mailbox. This interrupt vector will be generated on write accesses to the status register of the selected page.

As an **example**, consider when the PCI host system wants to transfer data to an intelligent peripheral. First it loads data into the mailbox data registers MBP2E1 through MBP2E7, and then writes a status information to the mailbox status register MBP2E0. This last action causes an interrupt vector to be written to the interrupt FIFO which is connected to the local bus. The presence of an interrupt vector results in assertion of pin LINT. The intelligent peripheral recognizes the interrupt pin asserted and reads the interrupt vector out of the interrupt FIFO (which results in deassertion of pin LINT), and then reads data from the mailbox data registers.

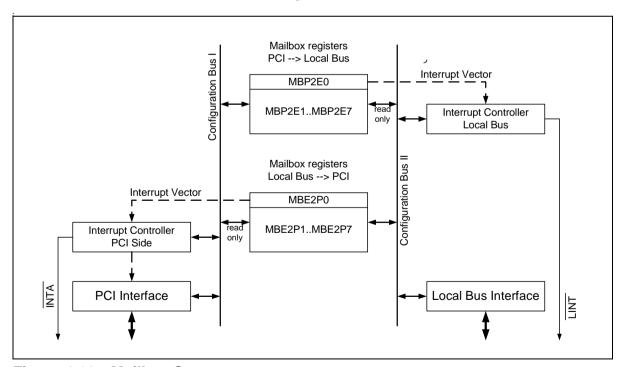


Figure 4-16 Mailbox Structure

**Alternately**, consider when an intelligent peripheral connected to the local bus wants to transfer data to the PCI host system. First it loads data into the mailbox data registers



MBE2P1 through MBE2P7 and then it writes status information to the mailbox status register MBE2P0. This causes a system interrupt vector to be written to the PCI host system, indicating that valid data is contained in the mailbox data registers.

This interrupt vector will be written to the interrupt queue specified in CONF1.SYSQ and together with this the pin INTA will be asserted. The processor sees the interrupt pin asserted, reads the register GISTA in order to determine the interrupt queue, and then writes a '1' to the interrupt status acknowledge register GIACK to clear the interrupt. Next, it reads the interrupt vector which contains a copy of the mailbox status register and then reads the mailbox data registers.



## 4.13 Interrupt Controller

Since the MUNICH256FM is divided into the basic functions mailbox, layer one functions (T1/E1 framer, facility data link, M13 multiplexer and DS2/DS3 framer) and layer two protocol functions (HDLC, PPP, TMA), the same partitioning is used for the interrupt handling.

All layer two interrupts (channel, port, system and command interrupts) are handled via an internal interrupt controller which forwards those interrupts to external interrupt queues. This interrupt controller is connected to the PCI interrupt pin INTA.

Mailbox interrupts and layer one interrupts are handled via an internal interrupt FIFO which is connected to the local bus interrupt pin LINT (normal operation). Additionally the interrupts stored in the internal interrupt FIFO can be notified via the PCI interrupt pin INTA.

The MUNICH256FM also provides the capability to bridge the local bus interrupt LINT to the PCI bus.

## 4.13.1 Layer Two interrupts

All channel interrupts, port interrupts and system interrupts are written in form of interrupt vectors to interrupt queues.

Each interrupt vector has an interrupt source. An interrupt source is either a channel, the port handler or certain device functions (system interrupts). After reset no interrupt vector is generated since port and system interrupts are masked and channels are in their idle state.

Each interrupt source forwards its interrupt vector to the interrupt controller, together with the information in which interrupt queue the vector should be forwarded. The interrupt controller moves the interrupt vector to the selected interrupt queue. Channel interrupts can optionally be forwarded to a dedicated high priority interrupt queue (interrupt queue seven). A programmable interrupt queue high priority mask determines channel interrupts, which shall be forwarded into the high priority interrupt queue instead of queueing them in the selected interrupt queue. This function is available for each interrupt queue and allows to queue important interrupt conditions in the high priority queue.



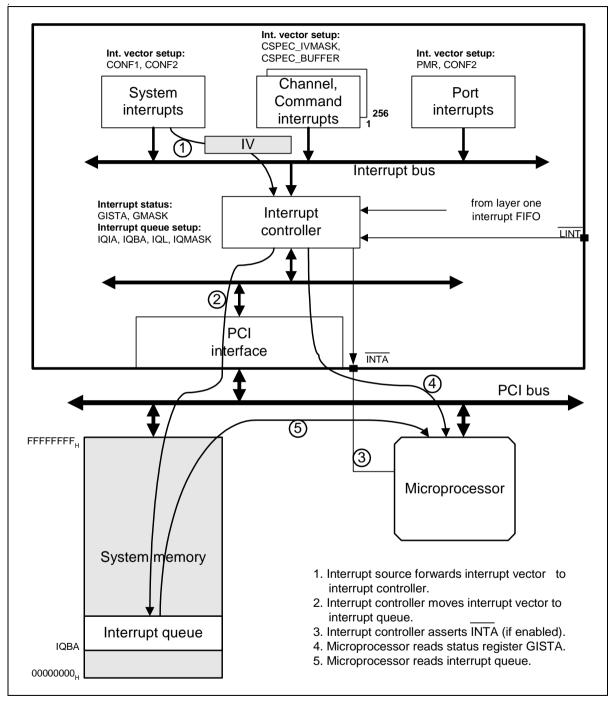


Figure 4-17 Layer Two Interrupts (Channel, command, port and system interrupts

As soon as the interrupt controller has written an interrupt vector to one of the nine interrupt queues the PCI interrupt pin INTA is asserted. The global interrupt status register indicates in which interrupt queue the interrupt vector can be found. Each of the



nine interrupt queues can be masked. In this case the interrupt pin  $\overline{\text{INTA}}$  is not asserted, but the interrupt vector is still written into the assigned interrupt queue.

An interrupt queues is a reserved memory locations in system memory. The MUNICH256FM supports up to eight interrupt queues which are organized in form of ring buffers with a programmable start address and a programmable size per interrupt queue. Additionally there is one fixed sized command interrupt queue where command interrupts are stored. The size of this queue is two times 256 DWORDs (**Figure 4-18**).


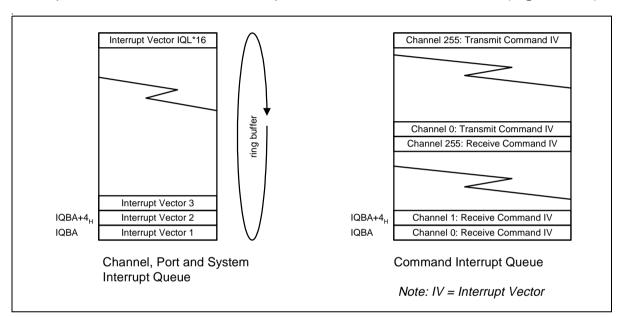


Figure 4-18 Interrupt Queue Structure in System Memory

# 4.13.1.1 General Interrupt Vector Structure

Each interrupt vector is 32 bit wide and contains several subfields, which indicate the interrupt group and depend on the interrupt group the interrupt information. Bit 31 of the interrupt vector is generally set to '1' by the MUNICH256FM and allows the system CPU to clear the bit in order to mark processed interrupts.

Table 4-15 Interrupt Vector Structure

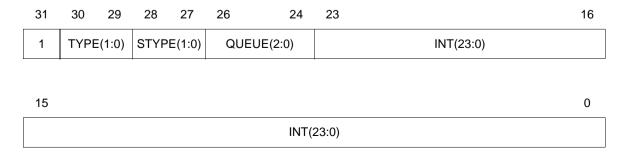



TYPE Interrupt type

The interrupt vectors are divided into four basic groups, where TYPE determines the interrupt group. A further classification of interrupts is done with the subtype indication.

00<sub>B</sub> Command interrupts
 01<sub>B</sub> Channel interrupts
 10<sub>B</sub> Port interrupts

11<sub>B</sub> System interrupts

STYPE Interrupt subtype

A specific interrupt type is divided into several subtypes. In general STYPE(1) indicates the data path (transmit, receive) generating the

interrupt.

QUEUE Interrupt queue

The interrupt vectors are written into 9 external interrupt queues located in the shared memory. Corresponding to these 9 queues are 9 interrupt queue start addresses and 8 interrupt queue length registers, since the

interrupt queue 8 has a fixed length of 2 x 256).

INT Interrupt Information

INT itself contains the interrupt information. The meaning of INT is

dependent on TYPE and STYPE indication.



## 4.13.1.2 System Interrupts

	31	30	29	28	27	26	24				20	19	18	17	16
	1	1	1 <sub>B</sub>	00	O <sub>B</sub>	QUE	UE(2:0)	0	0	0	МВ	RBF	RBEW	RAEW	РВ
-															
	15														0
Ī							INFO	(15:0)							

MB Mailbox

The 'Mailbox' interrupt vector is generated, in case that the local microprocessor has written data to the mailbox status register MBE2P0. The bit field INFO contains a copy of MBE2P0.

RBAF Receive Buffer Access Failed

The 'Receive Buffer Access Failed' interrupt vector is generated, when the protocol machine discarded packets due to permanent inaccessibility of the receive buffer. This interrupt is issued as soon as the programmable threshold stored in register RBAFT is reached. The actual value of discarded packets is stored in register RBAFC.

RBEW Receive Buffer Queue Early Warning

The 'Receive Buffer Queue Early Warning' interrupt vector is generated, when the receive buffer data threshold has been exceeded (RBTH.RBTH). This interrupt can be masked via bit CONF1.RBIM.

RAEW Receive Buffer Action Queue Early Warning

The 'Receive Buffer Action Queue Early Warning' interrupt vector is generated, when the receive data action queue threshold (RBTH.RBAQTH) has been exceeded. The receive buffer action queue stores all requests of the receive buffer to forward data packets to system memory. This interrupt vector can be masked via bit CONF1.RBIM.

PCI Access Error

The 'PCI Access Error' interrupt vector is generated, when system software tries to read/write internal registers with accesses that do not enable all byte lanes, e.g. the access is not a full 32 bit access. The bit field INFO contains the register address which was tried to access.

INFO Contains additional interrupt information data according to the bit, which

is set: See specific interrupt for details.

PB



### 4.13.1.3 Port Interrupts

Port interrupt vectors indicate the synchronous or asynchronous state of a port. Immediately after enabling both, the port and the port interrupts, port interrupts are generated indicating the synchronous or asynchronous state of a port. After this initial interrupt vector generation, further interrupts are written only when the state of a port changes from synchronous state to asynchronous state or vice versa. Port interrupts are enabled by resetting the corresponding mask bit in register PMR.

#### **Transmit interrupts**

31	30	29	28	27	26		24							17	16
1	10	) <sub>B</sub>	10	O <sub>B</sub>	QL	JEUE(2	2:0)	0	0	0	0	0	0	SYN	ASYN
	•		•									•			
15										5	4				0
0	0	0	0	0	0	0	0	0	0	0		P	ORT(4:	:0)	

PORT Port Number

This bit field identifies the port for which the information in the interrupt vector is valid.

SYN Synchronization achieved

Port has changed from asynchronous state to synchronous state. This interrupt is available for ports configured in T1 or E1 mode. In unchannelized mode there is no synchronous state.

A transmit port changes to the synchronous state, if common transmit frame synchronization is enabled and the number of bits between two synchronization pulses is equal to the number of frame bits of the selected mode or is equal to a multiple of that number. The first CTFS pulse after a port is enabled causes the transmitter to change to the synchronous state.

In case the common transmit frame synchronization is disabled, i.e. the looped timing bit or the CTFS disable bit of a port is set in PMR, the initial asynchronous state will not be left.

ASYN Asynchronous State

The transmitter generates an 'Asynchronous State' interrupt vector if a port has changed from synchronous to asynchronous state. This interrupt is available for ports configured in T1 or E1 mode. In



unchannelized mode there is no asynchronous state. In general a port is in asynchronous state when a port is disabled.

A transmit port changes to the asynchronous mode if the number of bits between two synchronization pulses is not equal to a multiple of the number of frame bits of the selected mode

### **Receive Interrupts**

•	31	30	29	28	27	26		24							17	16
	1	10	) <sub>B</sub>	00	) <sub>B</sub>	QL	JEUE(2	2:0)	0	0	0	0	0	0	SYN	ASYN
	15											4				0
	0	0	0	0	0	0	0	0	0	0	0		P	ORT(4	:0)	

PORT Port Number

This bit field identifies the port for which the information in the interrupt vector is valid.

SYN Synchronization achieved

Port has changed from asynchronous state to synchronous state. This interrupt is available for ports configured in T1 or E1 mode. In unchannelized mode there is no synchronous state.

A receive port changes to the synchronous state, if the number of bits between two synchronization pulses generated by the port related framer is exactly equal to the number of frame bits of the selected mode. The first framer pulse after a port is enabled causes the receive port to change to the synchronous state.

ASYN Asynchronous state

Port has changed from synchronous to asynchronous state. This interrupt is available for ports configured in T1 or E1 mode. In unchannelized mode there is no asynchronous state. In general a port is in asynchronous state when a port is disabled.

A receive port changes to the asynchronous state if the number of bits between two framer synchronization pulses is not equal to the number of frame bits of the selected mode. The synchronization pulses are generated internally by the T1/E1 framer.



## 4.13.1.4 Channel Interrupts

Channel interrupt are divided into two subtypes:

- · Receive Interrupt I and Transmit Interrupt I
- Receive Interrupt II and Transmit Interrupt II

Subtype I contains interrupts which indicate the general status of a channel. These interrupts are not linked to a descriptor.

Subtype II contains interrupts which indicate a channel or packet status that is linked to a descriptor. Each interrupt vector contains a descriptor ID which can be used for tracking purposes.

### Receive Interrupt I

SF

31	30	29	28	27	26		24								
1	0	1 <sub>B</sub>	00	0 <sub>B</sub>	QL	JEUE(2	2:0)	0	0	0	0	0	0	0	0
15	14	13	12	11				7							0
ROFP	SF	IFFL	IFID	SFD	0	0	0				CHAI	N(7:0)			

ROFP Receive Buffer Overflow

The 'Receive Buffer Overflow' interrupt vector is generated, when one or more whole frames or short frames or changes of interframe time-fill (HLDC, PPP) or data in general (TMA) has been discarded due to the inaccessibility of the internal receive buffer.

Short Frame Detected

The 'Short Frame Detected' interrupt vector is generated, when the receiver detected a frame which length matches the condition defined in

CONF1.SFL.

IFFL Interframe Time-fill Flag

The 'Interframe Time-fill Flag' interrupt vector is generated, when the

receiver detected a interframe time-fill change from FF<sub>H</sub> to 7E<sub>H</sub>.

IFID Interframe Time-fill Idle

The 'Interframe Time-fill Idle' interrupt vector is generated, when the

receiver detected a interframe time-fill change from 7E<sub>H</sub> to FF<sub>H</sub>.



SFD Small Frames Dropped


The 'Small Frames Dropped' interrupt vector is generated, when the receiver discarded N small frames. The length of small frames is defined in CONF3.MINFL and the threshold value N is defined in register SFDT.

CHAN Channel Number

This bit field identifies the channel for which the information in the

interrupt vector is valid.

## Transmit Interrupt I

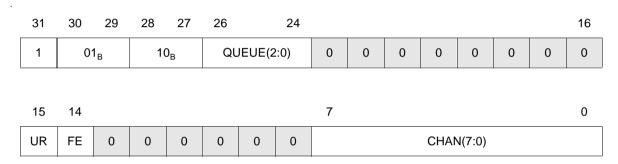

UR Underrun

The 'Underrun' interrupt vector is generated, when the transmit buffer was not able to provide data to the protocol machine transmit. If this happens during transmission of a HDLC or PPP packet, the transmitter will end the already started data packet with an abort sequence.

FE Frame End

The 'Frame End' interrupt vector is generated, when one complete data

packet has been transmitted via serial side.

CHAN Channel Number

This bit field identifies the channel for which the information in the

interrupt vector is valid.



## Receive Interrupt II

31	30	29	28	27	26		24	23	22	21		16
1	01	I <sub>B</sub>	0,	1 <sub>B</sub>	QU	IEUE(2	2:0)	0	0		DESID(5:0)	
<u> </u>												
15	14	13	12	11	10	9	8	7				0
RHI	RAB	FE	HRAB	MFL	RFOD	CRC	ILEN				CHAN(7:0)	

CHAN Channel Number

This bit field identifies the channel for which the information in the

interrupt vector is valid.

RHI (Receive) Host Initiated Interrupt

The '(Receive) Host Initiated' interrupt vector will be issued, if bit RHI is set in a receive descriptor and processing of this descriptor has finished. After receiving this interrupt vector, system software can release the

descriptor, e.g. put the descriptor into a free pool.

RAB Receive Abort

The 'Receive Abort' interrupt vector is generated, when an incoming data packet is aborted (more than 6 '1' in case of HDLC or more than 15 '1' in case of PPP) or if the receiver got a receive abort command from

the system CPU.

FE Frame End

The 'Frame End' interrupt Vector is generated, when one complete frame has been received completely and has been stored in system

memory.

HRAB Hold Caused Receive Abort

The 'Hold Caused Receive Abort' interrupt vector is generated, when the receiver discarded the first data packet after it has found a HOLD bit in

a receive descriptor.

RAB, HRAB Silent Discard

The 'Silent Discard' interrupt vector (bit RAB and HRAB set together) occurs, if two or more frames have been discarded by the receiver due to continuous inaccessibility of receive descriptor. This occurs, if receive descriptor has HOLD bit set and receiver gets further data packets. The

interrupt vector will be generated for each packet discarded.



MFL Maximum Frame Length Exceeded

The 'Maximum Frame Length Exceeded' interrupt vector is generated, when the length of a received data packet exceeded the frame length

defined in CONF1.MFL.

RFOD Receive Frame Overflow DMA

The 'Receive Frame Overflow DMA' interrupt indicates that protocol handler was unable to transfer data to the receive buffer. As soon as

receive buffer can store data again, this interrupt is generated.

CRC CRC Error

The 'CRC Error' interrupt vector is generated, when the internally

calculated CRC and the CRC of a received packet did not match.

ILEN Invalid Length

The 'Invalid Length' interrupt vector is generated, when the bit length of

received frame was not divisible by 8.

## **Transmit Interrupt II**

31	30	29	28	27	26		24			21	16
1	(	)1 <sub>B</sub>	1	1 <sub>B</sub>	QL	JEUE(2	2:0)	0	0	DESID(5:0)	
	·										
15	14		12					7			0
ТН	I TAB	0	НТАВ	0	0	0	0				

DESID Descriptor ID

This bit field is a copy of the descriptor ID of the transmit descriptor which

is currently in use. It can be used for tracking purposes.

THI (Transmit) Host Initiated Interrupt

The '(Transmit) Host Initiated' interrupt vector is generated, if bit THI is set in a transmit descriptor and processing of this descriptor has finished. After receiving this interrupt vector, system software can release the

descriptor, e.g. put the descriptor into a free pool.

TAB Transmit Abort

The 'Transmit Abort' interrupt vector is generated, either when the 'Transmit Abort/Branch' command was given and therefore one frame could not be transmitted completely or when NO and FE were set to 0 in a transmit descriptor and previous frame was incompletely specified.



HTAB Hold Caused Transmit Abort

The 'Hold Caused Transmit Abort' interrupt vector is generated, when data management unit retrieved a transmit descriptor where HOLD was set and FE equals 0. The interrupt will be generated after the data section was transferred completely. After transmission of frame based protocols (HDLC, PPP) protocol machine appends abort sequence due to incomplete packet.

CHAN Channel Number

This bit field identifies the channel for which the information in the interrupt vector is valid.



## 4.13.1.5 Command Interrupts

Command interrupts are written to the command interrupt queue (interrupt queue eight).

### **Transmit Interrupts**

•	31	30			27										17	16
	1		00	10 <sub>B</sub>		0	0	0	0	0	0	0	0	0	TCF	TCC
	•															
	15								7							0
	0	0	0	0	0	0	0	0				CHAI	N(7:0)			

#### TCF Transmit Command Failed

The 'Transmit Command Failed' interrupt vector is issued, if the command 'Transmit Init' given via register *CSPEC\_CMD.XCMD* could not be finished. This happens, when

- •system software tried to allocate more buffer locations for a channel than were available.
- system software specified thresholds (transmit forward threshold, transmit refill threshold), which were greater than the specified transmit buffer size.

Note: The sum of both thresholds must be smaller than the transmit buffer size of a particular channel. Erroneous programming does NOT result in the 'Transmit Command Failed' interrupt vector.

## TCC Transmit Command Complete


The 'Transmit Command Complete' interrupt vector is issued after successful completion of commands 'Transmit Init' and 'Transmit Off', which can be issued via register *CSPEC\_CMD.XCMD*.

#### CHAN Channel Number

This bit field contains the channel number of the affected channel.



## **Receive Interrupts**

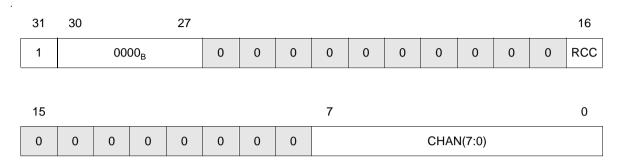

RCC Receive Command Complete

The 'Receive Command Complete' interrupt vector is issued after successful completion of commands 'Receive Init' and 'Receive Off',

which can be issued via register CSPEC\_CMD.RCMD.

CHAN Channel Number

This bit field contains the channel number of the affected channel.



### 4.13.2 Layer One Interrupts

All layer one related interrupts, that is interrupts issued by either the T1/E1 framer, the M13 multiplexer and DS2/DS3 framer, the facility data link or the PCI to Local Bus mailbox, are stored in an internal interrupt FIFO which is located inside the MUNICH256FM and can be read from either the local microprocessor or (for test purposes) via the chip internal bridge from the host processor located on the PCI bus.

The T1/E1 framer, the facility data link, the M13 multiplexer and DS2/DS3 framer, and the mailbox forward their specific interrupts to the internal interrupt FIFO. The interrupt FIFO triggers the LINT pin which indicates that there is at least one interrupt vector available. The interrupt FIFO then can be read from either PCI side or local bus side. The interrupt vector contains a coding for the interrupt reason and a last indication when there is no further interrupt vector stored in the internal interrupt FIFO. The interrupts of the internal layer one interrupt FIFO or the local bus interrupt LINT can also be reported via pin INTA.

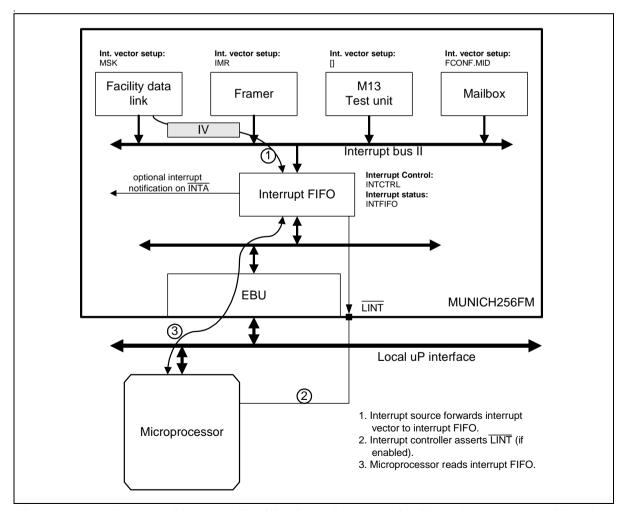


Figure 4-19 Framer, M13 and Facility Data Link and Mailbox Interrupt Notification



## 4.13.2.1 General Interrupt Vector Structure

15	14	13		7	6	5	4		0
LAST	STYPE		STATUS(6:0)		MID(	(1:0)		INFO(4:0)	

LAST Last indication

LAST indicates that at least one more valid interrupt vector is stored in the internal interrupt FIFO. This bit is generated at read access time.

There is at least one more interrupt in the internal interrupt FIFO.

1 This interrupt is the last interrupt that is stored in the internal interrupt FIFO.

STYPE Subtype of interrupt vector

This bit is used to indicate different subtypes of interrupt vectors.

STATUS Interrupt status

The interrupt status depends on STYPE and MID. Please refer to the

detailed description of the interrupt vectors in the next chapters.

MID Module ID

The bit field identifies the interrupt source.

00<sub>B</sub> T1/E1 Framer Interrupts

01<sub>B</sub> Facility Data Link Interrupts

10<sub>B</sub> M13 Multiplexer and DS2/DS3 framer Interrupts

11<sub>B</sub> Mailbox Interrupt

INFO Information

The content of this bit field contains further information about the

interrupt, e.g. the affected port.



### 4.13.2.2 T1/E1 Framer Interrupts

The framer interrupts are divided into type 0 and type I interrupts. The distinction is made in bit 14 of the interrupt vector.

### **Interrupt Type 0**

15	14	13	12	11	10	9	8	7	6	5	4		0
LAST	0	AISS	LOSS	RAS	ES	SEC	LLBS	PRBSS	00	O <sub>B</sub>		PORT(4:0)	

### Interrupt Type I

15	14			11	10	9	8	7	6	5	4		0
LAST	1	0	0	T400	CRC	PDEN /AUX	FAS	MFAS	00	O <sub>B</sub>		PORT(4:0)	

AISS Alarm Indication Signal Status

The 'Alarm Indication Signal Status' interrupt vector is generated, whenever the MUNICH256FM detects a change in the alarm indication. The actual state, i.e. active/not active, is shown in FRS.AIS.

LOSS Loss of Signal Status

The 'Loss of Signal Status' interrupt vector is generated, whenever the MUNICH256FM detects a change in FRS.LOS.

RAS Remote Alarm Status

The 'Remote Alarm Status' interrupt vector is generated, whenever the MUNICH256FM received remote alarm status changes. The actual state, i.e. active/not active, is shown in FRS.RRA.

ES Errored Second

The 'Errored Second' interrupt vector is generated for the first errored second event in a time interval of one second. Errored second events are:

- 1. Loss of frame alignment (this includes indirectly AIS or Loss of Signal)
- 2. CRC error received (CRC-6 or CRC-4).

SEC One Second Tick

The 'One Second Tick' interrupt vector is generated, when the internal one second timer has expired. The timer is derived from the incoming receive clock of the corresponding port.



LLBS Line Loopback Status

The 'Line Loopback Status' interrupt vector is generated, whenever the MUNICH256FM detects a change in either the line loopback deactuation signal or the line loopback actuate signal. The actual state of the signals is shown in FRS.LLBDD and FRS.LLBAD.

PRBS PRBS Status

The 'PRBS Status' interrupt vector is generated, whenever the MUNICH256FM synchronization state of the PRBS receiver changes. The actual state of the receiver, i.e. synchronized/not synchronized, is

shown in FRS.PRBS.

T400 400 Millisecond

This interrupt vector is generated when the framer has found the double framing (basic framing) and is searching for the multiframing. This interrupt vector will be generated to indicate that no multiframing could be found within a time window of 400 ms after basic framing has been achieved. In multiframe synchronous state this interrupt will not be

generated.

CRC Receive CRC Error

This interrupt vector is generated, when the CRC-6 checksum of an T1 ESF multiframe or the CRC-4 checksum of an E1 CRC-4 multiframe was

incorrect.

PDEN/AUX Pulse Density Violation Detected / Auxiliary Pattern Detected

This interrupt vector is generated, whenever the MUNICH256FM detects a change in bit FRS.PDEN/AUX. Bit PDEN/AUX is set whenever bit

FRS.PDEN.AUX toggles.

FAS Frame Alignment Status

The 'Frame Alignment Status' interrupt vector is generated, whenever the MUNICH256FM detects a change in frame alignment. The actual

state, i.e. aligne/not aligned, is shown in bit FRS.LFA.

MFAS Multiframe Alignment Status

The 'Multiframe Alignment Status' interrupt vector is generated, whenever the MUNICH256FM detects a change in multiframe alignment. The actual state, i.e. aligned/not aligned, is shown in bit

FRS.LMFA.

PORT Port Number

0..27 The port number the interrupt vector is associated with.



### 4.13.2.3 Facility Data Link Interrupts

### **Receive Interrupts**

15	14			11	10	9	8	7	6	5	4		0
LAST	0	0	0	RSA	SSM	RPF	RME	ISF	01 <sub>B</sub>			PORT(4:0)	

RSA Receive S<sub>a</sub> Data Valid

S<sub>a</sub> data in RSAW1 - RSAW3 is valid.

SSM SSM Data Valid

This bit is set, when a new synchronization status message has been received. The synchronization status message is stored in register

RSAW4.

RPF Receive Pool Full

This bit is set, when 32 bytes of a frame have been received and are stored in the receive FIFO. The frame is not yet completely received.

RME Receive Message End

This bit is set, when one complete message of length less than 32 bytes or the last part of a frame at least 32 bytes long is stored in the receive FIFO. The number of bytes in RFF.RFIFO can be determined reading

the port status register PSR.

ISF Incorrect Synchronization Format

This bit is set, when no eight consecutive '1's are detected within 32 bits

in BOM mode. Only valid if BOM receiver has been activated.

PORT Port Number

0..27 The port number the interrupt vector is associated with.



### **Transmit Interrupts**

15	14				10	9	8	7	6	5	4		0
LAST	1	0	0	0	TXSA	ALLS	XDU	XPR	01 <sub>B</sub>			PORT(4:0)	

TXSA Transmit S<sub>a</sub> Data Sent

The 'Transmit  $S_a$  Data Sent' is generated, when  $S_a$  data stored in XSAW1 - XSAW3 has been sent N times, where N is defined prior to transmission in XSAW3.XSAV.

ALLS All Sent

The 'All Sent' interrupt vector is generated, when the last bit of a frame to be transmitted is completely sent out and XFF.XFIFO is empty.

XDU Transmit Data Underrun

The 'Transmit Data Underrun' interrupt vector is generated, when the transmit FIFO runs out of data during transmission of a frame. The signalling controller terminates the affected frame with an abort sequence.

XPR Transmit Pool Ready

The 'Transmit Pool Ready' interrupt vector is generated, when a new data block of up to 32 bytes can be written to transmit FIFO. 'Transmit Pool Ready' is the fastest way to access the transmit FIFO. It has to be used for transmission of long frames, back-to-back frames or frames

with shared flag.

PORT Port Number

0..27 The port number the interrupt vector is associated with.



### 4.13.2.4 DS3, DS2 and Test Unit Interrupts

Note: The DS3, DS2 and test unit interrupts are seperated by the INFO field (bits 4 through 0).

## **DS3 Interrupts Type 0**

	15	14	13	12	11	10	9	8	7	6	5	4		0
L	AST	0	AIC	XBIT	IDLES	AISS	REDS	LOSS	FAS	10 <sub>B</sub>			00111 <sub>H</sub>	

### **DS3 Interrupts Type 1**

15	5	14	13	12	11	10	9	8	7	6	5	4		0
LAS	ЗТ	1	0	CLKS	RSDL	TSDL	LPCS	SEC	N <sub>r</sub>	10 <sub>B</sub>			00111 <sub>H</sub>	

**CLKS DS3 Clock Status** 

> The 'DS3 Clock Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the transmit clock or the receive clock, i.e. clock is activated/deactivated. The actual status of the clock is shown in D3RSTAT.LRXC and D3RSTAT.LTXC.

RSDL Receive Spare Data Link Transfer Buffer Full

> The 'Receive Spare Data Link Transfer Buffer Full' interrupt vector is generated when the receive spare data link buffer needs to be emptied.

**TSDL** Transmit Spare Data Link Transfer Buffer Empty

> The 'Transmit Spare Data Link Transfer Buffer Empty' interrupt vector is generated when the transmit spare data link buffer needs to be filled.

**LPCS** Loopback Code Status

> The 'Loopback Code Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the received loopback codes. Actual loopback codes can be found in register D3RLPCS.

**SEC** 1 Second Interrupt

The '1 Second Interrupt' is generated every second.

 $N_r$ Received new N<sub>r</sub>-Bit

> The 'Received new N<sub>r</sub>-Bit' interrupt vector is generated whenever the MUNICH256FM detects a change in the NA overhead bits and when its state is persistent for at least three multiframes.



AIC Received new AIC-Bit

The 'Received new AIC-Bit' interrupt vector is generated whenever the MUNICH256FM detects a change in the AIC overhead bits and when its

state is persistent for at least three multiframes.

XBIT Received X-Bit

The 'Received new X-Bit' interrupt vector is generated whenever the MUNICH256FM detects a change in the X overhead bits and when its

state is persistent for at least three multiframes.

IDLES DS3 Idle Signal Status

The 'DS3 Idle Signal Status' interrupt vector is generated whenever the MUNICH256FM detects a change of the idle signal. D3RSTAT.IDLES

contains the actual state of the idle state, i.e. active/not active.

AISS DS3 Alarm Indication Signal Status

The 'DS3 Alarm Indication Signal Status' is generated whenever the MUNICH256FM detects a change in the AIS alarm state. D3RSTAT.AISS shows the actual AIS alarm state, i.e. active/not active.

REDS DS3 Red Alarm Status

The 'DS3 Red Alarm' interrupt vector is generated whenever the MUNICH256FM detects a change in the red alarm state. D3RSTAT.RED shows the actual red alarm state, i.e. active/not active.

LOSS DS3 Input Signal Status

The 'DS3 Input Signal Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the DS3 input signal state, i.e. loss/no loss. D3RSTAT.LOSS shows the actual state of the DS3 input signal.

FAS DS3 Frame Alignment Status

The 'DS3 Frame Alignment Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the DS3 frame

alignment. D3RSTAT.FAS shows the actual state.



#### **DS2 Framer Interrupts**

Note: The effected DS2 tributary is encoded in the INFO field (bits 4..0).

15	14		12	11	10	9	8	7	6	5	4		0
LAST	0	0	LPCS	AISS	REDS	RES	RAS	FAS	10 <sub>B</sub>			00000 <sub>H</sub> - 00110 <sub>H</sub>	

LPCS Loop Code Status

The 'Loopback Code Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the received loopback codes.

Actual loopback codes can be found in register D2RLPCD.

AISS DS2 Alarm Indication Signal Status

The 'DS2 Alarm Indication Signal Status' is generated whenever the MUNICH256FM detects a change in the AIS alarm state. D2RSTAT.AIS

shows the actual AIS alarm state, i.e. active/not active.

REDS DS2 Red Alarm Status

The 'DS2 Red Alarm Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the red alarm state. D3RSTAT.RED shows the actual red alarm state, i.e. active/not active.

RES Received new Reserved ITU-T G.747 Overhead Bit

The 'Received new Reserved ITU-T G.747 Overhead Bit' interrupt vector is generated whenever the MUNICH256FM detects a change in the reserved ITU-T G.747 overhead bit and when its state is persistent for at least three multiframes. D2R[].[] shows the actual state of the

overhead bit.

RAS Remote Alarm Status

The 'Remote Alarm Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the remote alarm indication and when its state is persistent for at least three multiframes. D2RSTAT.RA

shows the actual state of the remote alarm indication.

FAS DS2 Frame Alignment Status

The 'DS2 Frame Alignment Status' interrupt vector is generated whenever the MUNICH256FM detects a change in the DS2 frame alignment. D2RSTAT.LFA shows the actual status of frame alignment.



## **Functional Description**

## **Test Unit Interrupts Type 0**

15									6 5	4		0
LAST	0	0	0	EMI	LBE	A1	A0	oos	10 <sub>B</sub>		01000 <sub>H</sub>	

OOS Receiver Out Of Synchronization

The 'Receiver Out of Synchronization' interrupt vector is generated whenever the test unit detects a change in synchronization. The actual state of the receiver is shown in TURSTAT.OOS.

A0 Input all '0's

The 'Input all '0's' interrupt vector is generated whenever the MUNICH256FM detects 32 continuous '0's or when this consition is resolved. The actual state is shown in TURSTAT.A0.

A1 Input all '1's

The 'Input all '1's' interrupt vector is generated whenever the MUNICH256FM detects 32 continuous '1's or when this consition is resolved. The actual state is shown in TURSTAT.A1.

LBE Latched Bit Error Detected Flag

The 'Latched Bit Error Detected Flag' interrupt vector is generated with

the first occurance of a bit error.

EMI End of Measurement Interval

The 'End of Measurement Interval' interrupt vector is generated when

the end of the programmed measurement interval is reached.

## 4.13.2.5 Mailbox Interrupts

•	15	14	13	7	6	5	4		0
	LAST	0	STATUS(6:0)		11 <sub>B</sub>			00000 <sub>B</sub>	

The 'Mailbox' interrupt vector is generated, in case that the host CPU on PCI side has written data to the mailbox status register MBP2E0. The bit field STATUS contains a copy of MBE2P0.MB(6:0).



# 5 Interface Description

#### 5.1 PCI Interface

A 32-bit and 66 MHz capable PCI bus controller provides the interface between the MUNICH256FM and the host system. PCI Interface pins are measured as compliant to the 3.3V signalling environment according to the PCI specification Rev. 2.1.

The PCI bus controller operates as initiator or target. Commands are supported as follows:

- Master memory read single DWORD/burst of up to 64 DWORDs with zero wait cycles.
- Master memory write single DWORD/burst of up to 64 DWORDs with zero wait cycles.
- Slave memory read single DWORD.
- Slave memory write single DWORD.

Fast back-to-back transfers are provided for slave accesses only. All read/write accesses to the MUNICH256FM must be 32-bit wide, that is all bytes must be enabled. Non 32-bit accesses result in system interrupt.

Refer also to the PCI specification Rev. 2.1 for detailed information about PCI bus protocol.

#### 5.1.1 PCI Read Transaction

The transaction starts with an address phase which occurs during the first cycle when FRAME is activated (clock 1 in **Figure 5-1**). During this phase the bus master (initiator) outputs a valid address on AD(31:0) and a valid bus command on C/BE (3:0). The first clock of the first data phase is clock 3. During the data phase C/BE indicate which byte lanes on AD(31:0) are involved in the current data phase.

The first data phase on a read transaction requires a turnaround cycle. In **Figure 5-1** the address is valid on clock 2 and then the <u>master stops</u> driving AD. The target drives the AD <u>lines following</u> the turnaround when <u>DEVSEL</u> is asserted. (TRDY cannot be driven until <u>DEVSEL</u> is asserted.) The earliest the target can provide valid data is clock 4. Once enabled, the AD output buffers of the target stay enabled through the end of the transaction.

A data phase may consist of a data transfer and wait cycles. A data phase completes when data is transferred, which occurs when both IRDY and TRDY are asserted. When either is deasserted a wait cycle is inserted. In the example below, data is successfully transferred on clocks 4, 6 and 8, and wait cycles are inserted on clocks 3, 5 and 7. The first data phase completes in the minimum time for a read transaction. The second data phase is extended on clock 5 because TRDY is deasserted. The last data phase is extended because IRDY is deasserted on clock 7. The Master knows at clock 7 that the next data phase is the last. However, the master is not ready to complete the last



transfer, so IRDY is deasserted on clock 7, and FRAME stays asserted. Only when IRDY is asserted can FRAME be deasserted, which occurs on clock 8.

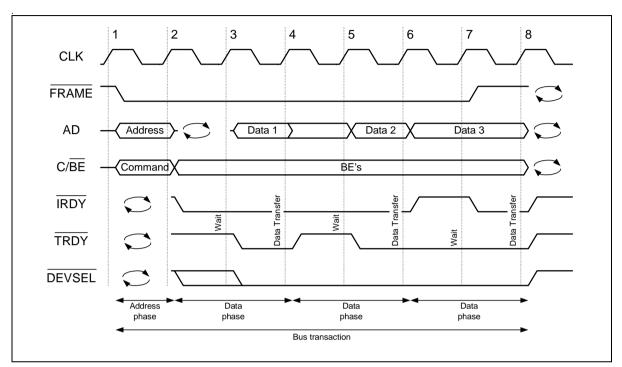


Figure 5-1 PCI Read Transaction

#### 5.1.2 PCI Write Transaction

The transaction starts when FRAME is activated (clock 1 in **Figure 5-2**). A write transaction is similar to a read transaction except no turnaround cycle is required following the address phase. In the example, the first and second data phases complete with zero wait cycles. The third data phase has three wait cycles inserted by the target. Both initiator and target insert a wait cycle on clock 5. In the case where the initiator inserts a wait cycle (clock 5), the data is held on the bus, but the byte enables are withdrawn. The last data phase is characterized by IRDY being asserted while the FRAME signal is deasserted. This data phase is completed when TRDY goes active (clock 8).



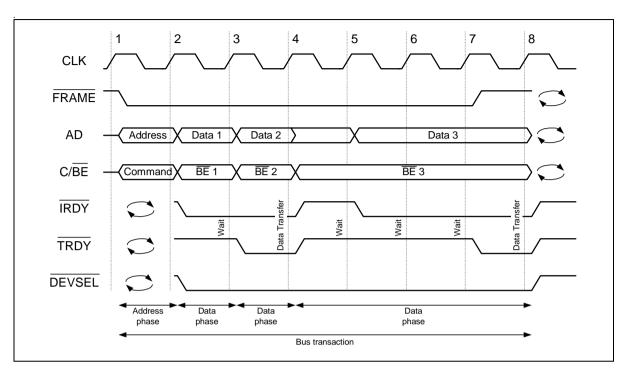


Figure 5-2 PCI Write Transaction

## 5.2 SPI Interface (ROM Load Unit)

Additional pins, which are not covered from the PCI specification, but are closely related, are the SPI pins. Via the SPI pins the vendor ID and the vendor subsystem ID can be loaded into the corresponding PCI configuration registers during start-up of the device.

The SPI Interface supports EEPROMs with an eight bit address space.

After a system reset, the MUNICH256FM starts reading the first byte out of the connected EEPROM at address  $00_{\rm H}$ . If this byte is equal  $AA_{\rm H}$ , the device continues reading out the memory contents. Everytime four bytes are read out of the EEPROM (starting with byte address  $01_{\rm H}$ ), the EEPROM interface writes the read information to the PCI configuration space. The first four bytes will be written to the PCI configuration space address  $00_{\rm H}$ , the next four bytes to the PCI configuration space address  $00_{\rm H}$ , and so on. So the contents of the EEPROM, starting with EEPROM byte address  $01_{\rm H}$ , will be mapped over the PCI configuration space after a system reset. During this configuration phase, all accesses to the PCI interface will be answered with 'retry' by the PCI interface.

If the first byte in the EEPROM is not equal  $AA_H$ , the EEPROM interface stops loading the PCI configuration space immediately, and the PCI interface can be accessed. The PCI configuration space in this case contains the default values.

The configuration mechanism through the serial interface can be disabled by pin SPLOAD. If this pin is connected to '0', the configuration mechanism is disabled. The



bridge can be accessed through the PCI Interface directly after a system reset. In this case the PCI configuration space contains the default values.

#### 5.2.1 Accesses to a SPI EEPROM

The EEPROM contents can also be controlled (read and write) by the software. For this, a special EEPROM control register is implemented as part of the PCI configuration space. To start a read/write transaction to an connected EEPROM, you have to set the command, the byte address (for read-/write data commands), the data to be written and the start indication by writing to the EEPROM control register SPI in the PCI configuration space. If the interface detects SPI.START asserted (= '1'), it interprets the command and starts the read-/write transaction to the connected EEPROM. After the transaction has finished, the EEPROM control module deasserts the start bit. If the command was a read command (Read Status Register, Read Data from Memory Array), the byte that was read out of the EEPROM is available in the data register. For transactions started with the EEPROM Control register, the interface does not check if an EEPROM is connected to the SPI bus, because the EEPROM is full passive. A full functional description of the SPI commands and their usage as well as a description of the EEPROMs status register can be found in the description of the EEPROM that will be selected by a board vendor.

#### **Byte Address**

For read and write transaction to the connected EEPROM, the byte address must be written in this register before the transaction is started.

#### **Data**

For the write status register transaction and the write data to memory array transactions, the data that has to be written to the EEPROM must be written to this register before the transaction is started. After a read status register transaction or a read data from memory array transaction has finished (Bit SPI.START is deasserted), the byte received from the EEPROM is available in this register.

#### Start

To start the EEPROM transaction defined via register SPI the bit SPI.START must be set to '1' by a write transaction through the PCI interface. After the transaction is finished, the EEPROM start bit is deasserted by the EEPROM interface controller. This signal has to be polled by system software.

## 5.2.2 SPI Read Sequence

The MUNICH256FM selects an external EEPROM by pulling SPCS low. The eight bit read sequence is transmitted followed by the eight bit address. After the read instruction



and address is sent, the data stored in the memory at the selected address is shifted in on the SPSI pin. The read operation is terminated by setting SPCS high (see **Figure 5-3**).

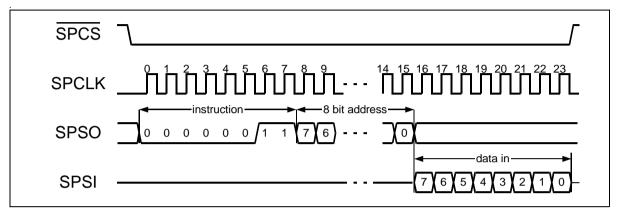


Figure 5-3 SPI Read Sequence

## 5.2.3 SPI Write Sequence

Prior to any attempt to write data to an external EEPROM, the write enable latch must be set by issuing the WREN instruction. This is done by setting SPCS low and then clocking out the WREN instruction. After all eight bits of the instruction are transmitted, the SPCS will be brought high to set the write enable latch.

Once the write enable latch is set, the user may proceed by issuing a write instruction, followed by the eight bit address and then the data to be written. In order that data will actually be written to the EEPROM, the SPCS is set high after the least significant bit (D0) of the data byte has been clocked in. Refer to **Figure 5-4** for detailed illustrations on the byte write sequence. While the write is in progress, the register bit SPI.START may be read to check the status of the transaction. When a write cycle is completed, the register bit SPI.START is reset.

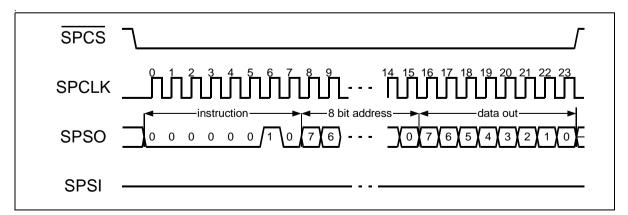


Figure 5-4 SPI Write Sequence



## 5.3 Local Microprocessor Interface

The Local Microprocessor Interface is a demultiplexed switchable Intel or Motorola style interface with master and slave functionality. In slave mode it is used to operate the M13 multiplexer, DS3/DS2 framer, T1/E1 framer and the facility data link of the MUNICH256FM. The MUNICH256FM provides a local clock output LCLK, which is a feed through of the PCI system clock as clock reference for the local microprocessor interface. The local bus master capability allows to access peripherals located on the local bus via the PCI interface. Bit FCONF.LME enables the bus master capability.

The base address register two is disabled per default and can be enabled during startup of the internal PCI interface. This is done by setting bit MEM.BAR2 in the PCI configuration space.

The MUNICH256FM supports a maximum of three 8 kByte pages of memory on the local address bus. The correspondence between the accessed PCI memory space (mapped via base address register 2) and the asserted chip selects is shown in table 5-1. The mapping of the PCI byte enables to the local bus address is dependent on the selected bus mode and is explained in detail in the corresponding section.

Table 5-1 Correspondence between PCI memory space and chip select

Page	AD(14:0)	LCS2	LCS1
0	0000 <sub>H</sub> - 1FFF <sub>H</sub>	1	0
1	2000 <sub>H</sub> - 3FFF <sub>H</sub>	0	1
2	4000 <sub>H</sub> - 5FFF <sub>H</sub>	0	0
3	6000 <sub>H</sub> - 7FFF <sub>H</sub>	Not	valid



#### 5.3.1 Intel Mode

#### **5.3.1.1** Slave Mode

In Intel slave mode the bus interface supports 16-bit transactions in demultiplexed bus operation. It uses the local bus port pins LA(12:1) for the 16 bit address and the local bus port pins LD(15:0) for 16 bit data. A read/write access is initiated by placing an address on the address bus and asserting LCSO (Figure 5-5). The external processor then activates the respective command signal (LRD, LWR). Data is driven onto the data bus either by the MUNICH256FM (for read cycles) or by the external processor (for write cycles). After a period of time, which is determined by the access time to the internal registers valid data is placed on the bus, which is indicated by asserting the active low signal LRDY.

Note: LCSO need not be deasserted between two subsequent cycles to the same device.

## Read cycles

Input data can be latched and the command signal can be deactivated now. This causes the MUNICH256FM to remove its data from the data bus which is then tri-stated again. LRDY is driven high and will be tri-stated as soon as LCS0 is deasserted.

#### Write cycles

The command signal can be deactivated now. If a subsequent bus cycle is required, the external processor can place the respective address on the address bus.

#### 5.3.1.2 Master Mode

A read/write access from the PCI bus to the 16 bit demultiplexed local bus is initiated by accessing the PCI memory space base which is controlled by the base address register 2. Each valid read or write access to this base address triggers the local bus master interface which in turn starts arbitration for the local bus by asserting LHOLD (see (1) in **Figure 5-6**). As soon as the MUNICH256FM gets access to the local bus (LHLDA asserted) it starts the local bus latency timer and begins a read/write transaction as the bus master. The signal LHOLD remains asserted while a transaction is in progress or as long as the local bus latency timer is not expired. A read/write transaction begins when the MUNICH256FM places a valid address on the address bus, sets the LBHE signal which indicates a 8- or 16-bit bus access and asserts the chip select signals LCS1 and/or LCS2. Then the MUNICH256FM activates the respective command signals (LRD, LWR). Data is driven onto the data bus either by the MUNICH256FM (for write cycles) or by the accessed device (for read cycles).

A transaction is finished on the local bus when the external device asserts  $\overline{\mathsf{LRDY}}$  (ready controlled bus cycles) or when the internal wait state timer expires.



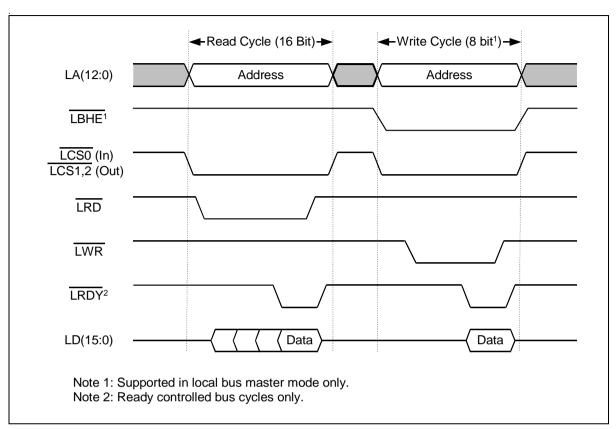


Figure 5-5 Intel Bus Mode

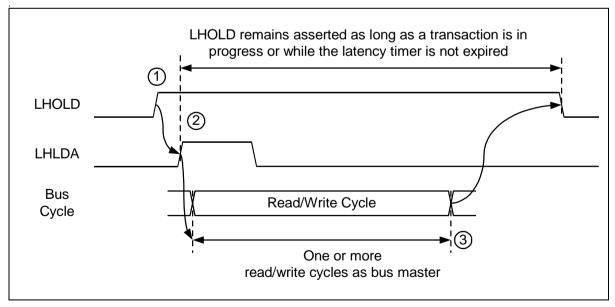


Figure 5-6 Intel Bus Arbitration

Valid C/BE combinations and the correspondence between local address, LBHE and the mapping of PCI data to the local data bus are shown in table 5-2 and table 5-3. All



accesses not shown in the table result in generation of a 'PCI Access Error' interrupt vector.

Table 5-2 C/BE to LA/LBHE mapping in Intel bus mode (8 bit port mode)

C/BE(3:0)	LA(1:0)	LBHE	LD(15:8)	LD(7:0)
1110 <sub>B</sub>	00 <sub>B</sub>	1	-	AD(7:0)
1101 <sub>B</sub>	01 <sub>B</sub>	1	-	AD(15:8)
1011 <sub>B</sub>	10 <sub>B</sub>	1	-	AD(23:16)
0111 <sub>B</sub>	11 <sub>B</sub>	1	-	AD(31:24)

Table 5-3 C/BE to LA/LBHE mapping in Intel bus mode (16 bit port mode)

C/BE(3:0)	LA(1:0)	LBHE	LD(15:8)	LD(7:0)
1110 <sub>B</sub>	00 <sub>B</sub>	1	-	AD(7:0)
1101 <sub>B</sub>	01 <sub>B</sub>	0	AD(15:8)	-
1011 <sub>B</sub>	10 <sub>B</sub>	1	-	AD(23:16)
0111 <sub>B</sub>	11 <sub>B</sub>	0	AD(31:24)	-
1100 <sub>B</sub>	00 <sub>B</sub>	0	AD(15:8)	AD(7:0)
0011 <sub>B</sub>	10 <sub>B</sub>	0	AD(31:24)	AD(23:16)



#### 5.3.2 Motorola Mode

#### **5.3.2.1** Slave Mode

The demultiplexed bus modes use the local bus port pins LA(12:1) for the 16- bit address and the local bus port pins LD(15:0) for 16 bit data. A read/write access is initiated by placing an address on the address bus and asserting LCS0 together with the command signal LWRRD (see "Motorola Bus Mode" on page 156). The data cycle begins when the signal LDS is asserted. Data is driven onto the data bus either by the MUNICH256FM (for read cycles) or by the external processor (for write cycles). After a period of time, which is determined by the access time to the internal registers valid data is placed on the bus, which is indicated by asserting the active low signal LDTACK.

Note: LCS0 need not be deasserted between two subsequent cycles to the same device.

#### Read cycles

Input data can be latched and the data strobe signal can be deactivated now. This causes the MUNICH256FM to remove its data from the data bus which is then tri-stated again. LDTACK is driven high and will be tri-stated as soon as LCS0 is deasserted.

## Write cycles

The data strobe signal can be deactivated now. If a subsequent bus cycle is required, the external processor can place the respective address on the address bus.

#### 5.3.2.2 Master Mode

As in Intel mode a read/write access from the PCI bus to the 16 bit demultiplexed local bus is initiated by accessing the PCI memory space base mapped by the base address register 2. Each valid read or write access to this base address triggers the local bus master interface which in turn starts arbitration for the local bus using the interface signals LBR and LBG and LBGACK. As soon as the MUNICH256FM gets access to the local bus it places a valid address on the address bus, sets the LSIZEO signal which indicates a 8- or 16-bit bus access and asserts the corresponding chip select signal. The signal LWRRD indicates a read or write operation. The data cycle begins when the signal LDS is asserted. Data is driven onto the data bus either by the MUNICH256FM or by the external component.

A transaction is finished on the local bus when the external device asserts the active low signal  $\overline{\text{LDTACK}}$  or when the internal wait state timer expires.



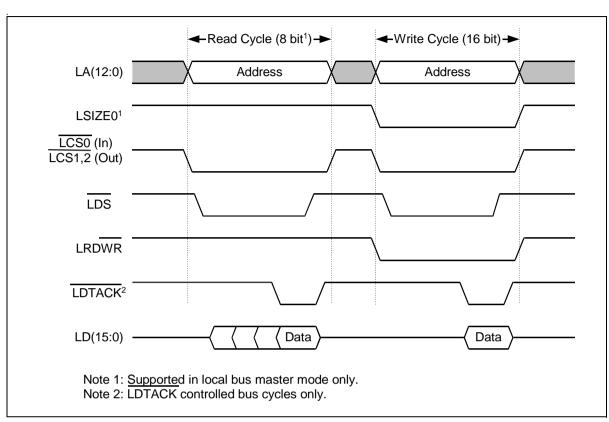


Figure 5-7 Motorola Bus Mode

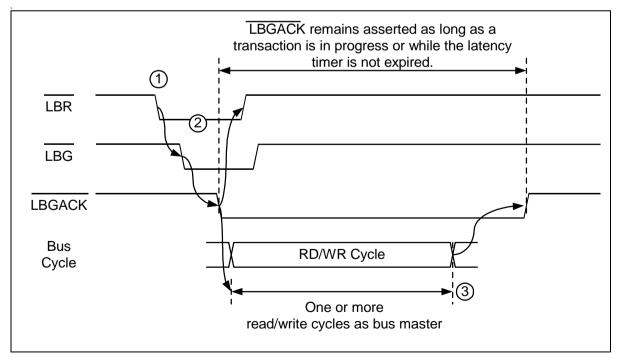


Figure 5-8 Motorola Bus Arbitration



The address and byte enable signals on the PCI bus are mapped to the local bus according to table 5-4 and table 5-5. It can be seen that the MUNICH256FM supports different valid C/BE combinations which result in either a 8- or 16-bit access to the local bus interface. All accesses not shown in the table result in generation of a 'PCI Access Error' interrupt vector. Byte swapping for 16 bit data transfers can be disabled.

Table 5-4 C/BE to LA/LSIZE0 mapping in Motorola bus mode (8 bit port mode)

C/BE(3:0)	LA(1:0)	LSIZE0	LD(15:8)	LD(7:0)
1110 <sub>B</sub>	00 <sub>B</sub>	1	AD(7:0)	-
1101 <sub>B</sub>	01 <sub>B</sub>	1	AD(15:8)	-
1011 <sub>B</sub>	10 <sub>B</sub>	1	AD(23:16)	-
0111 <sub>B</sub>	11 <sub>B</sub>	1	AD(31:24)	-

Table 5-5 C/BE to LA/LSIZE0 mapping in Motorola bus mode (16 bit port mode)

C/BE(3:0)	LA(1:0)	LSIZE0	LD(15:8)	LD(7:0)
1110 <sub>B</sub>	00 <sub>B</sub>	1	AD(7:0)	
1101 <sub>B</sub>	01 <sub>B</sub>	1	-	AD(15:8)
1011 <sub>B</sub>	10 <sub>B</sub>	1	AD(23:16)	-
0111 <sub>B</sub>	11 <sub>B</sub>	1	-	AD(31:24)
1100 <sub>B</sub>	00 <sub>B</sub>	0	AD(7:0)	AD(15:8)
0011 <sub>B</sub>	10 <sub>B</sub>	0	AD(23:16)	AD(31:24)



#### 5.4 Serial Line Interface

The DS3 interface of the MUNICH256FM consists of one receive port and one transmit port. The receive port provides a clock input (RC44) and one (RD44) or two data inputs (RD44P, RD44N) for unipolar or dual-rail input signals. Receive data can be sampled on the rising or falling edge of the receive clock. In transmit direction the port interface consists of two clock signals, the transmit clock input TC44 and a clock output signal TC44O. The data signals consists of one (TD44) or two data outputs (TD44P, TD44N) for unipolar or dual-rail output signals. The transmit port can be clocked by the receive clock RC44 or by the transmit clock TC44. The selected clock is provided as an output on TC44O. Transmit data is updated on the rising or falling edge of TC44O.

The MUNICH256FM provides two additional serial interfaces, one for DS3 overhead bit access and one for DS3 stuff bit access (M13 asynchronous format only).

The overhead access is provided via an overhead clock signal (ROVHCK, TOVHCK), an overhead data signal (ROVHD, TOVHD) and an synchronization signal (ROVHSYN, TOVHSYN) which marks the X overhead bit of the first subframe of a DS3 signal. In transmit direction the overhead enable signal (TOVHEN) marks those bits which shall be inserted in the overhead bits of the DS3 signal. All overhead signals are updated or sampled on the rising edge of the corresponding overhead clock, i.e. ROVHCK or TOVHCK. See **Figure 5-9** and **Figure 5-10** for details.

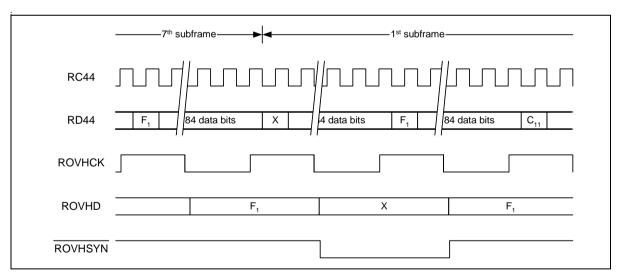


Figure 5-9 Receive Overhead Access



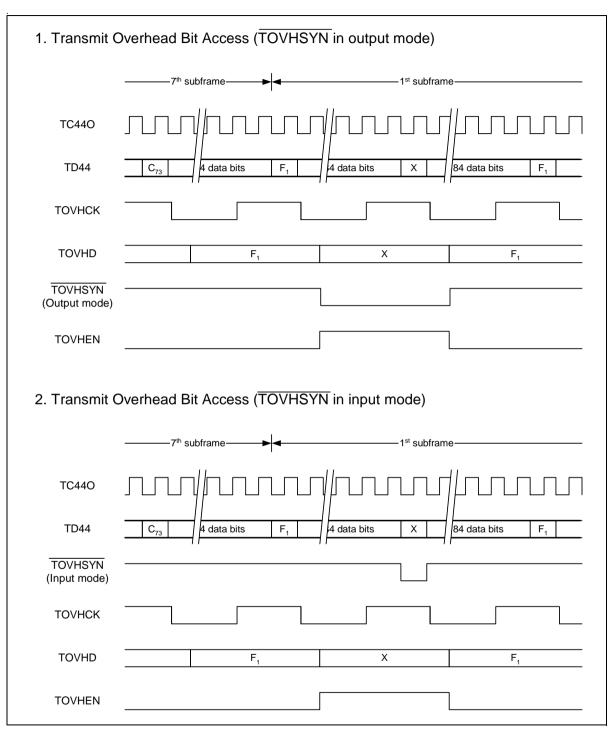


Figure 5-10 Transmit Overhead Access

The stuff bit access is provided via a receive and transmit stuff bit clock (RSBCK, TSBCK) and the two stuff bit signals RSBD and TSBD. Stuff bits are updated and sampled on the rising edge of the of stuff bit clock.



#### 5.5 JTAG Interface

A test access port (TAP) is implemented in the MUNICH256FM. The essential part of the TAP is a finite state machine (16 states) controlling the different operational modes of the boundary scan. Both, TAP controller and boundary scan, meet the requirements given by the JTAG standard: IEEE 1149.1. **Figure 5-11** gives an overview about the TAP controller.

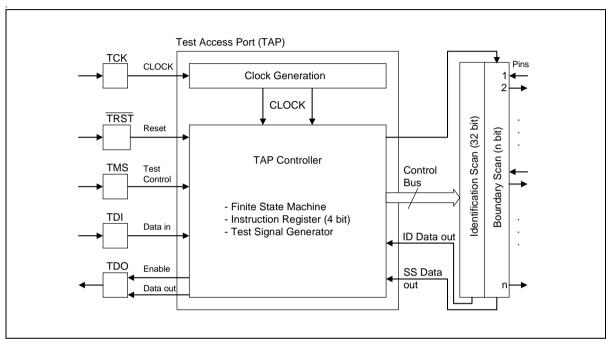


Figure 5-11 Block Diagram of Test Access Port and Boundary Scan Unit

If no boundary scan operation is planned  $\overline{TRST}$  has to be connected with  $V_{SS}$ . TMS and TDI do not need to be connected since pull- up transistors ensure high input levels in this case. Nevertheless it would be a good practice to put the unused inputs to defined levels. In this case, if the JTAG is not used:

TMS = TCK = '1' is recommended.

Test handling (boundary scan operation) is performed via the pins TCK (Test Clock), TMS (Test Mode Select), TDI (Test Data Input) and TDO (Test Data Output) when the TAP controller is not in its reset state, i. e.  $\overline{TRST}$  is connected to  $V_{DD3}$  or it remains unconnected due to its internal pull up. Test data at TDI are loaded with a clock signal connected to TCK. '1' or '0' on TMS causes a transition from one controller state to another; constant '1' on TMS leads to normal operation of the chip.

An input pin (I) uses one boundary scan cell (data in), an output pin (O) uses two cells (data out, enable) and an I/O-pin (I/O) uses three cells (data in, data out, enable). Note that most functional output and input pins of the MUNICH256FM are tested as I/O pins in boundary scan, hence using three cells. The boundary scan unit of the



MUNICH256FM contains a total of n = 484 scan cells. The desired test mode is selected by serially loading a 4-bit instruction code into the instruction register via TDI (LSB first).

**EXTEST** is used to examine the interconnection of the devices on the board. In this test mode at first all input pins capture the current level on the corresponding external interconnection line, whereas all output pins are held at constant values ('0' or '1'). Then the contents of the boundary scan is shifted to TDO. At the same time the next scan vector is loaded from TDI. Subsequently all output pins are updated according to the new boundary scan contents and all input pins again capture the current external level afterwards, and so on.

**INTEST** supports internal testing of the chip, i. e. the output pins capture the current level on the corresponding internal line whereas all input pins are held on constant values ('0' or '1'). The resulting boundary scan vector is shifted to TDO. The next test vector is serially loaded via TDI. Then all input pins are updated for the following test cycle.

**SAMPLE/PRELOAD** is a test mode which provides a snapshot of pin levels during normal operation.

**IDCODE**: A 32-bit identification register is serially read out via TDO. It contains the version number (4 bits), the device code (16 bits) and the manufacturer code (11 bits). The LSB is fixed to '1'.

The ID code field is set to

Version : 2<sub>H</sub>

Part Number : 0076<sub>H</sub>

Manufacturer : 083<sub>H</sub> (including LSB, which is fixed to '1')

Note: Since in test logic reset state the code '0011' is automatically loaded into the instruction register, the ID code can easily be read out in shift DR state.

BYPASS: A bit entering TDI is shifted to TDO after one TCK clock cycle.

**CLAMP** allows the state of signals driven from component pins to be determined from the boundary-scan register while the bypass register is selected as the serial path between TDI and TDO. Signals driven from the MUNICH256FM will not change while the CLAMP instruction is selected.

**HIGHZ** places all of the system outputs in an inactive drive state.



# 6 Channel Programming / Reprogramming Concept

For channel programming the MUNICH256FM provides a on-chip channel specification data structure. All information necessary to setup a channel has to be provided using this data structure. As soon as all channel information has been written to the channel specification registers the information can be released using simple channel commands, which have to be written to register CSPEC\_CMD. The relevant channel information will then be copied to the chip internal channel database. The channel specification registers, which need to be programmed before a command can be executed, are shown in **Table 6-1**.

Before initializing a channel the time slot assignment process for the affected channel must be completed. Vice versa after shutting down a channel the time slots associated with the affected channel should be set to inhibit. Otherwise if a time slot is reprogrammed afterwards, strange behavior can be expected on the serial side.

For each channel a simple sequence of channel commands must be ensured. After reset each channel is in its 'off' state. Therefore, the first command to start a channel is 'Transmit Init' or 'Receive Init'. This brings the channel into the operational state. In this state all commands except 'Transmit Init', 'Receive Init' or 'Transmit Idle can be given. To bring a channel back into the idle state a 'Transmit Off' or 'Receive Off' command has to be programmed. For certain channel commands system software has to wait before new commands can be given for the same channel. This is due to internal buffer allocation functions which require some processing time. Notification of system software is done in form of command interrupt vectors, which signal that a command has successful or even unsuccessful completed.

Table 6-1 Channel Specification Registers and Channel Commands

Register	<b>Transmit Commands</b>						Receive Commands					
	Transmit Init	Transmit Off	Transmit Abort/Branch	Transmit Hold Reset	Transmit Idle	Transmit Debug	Transmit Update FNUM	Receive Init	Receive Off	Receive Abort/Branch	Receive Hold Reset	Receive Debug
CSPEC_MODE_REC												
CSPEC_REC_ACCM												
CSPEC_MODE_XMIT												



Register	Transmit Commands						Receive Commands					
	Transmit Init	Transmit Off	Transmit Abort/Branch	Transmit Hold Reset	Transmit Idle	Transmit Debug	Transmit Update FNUM	Receive Init	Receive Off	Receive Abort/Branch	Receive Hold Reset	Receive Debug
CSPEC_XMIT_ACCM												
CSPEC_BUFFER												
CSPEC_FRDA												
CSPEC_FTDA												
CSPEC_IMASK												

## 6.1 Channel Commands

The following section describes all receive and transmit channel commands and the programming sequence in details.

#### 6.2 Transmit Channel Commands

#### **Transmit Init**

Before a 'Transmit Init' command is given, the MUNICH256FM will not transmit data for a channel. After the 'Transmit Init' command the channel database of the affected channel is initialized according to the parameters in the channel specification registers.

After initialization the transmit buffer prepares the buffer locations for the selected channel and the data management unit starts processing the linked list and fills the prepared buffer locations. In order to prevent a transmit underrun condition, the transmit buffer is filled up to the transmit forward threshold before data is sent to the serial side. The protocol machine formats data according to the given channel parameters and the data is placed in the time slots assigned to the selected channel. When no or not sufficient data is available, the device sends the idle code according the selected protocol mode.

If the command was successful, a 'Transmit Command Complete' interrupt vector is generated after the first transmit descriptor is read pointed to by register CSPEC\_FTDA. In case that there is insufficient transmit buffer space, the command cannot be



completed internally and the device responds with a 'Transmit Command Failed' interrupt vector. Furthermore the MUNICH256FM will not start processing the linked list for this particular channel.

New commands for the same channel may be given after the user received the 'Transmit Command Complete' interrupt vector. Prior to new initialization of the same channel it must be turned off using the 'Transmit Off' command.

#### **Transmit Off**

After 'Transmit Off' the transmit channel is disabled immediately and the time slots assigned to the selected channel are set to '1'. The transmit buffer releases all buffer locations assigned to the channel. The data management unit updates the last processed descriptor with the complete bit if enabled and generates a 'Transmit Host Initiated' interrupt vector if the THI bit in the last descriptor was set. All channel related informations are cleared from the internal channel database.

A 'Transmit Command Complete' interrupt vector is generated when the channel command is finished. After that time processing of the linked list is completely stopped. New commands for the same channel may be given after the user received the 'Transmit Command Complete' interrupt vector.

#### **Transmit Abort/Branch**

The 'Transmit Abort/Branch' command is performed on the serial side and in the data management unit. The data management unit stops immediately processing the current descriptor and branches to a new descriptor pointed to by CSPEC\_FTDA. Data which is already stored in the transmit buffer is sent on the serial side. The protocol machine will append an abort sequence if data in transmit buffer was not complete due to 'Transmit Abort/Branch' command. System software is informed about the aborted frame by a 'Transmit Abort' channel interrupt vector. If no data is stored in the transmit buffer this command does not affect the serial side and no 'Transmit Abort' interrupt vector is generated. Data transmission is continued with a new frame when the data management unit branched to the new descriptor list.

A 'Transmit Command Complete' interrupt vector is generated after the management unit released the old descriptor list. New commands for the same channel may be given after the user received the 'Transmit Command Complete' interrupt vector.

#### **Transmit Hold Reset**

The 'Transmit Hold Reset' command must be given after system software has set the HOLD bit of a descriptor from '1' to '0'. In case that the MUNICH256FM is in hold condition it reads the descriptor which had its HOLD bit set and tests the HOLD bit of the descriptor. If the HOLD bit is set to '0' the data management unit branches to the next descriptor and continues data transmission. Otherwise the particular channel remains in hold condition.



The MUNICH256FM will NOT generate a 'Transmit Command Complete' interrupt vector after this command is programmed.

## **Transmit Update FNUM**

The 'Transmit Update FNUM' command changes the parameter CSPEC\_MODE\_XMIT.FNUM in the internal channel database, which allows to change dynamically the number of idle flags that are inserted between two frames.

The MUNICH256FM will NOT generate a 'Transmit Command Complete' interrupt vector after this command is programmed.

#### Transmit Idle

The 'Transmit Idle' command starts the MUNICH256FM to send the value CSPEC\_MODE\_XMIT.TFLAG in the time slots of the selected channel. This command can only be given if a channel is turned off.

The MUNICH256FM will NOT generate a 'Transmit Command Complete' interrupt vector after this command is programmed.

## **Transmit Debug**

The 'Transmit Debug' command allows to read back the current settings of the internal channel database. After the 'Transmit Debug' command has been programmed system software can read back the current values of the channel specification registers. Register CSPEC FTDA contains the value of the next transmit descriptor.

The MUNICH256FM will NOT generate a 'Transmit Command Complete' interrupt vector after this command is programmed.

Note: The setting of the internal channel database is not copied into the channel specification registers and therefore the values read can not be used to program another channel. After system software has used the 'Transmit Debug' command it must reprogram the channel specification registers to setup a new channel.

#### 6.3 Receive Channel Commands

#### **Receive Init**

Before a 'Receive Init' command is given, the MUNICH256FM will not process data for a channel. After the 'Receive Init' command the channel database of the affected channel is initialized according to the parameters programmed in channel specification registers.

After initialization data received in those time slots assigned to the selected channel is processed and stored in the internal receive buffer. The data management unit starts



storing this data in the linked list which starts at CSPEC\_FRDA. The protocol machine deformats and checks data according to the given channel parameters.

A 'Receive Command Complete' interrupt vector is generated after the channel information is copied into the internal channel database.

New commands for the same channel may be given after the MUNICH256FM issued the 'Receive Command Complete' interrupt vector. Prior to new initialization of the same channel it must be turned off using the 'Receive Off' command.

#### **Receive Off**

The 'Receive Off' command disables the receive channel immediately. Further incoming data is discarded until the next 'Receive Init' command is given. Data already stored in the receive buffer is written to system memory. If a frame is destroyed by the 'Receive Off' command a 'Receive Abort' channel interrupt vector is generated.

A 'Receive Command Complete' interrupt vector is generated after remaining data in the receive buffer is written to system memory. After that time processing of the linked list is stopped and the channel information is cleared from the internal channel database.

New commands for the same channel may be given after the MUNICH256FM issued the 'Receive Command Complete' interrupt vector.

#### **Receive Abort/Branch**

The 'Receive Abort/Branch' command is performed in the data management unit. The data management unit stops immediately processing the current descriptor and branches to a new descriptor pointed to by CSPEC\_FRDA. In case that the 'Receive Abort/Branch' command is issued while a packet is written to system memory a 'Receive Abort' interrupt vector is generated and the rest of the frame already stored in receive buffer is discarded. Data reception is continued with a new frame when the data management unit branched to the new descriptor list.

A 'Receive Command Complete' interrupt vector is generated after the channel information is copied into the internal channel database. New commands for the same channel may be given after the MUNICH256FM issued the 'Receive Command Complete' interrupt vector.

#### **Receive Hold Reset**

The 'Receive Hold Reset' command must be given after system software has set the HOLD bit of a receive descriptor from '1' to '0'. In case that the MUNICH256FM is in hold condition it reads the descriptor which had its HOLD bit set and tests the HOLD bit of the descriptor. If the HOLD bit is set to '0' the data management unit branches to the next descriptor and continues data reception. Otherwise the particular channel remains in hold condition.



The MUNICH256FM will NOT generate a 'Receive Command Complete' interrupt vector after this command is programmed.

#### **Receive Debug**

The 'Receive Debug' command allows to read back the current settings of the internal channel database. After the 'Receive Debug' command has been programmed system software can read back the current values of the channel specification registers. Register CSPEC FRDA contains the value of the next receive descriptor.

The MUNICH256FM will NOT generate a 'Receive Command Complete' interrupt vector after this command is programmed.

Note: The setting of the internal channel database is not copied into the channel specification registers and therefore the values read can not be used to program another channel. After system software has used the 'Receive Debug' command it must reprogram the channel specification registers to setup a new channel.



## Reset and Initialization procedure

## 7 Reset and Initialization procedure

Since the term "initialization" can have different meanings, the following definition applies:

#### **Chip Initialization**

Generating defined values in all on-chip registers, RAMs (if required), flip-flops etc.

#### **Mode Initialization**

Software procedure, that prepares the device to its required operation, i.e. mainly writing on-chip registers to prepare the device for operation in the respective system environment.

#### **Operational programming**

Software procedures that setup, maintain and shut down operational modes, i.e. initialize logical channel or maintain framing operations on selected ports.

## 7.1 Chip Initialization

#### Hardware reset

The hardware reset RST has to be <u>applied</u> to the device. Chip input TRST must be activated prior to or while asserting RST and should be held asserted as long as the boundary scan operation is not required. System clock must start running during reset. During reset:

- All I/Os and all outputs are tri-state.
- All registers, state machines, flip-flops etc. are set asynchronously to their reset values and all internal modules are set to their initial state.
- · All interrupts are masked.
- The register bit CONF1.STOP is set to '1'.

After hardware reset (RST deasserted) system clock CLK is assumed to be running. Serial clocks must be low/high or running. The PCI and the local bus interface pins go into their idle state. All serial line outputs are tri-state.

The PCI interface becomes active and depending on input pin SPLOAD starts to read subsystem ID/subsystem vendor ID and Memory commands out of external EEPROM via the SPI interface. The serial clock is derived from the PCI clock. As long as this procedure is active, the PCI interface answers all accesses with retry. After the PCI interface has finished its self initialization it can be configured with PCI configuration cycles.

In parallel to PCI self initialization the internal modules start their RAM initialization. As long as the RAM initialization is running the internal modules indicate this condition with



## Reset and Initialization procedure

their initialization in progress signal. The register bit CONF1.IIP is the result of all signals. As soon as all internal modules have finished their RAM initialization the register bit CONF1.IIP is deasserted. Software must poll the register bit CONF1.IIP until this bit has been deasserted. Read access to registers other than CONF1 is prohibited and may result in unexpected behavior of the design. Write accesses are not allowed.

Chip initialization is finished when CONF1.IIP is '0'.

#### Software Reset

Alternately the MUNICH256FM provides the capability to issue a software reset via register bit CONF1.SRST. During software reset all interfaces except PCI interface are forced into their idle state. After software reset is set the MUNICH256FM starts its self initialization and IIP will be asserted. Chip initialization is finished when CONF1.IIP is deasserted. Afterwards the software reset bit must be set to '0' to allow further operation.

#### 7.2 Mode Initialization

After chip initialization is finished the system software has to setup the device for the required function.

The system software has to poll bit CONF1.IIP (FCONF.IIP). As soon as CONF1.IIP is deasserted, the system software has to clear bit CONF1.STOP and has to set the general operating modes in register CONF1.

The M13 multiplexer, DS3/DS2 framer mode, T1/E1 framer mode and the DS1/E1 and DS3 port interface has to be programmed. It is assumed, that the DS3 port clock and CTCLK are active. The T1/E1 ports shall be disabled, thus no incoming data is forwarded to the time slot assigner and to the T1/E1 framer.

#### **Transmit direction**

The T1/E1s have to be enabled via register XPI.TEN. After the tributaries are enabled, the F-Bit (T1 mode) respectively time slot zero (E1 mode) are generated by the on-chip T1/E1 framer and the signalling controller. To synchronize the first bit of a frame to an external reference the common transmit frame synchronization pulse CTFS can be used (in external timing mode only). After a tributary has been enabled, payload data is provided from the time slot assigner. Since the time slot assignment is in reset state, that is all time slots are set to inhibit, data bits are sent as '1'.

#### **Receive direction**

The tributaries have to be enabled via register XPI.REN. After they are enabled, the onchip T1/E1 framer tries to achieve frame alignment. As soon as frame alignment has been achieved, incoming payload data is passed to the time slot assigner. Since time slot assignment is in reset state, that is all time slots are set to inhibit, data bits are discarded.



# 8 Register Description

The register description of the MUNICH256FM is divided into two parts, an overview of all internal registers and in the second part a detailed description of all internal registers.

## 8.1 Register Overview

The first part of the register overview describes the PCI configuration space registers. The second part describes the register set which can be accessed from PCI side only. These registers are used to setup the main operation modes and to run the channel engines of the device. The last part describes the register set of the framing engines, the signalling controller, the mailbox and the local interrupt FIFO. These registers may be accessed through the local microprocessor interface or via PCI.

Note: Register locations not contained in the following register tables are "reserved". In general all write accesses to reserved registers are discarded and read access to reserved registers result in 00000000<sub>H</sub>. Nevertheless, to allow future extensions, system software shall access documented registers only, since writes to reserved registers may result in unexpected behavior. The read value of reserved registers shall be handled as don't care.

Unused and reserved bits are marked with a gray box. The same rules as given for register accesses apply to reserved bits, except that system software shall write the documented default value in reserved bit locations.

# 8.1.1 PCI Configuration Register Set (Direct Access)

Table 8-1 PCI Configuration Register Set

Register	Access	Address	Reset value	Comment	Page
Standard con	figuration	space reg	jister		1
DID/VID	R	00 <sub>H</sub>	2108110A <sub>H</sub>	Device ID/Vendor ID	182
STA/CMD	R/W	04 <sub>H</sub>	02A00000 <sub>H</sub>	Status/Command	183
CC/RID	R	08 <sub>H</sub>	02800001 <sub>H</sub>	Class Code/Revision ID	185
BIST/ HEAD/ LATIM/ CLSIZ	R/W	0C <sub>H</sub>	00000000 <sub>H</sub>	Built-in Self Test/ Header Type/ Latency Timer/ Cache Line Size	186
BAR1	R/W	10 <sub>H</sub>	00000000 <sub>H</sub>	Base Address 1	187
BAR2	R/W	14 <sub>H</sub>	00000000 <sub>H</sub>	Base Address 2	188
BARX	R	14 <sub>H</sub> -24 <sub>H</sub>	00000000 <sub>H</sub>	Base Address Not Used	



Register	Access	Address	Reset value	Comment	Page
CISP	R	28 <sub>H</sub>	00000000 <sub>H</sub>	Cardbus CIS Pointer	
SSID/ SSVID	R	2C <sub>H</sub>	00000000 <sub>H</sub>	Subsystem ID/ Subsystem Vendor ID	189
ERBAD	R	30 <sub>H</sub>	00000000 <sub>H</sub>	Expansion ROM Base Adr.	
Reserved	R	34 <sub>H</sub>	00000000 <sub>H</sub>	Reserved	
Reserved	R	38 <sub>H</sub>	00000000 <sub>H</sub>	Reserved	
MAXLAT/ MINGNT/ INTPIN/ INTLIN	R/W	3С <sub>н</sub>	06020100 <sub>H</sub>	Maximum Latency/ Minimum Grant/ Interrupt Pin/ Interrupt Line	190
User defined c	onfigurat	ion space	register		
SPI	R/W	40 <sub>H</sub>	0000001F <sub>H</sub>	SPI Access Register	191
REQ	R/W	44 <sub>H</sub>	00000000 <sub>H</sub>	REQ/GNT Config Register	193
MEM	R/W	48 <sub>H</sub>	000007E6 <sub>H</sub>	PCI Memory Command	194
DEBUG	R	4C <sub>H</sub>	00000000 <sub>H</sub>	PCI Debug Support	196



## 8.1.2 PCI Slave Register Set (Direct Access)

This section shows all registers which are located on the first configuration bus. These registers are used to setup the basic operating modes of the device and to setup the port, time slots and channels. System software has access to these registers via the PCI bus.

Table 8-2 PCI Slave Register Set

Register	Access	Address	Reset value	Comment	Page
<b>General Contro</b>	ol				I
CONF1	R/W	040 <sub>H</sub>		Configuration Register 1	214
CONF2	R/W	044 <sub>H</sub>	00000000 <sub>H</sub>	Configuration Register 2	217
CONF3	R/W	048 <sub>H</sub>	00090000 <sub>H</sub>	Configuration Register 3	219
RBAFT	W	04C <sub>H</sub>	00000000 <sub>H</sub>	Receive Buffer Access Failed Interrupt Threshold	220
SFDT	W	050 <sub>H</sub>	00000000 <sub>H</sub>	Small Frame Dropped Interrupt Threshold Register	221
Interrupt contr	ol PCI bu	s side			I
IQIA	R/W	0E0 <sub>H</sub>	00000000 <sub>H</sub>	Interrupt Queue Initialization	238
IQBA	R/W	0E4 <sub>H</sub>	00000000 <sub>H</sub>	Interrupt Queue Base Addr.	240
IQBL	R/W	0E8 <sub>H</sub>	00000000 <sub>H</sub>	Interrupt Queue Length	241
IQMASK	R/W	0EC <sub>H</sub>	00000000 <sub>H</sub>	Interrupt Queue Mask	242
GISTA/GIACK	R/W	0F0 <sub>H</sub>	00000000 <sub>H</sub>	Global Interrupt Status/ Global Interrupt Acknowledge	243
GMASK	R/W	0F4 <sub>H</sub>	FFFFFFF <sub>H</sub>	Interrupt Mask	245
Channel specif	ication re	egisters (*	= CSPEC)		I
*_CMD	W	000 <sub>H</sub>	00000000 <sub>H</sub>	Command	197
*_MODE_REC	R/W	004 <sub>H</sub>	00000000 <sub>H</sub>	Mode Receive	199
*_REC_ACCM	R/W	008 <sub>H</sub>	00000000 <sub>H</sub>	Receiver ACCM Map	202
*_MODE_XMIT	R/W	014 <sub>H</sub>	00000000 <sub>H</sub>	Mode Transmit	203
*_XMIT_ACCM	R/W	018 <sub>H</sub>	00000000 <sub>H</sub>	Transmit ACCM Map	206
*_BUFFER	R/W	020 <sub>H</sub>	00200000 <sub>H</sub>	Buffer Configuration	207
*_FRDA	R/W	024 <sub>H</sub>	00000000 <sub>H</sub>	First Receive Descriptor Addr.	210



Register	Access	Address	Reset value	Comment	Page
*_FTDA	R/W	028 <sub>H</sub>	00000000 <sub>H</sub>	First Transmit Descriptor Address	211
*_IMASK	R/W	02C <sub>H</sub>	00000000 <sub>H</sub>	Interrupt Vector Mask	212
Port and time	slot contr	ol registe	rs		
PMIAR	R/W	060 <sub>H</sub>	00000000 <sub>H</sub>	Port Mode Indirect Access	222
PMR	R/W	064 <sub>H</sub>	0104C000 <sub>H</sub>	Port Mode	223
REN	R/W	068 <sub>H</sub>	00000000 <sub>H</sub>	Receive Enable	225
TEN	R/W	06C <sub>H</sub>	00000000 <sub>H</sub>	Transmit Enable	226
TSAIA	R/W	070 <sub>H</sub>	00000000 <sub>H</sub>	Time slot Assignment Indirect Access	227
TSAD	R/W	074 <sub>H</sub>	02000000 <sub>H</sub>	Time slot Assignment Data	229
PPP character	map/ der	nap regist	ers		1
REC_ACCMX	R/W	080 <sub>H</sub>	00000000 <sub>H</sub>	Receive Extended ACCM Map	231
XMIT_ACCMX	R/W	090 <sub>H</sub>	00000000	Transmit Extended ACCM Map	235
Receive buffer	control				
RBMON	R	0B0 <sub>H</sub>	02000BFF <sub>H</sub>	Receive Buffer Monitor	236
RBTH	R/W	0B4 <sub>H</sub>	02000001 <sub>H</sub>	Receive Buffer Threshold Report	237
Maintenance	·	1			1
RBAFC	R	084 <sub>H</sub>	00000000 <sub>H</sub>	Receive Buffer Access Failed Counter	232
SFDIA	R/W	088 <sub>H</sub>	00000000 <sub>H</sub>	Small Frame Dropped Indirect Access	233
SFDC	R	08C <sub>H</sub>	00000000 <sub>H</sub>	Small Frame Dropped Counter	234



## 8.1.3 PCI and Local Bus Register Set (Direct Access)

This section describes the registers which are located on the configuration bus II (see also "MUNICH256FM Block Diagram" on page 42). These registers can be accessed either from PCI bus via the internal bus bridge or from the local bus side.

Note: Since the local bus is 16-bit wide and the PCI bus is 32-bit wide, the upper 16 bit of data coming from/to PCI are discarded.

Note: Please note that read accesses to local bus registers via PCI bus and therefore the internal bus bridge may result in latencies which exceed the 16 clock rule of PCI specification. Exceeding the 16 clock rule results in target initiated retry on PCI bus. In this case the read cycle needs to be repeated.

Table 8-3 PCI and Local Bus Slave Register Set

Register	Access	Address (PCI)	Address (Local Bus)	Reset value	Comment	Page
FCONF	R/W	100 <sub>H</sub>	00 <sub>H</sub>	8080 <sub>H</sub>	Configuration Register	246
MTIMER	R/W	100 <sub>H</sub>	00 <sub>H</sub>	0001 <sub>H</sub>	Master Local Bus Timer	248
Interrupt cont	rol for loc	al bus sid	de			
INTCTRL	R/W	108 <sub>H</sub>	04 <sub>H</sub>	0001 <sub>H</sub>	Interrupt Control	249
INTFIFO	R	10C <sub>H</sub>	06 <sub>H</sub>	FFFF <sub>H</sub>	Interrupt FIFO	250
DS3 Clock Co	nfiguratio	on and Sta	atus Regis	ster		
D3CLKCS	R/W	180 <sub>H</sub>	40 <sub>H</sub>	0000 <sub>H</sub>	DS3 Clock Configuration and Status	262
TUCLKC	R/W	184 <sub>H</sub>	42 <sub>H</sub>	0000 <sub>H</sub>	Test Unit Clock Configuration	264
DS3 Transmit	Control F	Registers	<u>'</u>			11
D3TCFG	R/W	188 <sub>H</sub>	44 <sub>H</sub>	0000 <sub>H</sub>	Transmit Configuration	265
D3TCOM	R/W	18C <sub>H</sub>	46 <sub>H</sub>	0070 <sub>H</sub>	Transmit Command	267
D3TLPB	R/W	190 <sub>H</sub>	48 <sub>H</sub>	0000 <sub>H</sub>	Remote DS2 Loopback	269
D3TLPC	R/W	194 <sub>H</sub>	4A <sub>H</sub>	0000 <sub>H</sub>	Transmit Loopback Code Insertion	270
D3TAIS	R/W	198 <sub>H</sub>	4C <sub>H</sub>	0000 <sub>H</sub>	Transmit AIS Insertion	271
D3TFINS	R/W	19C <sub>H</sub>	4E <sub>H</sub>	0000 <sub>H</sub>	Transmit Fault Insertion Control	272



Register	Access	Address (PCI)	Address (Local Bus)	Reset value	Comment	Page
D3TTUC	R/W	1A0 <sub>H</sub>	50 <sub>H</sub>	0000 <sub>H</sub>	Transmit Test Unit Control	273
D3TSDL	R/W	1A4 <sub>H</sub>	52 <sub>H</sub>	01FF <sub>H</sub>	Transmit Spare Data Link	274
DS3 Receive	Control/S	tatus Reg	isters			
D3RCFG	R/W	1C0 <sub>H</sub>	60 <sub>H</sub>	0000 <sub>H</sub>	Receive Configuration	275
D3RCOM	R/W	1C4 <sub>H</sub>	62 <sub>H</sub>	0000 <sub>H</sub>	Receive Command	278
D3RIMSK	R/W	1C8 <sub>H</sub>	64 <sub>H</sub>	1FFF <sub>H</sub>	Receive Interrupt Mask	280
D3RESIM	R/W	1CC <sub>H</sub>	66 <sub>H</sub>	0000 <sub>H</sub>	Receive Error Simulation	281
D3RTUC	R/W	1D0 <sub>H</sub>	68 <sub>H</sub>	0000 <sub>H</sub>	Receive Test Unit Control	282
D3RSTAT	R	1D4 <sub>H</sub>	6A <sub>H</sub>	0841 <sub>H</sub>	Receive Status	283
D3RLPCS	R	1D8 <sub>H</sub>	6C <sub>H</sub>	0000 <sub>H</sub>	Receive Loopback Code Status	286
D3RSDL	R	1DC <sub>H</sub>	6E <sub>H</sub>	01FF <sub>H</sub>	Receive Spare Data Link	287
D3RCVE	R/W	1E0 <sub>H</sub>	70 <sub>H</sub>	0000 <sub>H</sub>	Receive B3ZS Code Violation Error Counter	288
D3RFEC	R/W	1E4 <sub>H</sub>	72 <sub>H</sub>	0000 <sub>H</sub>	Receive Framing Bit Error Counter	288
D3RPEC	R/W	1E8 <sub>H</sub>	74 <sub>H</sub>	0000 <sub>H</sub>	Receive Parity Bit Error Counter	289
D3RCPEC	R/W	1EC <sub>H</sub>	76 <sub>H</sub>	0000 <sub>H</sub>	Receive CP-Bit Error Counter	289
D3RFEBEC	R/W	1F0 <sub>H</sub>	78 <sub>H</sub>	0000 <sub>H</sub>	Receive FEBE Error Counter	290
D3REXZ	R/W	1F4 <sub>H</sub>	7A <sub>H</sub>	0000 <sub>H</sub>	Receive Exzessive Zero Counter	290
D3RAP	R/W	1F8 <sub>H</sub>	7C <sub>H</sub>	0000 <sub>H</sub>	Alarm Timer Parameter	291



Register	Access	Address (PCI)	Address (Local Bus)	Reset value	Comment	Page
DS2 Transmit	Control F	Registers				I
D2TSEL	R/W	200 <sub>H</sub>	80 <sub>H</sub>	0000 <sub>H</sub>	DS2 Transmit Group Select	292
D2TCFG	R/W	204 <sub>H</sub>	82 <sub>H</sub>	0000 <sub>H</sub>	Transmit Configuration	293
D2TCOM	R/W	208 <sub>H</sub>	84 <sub>H</sub>	0000 <sub>H</sub>	Transmit Command	294
D2TLPC	R/W	20C <sub>H</sub>	86 <sub>H</sub>	0000 <sub>H</sub>	Transmit Loopback Code Insertion	295
DS2 Receive	Control R	egisters				
D2RSEL	R/W	220 <sub>H</sub>	90 <sub>H</sub>	0000 <sub>H</sub>	DS2 Receive Group Select	296
D2RCFG	R/W	224 <sub>H</sub>	92 <sub>H</sub>	0000 <sub>H</sub>	Receive Configuration	297
D2RCOM	R/W	228 <sub>H</sub>	94 <sub>H</sub>	0000 <sub>H</sub>	Receive Command	298
D2RIMSK	R/W	22C <sub>H</sub>	96 <sub>H</sub>	003F <sub>H</sub>	Receive Interrupt Mask	300
D2RSTAT	R	230 <sub>H</sub>	98 <sub>H</sub>	0001 <sub>H</sub>	Receive Status	301
D2RLPCS	RD	234 <sub>H</sub>	9A <sub>H</sub>	0000 <sub>H</sub>	Receive Loopback Code Status	303
D2RFEC	R/W	238 <sub>H</sub>	9C <sub>H</sub>	0000 <sub>H</sub>	Receive Framing Bit Error Counter	304
D2RPEC	R/W	23C <sub>H</sub>	9E <sub>H</sub>	0000 <sub>H</sub>	Receive Parity Bit Error Counter	304
D2RAP	R/W	240 <sub>H</sub>	A0 <sub>H</sub>	0000 <sub>H</sub>	Alarm Timer Parameter	305
Test Unit Tran	nsmit Reg	isters				
TUTCFG	R/W	280 <sub>H</sub>	C0 <sub>H</sub>	0000 <sub>H</sub>	Transmit Configuration	307
TUTCOM	W	284 <sub>H</sub>	C2 <sub>H</sub>	0000 <sub>H</sub>	Transmit Command	308
TUTEIR	R/W	288 <sub>H</sub>	C4 <sub>H</sub>	0000 <sub>H</sub>	Transmit Error Insertion Rate	310
TUTFP0	R/W	28C <sub>H</sub>	C6 <sub>H</sub>	0000 <sub>H</sub>	- Transmit Fixed Pattern	311
TUTFP1	R/W	290 <sub>H</sub>	C8 <sub>H</sub>	0000 <sub>H</sub>	Transmit Fattern	311
Test Unit Rec	eive Regi	sters				
TURCFG	R/W	2A0 <sub>H</sub>	D0 <sub>H</sub>	0000 <sub>H</sub>	Receive Configuration	312



Register	Access	Address (PCI)	Address (Local Bus)	Reset value	Comment	Page
TURCOM	W	2A4 <sub>H</sub>	D2 <sub>H</sub>	0000 <sub>H</sub>	Receive Command	314
TURERMI	R/W	2A8 <sub>H</sub>	D4 <sub>H</sub>	0000 <sub>H</sub>	Receive Error Rate Measurement Interval	316
TURIMSK	R/W	2AC <sub>H</sub>	D6 <sub>H</sub>	001F <sub>H</sub>	Receive Interrupt Mask	317
TURSTAT	R	2B0 <sub>H</sub>	D8 <sub>H</sub>	0021 <sub>H</sub>	Receive Status	318
TURBC0	R	2B4 <sub>H</sub>	DA <sub>H</sub>	0000 <sub>H</sub>	Pagaina Pit Countar	320
TURBC1	R	2B8 <sub>H</sub>	DC <sub>H</sub>	0000 <sub>H</sub>	Receive Bit Counter	320
TUREC0	R	2BC <sub>H</sub>	DE <sub>H</sub>	0000 <sub>H</sub>	Receive Error Counter	322
TUREC1	R	2C0 <sub>H</sub>	E0 <sub>H</sub>	0000 <sub>H</sub>	Receive Error Counter	322
TURFP0	R	2C4 <sub>H</sub>	E2 <sub>H</sub>	0000 <sub>H</sub>	Receive Fixed Pattern	324
TURFP1	R	2C8 <sub>H</sub>	E4 <sub>H</sub>	0000 <sub>H</sub>	Receive Fixed Pattern	324
T1/E1 Framer	transmit	registers				
TREGSEL	R/W	110 <sub>H</sub>	08 <sub>H</sub>	0000 <sub>H</sub>	Transmit T1/E1 Framer Port & Register Select	251
TDATA	R/W	114 <sub>H</sub>	0A <sub>H</sub>	0000 <sub>H</sub>	Transmit T1/E1 Framer Data	252
T1/E1 Framer	receive re	egisters				
RREGSEL	R/W	118 <sub>H</sub>	0C <sub>H</sub>	0000 <sub>H</sub>	Receive T1/E1 Framer Port & Register Select	253
RDATA	R/W	11C <sub>H</sub>	0E <sub>H</sub>	0000 <sub>H</sub>	Receive T1/E1 Framer Data	254
Facility data li	nk regist	ers				
FREGSEL	R/W	120 <sub>H</sub>	10 <sub>H</sub>	0000 <sub>H</sub>	Facility Data Link Port & Register Select	255
FDATA	R/W	124 <sub>H</sub>	12 <sub>H</sub>	0000 <sub>H</sub>	Facility Data Link Data	257
Mailbox regist	ters					
MBE2P0	R/W	140 <sub>H</sub>	20 <sub>H</sub>	0000 <sub>H</sub>	Mailbox Local Bus to PCI Command	258



Register	Access	Address (PCI)	Address (Local Bus)	Reset value	Comment	Page
MBE2P1 MBE2P2 MBE2P3 MBE2P4 MBE2P5 MBE2P6 MBE2P7	R/W	144 <sub>H</sub> 148 <sub>H</sub> 14C <sub>H</sub> 150 <sub>H</sub> 154 <sub>H</sub> 158 <sub>H</sub> 15C <sub>H</sub>	22 <sub>H</sub> 24 <sub>H</sub> 26 <sub>H</sub> 28 <sub>H</sub> 2A <sub>H</sub> 2C <sub>H</sub> 2E <sub>H</sub>	0000 <sub>H</sub>	Mailbox Local Bus to PCI Data Registers 1 through 7	259
MBP2E0	R/W	160 <sub>H</sub>	30 <sub>H</sub>	0000 <sub>H</sub>	Mailbox PCI to Local Bus Command	260
MBP2E1 MBP2E2 MBP2E3 MBP2E4 MBP2E5 MBP2E6 MBP2E7	R/W	164 <sub>H</sub> 168 <sub>H</sub> 16C <sub>H</sub> 170 <sub>H</sub> 174 <sub>H</sub> 178 <sub>H</sub> 17C <sub>H</sub>	32 <sub>H</sub> 34 <sub>H</sub> 36 <sub>H</sub> 38 <sub>H</sub> 3A <sub>H</sub> 3C <sub>H</sub> 3E <sub>H</sub>	0000 <sub>H</sub>	Mailbox PCI to Local Bus Data Registers 1 through 7	261



## 8.1.4 Transmit T1/E1 Framer Registers (Indirect Access)

Note: The transmit framer registers will be accessed via registers TREGSEL and TDATA as part of the Local Bus direct access register set. Please refer to page 251 for description of TREGSEL and to page 252 for description of TDATA.

Table 8-4 Transmit T1/E1 Framer Registers

Register	Access	Address	Reset value	Comment	Page					
Control reg	Control registers									
TCMDR	R/W	00 <sub>H</sub>	0000 <sub>H</sub>	Command	325					
TFMR	R/W	01 <sub>H</sub>	0000 <sub>H</sub>	Mode	327					
TLCR0	R/W	02 <sub>H</sub>	0000 <sub>H</sub>	Loop Code Register 0	329					
TLCR1	R/W	03 <sub>H</sub>	0000 <sub>H</sub>	Loop Code Register 0	330					
TPRBSC	R/W	04 <sub>H</sub>	001F <sub>H</sub>	PRBS Control	331					
TFPR0	R/W	05 <sub>H</sub>	0000 <sub>H</sub>	Fixed Pattern Register	332					
TFPR1	R/W	06 <sub>H</sub>	0000 <sub>H</sub>	- Fixed Falletti Keyistei	332					
TPTSL0	R/W	07 <sub>H</sub>	FFFF <sub>H</sub>	DDDS Time slot Degister	333					
TPTSL1	R/W	08 <sub>H</sub>	FFFF <sub>H</sub>	PRBS Time slot Register	333					
XSP	R/W	09 <sub>H</sub>	0000 <sub>H</sub>	Spare bit Register	334					



## 8.1.5 Receive T1/E1 Framer Registers (Indirect Access)

Note: The receive framer registers will be accessed via the registers RREGSEL and RDATA. Please refer to page 253 for description of RREGSEL and to page 254 for description of RDATA.

Table 8-5 Receive T1/E1 Framer Registers

Register	Access	Address	Reset value	Comment	Page
Control Reg	isters				
RCMDR	R/W	00 <sub>H</sub>	0000 <sub>H</sub>	Command	335
RFMR	R/W	01 <sub>H</sub>	0000 <sub>H</sub>	Mode Register	338
RLCR0	R/W	02 <sub>H</sub>	0000 <sub>H</sub>	Loop Code Register 0	343
RLCR1	R/W	03 <sub>H</sub>	0000 <sub>H</sub>	Loop Code Register 1	344
RPRBSC	R/W	04 <sub>H</sub>	001F <sub>H</sub>	PRBS Control	345
PFPR0	R/W	05 <sub>H</sub>	0000 <sub>H</sub>	Fixed Dettern Degister	346
RFPR1	R/W	06 <sub>H</sub>	0000 <sub>H</sub>	Fixed Pattern Register	340
RPTSL0	R/W	07 <sub>H</sub>	FFFF <sub>H</sub>	DDDC Time alot Degister	347
RPTSL1	R/W	08 <sub>H</sub>	FFFF <sub>H</sub>	PRBS Time slot Register	347
IMR	R/W	09 <sub>H</sub>	0000 <sub>H</sub>	Interrupt Mask	348
RFMR1	R/W	0A <sub>H</sub>	0000 <sub>H</sub>	Mode Register 1	349
PCD	R/W	0B <sub>H</sub>	0015 <sub>H</sub>	Pulse Count Detection	350
PCR	R/W	0C <sub>H</sub>	0015 <sub>H</sub>	Pulse Count Recovery	351
Status regis	ters				<u>,                                      </u>
FRS	R	40 <sub>H</sub>	0000 <sub>H</sub>	Status	352
FEC	R	41 <sub>H</sub>	0000 <sub>H</sub>	Framing Error Counter	355
CEC	R	42 <sub>H</sub>	0000 <sub>H</sub>	CRC Error Counter	356
EBC	R	43 <sub>H</sub>	0000 <sub>H</sub>	Errored Block Counter	357
BEC	R	44 <sub>H</sub>	0000 <sub>H</sub>	Bit Error Counter	358



# 8.1.6 Facility Data Link Registers (Indirect Access)

Note: The FDL registers will be accessed via registers FREGSEL and FDATA.

Table 8-6 Facility Data Link Registers

Register	Access	Address	Reset value	Comment	Page
RCR1	R/W	00 <sub>H</sub>	0000 <sub>H</sub>	Receive Configuration Register 1	359
RCR2	R/W	01 <sub>H</sub>	0000 <sub>H</sub>	Receive Configuration Register 2	362
RFF	R	02 <sub>H</sub>	0000 <sub>H</sub>	Receive FIFO	364
XCR1	R/W	03 <sub>H</sub>	0000 <sub>H</sub>	Transmit Configuration Register 1	365
XCR2	R/W	04 <sub>H</sub>	0000 <sub>H</sub>	Transmit Configuration Register 2	367
XFF	W	05 <sub>H</sub>	0000 <sub>H</sub>	Transmit FIFO	368
PSR	R	06 <sub>H</sub>	0000 <sub>H</sub>	Port Status	369
HND	W	07 <sub>H</sub>	0000 <sub>H</sub>	Handshake	371
MSK	R/W	08 <sub>H</sub>	0000 <sub>H</sub>	Interrupt Mask	374
RAL	R/W	09 <sub>H</sub>	0000 <sub>H</sub>	Receive Address Low	375
RAH	R/W	0A <sub>H</sub>	0000 <sub>H</sub>	Receive Address High	376
RSAW1	R	0B <sub>H</sub>	0000 <sub>H</sub>	Receive S <sub>a</sub> Word 1	377
RSAW2	R	0C <sub>H</sub>	0000 <sub>H</sub>	Receive S <sub>a</sub> Word 2	378
RSAW3	R	0D <sub>H</sub>	0000 <sub>H</sub>	Receive S <sub>a</sub> Word 3	379
RSAW4	R	0E <sub>H</sub>	0000 <sub>H</sub>	Receive S <sub>a</sub> Word 4	380
CRCS1	R	0F <sub>H</sub>	0000 <sub>H</sub>	CRC Status Counter 1	381
CRCS2	R	10 <sub>H</sub>	0000 <sub>H</sub>	CRC Status Counter 2	382
XSAW1	R/W	11 <sub>H</sub>	0000 <sub>H</sub>	Transmit S <sub>a</sub> Word 1	383
XSAW2	R/W	12 <sub>H</sub>	0000 <sub>H</sub>	Transmit S <sub>a</sub> Word 2	384
XSAW3	R/W	13 <sub>H</sub>	0000 <sub>H</sub>	Transmit S <sub>a</sub> Word 3	385
VSSM	R/W	14 <sub>H</sub>	0000 <sub>H</sub>	Valid SSM Pattern	386
VCRC	R/W	15 <sub>H</sub>	0000 <sub>H</sub>	Valid CRC Count Pattern	387



# 8.2 Detailed Register Description

# 8.2.1 PCI Configuration Register

# DID/VID

**Device ID/Vendor ID** 

 $\begin{array}{lll} {\sf Access} & : {\sf read} \\ {\sf Address} & : {\sf 00_H} \\ \end{array}$ 

Reset Value : 2108110A<sub>H</sub>

31 DID(15:0)

15 VID(15:0)

DID Device ID

The device ID identifies the particular device. It is hardwired to value

2108<sub>H</sub>.

VID Vendor ID

The vendor ID identifies the manufacturer of the device. It is hardwired

to value 110A<sub>H</sub>.



# STAT/CMD Status/Command Register

Access : read/write

Address : 04<sub>H</sub>

Reset Value : 02A00000<sub>H</sub>

31	30	29	28	27	26	25	24	23	22	21					16
DPE	SSE	RMA	RTA	0	01	I <sub>B</sub>	DPED	1	0	1	0	0	0	0	0
													,		
15							8		6				2	1	0
0	0	0	0	0	0	0	SE	0	PER	0	0	0	ВМ	MS	0

# DPE Detected Parity Error

This bit will be asserted whenever the MUNICH256FM detects a parity error.

- 0 No parity error detected.
- 1 Parity error detected. This bit will be cleared by writing a '1' to this bit position.

# SSE Signaled System Error

This bit will be asserted whenever the MUNICH256FM asserted SERR. For system error conditions see bit SE.

- 0 No system error signaled.
- 1 System error has been signaled. This bit will be cleared by writing a '1' to this bit position.

#### RMA Received Master Abort

This bit will set whenever a transaction in which the MUNICH256FM acted as bus master was terminated with master abort.

- No master abort detected.
- 1 Transaction terminated with master abort. This bit will be cleared by writing a '1' to this bit.



#### RTA Received Target Abort

This bit will be set whenever a transaction in which the MUNICH256FM acted as bus master was terminated with target abort.

- 0 No target abort detected.
- 1 Transaction terminated with target abort. This bit will be cleared by writing a '1' to this bit.

#### DPED Data Parity Error Detected

- 0 No data parity error detected.
- 1 The following three conditions are met:
  - •The bus agent asserted PERR itself or observed PERR asserted.
  - •The bus agent acted as bus master for the operation in which the error occurred.
  - •The Parity Error Response Bit is set

## SE SERR Enable

This bit enables assertion of SERR in case of severe system errors.

- 0 Assertion of SERR disabled.
- 1 Enables report of
  - Address parity errors
  - Master abort
  - Target abort

#### PER Parity Error Response

This bit enables reporting of parity errors via pin PERR.

- 0 Assertion of PERR disabled.
- 1 Enables the assertion of PERR. See also Data Parity Error Detected.

#### BM Bus Master

This bit controls a device ability to act as a master on PCI bus.

- 0 Disables the device from generating PCI accesses.
- 1 Allows the device to act as bus master.

#### MS Memory Space

This bit controls the device response to memory space accesses.

- 0 Response to memory space accesses disabled.
- 1 Allows a device to respond to memory space accesses.



# CC/RID Class Code/Revision ID

Access : read Address : 08<sub>H</sub>

Reset Value : 02800001<sub>H</sub>

31		24	23		16
	BCL(7:0)			SCL(7:0)	
15		8	7		0
	ICL(7:0)			RID(7:0)	

The class code, consisting of base class, subsystem class and interface class, is used to identify the generic function of the device and, in some cases, a specific register-level programming interface.

BCL Base Class

The base class is hardwired to 02<sub>H</sub>, which identifies this device as a

network controller.

SCL Sub Class

The sub class is hardwired to 80<sub>H</sub>, which together with the base class

identifies this device as 'Other network controller'.

ICL Interface Class

The interface class is hardwired to 00<sub>H</sub>.

RID Revision ID

The revision ID identifies the current version of the device. It is hardwired

to 01<sub>H</sub>.



# BIST/Header Type/Latency Timer/Cache Line Size

Access : read/write

Address : 0C<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31				24	23		16
		00 <sub>H</sub>				00 <sub>H</sub>	
<u> </u>							
15		11	10	8	7		0
	LT(7:3)			000 <sub>B</sub>		00 <sub>H</sub>	

# LT Latency Timer

The value of this register times eight specifies, in units of PCI clocks, the value of the latency timer for this PCI bus master.




# BAR1 Base Address 1

Access : read/write

Address : 10<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

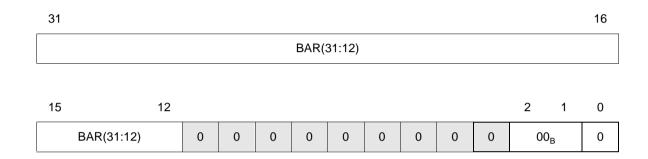

The first base address of the MUNICH256FM is marked as non-prefetchable and can be relocated anywhere in 32 bit address space of PCI memory. The MUNICH256FM supports memory accesses only.

#### BAR Base Address

The base address will be used for determining the address space of the MUNICH256FM and to do the mapping of the address space. Since the device allocates a total of 4 kByte address space BAR(31:12) are implemented as read/writable.




# BAR2 Base Address 2

Access : read/write

Address : 14<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

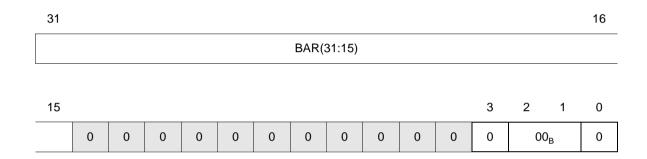

The second base address of the MUNICH256FM is marked as non-prefetchable and can be relocated anywhere in 32 bit address space of PCI memory. The MUNICH256FM supports memory accesses only. All accesses to memory regions defined by BAR2 will be mapped to the local bus.

#### BAR Base Address

The base address will be used for determining the address space of the memory regions located on the local bus of the MUNICH256FM and to set the mapping of the address space. The MUNICH256FM can access a total of 24 kByte address space on the local bus as a bus master.

In those applications where the master functionality of MUNICH256FM is not needed the second base address register BAR2 may be disabled using bit MEM.BAR2 in the PCI user configuration space.



# SID/SVID Subsystem ID/Subsystem vendor ID

Access : read Address : 2C<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31 SID(15:0)

15 O
SVID(15:0)

SID Subsystem ID

The subsystem ID uniquely identifies the add-in board or subsystem where the system resides. The value of SID may be reconfigured after

the reset phase of the system via the SPI interface.

SVID Subsystem Vendor ID

The subsystem vendor ID identifies the vendor of an add-in board or subsystem. The value may be reconfigured after the reset phase of the

system via the SPI interface.



#### ML/MG/IP/IL

# Maximum Latency/Minimum Grant/Interrupt Pin/Interrupt Line

Access : read/write

Address : 3C<sub>H</sub>

Reset Value : 06020100<sub>4</sub>

31		24	23		16
	ML(7:0)			MG(7:0)	
15		8	7		0
	IP(7:0)			IL(7:0)	

ML Maximum Latency

This value specifies how often the device needs to access the PCI bus

in multiples of 1/4 us. The value is hardwired to 06<sub>H</sub>.

MG Minimum Grant

This value specifies how long of a burst period the device needs, assuming a clock rate of 33 MHz in multiples of 1/4 us. The value is

hardwired to 02<sub>H</sub>.

IP Interrupt Pin

The interrupt pin register tells which interrupt pin the device uses. Refer to section 6.2.4 and to section 2.2.6 of the PCI specification Rev. 2.1.

The value is hardwired to 01<sub>H</sub>.

IL Interrupt Line

The interrupt line register is used to communicate interrupt line routing

information.



# SPI Access Register

Access : read/write

Address : 40<sub>H</sub>

Reset Value : 0000001F<sub>H</sub>

31							24	23	16
0	0	0	0	0	0	0	SPIS	SCMD(7:0)	
15							8	7	0
			SBA	(7:0)				SWD(7:0)	

## SPIS SPI Start

To start the EEPROM transaction, which is defined in the SPI command, the byte address, and the data field, this bit must be set to '1' by a write transaction through the PCI interface. After the transaction is finished, the start bit is deasserted by the SPI interface controller. This signal must be polled by system software.

#### SCMD SPI Command

In this register, the SPI command for the next EEPROM transfer must be written before the transaction is started. The following SPI commands are supported:

**WRSR** Write Status Register  $01_{H}$  $02_{H}$ WRITE Write Data to Memory Array  $03_{H}$ READ Read Data from Memory Array 04<sub>H</sub> WRDI Reset Write Enable Latch  $05_{H}$ RDSR Read Status Register Set Write Enable Latch 06<sub>H</sub> **WREN** 

# SBA SPI Byte Address

For read and write transaction to the connected EEPROM, the byte address must be written in this register before the transaction is started.



#### SD SPI Data

For the write status register transactions and the write data to memory array transactions, the data, that has to be written to the EEPROM, must be written to this register before the transaction is started. After a read status register transaction or read data from memory array transaction has finished (start bit is deasserted), the byte received from the EEPROM is available in this register.



# LR Long Request Register

Access : read/write

Address : 44<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31															16
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
						I	ı	ı				ı	I		
15															0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	LR

# LR Long Request

- The PCI interface deasserts the REQ signal in parallel with the assertion of the FRAME signal.
- The REQ signal will be deasserted in parallel with the deassertion of FRAME.



#### **MEM**

# **PCI Memory Command Register**

Access : read/write

Address : 48<sub>H</sub>

Reset Value : 000007E6<sub>H</sub>

31	30													17	16
0	0	0	0	0	0	0	0	0	0	0	0	0	0	BAR2	0
	•			•											,
15				11			8	7			4	3			0
0	0	0	0		MW	(3:0)			MRL	(3:0)			MR	(3:0)	

# BAR2 Enable Base Address Register 2

Setting this bit enables Base Address Register 2. Per default base address register two is disabled. If an EEPROM is connected to the SPI interface the value of this bit can be loaded via the EEPROM. Additionally this bit can set using standard PCI configuration write commands.

- 0 Base Address Register 2 is disabled.
- 1 Base Address Register 2 is enabled.

# MW Memory Write Command

The value of this register contains the write command to be used during initiator transfers and is set to memory write after reset. The value of this register is configurable during setup of the bridge either by loading the value from EEPROM or by writing from PCI side.

MRL Memory Read Command (Long transfers)

The value of this register defines command to be used for read transfers which are equal or more than two DWORDs and is set to memory read line after reset. The value of this register is configurable during run time of the bridge either by loading the value from EEPROM or by writing from PCI side.

MR Memory Read Command

The value of this register defines command to be used for read transfers of single DWORDs. The value of this register is configurable during run



time of the bridge either by loading the value from EEPROM or by reading or writing from PCI side.



# DEBUG PCI Debug Support Register

Access : read Address :  $4C_H$ 

Reset Value : 00000000<sub>H</sub>

31		16
	DSR(31:0)	
15		0
	DSR(31:0)	

# DSR Debug Support register

The value of this register contains the address of the next initiator transfer during normal operation. In case of disconnect, retry, master abort and target abort the register contains the address of the failed transaction.



# 8.2.2 PCI Slave Register

# CSPEC\_CMD Channel Specification Command Register

Access : read/write

Address : 000<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31							24	23		16
			CMD	X(7:0)					CMDR(7:0)	
15								7		0
0	0	0	0	0	0	0	0		CHAN(7:0)	

The channel specification registers are the access registers to the chip internal channel database. In order to program or reprogram a channel the channel information must be setup in the channel specification data registers before a channel command can be given. As soon as the channel command is issued the channel information is copied to the chip internal channel database and the device is reconfigured for the intended operation. Since reconfiguration time is dependent on the given command, certain commands generate acknowledge/fail command interrupt vectors to report status of configuration. During this time (command has been given and command interrupt) no further commands are allowed for the same channel. Please note that any command for one channel does not affect operation of any other channel.

For configuration of multiple channels the system software needs to program the channel data registers only once and then can issue channel commands for multiple channels without reprogramming the channel data registers.

Note: Debugging of channel information using the commands 'Receive Debug' or 'Transmit Debug' requires new programming of channel data registers for further operation.

For detailed description of register concept and command concept refer to chapter "Channel Programming / Reprogramming Concept" on page 162.



#### CMDX Command Transmit

For detailed description of transmit commands and programming sequences refer to **Chapter 6.2**.

01<sub>H</sub> Transmit Init

02<sub>H</sub> Transmit Off

04<sub>H</sub> Transmit Abort/Branch

08<sub>H</sub> Transmit Hold Reset

10<sub>H</sub> Transmit Debug

20<sub>H</sub> Transmit Idle

40<sub>H</sub> Transmit Update

#### CMDR Command Receive

For detailed description of receive commands and programming sequences refer to **Chapter 6.3**.

01<sub>H</sub> Receive Init

02<sub>H</sub> Receive Off

04<sub>H</sub> Receive Abort/Branch

08<sub>H</sub> Receive Hold Reset

10<sub>H</sub> Receive Debug

#### CHAN Channel select

0..255 Selects the channel to be programmed or debugged.

Note: Transmit init for a channel must be programmed only after reset or after a transmit off command, i.e. two transmit init commands for the same channel are not allowed.



# CSPEC\_MODE\_REC Channel Specification Mode Receive Register

Access : read/write

Address : 004<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31			28	27			24	23							16
0	0	0	DEL		ACCM	IX(3:0)					RFLA	G(7:0)			
	•			1											,
15	14	13	12	11	10	9	8							1	0
0	SFDE	TFF	INV	TMP	CRCX	CRC 32	CRC DIS	0	0	0	0	0	0	PMD	(1:0)

# DEL (Delete) Demap

This bit enables demapping of the control character DEL. This bit is valid in PPP modes only.

- 0 Disable demapping of control character DEL.
- 1 Enable demapping of control character DEL.

#### ACCMX Extended ACCM

In addition to the *Channel Specification Receive ACCM Map* the user can select four global user definable characters for character demapping in PPP modes. Setting one or more of the bits ACCM(3) through ACCM(0) enables the corresponding character which can be found in register REC\_ACCMX.

- O Disable the selected character in REC\_ACCMX for character demapping.
- 1 Enable the corresponding character in register REC\_ACCMX for character demapping.

# RFLAG Receive Flag

Used in transparent mode only. The RFLAG constitutes the flag that is filtered from the received bit stream if enabled via bit TFF.



# SFDE Short/Small Frame Drop Enable

This bit enables either the drop of short frames or the drop of small frames. This bit is valid in HLDC and PPP modes only.

- O Short Frame Drop. Frames smaller than four bytes payload data (CRC32) or smaller than two bytes payload data (CRC16) are dropped. This function is not available if bit CRCX is enabled.
- 1 Small Frame Drop. Frames (Payload and CRC) which are smaller or equal to CONF3.MINFL are dropped.

# TFF TMA Flag

This bit enabled flag extraction in TMA mode and is available if non of the bits belonging to this channel is masked.

- 0 No flag extraction
- 1 Enable flag extraction. The flag specified in RFLAG will be extracted from the received data stream.

#### INV Bit Inversion

When bit inversion is enabled incoming channel data is inverted before processed by the protocol machine. E.g. incoming octet 81<sub>H</sub> will be recognized as idle flag in HDLC mode.

- 0 No Bit Inversion
- 1 Bit Inversion

#### TMP Transparent Mode Packing

This bit enables the transparent mode packing and is valid in TMA mode only. This feature is applicable if at least one bit in any time slot is masked.

- Incoming masked bits are substituted with '1'. The non-used (masked) data bits are substituted by '1's.
- If subchanneling is used in transparent mode (i.e. less than 8 bits of a time slot are used), the non-used (masked) data bits are discarded.

#### CRCX CRC Transfer

This bit enables the capability to store the CRC checksum of incoming data packets in system memory together with the payload data.

- The CRC checksum from the incoming data packet will be removed from the packet and not transferred to the shared memory.
- The CRC checksum together with the payload data is transferred to the shared memory.



#### CRC32 CRC32 Select

This bit selects the generator polynomial in the receiver. The checksum of incoming data packets will be compared against CRC16 or CRC32. CRC Select is valid in HDLC and PPP modes only.

0 Select CRC16 checksum.

1 Select CRC32 checksum.

#### CRCDIS CRC Check Disable

This bit disables CRC Check in HDLC and PPP protocol modes.

0 CRC check is enabled.

1 CRC check is disabled.

#### PMD Protocol Machine Mode

These bit fields select the protocol machine mode in receive direction.

00<sub>B</sub> Select HDLC operation.

01<sub>B</sub> Select Bit synchronous PPP.

10<sub>B</sub> Select Byte synchronous PPP.

11<sub>B</sub> Select Transparent Mode.




# CSPEC\_REC\_ACCM Channel Specification Receive ACCM Map Register

Access : read/write

Address : 008<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

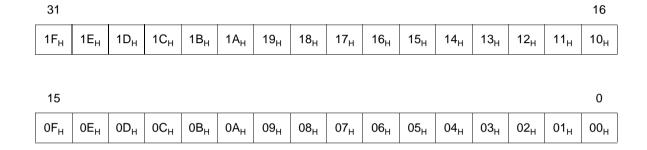

Any of the given characters can be selected for character demapping. If a bit is set the corresponding character is expected to be mapped by the control ESC character and is removed if received. These bits are valid in octet synchronous PPP modes only.

Note: If this register needs to be reprogrammed, it must be done **before** accessing the register CSPEC\_MODE\_REC.



# CSPEC\_MODE\_XMIT Channel Specification Mode Transmit Register

Access : read/write

Address : 014<sub>H</sub>

Reset Value : 00000000

31							24	23						16
			FNUN	M(7:0)						TFLA	G(7:0)			
15		13	12	11		9	8	7		4	3		1	0
IFTF	0	FA	INV	TMP	0	CRC 32	CRC DIS		ACCMX(3:0)		DEL	0	PMD	(1:0)

## FNUM Flag number

FNUM denotes the number of flags send between two frames. The flag number can be updated during transmission with command 'Transmit Update'.

One flag is sent between two frames (shared flag).

1..255 FNUM+1 flags are sent between two frames.

TFLAG Transparent flag

Only valid if transparent mode is selected and if FA is enabled. TFLAG constitutes the flag that is inserted into the transmit bit stream.

IFTF Interframe Time Fill

This bit determines the interframe time fill in HDLC and PPP modes.

0 Interframe time fill is 7E<sub>H</sub>.

Interframe time fill is FF<sub>H</sub>.

FA Flag Adjustment

Only valid if transparent mode is selected.

The value FF<sub>H</sub> is sent in sent in all TMA mode exception conditions.

The value specified in TFLAG is sent in all TMA mode exception conditions (e.g. idle). This bit can be set only when none of the bits belonging to this channels is masked.



#### INV Bit Inversion

If bit inversion is enabled outgoing channel data is inverted after processed by the protocol machine. E.g. a outgoing idle flag is transmitted as octet 81 in HDLC mode.

- 0 Disable bit inversion.
- 1 Enable bit inversion.

# TMP Transparent Mode Pack

This bit enables the transparent mode packing and is valid in TMA mode only. This feature is applicable if at least one bit in any time slot is masked.

- If subchanneling is used outgoing masked bits of data octet are discarded and substituted with '1'.
- 1 If subchanneling is used outgoing masked bits are sent as '1'.

  The remaining bits of data are sent in the next time slot.

#### CRC32 CRC 32 Select

This bit selects the generator polynomial in the transmitter. The checksum of outgoing data packets will be generated according to CRC16 or CRC32. CRC32 Select is valid in HDLC and PPP modes only.

- Select CRC16 generation.
- Select CRC32 generation.

#### CRCDIS CRC Disable

This bit enables generation and transmission of a CRC checksum. CRC disable is valid in HDLC and PPP modes only.

- O CRC generation and transmission is disabled.
- 1 CRC generation and transmission is enabled.

#### ACCMX Enable extended ACCM character

The selected bits in bit field ACCMX denote the enabled characters in XMIT\_ACCMX.

In addition to the *Channel Specification Transmit ACCM Map* the user can select four global user definable characters for character mapping in PPP modes. Setting one or more of the bits ACCM(3) through ACCM(0) enables the corresponding character which can be found in register XMIT ACCMX.

- O Disable the selected character in XMIT\_ACCMX for character mapping.
- 1 Enable the corresponding character in register XMIT\_ACCMX for character mapping.



DEL DEL (Delete) Map Flag

This bit enables mapping of the control character DEL. This bit is valid in

PPP modes only.

0 Disable mapping of DEL.

1 Enable mapping of DEL.

PMD Protocol Machine Mode

This bit field selects the protocol machine mode in transmit direction.

00<sub>B</sub> Select HDLC operation.

01<sub>B</sub> Select Bit synchronous PPP.

10<sub>B</sub> Select Byte synchronous PPP.

11<sub>B</sub> Select Transparent Mode.



# CSPEC\_XMIT\_ACCM Channel Specification Transmit ACCM Map Register

Access : read/write

Address : 018<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31															16
1F <sub>H</sub>	1E <sub>H</sub>	1D <sub>H</sub>	1C <sub>H</sub>	1B <sub>H</sub>	1A <sub>H</sub>	19 <sub>H</sub>	18 <sub>H</sub>	17 <sub>H</sub>	16 <sub>H</sub>	15 <sub>H</sub>	14 <sub>H</sub>	13 <sub>H</sub>	12 <sub>H</sub>	11 <sub>H</sub>	10 <sub>H</sub>
15															0
0F <sub>H</sub>	ΩE	OD.	00	ΛB	0.4	00	08	07	06 <sub>H</sub>	05	04 <sub>H</sub>	03	02	01 <sub>H</sub>	00 <sub>H</sub>

Any of the given characters can be selected for character mapping. If a bit is set the corresponding character will be mapped by the control ESC character. These bits are valid in octet synchronous PPP modes only.



# CSPEC\_BUFFER Channel Specification Buffer Configuration Register

Access : read/write

Address : 020<sub>H</sub>

Reset Value : 00200000<sub>H</sub>

31	29	28									16	
TQUEU	E(2:0)		ITBS(12:0)									
15		12	11		8		6	4	3		0	
TBRTC(3:0)				TBFTC(3:0)		0	RQUEL	JE(2:0)		RBTC(3:0)		

TQUEUE Transmit Interrupt Vector Queue

This bit field determines the interrupt queue where channel interrupts

transmit will be stored.

ITBS Individual transmit buffer size

Note: Please note that the internal architecture is 32 bit wide. Therefore each buffer location corresponds to four data octets.

The transmit buffer size configures the number of internal transmit buffer locations for a particular channel. Buffer locations will be allocated on command transmit init and released after command transmit off.

Note: The sum of transmit forward threshold and transmit refill threshold must be smaller than the internal buffer size.

TBRTC Transmit Buffer Refill Threshold Code

Note: Please note that the internal architecture is 32 bit wide. Therefore each buffer location corresponds to four data octets.

TBRTC is a coding for the transmit refill threshold. Please refer to **Table 8-7** for correspondence between code and threshold.

The internal transmit buffer has a programmable number of buffer locations per channel. When the number of free locations reach the transmit buffer refill threshold the internal transmit buffer requests new data from the data management unit.



TBFTC Transmit Buffer Forward Threshold Code

Note: Please note that the internal architecture is 32 bit wide. Therefore each buffer location corresponds to four data octets.

TBFTC is a coding for the transmit buffer forward threshold. Please refer to **Table 8-7** for correspondence between code and threshold.

The transmit buffer forward threshold code determines the number of buffer locations which must be filled until protocol machine starts transmission. Nevertheless the transmit buffer forwards data packets to protocol machine as soon as a whole packet or the end of a packet is stored in the transmit buffer.

RQUEUE Receive Interrupt Queue.

This bit field determines the interrupt queue number where channel interrupts receive will be stored.

RBTC Receive Buffer Threshold Code

Note: Please note that the internal architecture is 32 bit wide. Therefore each buffer location corresponds to four data octets.

RBTC is a coding for the receive buffer threshold. Please refer to **Table 8-7** for correspondence between code and threshold.

The receive buffer threshold determines the maximum packet size in DWORDs which will be stored in the internal receive buffer for a specific channel. When the packet size reaches the receive buffer threshold or a packet has been completely received, the packet will be forwarded to system memory.

Table 8-7 Threshold Codings

Coding	Threshold in DWORDs	RBTC	TBFTC	TBRTC	TPBL
0000 <sub>B</sub>	1	Х	Х	х	Х
0001 <sub>B</sub>	4	Х	Х	х	Х
0010 <sub>B</sub>	8	Х	Х	х	Х
0011 <sub>B</sub>	12	Х	Х	х	Х
0100 <sub>B</sub>	16	Х	Х	х	Х
0101 <sub>B</sub>	24	Х	Х	х	Х
0110 <sub>B</sub>	32	Х	Х	х	Х
0111 <sub>B</sub>	40	Х	Х	х	Х
1000 <sub>B</sub>	48	Х	Х	Х	Х



Coding	Coding Threshold in DWORDs		TBFTC	TBRTC	TPBL		
1001 <sub>B</sub>	64	Х	Х	Х	Х		
1010 <sub>B</sub>	96			Х			
1011 <sub>B</sub>	128			Х			
1100 <sub>B</sub>	192	Not '	Valid	Х	Not		
1101 <sub>B</sub>	256			Х	Valid		
1110 <sub>B</sub>	384			Х			
1111 <sub>B</sub>	512			Х			



# CSPEC\_FRDA Channel Specification FRDA Register

Access : read/write

Address : 024<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31				16
	FRDA(31:2)			
15		2	1	0
	FRDA(31:2)		0	0

# FRDA First Receive Descriptor Address

This 30-bit pointer contains the start address of the first receive descriptor. The receive descriptor is read entirely after the first request of the receive buffer and stored in the on-chip channel database. Therefore all information in the descriptor pointed to by FRDA must be valid when the data management unit branches to this descriptor.

The user can specify a new First Receive Descriptor Address using receive abort/branch command. In this case the First Receive Descriptor Address (FRDA) is used as a pointer to a new linked list. See details on commands in section "Channel Commands" on page 163.



# CSPEC\_FTDA Channel Specification FTDA Register

Access : read/write

Address : 028<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31			16
	FTDA(31:2)		
15			0
	FTDA(31:2)	0	0

# FTDA First Transmit Descriptor Address

This 30-bit pointer contains the start address of the first transmit descriptor. The transmit descriptor is read entirely after the first request of the transmit buffer and stored in the on-chip channel database. Therefore all information in the descriptor pointed to by FTDA must be valid when the data management unit branches to this descriptor.

The user can specify a new First Transmit Descriptor Address using the 'Transmit Abort/Branch' command. In this case the first transmit descriptor address (FTDA) is used as a pointer to a new linked list. See details on commands in **Chapter 6.2**.



# CSPEC\_IMASK Channel Specification Interrupt Vector Mask Register

Access : read/write

Address : 02C<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31	30		28					23	22						16
0	TAB	0	HTAB	0	0	0	0	UR	TFE	0	0	0	0	0	TCC
•															
15	14	13	12	11	10	9	8	7	6	5		3	2		0
0	RAB	RFE	HRAB	MFL	ROFD	CRC	ILEN	RFOP	SF	IFTC	0	SFD	SD	0	RCC

For each channel or command related interrupt vector an interrupt vector generation mask is provided. Generation of an interrupt vector itself does not necessarily result in assertion of the interrupt pin. For description of interrupt concept and interrupt vectors see **Chapter 4.13.1**.

The following definition applies:

1 The device will not generate the corresponding interrupt vector, i.e. the

interrupt vector is masked.

O An interrupt condition results in generation of the corresponding interrupt

vector.

#### **Channel Interrupt Vector Transmit**

TAB Mask 'Transmit Abort'

HTAB Mask 'Hold Caused Transmit Abort'

UR Mask 'Transmit Underrun'
TFE Mask 'Transmit Frame End'

#### **Command Interrupt Vector Transmit**

TTC Mask 'Transmit Command Complete'



# **Command Interrupt Vector Receive**

RAB Mask 'Receive Abort'

RFE Mask 'Receive Frame End'

HRAB Mask 'Hold Caused Receive Abort'

MFL Mask 'Maximum Frame Length Exceeded'

RFOD Mask 'Receive Frame Overflow DMU'

CRC Mask 'CRC Error'

ILEN Mask 'Invalid Length'

RFOP Mask 'Receive Frame Overflow'

SF Mask 'Short Frame Detected'

IFTC Mask 'Interframe Time-fill Flag' and 'Interframe Time-fill Idle'

SFD Mask 'Short Frame Dropped'

SD Mask 'Silent Discard'

RCC Mask 'Receive Command Complete'



# CONF1 Configuration Register 1

Access : read/write

Address : 040<sub>H</sub>

Reset Value : 820000F0<sub>H</sub>

31						25	24	23		21	20				16
IIP	0	0	0	0	0	STOP	SRST	0	0	MFLE		M	IFL(12:	0)	
<u> </u>							•								
15							8	7	6	5	4	3	2	1	0
	MFL(12:0)								PBIM	RBIM	RFIM	SFL	RBM	LBE	0

# IIP Initialization in Progress (Read Only)

After reset (hardware reset or software reset) the internal RAM's are self initialized by the MUNICH256FM. During this time (approx. 250  $\mu$ s) no other accesses to the device than reading register CONF1 or FCONF are allowed. This bit must be polled until it has been deasserted by the MUNICH256FM.

- 0 Self initialization has finished.
- 1 Self initialization in progress.

## STOP Stop

After reset the MUNICH256FM can be switched to 'Fast Initialization' mode. During stop mode internal RAM's will not be accesses by internal state machines. This mode is for test purposes only and allows writing or reading the internal RAM's.

- Device is in normal operation. This bit must be set to zero after chip initialization. See also "Mode Initialization" on page 169.
- 1 Device is in 'Fast Initialization Mode'. This function is used for test purposes only.

# SRST Software Reset

This bit issues a software reset to the MUNICH256FM. During software reset all interfaces except PCI interface are forced into their idle state. After software reset is set the MUNICH256FM starts its self initialization



and IIP will be asserted. When IIP is deasserted system software can reset SRST to '0' to start normal operation again.

- 0 Normal operation
- 1 Start software reset.

# MFLE Maximum Frame Length Check Enable

- O Disable maximum frame length check.
- 1 Enable maximum frame length check.

# MFL Maximum Frame Length

MFL defines the maximum length of incoming data packets. Packets exceeding the specified length are reported in the status field of the receive descriptor and if selected in an additional channel interrupt.

#### MBIM Mailbox Interrupt Vector Mask

This bit enables or disables mailbox system interrupt vectors generated by the mailbox.

- 0 Enable interrupt vector.
- 1 Disable interrupt vector.

#### PBIM PCI Bridge Interrupt Vector Mask

This bit enables or disables the 'PCI Access Error' interrupt vector generated by the PCI bridge.

- 0 Enable interrupt vector.
- Disable interrupt vector.

#### RBIM Receive Buffer Interrupt Vector Mask

This bit enables or disables system interrupt vectors 'Receive Buffer Queue Early Warning' and 'Receive Buffer Action Queue Early Warning' which are generated by the receive buffer. RBIM is valid only if bit RBM is set.

- 0 Enable interrupt vector.
- 1 Disable interrupt vector.

# RFIM Receive Buffer Failed Interrupt Vector Mask

This bit enables or disables the 'Receive Buffer Access Failed' interrupt vector.

- 0 Enable interrupt vector.
- 1 Disable interrupt vector.



# SFL Short Frame Length

This bit is a global parameter which defines the length of short frames for all channels.

- O Short frame is defined as a frame containing less than 4 bytes (CRC16) or less than 6 bytes (CRC32).
- Short frame is defined as a frame containing less than 2 bytes (CRC16) or less than 4 bytes (CRC32).

#### RBM Receive Buffer Monitor

This bit is provided to switch between two monitoring functions of the receive buffer. Receive buffer monitor functions are available in register RBTH and RBMON.

- The minimum free pool count is captured in register RBTH.
- An interrupt is generated, if the free pool counter falls below the value programmed in register RBTH.

# LBE Little/Big Endian Byte Swap

This bit enables the little or big endian mode, which affects the data structures pointed to by data pointer of receive or transmit descriptor in system memory. Registers, interrupt vectors or descriptors are not affected by little/big endian byte swap.

- 0 Switch data section to little endian mode.
- 1 Switch data section to big endian mode.



## CONF2 Configuration Register 2

Access : read/write

Address : 044<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31	30		28	27	26	24	23	22	21	20		16
0	S	YSQ(2:	0)	0	PORTQ	(2:0)		TBE	RSPEN		SPA(4:0)	
				·								
15		13	12			8	7					0
RCL	0	0		LI	PID(4:0)					LCID(7:0	0)	

SYSQ System Interrupt Queue

SYSQ sets up the interrupt queue where system interrupt vectors will be written to. One system interrupt queue can be selected for system interrupts.

PORTQ(2:0) Port Interrupt Vector Queue

PORTQ sets up the interrupt queue where port interrupt vectors will be written to. One interrupt queue can be selected for port interrupts.

TBE Test Breakout Enable

This bit enables the test breakout function. The incoming signals of the port selected via LPID are switched to the test ports and the incoming signals on the test port replace the output signals of the selected port. Setting TBE enables the selected port (tri-state no longer active) and has priority over functions selected in register PMR and priority over bit RSPEN. The port may be disabled using register REN and TEN to disable internal processing while test function is active.

0 Disable test function.

1 Enable test function.

RSPEN Receive Synchronization Pulse Enable

The selected transmit clock of port zero is visible on pin TCLKO. This function is available when port zero is operated in unchannelized mode.



The internally generated synchronization pulse of input port CONF2.SPA is switched to pin RSPO for test purposes.

SPA Synchronization Pulse Access

This bit field selects one framer 0..27 whose synchronization pulse can be externally monitored. Only valid if RSPEN is set.

RCL Remote Channel Loop

The remote channel loop switches incoming data of one channel to the outgoing bit stream of the same channel. The bit rate of the receiver and the transmitter must be the same. The channel to be looped can be selected using bit field LCID. One channel at a time can be looped.

O Disable remote channel loop.

1 Enable remote channel loop.

LPID Port Identifier

This bit field selects the port which shall be switched to the test port. See also bit CONF1.TBE.

LCID Loop Channel Identifier

This bit field selects the channel which shall be looped through the internal loop buffer.



## CONF3 Configuration Register 3

Access : read/write

Address : 048<sub>H</sub>

Reset Value : 00090000<sub>H</sub>

31												19			16
0	0	0	0	0	0	0	0	0	0	0	0		TPBL	_(3:0)	
						I					ı	1			
15		13					8								0
0	0			MINF	L(5:0)			0	0	0	0	0	0	0	0

TPBL Transmit Packet Burst Length

This bit field is a coding for the maximum burst length on PCI bus, when data management unit fetches transmit packets. Please refer to **Table 8-7 "Threshold Codings" on page 208** for correspondence between code and maximum burst length.

El Marianos Espera Laborth

MINFL Minimum Frame Length

Only valid for those channel which have bit CSPEC\_MODE\_REC.SFDE set. MINFL sets the minimum frame length in bytes (payload bytes and CRC bytes) for frames which will be forwarded to system memory. If enabled the receive buffer will drop frames which are smaller or equal to the programmed value MINFL to avoid wasting of PCI bandwidth in case of error conditions. The small frame check is disabled, if MINFL is set to zero.

Note: Since the receive packets will be dropped inside the receive buffer, the receive packet threshold CSPEC\_BUFFER.RTC has to be greater than MINFL/4 in order to work properly.




#### **RBAFT**

## **Receive Buffer Access Failed Interrupt Threshold Register**

Access : read/write

Address : 04C<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

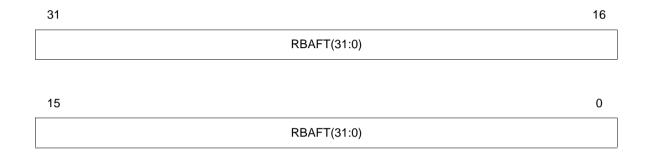

RBAFT Receive Buffer Access Failed Interrupt Threshold

This register sets the threshold for the 'Receive Buffer Access Failed'

interrupt vector.



# SFDT Small Frame Dropped Interrupt Threshold Register

Access : read/write

Address : 050<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31		16
	SFDIT(31:0)	
15		0
	SFDIT(31:0)	

## SFDIT Small Frame Dropped Interrupt Vector Threshold

The programmed threshold defines the threshold for the 'Small Frame Dropped' interrupt vector. As soon as the internal number of dropped, small frames reaches the programmed value a channel interrupt vector with bit SFD set will be generated. The actual value of dropped frames can be read using register SFDC. The value is applied to all 256 channels.



#### **PMIAR**

## **Port Mode Indirect Access Register**

Access : read/write

Address : 060<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31								23							
0	0	0	0	0	0	0	0	AIP	0	0	0	0	0	0	0
								I							
15											4				0
0	0	0	0	0	0	0	0	0	0	0		P	ORT(4:	:0)	

Note: This register is an indirect access register which must be programmed before accessing the register PMR.

AIP Auto Increment Port

This bit enables the auto increment function of bit field PORT. Each read/write access to register PMR increments PORT. This allows to program multiple, consecutive ports without accessing PMIAR again.

0 Disable auto increment function.

1 Enable auto increment function.

PORT Port Select

This bit field selects the port number, which can be accessed via register

PMR.

0..27 Port Number



## **PMR Port Mode Register**

Access : read/write

Address : 064⊔

Reset Value : 0104C000<sub>4</sub>

31			28				24		22				18		16
	PCM	(3:0)		0	0	0		000 <sub>B</sub>		0	0	0		000 <sub>B</sub>	
15	14	13	12	11	10	9	8	7	6	5					0
RIM	TIM	0	TXR	0	0	CTFSD	LT	RLL	RPL	LPL	0	0	0	0	0

Note: Effected port is selected via register PMIAR. All settings in this register affect the selected port only.

**PCM** Select Port Mode

This bit field selects the port mode.

0000<sub>R</sub> T1 mode (1.544 MHz) 1000<sub>R</sub> E1 mode (2.048 MHz) 1111<sub>B</sub> Unchannelized mode

**RIM** Receive Synchronization Error Interrupt Vector Mask

This bit disables generation of the port interrupt vector receive. See "Port

Interrupts" on page 127 for description of interrupt vectors.

0 Enable

1 Disable

TIM Transmit Synchronization Error Interrupt Vector Mask

This bit disables generation of the port interrupt vector transmit. See

"Port Interrupts" on page 127 for description of interrupt vectors.

0 Enable

Disable 1



#### TXR Transmit Data Rising

This bit defines the edge the common transmit frame synchronization pulse CTFS is sampled on with respect to the common transmit clock CTCLK.

- O CTFS is sampled on the rising edge of CTCLK.
- 1 CTFS is sampled on the falling edge of CTCLK.

#### CTFSD Common transmit frame synchronization disable

- 0 Bit 0 of transmit data is synchronized to CTFS.
- 1 Synchronization of data to CTFS is disabled.

#### LT Looped Timing

This bit selects the transmit clock in MUNICH256FM. Per default the transmit clock of the selected tributary is the common transmit clock. If set to '1' the corresponding tributary is switched into looped timed mode.

- 0 Select normal operation mode.
- 1 Select looped timing mode.

#### RLL Remote Line Loop

This bit enables the remote line loop of the selected port.

- O Disable remote line loop.
- 1 Enable remote line loop.

#### RPL Remote Payload Loop

This bit enables the remote payload loop of the selected port.

- O Disable remote payload loop.
- 1 Enable remote payload loop.

## LPL Local Port Loop

This bit enables the local port loop on the selected port. When local loops are closed, the corresponding transmit clock and the synchronization pulse is switched to the receive port.

- 0 Disable local port loop.
- 1 Enable local port loop.



## REN Receive Enable Register

Access : read/write

Address : 068<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31				27	16
0	0	0	0	REN(27:0)	
15					0
				REN(27:0)	

#### REN Receive Enable

Setting a bit in this bit field enables the receive function of the selected port. After reset all ports are disabled and thus all incoming receive data is discarded. While a port is disabled communication between port handler, time slot assigner and synchronization function is disabled. A port should be enabled if it is correctly configured using registers PMIAR and PMR.

- 0 Disable receive port.
- 1 Enable receive port.



## TEN Transmit Enable Register

Access : read/write

Address : 06C<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31				27	16
0	0	0	0	TEN(27:0)	
15					0
				TEN(27:0)	

#### TEN Transmit Enable

This bit field enables the transmit function of the selected port. After reset all transmit ports are disabled and thus all TD lines are set to tri-state. While a port is reset the communication between port handler, time slot assigner and synchronization function is disabled. After the port mode has been selected using register PMIAR and PMR a transmit port can be enabled.



#### **TSAIA**

## **Time slot Assignment Indirect Access Register**

Access : read/write

Address : 070<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31								23							16
DIR	0	0	0	0	0	0	0	AIT	0	0	0	0	0	0	0
15			12				8				4				0
				P	ORT(4:	0)			0			TS	NUM(4	:0)	

DIR Direction

This bit select the direction for which programming is valid.

0 Program time slots in receive direction.

1 Program time slots in transmit direction.

AIT Auto Increment Time slot

This bit enables the auto increment function of bit field TSNUM. Each read/write access to register TSAD increments TSNUM. This allows to program multiple, consecutive time slots without accessing TSAIA again.

0 Disable auto increment function.

1 Enable auto increment function.

PORT Port Select

This bit field selects the port number, which can be accessed via register

TSAIA.

0..27 Port number



TSNUM Time Slot Number

This bit field selects the time slots, which can be accessed via register TSAIA.

Valid time slot numbers are:

0..23 T1, Unchannelized

0..31 E1



#### **TSAD**

## **Time slot Assignment Data Register**

Access : read/write

Address : 074<sub>H</sub>

Reset Value : 02000000<sub>H</sub>

31						25	24								
0	0	0	0	0	0	INHI BIT	TMA 1ST	0	0	0	0	0	0	0	0
15							8	7							0
			CHA	N(7:0)							MASI	<b>&lt;</b> (7:0)			

Note: The time slot assignment data register assigns a channel and a mask to a specific port/time slot combination. The related port/time slot must be chosen by accessing TSAIA.

The time slot assignment has to be done before a specific channel is configured for operation. After operation the port/time slot assignment of a particular channel has to be set to inhibit.

#### INHIBIT Inhibit Time slot

This bit disabled processing of the selected port/time slot.

- 0 The time slot is enabled.
- The time slot is disabled. In receive direction incoming octets are discarded. In transmit direction the octet of this time slot and port is set to FF<sub>H</sub>.

## TMA1ST TMA First

This bit marks the first time slot belonging to a TMA superchannel for TMA synchronization. Receiver starts processing data on the marked time slot. In transmit direction data transmission is started on the marked time slot. If TMA channel uses only one time slot this bit must be set.

#### CHAN Channel Number

This bit field selects the channel number which will be associated to the port and time slot which is selected in register TSAIA.



#### MASK Mask Bits

Setting a bit in this bit field selects the corresponding bit in a time slot which is enabled for operation.

- In receive direction the corresponding bit is discarded. In transmit direction the bit is sent as '1'.
- In receive direction the corresponding bit is forwarded to the protocol machine (via time slot assigner). In transmit direction data on the serial line is generated by the protocol machine.



# REC\_ACCMX Receive Extended ACCM Map Register

Access : read/write

Address : 080<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31		24	23		16
	CHAR3(7:0)			CHAR2(7:0)	
15		8	7		0
	CHAR1(7:0)			CHAR0(7:0)	

This register is only used by channels operated in octet synchronous PPP mode. A character written to this register is mapped with a control escape sequence, if the corresponding enable flag is set in the corresponding bit CSPEC\_MODE\_REC.ACCMX(3:0).



#### **RBAFC**

## **Receive Buffer Access Failed Counter Register**

Access : read Address : 084<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31		16
	RBAFC(31:0)	
15		0
	RBAFC(31:0)	

#### RBAFC Receive Buffer Access Failed Counter

The read value of this register defines the number of packets which have been discarded due to inaccessibility of the internal receive buffer. A read access resets the counter to zero.



## SFDIA Small Frame Dropped Indirect Access Register

Access : read/write

Address : 088<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31								23	22						16
0	0	0	0	0	0	0	0	AIC	CLR	0	0	0	0	0	0
Į.															
15								7							0
0	0	0	0	0	0	0	0				CHA	N(7:0)			

## AIC Auto Increment Channel

This bit enables the auto increment function of bit field CHAN. Each read/write access to register SFD increments CHAN by two. This allows to read the status of multiple channels without accessing SFDIA again.

- 0 Disable auto increment function.
- 1 Enable auto increment function.

#### CLR Clear

This bit enables the counter mode on reads to register SFDC.

- 0 Read of register SFDC does not affect the small frame dropped counter.
- 1 After reading register SFDC the value of the small frame dropped counter will be reset to zero.

#### CHAN Channel Number

This bit field selects the channel, whose status can be read in register SFDC.


0..255 Channel number



## SFDC Small Frame Dropped Counter Register

 $\begin{array}{lll} \text{Access} & : \text{read} \\ \text{Address} & : 08C_{\text{H}} \\ \end{array}$ 

Reset Value : 00000000<sub>H</sub>

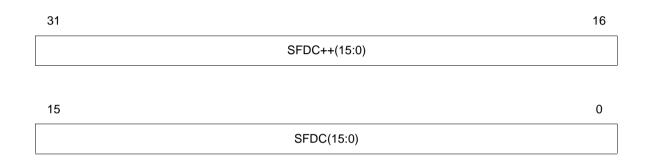

These both bit fields show the current value of the small frame dropped counter of the channel N and N+1 selected via SFDIA.CHAN. Dependent on bit field SFDIA.CLR the counter will be cleared after they are read.

SFDC++ Small Frame Dropped Counter for Channel N+1

The number of dropped, small frames of channel SFDIA.CHAN+1.

SFDC Small Frame Dropped Counter

The number of dropped, small frames of channel SFDIA.CHAN.



## XMIT\_ACCMX Transmit Extended ACCM Map

Access : read/write

Address : 090<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31		24	23		16
	CHAR3(7:0)			CHAR2(7:0)	
15		8	7		0
	CHAR1(7:0)			CHAR0(7:0)	

This register is only used by a channel in octet synchronous PPP mode. A character written to this register will be mapped with a Control Escape sequence, if the corresponding enable flag is set in the CSPEC\_MODE\_XMIT register (ACCMX(3:0)).



#### **RBMON**

## **Receive Buffer Monitor Indirect Access Register**

Access : read Address : 0B0<sub>H</sub>

Reset Value : 02000BFF<sub>H</sub>

31						25	16
0	0	0	0	0	0	RBAQC(9:0)	
•							
15				11			0
0	0	0	0			RBFPC(11:0)	

RBAQC Receive Buffer Action Queue Free Count

The value of this register determines the actual number of free actions

inside the receive buffer.

RBFPC Receive Buffer Free Pool Count

The value of this register determines the actual number of free buffer locations inside the receive buffer. After reset a total number of 3072 receive buffer locations, which equals 12kB receive buffer, is available.



## RBTH Receive Buffer Threshold Register

Access : read/write

Address : 0B4<sub>H</sub>

Reset Value : 02000001<sub>H</sub>

31						25	16
0	0	0	0	0	0	RBAQTH(9:0)	
15				11			0
0	0	0	0			RBTH(11:0)	

#### RBAQTH Receive Buffer Action Queue Free Pool Threshold

Function of RBAQTH is dependent on bit CONF1.RBM.

CONF1.RBM = '0':

The minimum value of RBMON.RBAQC, which occurred since the last reset or the last read of this register, is captures in here.

CONF1.RBM = '1':

A 'Receive Buffer Action Queue Early Warning' interrupt will be generated, if the receive buffer action queue free pool drops below the value programmed in bit field RBAQTH. The value to be programmed must be in the range of 000<sub>H</sub> to 1FF<sub>H</sub>.

RBTH Receive Buffer Free Pool Threshold

Function of RBTH is dependent on CONF1.RBM.

CONF1.RBM = '0':

The minimum value of RBMON.RBFP, which occurred since the last reset or the last read of this register, is captured in here.

CONF1.RBM = '1':

A 'Receive Buffer Queue Early Warning' interrupt vector will be generated, if the receive buffer free pool drops below the value programmed in bit field RBTH.



## IQIA

## **Interrupt Queue Indirect Access Register**

Access : read/write

Address : 0E0<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31												19	18	17	16
0	0	0	0	0	0	0	0	0	0	0	0	DBG	SIQM	SIQL	SIQBA
													•		
15												3			0
0	0	0	0	0	0	0	0	0	0	0	0	Q(3:0)			

## DBG Debug

This bit selects the debug mode of the interrupt controller. When DEBUG is set, the actual values of interrupt queue base address, interrupt queue length and high priority interrupt queue mask of queue Q are copied to register IQBA, IQL and IQMASK. The value can be read with a following access to these registers.

Note: Setting DEBUG is only allowed, if neither SIQBA, SIQL and SIQM are set.

0 No operation

1 Enable debug mode.

#### SIQM Set High Priority Interrupt Queue Mask

This bit field enables setup of the high priority interrupt queue mask of queue Q. The value to be programmed has to be configured via register IQMASK prior to a write access to this bit.

0 No operation

1 Set high priority mask.



#### SIQL Set Interrupt Queue Length

This bit field enables setup of the interrupt queue length of queue Q. The value to be programmed has to be configured via register IQL prior to a write access to this bit.

- 0 No operation
- 1 Set interrupt queue length.

## SIQBA Set Interrupt Queue Base address

This bit field enables setup of the interrupt queue base address of queue Q. The value to be programmed has to be configured via register IQBA prior to a write access to this bit.

- 0 No operation
- 1 Update interrupt queue base address with value programmed in register IQBA.

## Q Interrupt Queue Number

This bit field determines the interrupt queue number for which programming is valid. The first eight (0..7) interrupt queues are used for channel, port and system interrupt vectors, while the last interrupt queue (8) is used for command interrupt vectors. Interrupt queue number seven is per default the high priority interrupt queue.

System software may setup the interrupt queue high priority mask, the interrupt queue length and the interrupt queue base address simultaneously by setting SIQL, SIQBA and SIQM.

The command interrupt queue has a fixed length of two times 256 DWORDs, that is one DWORD for each interrupt vector.

It is possible to setup the interrupt queue high priority mask, the interrupt queue length and the interrupt queue base address concurrently by setting SIQBA, SIQL and SIQM to '1'.

Note: Programming of interrupt queue length or interrupt queue high priority mask is not valid for the command interrupt queue (interrupt queue 8).

Note: Programming of interrupt queue high priority mask is not valid for the high priority interrupt queue (interrupt queue 7).

#### 0..8 Interrupt Queue



## IQBA Interrupt Queue Base Address Register

Access : read/write

Address : 0E4<sub>H</sub>

Reset Value : 00000000

31				16
	IQBA(31:2)			
15		2	1	0
	IQBA(31:2)		0	0

## IQBA Interrupt Queue Base Address

The interrupt queue base address register assigns a base address to the eight channel interrupt queues and the command interrupt queue. To set a new base address for a specific queue, system software must first program IQBA. Afterwards the value is released by selecting the associated queue via bit field IQIA.Q and setting of bit IQIA.SIQBA. The interrupt queue base address has to be DWORD aligned. Whenever the base address of a particular interrupt queue is modified, the next interrupt vector written to that queue is stored in the first location of the queue.



## IQL Interrupt Queue Length Register

Access : read/write

Address : 0E8<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31															16
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Į.															
15					7										
0	0	0	0	0	0	0	0	IQL(7:0)							

## IQL Interrupt Queue Length

This bit field assigns a interrupt queue length to the eight channel interrupt queues. To set the interrupt queue length of a specific queue, system software must first program IQL. Afterwards the value is released by selecting the associated queue via bit field IQIA.Q and setting of bit IQIA.SIQL. IQL specifies the interrupt queue length L (number of DWORDs) in the shared memory with

L=(IQL+1)\*16 (maximum of 4092 DWORDs).

Note: IQL = 255 equals a queue length of 1 DWORD.

Whenever the length of a particular interrupt queue is modified, the next interrupt vector written to that queue is stored in the first location of the queue.



# IQMASK Interrupt Queue High Priority Mask

Access : read/write

Address : 0EC<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31	30		28					23	22						16
THI	TAB	0	HTAB	0	0	0	0	UR	TFE	0	0	0	0	0	0
	1														
15	14	13	12	11	10	9	8	7	6	5		3	2		0
RHI	RAB	RFE	HRAB	MFL	ROFD	CRC	ILEN	RFOP	SF	IFTC	0	SFD	SD	0	0

In normal operation each channel interrupt vector is written to the interrupt queue associated with a specific channel, that is interrupt queue 0 to 7. The interrupt queue mask provides the functionality to forward selected channel interrupts to the high priority interrupt queue, which is hardwired as queue 7. Therefore a mask can be set for each of the interrupt queues, which specifies the channel interrupt vector to be forwarded to the high priority interrupt queue. To set the IQMASK for interrupt queues 0 to 6, system software must first program IQMASK. Afterwards the mask is released by selecting the affected interrupt queue via bit field IQIA.Q and setting of bit SIQM.

Those interrupt vectors which have an interrupt bit set, that is also masked in this high priority mask are forwarded to the high priority interrupt queue instead of the regular interrupt queue associated with a specific channel.

If a channel interrupt vector has at least one interrupt bit set, that is also masked in the high priority mask, the interrupt vector will be forwarded to the high priority interrupt queue.

In case that a channel interrupt vector has at least one bit set, that is not masked in the high priority mask, the interrupt vector is queued into the regular interrupt queue associated with the corresponding channel.



## GISTA/GIACK Interrupt Status/Interrupt Acknowledge Register

Access : read/write

Address : 0F0<sub>H</sub>

Reset Value : 00000000<sub>H</sub>

31														17	16
INTOF	0	0	0	0	0	0	0	0	0	0	0	0	0	LBI	IF
15							8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	Q8	Q7	Q6	Q5	Q4	Q3	Q2	Q1	Q0

Depending on the corresponding bits in register GMASK, an interrupt indication in this register will be flagged at pin INTA. If an interrupt bit is masked (set to '1') in register GMASK, system software has to poll this register in order to get status information of the disabled interrupt bit.

#### INTOF Interrupt Overflow

This bit indicates that interrupt information has been lost due to overload conditions of the internal interrupt controller. This interrupt indicates a severe system problem. If this bit is set and INTOF is not masked in register GMASK, the interrupt pin INTA will be asserted. INTOF is cleared, when an '1' is written to this bit.

- No interrupt overflow.
- 1 Interrupt overflow. The interrupt will be cleared by writing a '1' to the corresponding bit.

## LBI Local Bus Interrupt

The MUNICH256FM supports bridging of interrupts from the local bus to the PCI bus. In this application the pin LINT is used as an input and as



soon as LINT changes from an inactive to an active state the interrupt pin INTA will be asserted.

Note: This bit does not clear by writing a '1'. This bit is set as long as the interrupt pin LINT is asserted.

- 0 LINT not asserted.
- 1 INT asserted.

## IF Interrupt FIFO

This bit indicates that there is an interrupt vector stored in the <u>internal</u> interrupt FIFO. The IF interrupt is available if the interrupt pin <u>LINT</u> is switched to input mode (INTCTRL.ID = '1') and when the interrupt mask GMASK.IF is set to '0'.

Note: This bit does not clear by writing a '1'. This bit is set as long as an interrupt vector is stored in the interrupt FIFO.

- 0 No Interrupt vector in interrupt FIFO.
- 1 Interrupt vector stored in internal interrupt FIFO.

#### Q8..Q0 Interrupt Queue 8..0

On reads each bit flags one or more interrupt vectors that have been written to the corresponding interrupt queue. If one of the bits is set and the same bit is not masked in register GMASK, the interrupt pin INTA will be asserted. A bit is cleared, when an '1' is written to the specific bit.

- 0 No interrupt vector written.
- 1 Read: One or more interrupt vectors have been written to interrupt queue.

Write: Clear bit



## GMASK Global Interrupt Mask Register

Access : read/write

Address : 0F4<sub>H</sub>

Reset Value : FFFFFFFF

31														17	16
INTOF	1	1	1	1	1	1	1	1	1	1	1	1	1	LINT	IF
15							8	7	6	5	4	3	2	1	0
1	1	1	1	1	1	1	Q8	Q7	Q6	Q5	Q4	Q3	Q2	Q1	Q0

Each bit in this register mask the interrupts, which are flagged in register GISTA/GIACK.

INTOF Mask Interrupt Overflow

This bit masks the interrupt overflow interrupt.

LINT Local Bus Interrupt

This bit masks bridging of interrupt from the local bus to the PCI bus.

- 0 Bridging of LINT to INTA enabled.
- 1 Bridging of LINT to INTA disabled.

IF Interrupt FIFO

This bit masks the internal mailbox/layer one interrupt FIFO.

- 0 IF interrupt is enabled.
- 1 IF interrupt is disabled.

Q8..Q0 Mask Interrupt Queue 8..0

Each of the bits Q8..Q0 masks an interrupt, which will be asserted, when an interrupt vector has been written to the corresponding interrupt queue 8..0. Masking an interrupt does not suppress generation of the interrupt vector itself.

- O Enable interrupt, when interrupt vector has been written to selected interrupt queue.
- 1 Mask (Disable) interrupt, when interrupt vector has been written to selected interrupt queue.



## 8.2.3 PCI and Local Bus Slave Register Set

#### **FCONF**

#### Framer and FDL Configuration Register

Access : read/write

Address : 100<sub>H</sub> (PCI), 00<sub>H</sub> (Local Bus)

Reset Value : 8080<sub>H</sub>

15	14							7	6	5	4	3	2	1	0	
IIP	0	0	0	0	0	0	0	MBID	WSE	BSD	P28	P18	P08	LAE	LME	

## IIP Initialization in Progress (Read Only)

After reset (hardware reset or software reset) the internal RAM's are self initialized by the MUNICH256FM. During this time (approx. 250  $\mu$ s) no other accesses to the device than reading register CONF1 or FCONF are allowed. This bit must be polled until it has been deasserted by the MUNICH256FM.

- Self initialization has finished.
- Self initialization in progress.

#### MBID Mailbox Interrupt Vector Disable

- O Enable generation of mailbox interrupt vectors. As soon as system software on PCI side writes to register MBP2E0 an interrupt vector indicating a mailbox interrupt will be forwarded to the internal interrupt FIFO and can be read by the local CPU.
- 1 Disable generation of mailbox interrupt vectors.

#### WSE Wait State Enable

This bit enables the wait state controlled master mode.

- 1 Wait state controlled bus mode. Wait states are defined in register MTIMER.WS.



#### BSD Byte Swap Disable

This bit disables byte swapping on 16-bit transfers when the local bus is operated in Motorola master mode.

- 0 Enable byte swap.
- 1 Disable byte swap.

## P28..P08 Switch Page 2..0 to 8-bit mode

The MUNICH256FM maps three pages of 8 kByte each to the local bus in master mode. Each page accessed from the PCI side can be mapped in 8-bit mode or 16-bit mode. In 8-bit mode the data bits LD(15:8) are unused.

- 0 Set page mode to 16-bit mode.
- 1 Set page mode to 8-bit mode.

#### LAE Local Bus Arbiter Enable

This bit enables the local bus arbiter. In case that the local bus arbiter is enabled the MUNICH256FM will arbitrate for each bus access on the local bus using the arbitration signals. If local bus arbiter functionality is disabled it assumes bus ownership and does not arbitrate for the local bus.

- 0 Disable the local bus arbiter.
- 1 Enable the local bus arbiter.

#### LME Local Bus Master Enable

This bit enables the local bus master functionality. As long as the local bus master functionality is disabled the MUNICH256FM can be accessed from the local bus as slave only.

- Disable Local Bus Master.
- Enable Local Bus Master.



## MTIMER Master Local Bus Timer Register

Access : read/write

Address : 104<sub>H</sub> (PCI), 02<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15	4	3	0
TIMER(15:4)		WS(3:0)	

TIMER Local Bus Latency Timer

TIMER\*16 determines the time in clock cycles the MUNICH256FM holds the local bus as bus master after it was granted the bus. It holds the bus as long as the first transaction is in progress or the latency timer is counting. In case that the MUNICH256FM shall release the bus after it

each transaction the latency TIMER value must be set to zero.

WS Wait State Timer

The value of this register determines the time in clock cycles the MUNICH256FM asserts LRD, LWR (Intel Mode) respectively LDS

(Motorola Bus Mode). See also FCONF.WSE.



# INTCTRL Interrupt Control Register

Access : read/write

Address : 108<sub>H</sub> (PCI), 04<sub>H</sub> (Local Bus)

Reset Value : 0001<sub>H</sub>

15												3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	ID	IP	CLIQ	IM

ID Interrupt Direction

This pin determines the direction of the interrupt pin  $\overline{\text{LINT}}$ .

0 LINT is output.

1 LINT is input.

IP Interrupt Polarity

 $\overline{\text{LINT}}$  is active low.

1 LINT is active high.

CLIQ Clear Interrupt Queue

Setting this bit will clear the internal interrupt FIFO. This effects all interrupts of facility data link, framer and mailbox interrupts to the local bus.

0 No action

Clear interrupt FIFO.

IM Interrupt Mask

This bit masks assertion of the pin LINT when interrupts are stored in the internal interrupt FIFO. If the interrupt direction bit is set to output mode interrupt are flagged at interrupt pin LINT. If the interrupt direction is set to input mode interrupts are flagged at pin INTA.

0 Enable assertion of interrupt pin LINT.

1 Disable assertion of interrupt pin  $\overline{\text{LINT}}$ .



## INTFIFO Interrupt FIFO

Access : read

Address : 10C<sub>H</sub> (PCI), 06<sub>H</sub> (Local Bus)

Reset Value : FFFF<sub>H</sub>

15 IV(15:0)

IV Interrupt Vector

After the MUNICH256FM asserted interrupt pin  $\overline{\text{LINT}}$  on the local bus side, this bit field contains an interrupt vector containing interrupt information. Please refer to section "Layer One Interrupts" on page 136

for a detailed description of interrupt vector contents.



#### **TREGSEL**

## Transmit T1/E1 Framer Port & Register Select

Access : read/write

Address : 110<sub>H</sub> (PCI), 08<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15	14		12		8	7				3	0
0	AIP	0		PORT(4:0)		AIA	0	0	0	ADDR(3:0)	

Note: This register is an indirect access register, which must be programmed before accessing the register TDATA.

#### AIP Auto Increment Port

This bit enables the auto increment function of bit field PORT. Each read/write access to register TDATA increments PORT. This allows to program multiple, consecutive ports without accessing TREGSEL again.

0 Disable auto increment function.

Enable auto increment function.

#### PORT Port Select

This bit field selects the port number, which can be accessed via register TDATA.

0..27 Port Number.

#### AIA Auto Increment Address

This bit enables the auto increment function of bit field ADDR. Each read/write access to register TDATA increments ADDR. This allows to program multiple, consecutive registers without accessing TREGSEL again.

0 Disable auto increment function.

1 Enable auto increment function.

#### ADDR Register Address

This bit field selects the register address of the transmit framer, which can be accessed via register TDATA.

0<sub>н</sub>..F<sub>н</sub> Register address.



#### **TDATA**

#### **Transmit T1/E1 Framer Data Register**

Access : read/write

Address : 114<sub>H</sub> (PCI), 0A<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15 DATA(15:0)

Note: Effected port and address is selected via register TREGSEL. All settings in this register affect the selected port only.

DATA Data register

The transmit framer data register assigns a value to the transmit framer of port TREGSEL.PORT and the register selected via bit field TREGSEL.ADDR. Read/write operation depends on the selected

register.



### RREGSEL

### Receive T1/E1 Framer Port & Register Select

Access : read/write

Address : 118<sub>H</sub> (PCI), 0C<sub>H</sub> (Local Bus)

Reset Value : 0000 μ

15	14		12		8	7	6		0
0	AIP	0		PORT(4:0)		AIA		ADDR(6:0)	

Note: This register is an indirect access register, which must be programmed before accessing the register RDATA.

#### **AIP Auto Increment Port**

This bit enables the auto increment function of bit field PORT. Each read/ write access to register RDATA increments PORT. This allows to program multiple, consecutive ports without accessing RREGSEL again.

0 Disable auto increment function.

Enable auto increment function.

#### **PORT** Port Select

This bit field selects the port number, which can be accessed via register

RDATA.

0..27 Port Number.

#### AIA Auto Increment Address

This bit enables the auto increment function of bit field ADDR. Each read/write access to register RDATA increments ADDR. This allows to program multiple, consecutive registers without accessing RREGSEL

again.

0 Disable auto increment function.

Enable auto increment function.

#### **ADDR** Register Address

This bit field selects the register address of the transmit framer, which can be accessed via register RDATA.

0<sub>н</sub>..7F<sub>н</sub>Register address.



## RDATA Receive T1/E1 Framer Data Register

Access : read/write

Address : 11C<sub>H</sub> (PCI), 0E<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15 DATA(15:0)

Note: Effected port and address is selected via register RREGSEL. All settings in this register affect the selected port only.

DATA Data register

The receive framer data register assigns a value to the receive framer of port RREGSEL.PORT and the register selected via bit field RREGSEL.ADDR. Read/write operation depends on the selected

register.



# FREGSEL FDL Port & Register Select

Access : read/write

Address : 120<sub>H</sub> (PCI), 10<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15			12	8	7			4	0
AIP	0	0	PORT(4:0)		AIA	0	0	ADDR(4:0)	

Note: This register is an indirect access register which must be programmed before accessing the register FDATA.

## AIP Auto Increment Port

This bit enables the auto increment function of bit field PORT. Each read/write access to register FDATA increments PORT. This allows to program multiple, consecutive ports without accessing FREGSEL again.

0 Disable auto increment function.

Enable auto increment function.

#### PORT Port Select

This bit field selects the port number, which can be accessed via register FDATA.

0..27 Port Number for T1/E1.

28 Far End Alarm and Control Channel (DS3)

29 C-bit parity path maintenance data link channel (DS3)

### AIA Auto Increment Address

This bit enables the auto increment function of bit field ADDR. Each read/write access to register FDATA increments ADDR. This allows to program multiple, consecutive registers without accessing FREGSEL again.

0 Disable auto increment function.

1 Enable auto increment function.



ADDR Register Address

This bit field selects the register address of the facility data link channel, which can be accessed via register FDATA.

0<sub>H</sub>..1F<sub>H</sub>Register address.



## FDATA FDL Data Register

Access : read/write

Address : 124<sub>H</sub> (PCI), 12<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15 DATA(15:0)

Note: Effected port and address is selected via register FREGSEL. All settings in this register affect the selected port only.

DATA Data register

The FDL data register assigns a value to the facility data link controller of port FREGSEL.PORT and the register selected via bit field FREGSEL.ADDR. Read/write operation depends on the selected

register.



## MBE2P0

## **Mailbox Local Bus to PCI Command Register**

Access : read/write

Address : 140<sub>H</sub> (PCI), 20<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15 0

MB(15:0)

## MB Mailbox Data register

This register can be written and read from local bus side. From PCI side this register should be used as read only in order to allow stable interprocessor communication. Write access to this register results in mailbox interrupt vectors on local bus side to the internal interrupt FIFO

when FCONF.MBID is set to '0'.



# MBE2P1-7 Mailbox Local Bus to PCI Data Register 1-7

Access : read/write

Address :  $144_{H}$ - $15C_{H}$  (PCI),  $22_{H}$ - $2E_{H}$  (Local Bus)

Reset Value : 0000<sub>H</sub>

15 MB(15:0)

MB Mailbox Data register

This register can be written and read from local bus side. From PCI side this register should be used as read only in order to allow stable

interprocessor communication.



## MBP2E0 Mailbox PCI to Local Bus Status Register

Access : read/write

Address : 160<sub>H</sub> (PCI), 30<sub>H</sub> (Local Bus)

Reset Value : 0000<sub>H</sub>

15 0

MB(15:0)

## MB Mailbox Status Register

This register can be written and read from PCI side. From local bus side this register should be used as read only in order to allow stable interprocessor communication. Write access to this register results in mailbox interrupt vectors to PCI side when CONF1.MBIM is set to '0'.



# MBP2E1-7 Mailbox PCI to Local Bus Data Register 1-7

Access : read/write

Address :  $164_{H}$ - $17C_{H}$  (PCI),  $32_{H}$ - $3E_{H}$  (Local Bus)

Reset Value : 0000<sub>H</sub>

15 0 MB(15:0)

MB Mailbox Data Register

This register can be written and read from PCI side. From local bus side this register should be used as read only in order to allow stable

interprocessor communication.



## 8.2.3.1 M13 Transmit Registers

### **D3CLKCS**

### **DS3 Clock Configuration and Status Register**

Access : read/write

Address : 180<sub>H</sub> (PCI), 40<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15									6	5	4	3	2	1	0	
0	0	0	0	0	0	0	0	0	RCA	TCA	RRX	RTX	T2RL	R2TL	TXLT	

### RCA Receive Clock Activity

This bit monitors the receive clock activity (RC44).

- No receive DS3 clock since last read of this register. This bit is set to '0' approx. 125 μs after the last active clock was detected.
- 1 At least one receive DS3 clock since last read of this register.

### TCA Transmit Clock Activity

This bit monitors the transmit clock activity (TC44).

- No transmit DS3 clock since last read of this register. This bit is set to '0' approx. 125 µs after the last active clock was detected.
- 1 At least one transmit DS3 clock since last read of this register.

## RRX Reset Receiver Clock Unit

This bit resets the receivers clock unit.

- 0 Normal operation.
- 1 Reset DS3 receiver clock unit. This bit is self clearing.

### RTX Reset Transmitter Clock Unit

This bit resets the transmitters clock unit.

- 0 Normal operation.
- 1 Reset DS3 transmitter clock unit. This bit is self clearing.



T2RL Transmit to Receive Loop (Local DS3 Loopback)

This bit enables the local DS3 loop where the outgoing DS3 bit stream is mirrored to the DS3 input.

- 0 Disable local loop.
- 1 Enable local loop.

R2TL Receive to Transmit Loop (Remote DS3 Loopback)

This bit enables the remote DS3 line loop where the complete incoming DS3 bit stream is mirrored to the transmitter.

- 0 Disable remote loop.
- 1 Enable remote loop.

TXLT Transmit Loop Timing Mode

This bit enables DS3 looped timing where the transmitter uses the receivers DS3 input clock.

- 0 Disable looped timing.
- 1 Enabled looped timing.



## TUCLKC Test Unit Clock Configuration Register

Access : read/write

Address : 184<sub>H</sub> (PCI), 42<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15														1	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	RTUR	TUL

RTUR Reset Test Unit Receiver

This bit resets the test unit receiver.

0 Normal operation.

1 Reset Receiver (automatically removed). This bit is self clearing.

TUL Test Unit Transmit to Receive Loop

This bit switches a local loop from the test unit transmitter to the test unit receiver. While operating in loop mode the test unit is operated with TC44.

Normal operation.

1 Test unit transmitter output connected to test unit receiver input.



## D3TCFG DS3 Transmit Configuration Register

Access : read/write

Address : 188<sub>H</sub> (PCI), 44<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15							8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	FAM	ITCK	ITD	UTD	AISC	LPC	(1:0)	FPL	СВР

## FAM TOVHSYN Mode

This bit switches between input mode and output mode of the signal pin TOVHSYN. If TOVHSYN is operated in input mode it marks the position of the X-bit. Therefor the outgoing DS3 frame is aligned to TOVHSYN. If TOVHSYN is switched to output mode TOVHSYN is asserted when the X-bit needs to be inserted via the transmit overhead interface.

0 TOVHSYN switched to input.

1 TOVHSYN switched to output.

ITCK Invert Transmit Clock

This bit sets the clock edge for data transmission.

0 Update transmit data on the rising edge of transmit clock.

1 Update transmit data on the falling edge of transmit clock.

ITD Invert Transmit Data

This bit enables inversion of transmit data.

0 Transmit data is logic high (not inverted).

1 Transmit data is logic low (inverted).

UTD Unipolar data mode

This bit sets the port mode to dual-rail mode or unipolar mode.

0 B3ZS (dual rail data)

1 Unipolar mode (single rail data)



### AISC AIS Code Type

This bit field sets the AIS code.

- O Set AIS to '1010... ' between overhead bits, C-bits all '0's, X-bits all '1's (standard)
- 1 Set AIS to unframed all '1's (non-standard).

## LPC Loopback Code.

This bit field selects the C-bit which will be inverted when loopback requests are transmitted.

- 00 Invert 1<sup>st</sup> C-bit.
- 01 Invert 2<sup>nd</sup> C-bit.
- 10 Invert 3<sup>rd</sup> C-bit.

### FPL Full Payload Mode

This bit enables the M23 multiplex operation or the full payload rate format.

- O Enable M23 multiplex operation. Payload is formed by interleaving 7 asynchronous DS2 tributaries
- 1 Enable full payload rate format. The payload is one single, high speed data stream without stuffing.

### CBP C-bit parity mode

This bit enables M13 asynchronous mode or C-bit parity mode.

- 0 M13 asynchronous mode
- 1 C-bit parity mode



#### D3TCOM

## **DS3 Transmit Command Register**

Access : read/write

Address : 18C<sub>H</sub> (PCI), 46<sub>H</sub> (Local bus)

Reset Value : 0070<sub>H</sub>

15									6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	TAIC	TN <sub>r</sub> B	TXBIT	SIDLE	SAISA	SAIS	0

#### TAIC Transmitted AIC-bit

This bit sets the value to be transmitted in the DS3 overhead bit of block 3, subframe 1. This function is available in C-pit parity format only.

0 AIC-bit = '0'

1 AIC-bit = '1'

TN<sub>r</sub>B Transmitted N<sub>r</sub>-bit

This bit sets the value to be transmitted in the DS3 overhead bit of block 5, subframe 1. This function is available in C-pit parity format only.

 $0 N_r - bit = '0'$ 

1  $N_r$ -bit = '1'

TXBIT Transmitted X-bits

This bit sets the value to be transmitted in the DS3 overhead bit of block 1, subframes 1 and 2.

TXBIT is synchronized to the M23 multiframe. Both X-bits in a multiframe are guaranteed identical. Software should limit changes to maximum of 1 per second.

0 X-bit = '0'

1 X-bit = '1'

SIDLE Send DS3 Idle Code

This bit enables transmission of the DS3 idle code ('1010' between overhead bits, X-bits all '1's, C-bits all '0's).

Normal operation.

1 Send DS3 idle code.



### SAISA Send AIS in DS3 output and on DS3 loop)

This bit enables transmission of AIS on the DS3 output. If the DS3 is additionally switched to local DS3 loopback mode the DS3 signal including AIS is mirrored to the receiver. The AIS code transmitted depends on D3TCFG.AISC.

- 0 Normal operation.
- 1 Enable transmission of AIS.

## SAIS Send AIS at DS3 output

This bit enables transmission of AIS on the DS3 output. If the DS3 signal is switched into local DS3 loopback mode the DS3 signal **without** AIS code is mirrored to the DS3 receiver. The AIS code transmitted depends on D3TCFG.AISC.

- 0 Normal operation.
- Enable transmission of AIS.



## D3TLPB DS3 Transmit Remote DS2 Loopback Register

Access : read/write

Address : 190<sub>H</sub> (PCI), 48<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15									6	0
0	0	0	0	0	0	0	0	0	LPB(6:0)	

LPB Remote DS2 Loopback

Setting LPB(x) enables the remote DS2 loopback of tributary x. In this mode the demultiplexed DS2 tributary is internally looped and multiplexed into the outgoing DS3 signal.

0 Normal operation.

1 Enable remote DS2 loopback of tributary x.



## **D3TLPC**

## **DS3 Transmit Loopback Code Insertion Register**

Access : read/write

Address : 194<sub>H</sub> (PCI), 4A<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15									6	0
0	0	0	0	0	0	0	0	0	LPC(6:0)	

LPC Send Loopback

Setting LPC(x) enables transmission of the loopback code in tributary x of the DS3 signal. The loopback code inserted depends on D3TCFG.LPC.

0 Normal operation.

1 Enable transmission of loopback code in tributary x.




## D3TAIS DS3 Transmit AIS Insertion Register

Access : read/write

Address : 198<sub>H</sub> (PCI), 4C<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

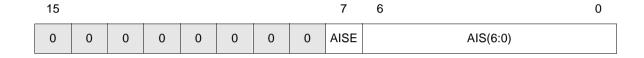

AISE AIS Error Insertion

Toggling this bit inserts one '0' in all DS3 tributaries which transmit AIS.

AIS Send DS2 Alarm Indication Signal

Setting AIS(x) enables insertion of the DS2 alarm indication signal in the

outgoing tributary x of the DS3 signal. AIS is an all '1' signal.

0 Normal operation

1 Enable transmission of AIS in tributary x.



### **D3TFINS**

## **DS3 Transmit Fault Insertion Control Register**

Access : read/write

Address :  $19C_{H}$  (PCI),  $4E_{H}$  (Local bus)

Reset Value : 0000<sub>H</sub>

15												3	0
0	0	0	0	0	0	0	0	0	0	0	0	FINSC(3:0)	

### FINSC Fault Insertion Code.

Fault insertion is service affecting and is intended for testing only. Codes are not self clearing, i.e. errors are continuously generated as indicated until bit cleared. A single FEBE, P, CP, or code violation is guaranteed to be inserted if the respective code is written and then immediately cleared.

- 0 Normal operation (no fault insertion)
- 1 Insert FEBE event every multiframe (106 μsec).
- 2 Insert P-bit errors every 2nd multiframe (212 μsec).
- 3 Insert CP-bit errors every 2nd multiframe (212 μsec).
- 4 Insert 4 F-bit errors/multiframe (satisfies 3 out of 15 threshold trigger).
- Insert 5 F-bit errors/multiframe (satisfies 3 out of 7 threshold trigger).
- Insert 3 M-bit errors/multiframe (caution: receiver can frame on emulator).
- 7 Force DS3 output to all '0's.
- 8 Insert B3ZS violation/multiframe (violation of alternate polarity rule).
- 9 Insert 3 zero string/multiframe (B3ZS code word suppressed)



## D3TTUC

### **DS3 Transmit Test Unit Control Register**

Access : read/write

Address: 1A0<sub>H</sub> (PCI), 50<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15								7	6	4	3	2	1	0
0	0	0	0	0	0	0	0	EN	TUDS	2(2:0)	TUDS	31(1:0)	TU	JIM

EN Enable Test Unit Insertion

Setting this bit enables insertion of the test unit data.

0 Normal operation

1 Enable insertion of test unit data.

TUDS2 Test Unit DS2 Group

This bit field selects the DS2 group the test unit is attached to. Only valid

if TUIM is  $10_B$ ,  $01_B$  or  $00_B$ .

0..6 Selects DS2 group 0..6.

TUDS1 Test Unit DS1 Tributary

This bit field selects the DS1 tributary the test unit is attached to. Only

valid if TUIM is 00<sub>B</sub>. The DS2 group is selected via TUDS2.

0..3 DS1/E1 tributary

TUIM Bit Error Rate Test Unit (TU) Insertion Mode

This bit field selects the interface the test unit is attached to.

00<sub>B</sub> Insert test stream into DS1/E1 tributary (unframed)

01<sub>B</sub> Insert test stream into DS2 tributary (unframed, bypass M12)

10<sub>B</sub> Insert test stream into DS2 payload (framed)

11<sub>B</sub> Insert test stream into DS3 payload (framed)



# D3TSDL DS3 Transmit Spare Data Link Register

Access : read/write

Address : 1A4<sub>H</sub> (PCI), 52<sub>H</sub> (Local bus)

Reset Value : 01FF<sub>H</sub>

15							8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	DL77	DL75	DL73	DL67	DL65	DL63	DL27	DL25	DL23

Multiframe buffer for spare DL bits transmitted in blocks 3, 5, and 7 of subframes 2, 6, and 7. If enabled, the M13 will generate an interrupt every multiframe to request a refresh of this register. The software must write these registers within 106  $\mu$ sec to avoid an underrun.

DL(S)(B) Overhead bit for block B of subframe S

These bits store the DL bits to be transmitted in blocks 3, 5, and 7 of subframes 2, 6, and 7. If enabled, the M13 will generate an interrupt every multiframe to request a refresh of this register. The software must write these registers within 106  $\mu$ sec to avoid an underrun.



# D3RCFG DS3 Receive Configuration Register

Access : read/write

Address :  $1C0_{H}$  (PCI),  $60_{H}$  (Local bus)

Reset Value : 0000<sub>H</sub>

15				11	10	9	8		6	5	4	3	2	1	0
CVM	0	0	0	IVM	STTM	ECM	FEBM	0	AISX	MFM	MDIS	FFM	IRCK	IRD	URD

Note: M13 mode, Full payload mode, loopback code, and AIS mode are controlled by bits CBP, FPL, LPC, and AISC in register DS3 transmit configuration register D3TCFG.

CVM B3ZS Code Word ("00V" or "10V" Acceptance Condition)

This bit selects the B3ZS violations alternate polarity to maintain line balance.

- O Convert all B3ZS codeword patterns to "000" regardless of polarity.
- 1 Convert codeword only if alternate violation polarity rule is satisfied.

IVM Interrupt Vector Mode

This bit selects the interrupt vector mode.

- Interrupt vector flags are set when corresponding condition has changed.
- 1 Interrupt vector flags contain actual status of condition.

STTM Select Transmit Tributary Monitoring for receive test unit

This bit selects the T1/E1 tributary observed by the test unit receiver. The test unit can be connected to the upstream T1/E1 tributary (T1/E1 tributary going towards the DS3 interface) or to the downstream T1/E1 tributary (T1/E1 tributary coming from the DS3 interface).

- 0 Monitor downstream T1/E1 tributary.
- 1 Monitor upstream T1/E1 tributary.



#### ECM Error Counter Mode

DS3 errors are counted in background and copied to foreground (error counter registers) when condition selected via ECM is met.

- O Counter values are copied to foreground when copy command is executed. See also register DS3COM.
- The counter values are copied to the foreground register in one second intervals. At the same time the background registers are reset to zero. This operation is synchronous with the periodic one second interrupt which alerts software to read the register.

## FEBM Far End Block Error (FEBE) Mode

This bit selects the event which leads to FEBE indication. It is available in C-bit parity mode only.

- 0 Receive multiframe parity error.
- 1 Receive multiframe parity error or framing error.

### AISX AIS X-bit Check Disable

This bit disables checking of the X-bit for AIS and idle detection.

- 0 Check X-bit.
- 1 Disable check of X-bit.

## MFM Multiframe Framing Mode

This bit selects the M-bit error condition which triggers the DS3 framer to start a new frame search. To enable reframing in case of M-bit errors MDIS must be set to '0'.

- O Start new F-frame search if M-bit errors are detected in two out of four consecutive M-frames.
- Start new F-frame search if M-bit errors are detected in three out of four consecutive M-frames.

#### MDIS Multiframe Reframe Disable

This bit disables reframing due to M-bit errors.

- 0 Enable reframe due to M-bit errors.
- 1 Disable reframe due to M-bit errors.



### FFM F Framing Mode

This bit selects the F-bit error condition which triggers the DS3 framer to start a new frame search.

- O A new frame search is started when 3 out of 8 contiguous F-bits are in error.
- A new frame search is started when 3 out of 16 contiguous F-bits are in error.

## IRCK Invert Receive Clock

This bit sets the clock edge for data sampling.

- O Sample data on the rising edge of receive clock.
- 1 Sample data on the falling edge of receive clock.

## IRD Invert Receive Data

This bit enables inversion of receive data.

- 0 Receive data is logic high (not inverted).
- 1 Receive data is logic low (inverted).

## URD Unipolar Receive Data

This bit sets the port mode to dual-rail mode or unipolar mode.

- 0 B3ZS (dual rail data input)
- 1 Unipolar mode (single rail data input)



## D3RCOM DS3 Receive Command Register

Access : read/write

Address : 1C4<sub>H</sub> (PCI), 62<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15	5											4	3	2	1	0
0		0	0	0	0	0	0	0	0	0	0	C3NC	СЗС	CNCA	CCA	FRS

## C3NC Copy DS3 Error Counters

Values of DS3 background registers are copied to foreground. Background registers are NOT cleared. Command is self clearing and completes before next register access is possible i.e. software can write command and then immediately read the counters without starting a delay timer.

Note: Usage of this function in not recommend in 'One Second' error counter mode (D3RCFG.ECM = '1').

- 0 No operation.
- 1 Copy background counters to foreground.

## C3C Copy and Clear DS3 Error Counters

Values of DS3 background registers are copied to foreground. Background registers are cleared. Command is self clearing and completes before next register access is possible i.e. software can write command and then immediately read the counters without starting a delay timer.

- 0 No operation.
- 1 Copy background counters to foreground. Clear background counters.

Note: Usage of this function in not recommend in 'One Second' error counter mode (D3RCFG.ECM = '1').

## CCNA Copy Error Counters

Only valid for counters which are not operating in 'One Second' error counter mode. Values of DS2 and DS3 background registers are copied to foreground. Background registers are NOT cleared. Command is self



clearing and completes before next register access is possible i.e. software can write command and then immediately read the counters without starting a delay timer.

- 0 No operation.
- 1 Copy background counters to foreground.

## CCA Copy and Clear DS2/DS3 Error Counters

Only valid for counters which are not operating in 'One Second' error counter mode. Values of DS2 and DS3 background registers are copied to foreground. Background registers are cleared. Command is self clearing and completes before next register access is possible i.e. software can write command and then immediately read the counters without starting a delay timer.

- 0 No operation.
- 1 Copy background counters to foreground. Clear background counters.

## FRS Force Resynchronization

This bit enables a new frame search on the DS3 input. The command is self clearing after frame search has begun.

- 0 Normal operation.
- 1 Force new frame search.



## D3RIMSK DS3 Receive Interrupt Mask Register

Access : read/write

Address : 1C8<sub>H</sub> (PCI), 64<sub>H</sub> (Local bus)

Reset Value : 1FFF<sub>H</sub>

15			12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	CLKS	RSDL	TSDL	LPCS	SEC	N <sub>r</sub>	AIC	XBIT	IDLES	AISS	REDS	LOSS	FAS

This register provides the interrupt mask for DS3 status interrupts and DS3 loopback code interrupts. Generation of an interrupt vector itself does not necessarily result in assertion of the interrupt pin. For description of interrupt concept and interrupt vectors see "Layer One Interrupts" on page 136.

The following definition applies:

1 The corresponding interrupt vector will not be generated by the device.

The corresponding interrupt vector will be generated.

RSDL Mask 'Receive Spare Data Link Transfer Buffer Full'
TSDL Mask 'Transmit Spare Data Link Transfer Buffer Empty'
LPCS Mask 'Loopback Code Status' (flagged in D3RLPCS)

SEC Mask '1 Second Interrupt'

CLKS Mask 'DS3 Clock Status'

N<sub>r</sub> Mask 'N<sub>r</sub>-bit Image' (C-bit parity mode only)
AIC Mask 'AIC-bit Image' (C-bit parity mode)

XBIT Mask 'X-bit Image'

IDLES Mask 'DS3 Idle Signal State'

AISS Mask 'DS3 Alarm Indication Signal State'

REDS Mask 'DS3 Red Alarm State'
LOSS Mask 'DS3 Input Signal State'
FAS Mask 'Frame Alignment State'



## D3RESIM DS3 Receive Error Simulation Register

Access : read/write

Address : 1CC<sub>H</sub> (PCI), 66<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15											4		2	0
0	0	0	0	0	0	0	0	0	0	0	FTMR	0	ESIM	C(2:0)

#### FTMR Fast Timer

This bit enables alarm timer test function (manufacturing test only).

- 0 Normal Operation
- 1 Test Operation

DS3 RED/AIS/Idle timer period reduced by 56.

DS2 READ/AIS timer period reduced by 24.

Second interrupt period reduced to 140 µsec

### ESIMC Error Simulation Code

This bit enables error simulation. During error simulation the device generates error interrupts and error status messages. Nevertheless the service is not affected.

- 0 Normal operation (no error simulation).
- 1 Simulate one F-bit error/multiframe (106 μsec).
- 2 Simulate M-bit error in every other multiframe.
- 3 Simulate FEBE event/multiframe (106 μsec).
- 4 Simulate P/CP event/multiframe (106 μsec).
- 5 Simulate Loss of DS3 input (all zeros).
- 6 Simulate B3ZS code violations.
- 7 Simulate Loss of Receive Clock



## D3RTUC DS3 Receive Test Unit Control Register

Access : read/write

Address : 1D0<sub>H</sub> (PCI), 68<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15								7	6	4	3	2	1	0
0	0	0	0	0	0	0	0	EN	TUDS	32(2:0)	TUDS	31(1:0)	TU	RM

EN Enable Test Unit Receive Clock

This bit enables the receive clock of the test unit. The clock speed is dependent on the selected test mode.

0 Receive clock disabled.

1 Receive clock enabled.

TUDS2 Test Unit DS2 Group

This bit field selects the DS2 group the test unit is attached to. Only valid

if TURM is  $10_B$ ,  $01_B$ , or  $00_B$ .

0..6 Selects DS2 group 0..6.

TUDS1 Test Unit DS1/E1 Tributary

This bit field selects the DS1/E1 tributary the test unit is attached to. Only

valid if TURM is 00<sub>B</sub>. The DS2 group is selected via TUDS2.

0..3 DS1/E1 tributary

TURM Test Unit Receive Mode

This bit field selects the interface the test unit is attached to.

00<sub>B</sub> DS1/E1 tributary (unframed)

01<sub>B</sub> DS2 tributary (unframed, bypass M12)

10<sub>R</sub> DS2 payload (framed)

11<sub>B</sub> DS3 payload (framed)



# D3RSTAT DS3 Receive Status Register

Access : read

Address : 1D4<sub>H</sub> (PCI), 6A<sub>H</sub> (Local bus)

Reset Value : 0841<sub>µ</sub>

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	LRXC	LTXC	RSDL	TSDL	LPCD	SEC	N <sub>r</sub> AICC	AIC	XBIT	IDLES	AISS	REDS	LOSS	COFA	FAS

Each bit in the DS3 framer receive status register declares a specific condition dependent on the selected modes. The following convention applies to the individual bits:

O The named status is not or no longer existing.

1 The named status is currently effective.

Except for COFA every bit can be used to generate a DS3 interrupt vector. See also register D3RIMSK which describes how to enable/disable interrupt vector generation and refer to the description of DS3 framer interrupts on page "Layer One Interrupts" on page 136.

LRXC Loss of Receive DS3 Clock

This bit indicates loss of DS3 receive clock.

LTXC Loss of Transmit DS3 Clock

This bit indicates loss of DS3 transmit clock.

RSDL Receive Spare Data Link Buffer Full

This bit indicates that the spare data link receive buffer (register

D3RSDL) is full.

TSDL Transmit Spare Data Link Buffer Empty

This bit indicates that the spare data link transmit buffer (register

D3TSDL) is empty.

LPCD Loopback Code Detected

This bit indicates a changes in register D3RLPCS.



SEC 1 Second Flag

This bit toggles every second synchronously with the one second interrupt. It can be used by software to synchronize 1 second events when the 'One second interrupt' vector is masked.

 $N_r$ /AICC  $N_r$ -bit Image (C-bit parity format only)

This bit contains an image of the DS3 frame overhead bit in block 5 of subframe 1. It is updated only if its state persists for 3 multiframes and DS3 frame is aligned.

AIC-bit changed (M13 asynchronous format)

This bit indicates a change of the AIC-bit (first C-bit of the first subframe)

since the last read of this register.

AIC AIC bit Image (DS3 frame overhead bit in block 3 of subframe 1)

This bit contains an image of the DS3 frame overhead bit in block 3 of subframe 1. It is updated only if its state persists for 3 multiframes and

DS3 frame is aligned.

XBIT X bit Image (DS3 frame overhead bit in block 1 of subframes 1 and 2)

This bit contains an image of the DS3 frame overhead bit in block 1 of subframes 1 and 2. It is updated only if both bits in a DS3 multiframe have the same value, its state persists for at least 3 multiframes and

when the DS3 framer is in synchronous state.

IDLES Idle State

This bit indicates that the idle pattern (framed ...1100... with C-bits='0' in subframe 3 and X-bits='1') was persistent as per alarm timing parameters defined in register D3RAP. Idle is considered active in a multiframe when fewer than 15 errors are detected. At 10<sup>-3</sup> error rates, 5 errors per multiframe are typical. The exact time necessary to change the flag could be greater if the FAS flag is not constant. The frame alignment state is integrated by incrementing or decrementing a counter at the end of each multiframe when the FAS flag is set or cleared respectively.

AISS AIS Slarm State.

This bit indicates the AIS alarm state. AIS can be a framed '..1010..' pattern with C-bits='0' and X-bits='1' or an unframed all '1' pattern. This is determined by D3TCFG.AISC. AIS is considered active in a multiframe when fewer than 15 errors are detected and is declared when it was persistent as per alarm timing parameters defined in register D3RAP. At 10<sup>-3</sup> error rates, 5 errors per multiframe are typical. The exact time necessary to change the flag could be greater if the FAS flag is not constant. The frame alignment state is integrated by incrementing or



decrementing a counter at the end of each multiframe when the FAS flag is set or cleared respectively.

REDS Red Slarm State (loss of frame alignment)

This bit indicates that red alarm was persistent as per alarm timing parameter defined in register D3RAP. The red alarm flag nominally changes when loss of frame alignment condition persists for either 32 or 128 multiframes. This is determined by bit D3RCFG.SAIT. The exact time necessary to change the flag could be greater if the FAS flag is not constant. The frame alignment state is integrated by incrementing or decrementing a counter at the end of each multiframe when the FAS flag set or cleared respectively.

LOSS Loss of DS3 Input Signal

This bit indicates that the received DS3 bit stream contained at least 175 consecutive '0's. It is deasserted when 59 '1' bits are detected in 175 clocks (1/3 density). Following removal of LOS, a 10 msec guard timer is started. If a new LOS occurs, the release condition is extended so that the 1/3 density condition must persist for at least 10 msec. This prevents chatter and excessive interrupts.

COFA Change of Frame Alignment.

This bit indicates a change of frame alignment event. It is set when the DS3 framer found a new frame alignment and when the new frame position differs from the expected frame position.

FAS DS3 Frame Alignment State

This bit indicates that the DS3 framer is not aligned.



# D3RLPCS DS3 Receive Loopback Code Status Register

Access : read

Address : 1D8<sub>H</sub> (PCI), 6C<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15									6	0
0	0	0	0	0	0	0	0	0	LPCD(6:0)	

## LPCD Loopback Detected

LPCD(x) indicates that a loopback request was received. A loopback request for tributary x is indicated by inverting one of the 3 C-bits of the x<sup>th</sup> subframe. The C-bit is determined by D3TCFG.LPC. A command state change must persist for 5 contiguous multiframes before it will be reported. This function is available in M13 asynchronous mode only.

- 0 No loopback code being received
- 1 Loopback code being received



## D3RSDL DS3 Receive Spare Data Link Register

Access : read

Address : 1DC<sub>H</sub> (PCI), 6E<sub>H</sub> (Local bus)

Reset Value : 01FF<sub>H</sub>

15							8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	DL77	DL75	DL73	DL67	DL65	DL63	DL27	DL25	DL23

## DL(S)(B) Overhead Bit for Block B of Subframe S

These bits buffer the spare DL bits received in blocks 3, 5, and 7 of subframes 2, 6, and 7. If enabled, the M13 will generate an interrupt every multiframe to synchronize reading of this register. The register must be read within 106  $\mu$ sec to avoid an overrun.



#### **D3RCVE**

### **DS3 Receive B3ZS Code Violation Error Counter**

Access : read/write

Address : 1E0<sub>H</sub> (PCI), 70<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 CVE(15:0)

CVE(15:0) B3ZS Code Violation Errors

Error counter mode (Clear on Read or Errored Second) depends on

register D3RCFG.ECM.

Count of B3ZS Code Violation errors. The error counter will not be

incremented during asynchronous state.

### D3RFEC

### **DS3 Receive Framing Bit Error Counter**

Access : read/write

Address : 1E4<sub>H</sub> (PCI), 72<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0 FEC(15:0)

FEC(15:0) Framing Bit Error Counter

Error counter mode (Clear on Read or Errored Second) depends on

register D3RCFG.ECM.

Count of F-bit and M-bit errors. Errors are not counted in out of frame

state.



#### **D3RPEC**

# **DS3 Receive Parity Error Counter**

Access : read/write

Address : 1E8<sub>H</sub> (PCI), 74<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 PE(15:0)

PE(15:0) Parity Bit Error Counter

Error counter mode (Clear on Read or Errored Second) depends on

register D3RCFG.ECM.

Count of parity errors (P-bits in DS3 overhead bits). The P-bit is duplicated in the DS3 frame structure but only one error is counted per

multiframe. Errors are not counted in out of frame state.

#### **D3RCPEC**

# **DS3 Receive Path Parity Error Counter**

Access : read/write

Address : 1EC<sub>H</sub> (PCI), 76<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

0 CPE(15:0)

CPE(15:0) Path Parity Error Counter

Error counter mode (Clear on Read or Errored Second) depends on register D3RCFG.ECM.

Count of path parity errors (CP bits in DS3 C-bit parity overhead bits). CP-bits are triplicated in the DS3 frame structure but only single error maximum is counted per multiframe. Errors are not counted in out of

frame state.



#### **D3RFEBEC**

#### **DS3 Receive FEBE Error Counter**

Access : read/write

Address : 1F0<sub>H</sub> (PCI), 78<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 FEBE(15:0)

#### FEBEC(15:0) FEBE error events

Error counter mode (Clear on Read or Errored Second) depends on register D3RCFG.ECM.

This register counts the occurence of a received 'not all '1's'. FEBE-bits are triplicated in the DS3 frame structure but only one single error maximum is counted per multiframe. Errors are not counted in out of frame state.

#### D3REXZ

#### **DS3 Receive Excessive Zeroes Counter**

Access : read/write

Address : 1F4<sub>H</sub> (PCI), 7A<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0 EXZ(15:0)

#### EXZ(15:0) Exzessive Zeroes

Error counter mode (Clear on Read or Errored Second) depends on register D3RCFG.ECM.

Violations are 3 zero strings. The error counter will not be incremented during asynchronous state.



# D3RAP DS3 Alarm Parameters

Access : read/write

Address : 1F8<sub>H</sub> (PCI), 7C<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15								7		5	0
0	0	0	0	0	0	0	0	AIS	0	CV(5:0)	

#### AIS AIS criteria

This bits sets the error rate for AIS detection. Declaration of AIS depends on value defined in bit field CV.

- O AIS is recognized when the alarm indication signal is received with less than 8 errors per multiframe.
- 1 AIS is recognized when the alarm indication signal is received with less than 15 errors per multiframe.

#### CV Counter Value

This bit specifies the number of frames when the MUNICH256FM declares AIS, RED or Idle.

0..63 Counter Value.



# 8.2.3.2 DS2 Control and Status Registers

#### **D2TSEL**

# **DS2 Transmit Group Select Register**

Access : read/write

Address : 200<sub>H</sub> (PCI), 80<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15													2	0
0	0	0	0	0	0	0	0	0	0	0	0	0	GN(2:0)	

Note: This register is an indirect access register, which must be programmed before accessing the register DS2 transmit registers.

GN Group Number

This bit field selects the DS2 group, which can be accessed via the DS2

transmit registers.

0..6 Group Number.



#### **D2TCFG**

# **DS2 Transmit Configuration Register**

Access : read/write

Address : 204<sub>H</sub> (PCI), 82<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15													2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	0	LPC(	1:0)	E1

LPC Loopback Code

This bit selects the C-bit which will be inverted when loopback requests are transmitted.

Invert 1<sup>st</sup> C-bit.
Invert 2<sup>nd</sup> C-bit.

10 Invert 3<sup>rd</sup> C-bit.

E1 G.747 Select

This bit selects the operation mode of the low speed multiplexer.

0 Select M12 mode (4 DS1 into DS2).

1 Select ITU-T G.747 mode (3 E1 into DS2).



#### **D2TCOM**

## **DS2 Transmit Command Register**

Access : read/write

Address : 208<sub>H</sub> (PCI), 84<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15												3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	FINS	C(1:0)	SRA	RES

#### FINSC Fault Insertion Code

This bit enables transmission of faults for testing purposes.

- 0 No fault insertion.
- 1 Insert F-bit errors at low rate (2 out of 5 F-bits).
- 2 Insert F-bit errors at high rate (2 out of 4 F-bits).
- Insert M-bit framing bit error (DS1 mode) or P-bit error (ITU-T G.747)

#### SRA Set Remote Alarm

This bit enables transmission of the DS3 remote alarm. In DS1 modes remote alarm is transmitted in subframe 4, block 1 overhead bit and in ITU-T G.747 remote alarm is transmitted in bit 2 of "set II".

- 0 Normal operation.
- Enable transmission of remote alarm.

#### RES ITU-T G.747 Reserved Bit

This bit sets the value to be transmitted in the reserved bit of ITU-T G.747 format.

- 0 Transmit reserved bit as '0'.
- 1 Transmit reserved bit as '1'.




#### **D2TILPC**

# DS2 Transmit E1/T1 Remote Loopback/Loopback Code InsertionRegister

Access : read/write

Address : 20C<sub>H</sub> (PCI), 86<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

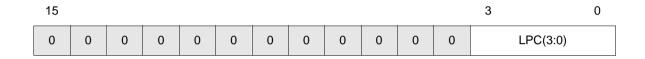

LPC Send Loopback Code for Tributary N

Setting LPC(x) enables transmission of the loopback code in tributary x. The loopback code inserted is specified in D2TCFG.LPC.

O Disable transmission of loopback code.

1 Enable transmission of loopback code.



# D2RSEL DS2 Receive Group Select Register

Access : read/write

Address : 220<sub>H</sub> (PCI), 90<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15													2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	0		GN(2:0)	

Note: This register is an indirect access register, which must be programmed before accessing the register DS2 transmit registers.

GN Group Number

This bit field selects the DS2 group number, which can be accessed via

the DS2 receive registers.

0..6 Group Number.



# D2RCFG DS2 Receive Configuration Register

Access : read/write

Address : 224<sub>H</sub> (PCI), 92<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15												3		1	0
0	0	0	0	0	0	0	0	0	0	0	0	ECM	0	MFM	FFM

Note: ITU-T G.747 mapping and loopback codes are controlled by bits E1 and LPC in the DS3 transmit configuration register D2TCFG.

E1/T1 and loopback codes are controlled by E1 and LPC fields of the D2TCFG register.

#### ECM Error Counter Mode

DS2 errors are counted in background and copied to foreground (error counter registers) when condition selected via ECM is met.

- O Counter values are copied to foreground when copy command is executed. See also register DS3COM.
- The counter values are copied to the foreground register in one second intervals. At the same time the background registers are reset to zero. This operation is synchronous with the periodic one second interrupt which alerts software to read the register.

# MFM Multiframe Framing Mode

This bit selects the M-bit error condition which triggers the DS2 framer to start a new frame search. It is valid in DS1 mode only.

- F-frame search started if 3 contiguous multiframes have M-bit errors.
- 1 Inhibit new F-frame search due to M-bit errors.

#### FFM F-Framing Mode

This bit selects the F-bit error condition which triggers the DS2 framer to start a new frame search.

- A new frame search is started when 2 out of 4 contiguous F-bits are in error.
- A new frame search is started when 2 out of 5 contiguous F-bits are in error.



# D2RCOM DS2 Receive Command Register

Access : read/write

Address : 228<sub>H</sub> (PCI), 94<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15									6	1		1	0
0	0	0	0	0	0	0	0	0	ESIMC(2:0)	0	0	C2NC	C2C

#### ESIMC Error Simulation Code

This bit field enables error simulation. During error simulation the device generates error interrupts and error status messages. Nevertheless the service is not affected.

- 0 Normal operation (no error simulation)
- 1 Simulate 2 receive F-bit errors/multiframe (186 μsec)
- 2 Simulate

2 receive M-bit errors/multiframe (186 μsec) (DS-1 mode) Receive parity error/multiframe (133 μsec) (ITU-T G.747 mode)

- 3 Simulate remote alarm
- 4 Simulate loss of frame (RED alarm timer)
- 5 Simulate AIS (AIS alarm timer)
- 6 Simulate receive loop command

## C2NC Copy DS2 Error Counters

Only valid when D2RCFG.ECM is set to '0'. Values of DS2 background registers are copied to foreground. Background registers are NOT cleared. Command is self clearing and completes before next register access is possible i.e. software can write command and then immediately read the counters without starting a delay timer.

- 0 No operation.
- 1 Copy background counters to foreground.

## C2C Copy and Clear DS2 Error Counters

Only valid when D2RCFG.ECM is set to '0'. Values of DS2 background registers are copied to foreground. Background registers are cleared. Command is self clearing and completes before next register access is



possible i.e. software can write command and then immediately read the counters without starting a delay timer.

- 0 No operation.
- 1 Copy background counters to foreground. Clear background counters.



# D2RIMSK DS2 Receive Interrupt Mask Register

Access : read/write

Address : 22C<sub>H</sub> (PCI), 96<sub>H</sub> (Local bus)

Reset Value : 003F<sub>H</sub>

15										5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	LPCS	AISS	REDS	RES	RAS	FAS

This register provides the interrupt mask for DS2 status interrupts and DS2 loopback code interrupts. Generation of an interrupt vector itself does not necessarily result in assertion of the interrupt pin. For description of interrupt concept and interrupt vectors see "Layer One Interrupts" on page 136.

The following definition applies:

1 The corresponding interrupt vector will not be generated by the device.

The corresponding interrupt vector will be generated.

LPCS Mask 'Loopback Code Status' (flagged in D2RLPCS)

AISS Mask 'AIS State'

REDS Mask 'Red Alarm State'

RES Mask 'Reserved Bit'

RAS Mask 'DS2 Remote Alarm State'
FAS Mask 'DS2 Frame Alignment State'



# D2RSTAT DS2 Receive Status Register

Access : read

Address : 230<sub>H</sub> (PCI), 98<sub>H</sub> (Local bus)

Reset Value : 0001<sub>H</sub>

15										5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	AISS	REDS	RES	RAS	COFA	FAS

Each bit in the DS2 framer receive status register declares a specific condition dependent on the selected modes. The following convention applies to the individual bits:

The named status is not or no longer existing.

1 The named status is currently effective.

The change of status bit can also be used to generate a DS2 interrupt vector. See also register D2RIMSK which describes how to enable/disable interrupt vector generation and refer to the description of DS2 framer interrupts on page "Layer One Interrupts" on page 136.

## AISS DS2 AIS Alarm State (unframed all '1's pattern)

AIS is considered valid in a multiframe when fewer than 5 zeros are detected. At 10<sup>-3</sup> error rates, 1 zero per multiframe is typical. A valid DS2 signal without any bit errors has at least 5 zeros.

The AIS flag nominally changes when the AIS condition is persistent as per alarm timing parameters defined in register D2RAP. The exact time necessary to change the flag could be greater in extremely high error rates. The AIS state is integrated by incrementing or decrementing a counter at the end of each multiframe depending on the AIS condition being valid or invalid respectively.

# REDS DS2 Red Alarm State (loss of frame alignment).

The red alarm flag nominally changes when loss of frame alignment condition is persistent as per alarm timing parameters defined in register D2RAP. The exact time necessary to change the flag could be greater if the FAS flag is not constant because the frame alignment state is integrated by incrementing or decrementing a counter at the end of each



multiframe when the FAS flag set or cleared respectively. Note that the framer's verification algorithm is designed to prevent a bouncing FAS

flag.

**RES** Reserved Bit

> This bit indicates the status of bit 3 in set II of ITU-T G.747 mode. Is it updated if the state persists for at least 8 multiframes. Reserved Bit

changes are not reported when the DS2 framer is not aligned.

RRA Remote Alarm

> This bit indicates that remote alarm is active. Changes are reported when they persist for at least 8 multiframes. In DS1 mode changes on M<sub>v</sub> bit are reported, in ITU-T G.747 mode changes of bit 1 of set II are reported. Changes are not reported when the DS2 framer is not aligned.

**COFA** Change of Frame Alignment.

> This bit indicates a change of frame alignment event. It is set when the DS2 framer found a new frame alignment and when the new frame

position differs from the expected frame position.

**FAS Demultiplexer Loss of Frame Alignment** 

This bit indicates that the DS2 framer is not aligned.



# D2RLPCS DS2 Receive Loopback Code Status Register

Access : read

Address : 234<sub>H</sub> (PCI), 9A<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15												3	0
0	0	0	0	0	0	0	0	0	0	0	0	LPCD(3:0)	

# LPCD(N) Loopback Command Detected

LPCD(x) indicates that a loopback request was received. A loopback request for tributary x is indicated by inverting one of the 3 C-bits of the x<sup>th</sup> subframe. The C-bit is determined by D2TCFG.LPC. A command state change must persist for 5 contiguous multiframes before it will be reported.

- 0 No loopback code being received.
- 1 Loopback code being received.



#### D2RFEC

## **DS2 Receive Framing Bit Error Counters**

Access : read/write

Address : 238<sub>H</sub> (PCI), 9C<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0 FE(15:0)

FE(15:0) Framing Bit Errors

Error counter mode (Clear on Read or Errored Second) depends on

register D2RCFG.ECM.

For DS1 mode framing bit errors include F-bit and M-bit errors. For G747 mode, individual bits in the Frame Alignment Signal (FAS) are counted.

Errors are not counted in out of frame state.

### **D2RPEC**

### **DS2 Receive Parity Bit Error Counter (ITU-T G.747)**

Access : read/write

Address : 23C<sub>H</sub> (PCI), 9E<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 PE(15:0)

PE(15:0) Parity Errors in ITU-T G.747 mode

Error counter mode (Clear on Read or Errored Second) depends on register D2RCFG.ECM. Errors are not counted in out of frame state.



# D2RAP DS2 Receive Alarm Timer Parameters

Access : read/write

Address : 240<sub>H</sub> (PCI), A0<sub>H</sub> (Local bus)

Reset Value : 00<sub>H</sub>

15								7	6	5		0
0	0	0	0	0	0	0	0	AIS	СМ		CV(5:0)	

#### AIS AIS criteria

This bits sets the error rate for AIS detection. Declaration of AIS is specified by bits CM and CV.

#### ITU-T G.747:

- O AIS condition is recognized when the alarm indication signal is received with less than 5 errors in each of 2 consecutive multiframes.
- 1 AIS condition is recognized when the alarm indication signal is received with less than 9 errors in each of 2 consecutive multiframes.

#### M12 format:

- O AIS condition is recognized when the alarm indication signal is received with less than 3 errors in 3156 bits.
- 1 AIS condition is recognized when the alarm indication signal is received with less than 9 errors in 3156 bits.

#### CM Counter Mode

This bit selects the alarm timer mode. If counter mode is set to multiframes ('0') the value in CV determines the number of multiframes after which the MUNICH256FM declares AIS or RED. When counter mode is set to '½ milliseconds' ('1') the value in CV determines the time in CV x 0.5 ms after which AIS or RED is declared.

- Multiframes.
- 1 ½ Milliseconds.



## CV Counter Value

Dependent on bit CM the counter value specifies the number of frames or the time in multiples of 0.5 milliseconds when AIS or RED is declared, i.e. setting CV to 20 and CM to '1' sets the alarm integration time to 10 milliseconds.

0..63 Counter Value.



# 8.2.4 Test Unit Registers

#### **TUTCFG**

#### **Test Unit Transmit Configuration Register**

Access : read/write

Address : 280<sub>H</sub> (PCI), C0<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15		13	12		8		6		2	1	0	
0	0	INV	F	FBT(4:0)		0		LEN(4:0)		ZS	MD	

INV Invert output

This bit enables inversion of the test unit output. Bit inversion is done after the zero suppression insertion point.

0 No inversion

1 Invert pattern generator output

FBT Feedback Tap

This bit field sets the feedback tap in pseudorandom pattern mode. PRBS shift register input bit 0 is XOR of shift register bits LEN and FBT.

LEN Pattern Generator Length

This bit field sets the pattern generator length to 1..32.

ZS Enable Zero Suppression

This bit enables zero suppression where a '1' bit is inserted at the output if the next 14 bits in the shift register are '0'.

0 No zero suppression

1 Zero suppression.

MD Generator Mode

This bit selects the generator mode of the test unit to be either PRBS or fixed pattern mode.

0 Pseudorandom Pattern (PRBS)

1 Fixed Pattern



#### **TUTCOM**

#### **Test Unit Transmit Command Register**

Access : write

Address : 284<sub>H</sub> (PCI), C2<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15												3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	0	LDER	IN1E	STOP	STRT

Note: All commands are self clearing i.e. user does not have to clear command. The maximum command rate is limited by clock rate of unit under test and the associated synchronization process. Write interval should be > 4 transmit clock periods e.g. 2.6 µs for T1 tributary test or 634 ns for T2 tributary test.

LDER Load Error Rate Register

This bit loads the value of the error rate register TUTEIR to the test unit transmitter. The command can be given while the transmitter is running.

0 No function.

1 Copy value of register TUTEIR to transmit clock region.

IN1E Insert One Error in Output

This bit enables a single error insertion in the next bit after command was written.

0 No function

1 Single error insertion.

STOP Stop Pattern Generation.

This bit stops the test unit transmitter. When stopped output becomes all '1'.

No function.

1 Stop pattern generation.



## STRT Load/Start Transmitter.

This bit starts the test unit transmitter with the parameters defined in register TUTCFG. In fixed pattern mode the pattern needs to be programmed via register TUTFP0/1 prior to starting the transmitter.

- 0 No operation.
- 1 Load/Start test unit.



#### **TUTEIR**

# **Test Unit Transmit Error Insertion Rate Register**

Access : read/write

Address : 288<sub>H</sub> (PCI), C4<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15												3	2	0
0	0	0	0	0	0	0	0	0	0	0	0	MTST	TXE	R(2:0)

MTST Manufacturing test.

Must be written to '0' for normal operation.

TXER Transmit Error Insertion Rate.

This bit field determines the error insertion rate of the test unit

transmitter.

000	No errors	
001	10 <sup>-1</sup> (1 in	10)
010	10 <sup>-2</sup> (1 in	100)
011	10 <sup>-3</sup> (1 in	1 000)
100	10 <sup>-4</sup> (1 in	10 000)
101	10 <sup>-5</sup> (1 in	100 000)
110	10 <sup>-6</sup> (1 in	1 000 000)
111	10 <sup>-7</sup> (1 in	10 000 000)



#### **TUTFP0**

#### **Test Unit Transmit Fixed Pattern Low Word**

Access : read/write

Address : 28C<sub>H</sub> (PCI), C6<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0

FP(15:0)

FP Fixed Pattern Low Word

See description below.

## **TUTFP1**

#### **Test Unit Transmit Fixed Pattern High Word**

Access : read/write

Address : 290<sub>H</sub> (PCI), C8<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0 FP(31:15)

FP Fixed pattern High Word

The 32 bit fixed pattern is distributed over two 16 bit registers and contains the pattern which is transmitted repetitively from bit FP(TUTCFG.LEN) down to FP(0) when test unit is operated in fixed

pattern generator mode.



#### **TURCFG**

## **Test Unit Receive Configuration Register**

Access : read/write

Address : 2A0<sub>H</sub> (PCI), D0<sub>H</sub> (Local bus)

Reset Value : 0000 ...

15		13	12	8		6	:	2	1	0
AIM	0	DAS	FBT(4:	0)	0		LEN(4:0)		ZS	MD

#### AIM **Auxiliary Interrupt Mode**

This bit field enables the auxiliary interrupt mask AIM of register TURIMSK. In normal operation and if not masked every status event generates an interrupt event. In auxiliary interrupt mode an individual status event generates one interrupt event and further status events of the same class, i.e. 'Bit Error Detected', are masked via an internal mask. This prevents excessive interrupt floods. See register TURIMSK for further details.

0 **Normal Operation** 

1 **Auxiliary Interrupt Mode** 

#### DAS Disable Automatic Synchronization

This bit disables automatic resynchronization in case of high bit error rates. If automatic resynchronization is enables the receiver automatically tries to resynchronize to the received test pattern.

0 Enable automatic resynchronization.

1 Disable automatic resynchronization.

#### **FBT** Feedback Tap

This bit field sets the feedback tap of the test unit synchronizer (receiver) in pseudorandom pattern mode. Next input to PRBS reference shift

register (bit 0) is XOR of shift register bits LEN and FBT.

#### LEN Reference shift register length

This bit field sets the length of the receiver's test pattern register.



# ZS Enable Zero Suppression

This bit enables zero suppression at the test unit receiver. A '1' is expected and inserted at the input if the next 14 bits in the shift register are set to '0'.

- 0 No zero suppression.
- 1 Enable zero suppression.

### MD Generator Mode

This bit sets the generator mode of the test unit to either PRBS or fixed pattern.

- 0 Pseudorandom Pattern (PRBS)
- 1 Fixed Pattern



#### **TURCOM**

#### **Test Unit Receive Command Register**

Access : write

Address : 2A4<sub>H</sub> (PCI), D2<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15											4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	0	RDF	RDC	CAIM	STOP	STRT

Note: All commands are self clearing i.e. user does not have to clear command. The maximum command rate is limited by clock rate of unit under test and the associated synchronization process. Write interval should be > 4 transmit clock periods e.g. 2.6 µs for T1 tributary test or 634 ns for DS2 tributary test.

## RDF Copy Receiver's 32 bit Pattern

This bit loads the test units internal receiver pattern to register TURFP in fixed pattern mode. In synchrones state TURFP will be loaded with the pattern received. In asynchronous state TURFP with a 32-bit sample of the last received bit stream.

0 No function.

1 Update register TURFP with synchronizer pattern.

#### RDC Copy bit counter and error counter

This bit loads the test units internal bit counter and error counter to registers TURBC0,1 and TUREC0,1.

0 No function.

1 Copy counter.

## CAIM Clear Auxiliary Interrupt Masks.

This bit resets the internal auxililiary mask. See TURCFG.AIM.

0 no operation

1 clear auxiliary interrupts

#### STRT Start Receiver.

This bit loads and starts the test unit receiver with the parameters defined in register TURCFG.



- 0 No operation.
- 1 Load/Start test unit receiver.



#### TURERMI

# Test Unit Receive Error Measurement Interval Register

Access : read/write

Address : 2A8<sub>H</sub> (PCI), D4<sub>H</sub> (Local bus)

Reset Value : 0000 μ

15												3	2	0
0	0	0	0	0	0	0	0	0	0	0	0	TST	RXIV	11(2:0)

#### **TST** Test Mode

This bit enables measurement interval timer test.

0 Normal operation

1 Auto test of measurement interval function. End of Measurement interrupt should be asserted after approximately 4250 receive clock cycles (if enabled). The lower three bits of register FPAT

should be "111".

#### **RXMI** Receive Frror Rate Measurement Interval

This bit field defines the measurement interval in terms of input bits for measurement of receive bit error rate.

At the end of the measurement window, contents of background error counter are automatically copied to foreground error counter and reset for next measurement interval. An interrupt can be generated at the end of each measurement interval.

000<sub>D</sub> Max measurement interval of 232-1

001<sub>R</sub> 10<sup>3</sup> bits

10<sup>4</sup> bits  $010_{R}$ 

 $011_{\rm B}$   $10^5$  bits

 $100_{\rm R}$   $10^6$  bits

 $101_{\rm B}$   $10^7$  bits

 $110_{\rm B}$   $10^{8}$  bits

 $111_{\rm R}$   $10^9$  bits



#### **TURIMSK**

## **Test Unit Receive Interrupt Mask Register**

Access : read/write

Address : 2AC<sub>H</sub> (PCI), D6<sub>H</sub> (Local bus)

Reset Value : 001F<sub>H</sub>

15			12	8				4	3	2	1	0
0	0	0	AIM(4:0)		0	0	0	ERXM	BED	ALL1	LOS	SYN

This register provides the interrupt masks for the test unit interrupts. Generation of an interrupt vector itself does not necessarily result in assertion of the interrupt pin. For description of interrupt concept and interrupt vectors see "Layer One Interrupts" on page 136.

The following definition applies:

1 The corresponding interrupt vector will not be generated by the device.

The corresponding interrupt vector will be generated.

ERXM Mask 'End of Receive Error Rate Measurement'

BED Mask 'Bit Error Detected'

ALL1 Mask 'All '1' Pattern Received'

LOS Mask 'Loss of Signal'

SYN Mask 'Change in Receiver Synchronization State'

AIM flags have same layout as the above five mask but are internal masks that are set automatically following the interrupt in the AIM mode. This mask prevents excessive bus load in error conditions. AIM flags are cleared by the **TURCOM.CAIM** command. They are "read only" flags in this register.



# TURSTAT Test Unit Receive Status Register

Access : read

Address : 2B0<sub>H</sub> (PCI), D8<sub>H</sub> (Local bus)

Reset Value : 0021<sub>H</sub>

15							_		_	5		_			_
0	0	0	0	0	0	0	INVS	LA1	LA0	LOOS	EMI	LBE	A1	A0	oos

INV Inverted Pattern

This bit indicates that the received PRBS sequence is inverted.

0 Not Inverted.

1 Inverted.

LA1 Latched 'Input all '1"

This bit indicates that the condition 'Input all '1" was active since last

status register read.

LA0 Latched 'Input all '0"

This bit indicates that the condition 'Input all '0" was active since last

status register read.

LOOS Latched Out of Synchronization

This bit indicates that the receiver was out of synchronization since last

status register read.

EMI End of Measurement Interval

This bit indicates that the end of the measurement internal was reached since last read of error counter or that command TURCMD.RDC was given. The results of the bit error rate test are available in register TURBC0,1 and TUREC0,1. This flag is cleared when the error counter

is read. Counters will not be overwritten while EMI is '1'.

LBE Latched Bit Error Detected Flag

This bit indicates that at least '1' one bit error occurred since last read of

this register. It is cleared by status register read.

A1 Input all '1's

This bit indicates that the input contained all '1' during the last 32 bits. It

is reset if at least one '0' occurs in 32 bits.



A0 Input all '0's

This bit indicates that the input contained all '0' during the last 32 bits. It

is reset if at least one '1' occurs in 32 bits.

OOS Receiver Out of Synchronization

This bit indicates the status of the test unit synchronizer.



#### **TURBC0**

#### **Test Unit Receive Bit Counter Low Word**

Access : read

Address : 2B4<sub>H</sub> (PCI), DA<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 BC(15:0)

BC(31:0) Bit Counter

See description below.

#### TURBC1

#### **Test Unit Receive Bit Counter High Word**

Access : read

Address : 2B8<sub>H</sub> (PCI), DC<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0 BC(31:16)

#### BC(31:0) Bit Counter

BC is a 32 bit counter which is split between two 16 bits registers. It counts receive clock slots when the receiver is enabled. Bits are counted in a background register which is not directly readable. The values are transferred to the two 16 bit foreground (readable) registers and cleared in one of the two ways:

- Assert command TURCOM.RDC.
- 2. Automatically at end of measurement interval.

The background register is transferred to the foreground register and cleared in the same way as the bit error counter (see previous section).



When the error registers are read in response to the "End of Measurement Interval" interrupt vector, reading this register is not necessary because the measurement interval would be known. However the user could assert command TURCOM.RDC to terminate the measurement interval early and transfer the current bit error count and bit count to the foreground registers (polling mode).



### TUREC0

#### **Test Unit Receive Error Counter Low Word**

Access : read

Address :  $2BC_{H}$  (PCI),  $DE_{H}$  (Local bus)

Reset Value : 0000<sub>H</sub>

15 EC(15:0)

EC(31:0) Error Counter

See description below.

#### **TUREC1**

#### **Test Unit Receive Error Counter High Word**

Access : read

Address : 2C0<sub>H</sub> (PCI), E0<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 EC(31:16)

## EC(31:0) Error Counter

This 32 bit counter counts receive errors detected when receiver is enabled and in synchronized state. When the 'Bit Error Detected' interrupt is enabled, it will be asserted and then automatically masked when this counter is incremented.

Errors are counted in a background register (not directly readable) until:

- 1. The user asserts command TURCOM.RDC.
- 2. The end of measurement interval is reached and the last result was read.

In both cases the value of the background register is copied to TUREC.EC and the measured values are accessible. An 'End of



Receive Error Rate Measurement' interrupt vector is optionally generated.



#### **TURFP0**

#### **Test Unit Receive Fixed Pattern Low Word**

Access : read

Address : 2C4<sub>H</sub> (PCI), E2<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 PP(15:0)

FP(31:0) Fixed pattern

See description below.

#### TURFP1

# **Test Unit Receive Fixed Pattern High Word**

Access : read

Address : 2C8<sub>H</sub> (PCI), E4<sub>H</sub> (Local bus)

Reset Value : 0000<sub>H</sub>

15 0 FP(31:16)

#### FP(31:0) Fixed Pattern

This 32 bit field is distributed over two 16 bit registers and is used in the fixed pattern mode (TURCFG.MD='1'). The TURCOM.RDF command will copy the current state of the receiver's 32 bit pattern generator to this register. If the receiver is synchronized, bits FP(TURCFG.LEN:0) contain the fixed pattern being received. Bit 0 is the most recently received. If not synchronized, the register contains a 32 bit sample of input data.



# 8.2.5 Transmit Framer Register

### **TCMDR**

# T1/E1 Transmit Command Register

Access : read/write

Address : 00<sub>H</sub> Reset Value : 0000<sub>H</sub>

15										5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	XAP	XPRBS	XAIS	XRA	XLU	XLD

# XAP Transmit Auxiliary Pattern

This bit enables transmission of auxiliary pattern in the outgoing bit stream. The auxiliary pattern is defined as a continuous pattern of '01'.

- O Disable transmission of auxiliary pattern.
- 1 Enable transmission of auxiliary pattern. This function is not available if bit XAIS is set to '1'.

## XPRBS Transmit PRBS

This bit enables the transmission of the pseudo-random bit sequence defined in register TPRBSC.

- Disable transmission of PRBS.
- Enable transmission of PRBS.

#### XAIS Transmit AIS

This bit enables transmission of alarm indication signal towards the remote end. AIS is an all one unframed signal.

- Disable transmission of AIS.
- 1 Enable transmission of AIS.



## XRA Transmit Remote Alarm (Yellow Alarm)

This bit enables the transmission of remote alarm in the outgoing bit stream. Clearing the bit will remove the remote alarm pattern.

## **T**1

- 0 Disable transmission of remote alarm.
- 1 Enable transmission of remote alarm. Remote alarm pattern is selected via register FMR.SRAF.

## **E1**

- O Disable transmission of remote alarm.
- 1 Set A-bit in transmitted service word.

# XLU Transmit Line Loopback Actuate (Up) Code

- 0 Normal operation.
- A one in this bit position will cause the transmitter to replace normal transmit data with the line loopback actuate code continuously until this bit is reset. The line loopback actuate code will be optionally overwritten by the framing/DL/CRC bits.

## XLD Transmit Line Loopback Deactuate (Down) Code

- 0 Normal operation.
- A one in this bit position will cause the transmitter to replace normal transmit data with the line loopback deactuate code continuously until this bit is reset. The line loopback deactuate code will be optionally overwritten by the framing/DL/CRC bits.



# TFMR T1/E1 Transmit Mode Register

Access : read/write

Address :  $01_{H}$ Reset Value :  $0000_{H}$ 

15										5	4	3	2	1	0
0	0	0	0	0	0	0	0	0	0	XAS	AXRA	SRAF	T1E1	FM(	1:0)

# XAS Automatic Spare Bit Insertion

## E1: CRC-4 Multiframe

- Normal operation. Content of register XSP.XS13 and XSP.XS15 is inserted in the E-Bit of time slot 0 in frame 13 and frame 15 respectively.
- Submultiframe status will be automatically set in the outgoing data stream. Each received, errored submultiframe causes bit one of time slot 0 of frame 13 and frame 15 to be '0'. Otherwise these bits are set to '1'.

## AXRA Automatic Transmit Remote Alarm

Setting this bit enables automatic transmission of remote alarm.

- 0 Normal operation.
- The Remote Alarm (yellow alarm) bit will be automatically set in the outgoing data stream if the receiver is in asynchronous state (FRS.LFA bit is set). In synchronous state the remote alarm bit will be reset.



## SRAF Select Remote (Yellow) Alarm Format

Setting this bit enables the remote alarm format in T1 mode. This bit has no function in E1 mode.

T1: F4

1 Bit 2 = 0 in every channel

T1: F12

0 FS bit of frame 12.

1 Bit 2 = 0 in every channel.

T1: ESF

0 Pattern '1111 1111 0000 0000...' in data link channel.

1 Bit 2 = 0 in every channel.

## T1E1 T1/E1 mode selection

This bit switches the transmit framer into T1 and E1 mode.

Select T1 mode.

Select E1 mode.

## FM Select Frame Mode

This bit field determines the framing mode of the transmit framer.

T1

00<sub>B</sub> Select ESF format.

01<sub>B</sub> Select F12 format.

10<sub>R</sub> Select F4 format.

Other Reserved

**E1** 

00<sub>B</sub> Select Double frame format.

01<sub>B</sub> Select CRC-4 multiframe format.

Other Reserved



# TLCR0 T1/E1 Transmit Loop Code Register 0

Access : read/write

Address : 02<sub>H</sub> Reset Value : 0000<sub>H</sub>

15	14					9 8							1	0
FLLB	LCS	0	0	0	0	LDCL(1:0)	0	0	0	0	0	0	LACL(	1:0)

# FLLB Disable Framed Line Loopback

This bit switches between framed and unframed transmission of line loopback. In unframed transmission the FS/DL bit the line loopback code overwrites the FS/DL bits, while in framed transmission the FS/DL bits will not be overwritten by the line loopback code.

- 0 Set framed line loopback transmission.
- Set unframed line loopback transmission.

## LCS Loop Code Select

This bit switches between line loopback code defined in ANSI T1.403 or a user definable loopback code defined in register TLCR1.

- 0 Select ANSI codes.
- 1 Select line loopback code defined in register TLCR1.

## LDCL Line Loopback Deactuate Code Length

This bit field determines the length of the line loopback deactuate code specified in register TLCR1. The length of the loopback code can be specified in a range of 5 to 8 bits.

00<sub>B</sub>...11<sub>B</sub>Specifies code length in the range of 5 to 8 bits.

## LACL Line Loopback Actuate Code Length (5-8 bit)

This bit field determines the length of the line loopback actuate code specified in register TLCR1. The length of the loopback code can be specified in a range of 5 to 8 bits.

00<sub>B</sub>..11<sub>B</sub>Specifies code length in the range of 5 to 8 bits.

Note: Codes of smaller length might be activated by multiple entry, e.g. code 001: write 001001 to TLCR1 register and define code length of 6 bits.



# TLCR1 T1/E1 Transmit Loop Code Register 1

Access : read/write

Address : 03<sub>H</sub> Reset Value : 0000<sub>H</sub>

LAC

15 8	7 0	
LDC(7:0)	LAC(7:0)	1

LDC Line Loopback Deactuate Code

This bit field is sent in the outgoing bit stream if enabled via bit

TCMDR.XLD and TLCR0.LCS.

Note: Most significant bit is sent first. E.g.  $TCLR0.LDCL = 01_B$  specifies code length to be six bits long. In this case LDC(5) is sent first.

Line Loopback Actuate Code

This bit field is sent in the outgoing bit stream if enabled via bit

TCMDR.XLU and TLCR0.LCS.

Note: Most significant bit is sent first. E.g.  $TCLR0.LACL = 01_B$  specifies code length to be six bits long. In this case LAC(5) is sent first.



#### **TPRBSC**

## T1/E1 Transmit PRBS Control Register

Access : read/write

Address :  $04_{H}$ Reset Value :  $001F_{H}$ 

	15			12			9 8				4	0
FF	RBS	0	0	IPRBS	0	0	PRP(1:0)	0	0	0	FPL(4:0)	

#### FPRBS Framed PRBS

This bit field enables framed or unframed transmission of the pseudorandom bit sequence.

Transmit framed PRBS.

Transmit unframed PRBS.

## IPRBS Invert PRBS

This bit field enables inversion of the pseudo-random bit sequence in transmit direction.

0 PRBS is not inverted.

1 PRBS is inverted.

# PRP Pseudo-Random Pattern

This bit field determines the generator polynomial for the pseudorandom bit sequence.

00<sub>B</sub> PRBS is generated according to 2<sup>15</sup> -1 (ITU-T O. 151)

01<sub>B</sub> PRBS is generated according to 2<sup>20</sup> -1 (ITU-T O. 151)

1-<sub>B</sub> For PRBS the fixed pattern, defined in TFPR0 and TFPR1, is selected.

## FPL Fixed Pattern Length

This bit field sets the length of the fixed pattern FP which is located in register TFPR0 and TFPR1. E.g.:  $FPL(4:0) = 10010_B$  means pattern length is equal to 19, which implies that the bits FP(18)..FP(0) form the PRBS.



## TFPR0

# T1/E1 Transmit Fixed Pattern Register Low Word

Access : read/write

Address : 05<sub>H</sub> Reset Value  $:0000_{H}$ 

15 0 FP(15:0)

FP(31:0) Fixed Pattern Low Bytes

See description below.

#### TFPR1

## T1/E1 Transmit Framer Fixed Pattern Register High Word

Access : read/write

Address : 06<sub>H</sub> Reset Value  $:0000_{H}$ 

15 0 FP(31:16)

#### Fixed Pattern High Bytes FP(31:0)

This bit field together with bit field TFPR0.FP defines a bit sequence, which can be sent instead of a pseudo-random bit sequence. FP is sent in the order FP(TPRBSC.FPL-1) down to FP(0) and will be repeated until

deactivated.



## **TPTSL0**

# T1/E1 Transmit PRBS Time Slot Number Register Low Word

Access : read/write

Address : 07<sub>H</sub> Reset Value : FFFF<sub>H</sub>

15 TSL(15:0)

TSL(31:0) Time slot 15..0 Select

See description below.

#### TPTSL1

# T1/E1 Transmit PRBS Time Slot Number Register High Word

Access : read/write

Address : 08<sub>H</sub> Reset Value : 00FF<sub>H</sub>

15 TSL(31:16)

# TSL(31:0) Time slot 31..16 Select

Selected bits in bit field TSL and TPTSL0.TSL determine those time slots, which are used for PRBS generation. Time slots can be programmed arbitrarily. E.g. if TPTSL0.TSL(1) and TPTSL0.TSL(2) are set to '1', the PRBS is sent continuously over both time slots combined.



## **XSP**

# T1/E1 Transmit Spare Bit Register

Access : read/write

 $\begin{array}{lll} \text{Address} & : 09_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \end{array}$ 

15														1	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	XS13	XS15

XS13, XS15 Transmit Spare Bit

E1: CRC-4 Multiframe

Dependent on bit FMR.XAS and framer mode spare bits of service word in CRC-4 multiframe 13 and 15 are replaced by XS13 and XS15.



# 8.2.6 Receive Framer Registers

#### **RCMDR**

## T1/E1 Receive Command Register

Access : read/write

Address : 00<sub>H</sub> Reset Value : 0000<sub>H</sub>

15										5	4		1	0
0	0	0	0	0	0	0	0	0	0	0		SIM(3:0)		FRS

## SIM Alarm Simulation

This bit field enables alarm simulation in the receive framer. See codes for specific function.

0000<sub>B</sub> Disable alarm simulation.

0001<sub>B</sub> Simulate loss of signal

## Setting this code:

- Generate 'Loss of Signal Status' interrupt vector.
- Flag 'Loss of Signal' via bit FSR.LOS.
- Generate PDEN interrupt vector.
- Flag 'Pulse Density Code Violation Detected' via bit FSR.PDEN/ AUX.

#### Removing this code:

- Generate 'Loss of Signal Status' interrupt vector.
- Remove signalling of 'Loss of Signal'.
- Generate PDEN interrupt vector.
- Remove signalling of 'Pulse Density Code Violation Detected'.

## 0010<sub>R</sub> Simulate Alarm Indication Signal

## Setting this code:

- Generate 'Loss of Frame Alignment' interrupt vector.
- Flag 'Loss of Frame Alignment' via bit FRS.LFA.
- Generate 'Alarm Indication Signalled' interrupt vector.
- Flag 'Alarm Indication Signalled' via bit FRS.AIS.



## Removing this code:

- Generate 'Loss of Frame Alignment Status' interrupt vector.
- Remove signalling of 'Loss of Frame Alignment'.
- Generate 'Alarm Indication Signal Status' interrupt vector.
- Remove signalling of 'Alarm Indication Signalled'.

# 0011<sub>B</sub> Simulate auxiliary pattern ('...010101...' pattern)

This sequence simulates also loss of frame (required for auxiliary pattern).

## Setting this code:

- Generate 'Auxiliary Pattern Status' interrupt vector.
- Generate 'Loss of Frame Alignment Status' interrupt vector.
- Flag 'Loss of Signal' via bit FRS.LFA.
- Flag 'Auxiliary Pattern detected' via bit FRS.PDEN/AUX.
- Flag 'Loss of Multiframe Alignment' via bit FRS.LMFA (CRC-4 Multiframe mode).
- Increment framing error counter by 3 or 4 depending on RFMR.SSP

## Removing this code:

- Generate 'Auxiliary pattern Status' interrupt vector.
- Generate 'Loss of Frame Alignment Status' interrupt vector.
- Remove signalling of 'Loss of Frame Alignment'.
- Remove signalling of FRS.PDEN/AUX.
- Remove signalling of 'Loss of Multiframe Alignment'.

## 0100<sub>R</sub> Simulate loss of frame

## Setting this code:

- Generate 'Loss of Frame Alignment Status' interrupt vector.
- Flag 'Loss of Signal' via bit FRS.LFA.
- Flag 'Loss of Multiframe Alignment' via bit FRS.LMFA (CRC-4 multiframe mode).
- Increment framing error counter by 2, 3, or 4 (depends on RFMR.SSP).
- Increment errored seconds (T1 mode only).

## Removing this code:

- Generate 'Loss of Frame Alignment Status' interrupt vector.
- Remove signalling of 'Loss of Frame Alignment'.
- Remove signalling of 'Loss of Multiframe Alignment'.



## 0101<sub>B</sub> Simulate remote alarm

## Setting this code:

- Generate 'Remote Alarm Status' interrupt vector.
- Flag 'Received Remote Alarm' bit FRS.RRA.

## Removing this code:

- Generate 'Remote Alarm Status' interrupt vector.
- Remove signalling of 'Receive Remote Alarm'.

# 0110<sub>B</sub> Simulate CRC error (T1 ESF or E1 CRC-4 multiframe mode)

## Setting this code:

- Generate CRC interrupt vector.
- Increment CRC error counter.

## Removing this code:

- Stop generation of CRC interrupt vector.
- Stop increment of CRC error counter.

## FRS Force Resynchronization

A transition from low to high will force the frame aligner to execute a resynchronization of the pulse frame. The procedure depends on the status of bit FMR.SSP.

- 0 No operation.
- 1 Change from '0' to '1' forces resynchronization.



# RFMR T1/E1 Receive Mode Register

Access : read/write

 $\begin{array}{lll} \text{Address} & : 01_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \end{array}$ 

15				11	10	9	8	7	6	5		3	2	1	0	
0	0	0	0	LOSR	ALMF	RRAM	AIS3	SSP	SSC(	(1:0)	0	SRAF	T1E1	FM(	1:0)	

## LOSR Loss of Signal Recovery

This bit sets the conditions for 'Loss of Signal' detection.

## **T**1

- Loss of signal cleared, when pulse density defined by register PCR is detected during a time interval declared by register PCD.
- Loss of signal cleared, when pulse frame density defined by register PCR is detected during a time interval declared by register PCD and a pulse density of at least N '1's in every N+1 octets (0<N<24) during recovery interval defined in register PCD is detected.

## **E**1

- Loss of signal cleared, when pulse density defined by register PCR is detected during a time interval declared by register PCD.
- 1 No function.

# ALMF Automatic Loss of Multiframe

This bit selects condition for automatic loss of multiframe.

## **T**1

- 0 CRC errors do not cause loss of frame alignment.
- 1 320 or more CRC errors in one second cause loss of frame alignment.

#### **E1**

- O CRC errors do not cause loss of frame alignment.
- 1 915 or more CRC-4 errors in one second cause loss of frame alignment.



## RRAM Receive Remote Alarm Mode

The conditions for remote (yellow) alarm detection can be selected via this bit to allow detection even in the presence of BER 10<sup>-3</sup>. Remote alarm detection is flagged in register FRS.RRA and can be signalled as an interrupt.

## T1: F4

0 Normal operation

Detection:

Bit 2 = 0 in every speech channel per frame.

Release:

The alarm will be reset when above conditions are no longer detected.

1 Detection with BER 10<sup>-3</sup>

Detection:

Bit 2 = 0 in 255 consecutive speech channels.

Release:

The alarm will be reset when receiver does not detect the Bit 2 = '0' condition for three consecutive pulseframes.

## T1: F12

0 Normal operation

Depending on bit FMR0.SRAF:

0 Detection:

FS-bit of frame 12 is forced to '1'.

Release:

The alarm will be reset when above conditions are no longer detected.

1 Detection:

Bit 2 = 0 in every speech channel per frame.

Release:

The alarm will be reset when above conditions are no longer detected.

1 Detection with BER 10<sup>-3</sup>

Remote alarm detection depending on bit FMR0.SRAF:

0 Detection:

FS-bit of frame 12 is forced to '1'.

Release:

The alarm will be reset when receiver does not detect the 'Fs-bit' condition for three consecutive multiframes.



#### 1 Detection:

Bit 2 = '0' in 255 consecutive speech channels.

#### Release

The alarm will be reset when receiver does not detect the Bit 2 = '0' condition for three consecutive pulseframes.

#### T1: ESF

## 0 Normal operation

Remote alarm detection depending on bit FMR0.SRAF:

#### 0 Detection

Pattern '1111 1111 0000 0000...' in data link channel.

#### Release:

The alarm will be reset when above conditions are no longer detected.

## 1 Detection:

Bit 2 = 0 in every speech channel per frame.

#### Release:

The alarm will be reset when above conditions are no longer detected.

## 1 Detection with BER 10<sup>-3</sup>

Remote alarm detection depending on bit FMR0.SRAF:

## 0 Detection

Pattern '1111 1111 0000 0000...' in data link channel.

#### Release

The alarm will be reset when receiver does not detect 'DL pattern' for three times in a row.

#### 1 Detection:

Bit 2 = 0 in 255 consecutive speech channels.

#### Release:

The alarm will be reset when receiver does not detect the Bit 2 = '0' condition for three consecutive pulseframes.

#### AIS3 Select AIS Condition

This bit selects the condition which leads to AIS reporting.

## T1: F4, F12

- O AIS (blue alarm) is indicated, when two or less zeros in the received bit stream are detected in a time interval of 12 frames.
- 1 AIS (blue alarm) detection is only enabled, when framer is in asynchronous state. The alarm is indicated, when three or less



zeros within a time interval of 12 frames are detected in the received bit stream.

#### T1: ESF

- O AIS (blue alarm) is indicated, when two or less zeros in the received bit stream are detected in a time interval of 24 frames.
- AIS (blue alarm) detection is only enabled, when framer is in asynchronous state. The alarm is indicated, when five or less zeros within a time interval of 24 frames are detected in the received bit stream.

## SSP Select Synchronization/Resynchronization Procedure

#### T1: F12

- O Specified number of errors in FT framing or specified number of errors in FS framing leads to loss of synchronization (FRS.LFA). In the case of FS bit framing errors, bit FRS.LMFA is set additionally. A complete new synchronization procedure is initiated to regain pulseframe alignment and then multiframe alignment.
- Specified number of errors in FT framing has the same effect as above. Specified number of errors in FS framing only initiates a new search for multiframe alignment without influencing pulseframe synchronous state (FRS.LMFA is set).

## T1: ESF

- O Synchronization is achieved only on verification of the framing pattern.
- 1 Synchronous state is reached when framing pattern and CRC-6 checksum are correctly found.

## SSC Select Synchronization Conditions

#### **T1**

Loss of Frame Alignment (FRS.LFA or opt. FRS.LMFA) is declared if

00<sub>B</sub> 2 out of 4 framing bits

01<sub>B</sub> 2 out of 5 framing bits

10<sub>B</sub> **F12** 

2 out of 6 framing bits

ESE

2 out of 6 framing bits per multiframe period

11<sub>B</sub> 4 consecutive incorrect multiframe pattern

It depends on the selected multiframe format and optionally on bit FMR.SSP which framing bits are observed:



F12 SSP = 0: FT bits  $\to$  FRS.LFA: FS bits  $\to$  FRS.LFA and FRS.LMFA SSP = 1:FT  $\to$  FRS.LFA FS  $\to$  FRS.LMFA

ESF ESF framing bits → FRS.LFA

E1

 $\begin{array}{ccc} {\rm 00_B} & {\rm 3~out~of~4~consecutive~FAS~or~service~word~errors} \\ {\rm 01_B} & {\rm 4~out~of~4~consecutive~FAS~or~service~word~errors} \end{array}$ 

10<sub>B</sub> 3 out of 3 FAS errors11<sub>B</sub> 4 out of 4 FAS errors

SRAF Select Remote (Yellow) Alarm Format

This bit is valid for T1 mode only.

T1: F4

0/1 Bit 2 = '0' in every channel.

T1: F12

0 FS bit of frame 12.

1 Bit 2 = 0 in every channel.

T1: ESF

0 Pattern '1111 1111 0000 0000...' in data link channel.

1 Bit 2 = 0 in every channel.

T1E1 T1/E1 Mode Selection

This bit switches the receive framer into T1 or E1 mode.

Select T1 mode.

1 Select E1 mode.

FM Select Frame Mode

This bit field selects the framing mode of the receive framer.

**T1** 

00<sub>R</sub> ESF-Format

01<sub>B</sub> F12-Format

10<sub>B</sub> F4-Format

Other Reserved

E1

00<sub>B</sub> Doubleframe

01<sub>B</sub> CRC-4

10<sub>B</sub> CRC-4 Interworking mode

Other Reserved



# RLCR0 T1/E1 Receive Loop Code Register 0

Access : read/write

Address :  $02_{H}$ Reset Value :  $0000_{H}$ 

15	14					9 8							1	0
0	LCS	0	0	0	0	LDCL(1:0)	0	0	0	0	0	0	LACL(	1:0)

LCS Loop Code Select

This bit switches between line loopback code defined in ANSI T1.403 or a user definable loopback code defined in register RLCR1.

Select ANSI codes.

1 Select line loopback code defined in register RLCR1.

LDCL Line Loopback Deactuate Code Length

This bit field determines the length of the line loopback deactuate code specified in register TLCR1. The length of the loopback code can be specified in a range of 5 to 8 bits

specified in a range of 5 to 8 bits.

00<sub>B</sub>..11<sub>B</sub>Specifies code length in the range of 5 to 8 bits.

LACL Line Loopback Actuate Code Length (5-8 bit)

This bit field determines the length of the line loopback actuate code specified in register TLCR1. The length of the loopback code can be

specified in a range of 5 to 8 bits.

00<sub>B</sub>..11<sub>B</sub>Specifies code length in the range of 5 to 8 bits.

Note: Codes of smaller length might be activated by multiple entry, e.g. code 001: write 001001 to LCR1 register and define code length of 6 bits.



# RLCR1 T1/E1 Receive Loop Code Register 1

Access : read/write

 $\begin{array}{lll} \text{Address} & : 03_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \end{array}$ 

15	8	7	0
LDC(7:0)		LAC(7:0)	

LDC Line Loopback Deactuate Code

This incoming bit stream will be compared against this bit field if enabled

via bit RLCR0.LCS.

Note: Most significant bit is sent first. E.g.  $TCLR0.LDCL = 01_B$  specifies

code length to be six bits long. In this case LDC(5) is sent first.

LAC Line Loopback Actuate Code

This incoming bit stream will be compared against this bit field if enabled

via bit RLCR0.LCS.

Note: Most significant bit is sent first. E.g.  $TCLR0.LACL = 01_B$  specifies

code length to be six bits long. In this case LAC(5) is sent first.



## **RPRBSC**

## T1/E1 Receive PRBS Control Register

Access : read/write

 $\begin{array}{lll} \text{Address} & : 04_{\text{H}} \\ \text{Reset Value} & : 001F_{\text{H}} \end{array}$ 

15		13				9 8				4	0
0	0	EPRM	0	0	0	PRP(1:0)	0	0	0	FPL(4:0)	

#### EPRM Enable PRBS Monitor

This bit enables the PRBS monitoring function. When PRBS monitor is enabled the pseudo-random pattern synchronizer logs onto the pseudo-random pattern defined in PRB.

0 PRBS monitor is disabled.

1 PRBS monitor is enabled.

## PRP Pseudo-Random Pattern

 $00_B$  The incoming pattern is compared according to  $2^{15}$  -1 (ITU-T 0.151)

 $01_{B}$  The incoming pattern is compared according to  $2^{20}$  -1 (ITU-T 0.151)

11<sub>B</sub> The incoming pattern is compared to the fixed pattern, defined in RFPR0 and RFPR1. The pattern length is defined in FPL.

Other Reserved

FPL Fixed Pattern Length, e.g.: =10010 means pattern length is equal to 19,

which implies that the bits RFPR1/0.FP(18)..FP(0) form the PRBS.



## RFPR0

# T1/E1 Receive Fixed Pattern Register Low Word

Access : read/write

Address : 05<sub>H</sub> Reset Value  $:0000_{H}$ 

15 0 FP(15:0)

FΡ Fixed Pattern Low Bytes

See description below.

#### RFPR1

# T1/E1 Receive Fixed Pattern Register High Word

Access : read/write

Address : 06<sub>H</sub> Reset Value  $:0000_{H}$ 

15 0 FP(31:16)

#### FP Fixed Pattern High Bytes

This bit field together with RFPR0.FP defines a bit sequence, which will be monitored in the PRBS synchronous state. FP is compared in the order FP(RPRBSC.FPL-1) down to FP(0) and comparison will be

repeated until deactivated.



## RPTSL0

# T1/E1 Receive PRBS Time Slot Number Register Low Word

Access : read/write

 $\begin{array}{ll} \text{Address} & : 07_{\text{H}} \\ \text{Reset Value} & : \text{FFFF}_{\text{H}} \end{array}$ 

15 TSL(15:0)

TSL Time slot 15..0 Select

See description below.

#### RPTSL1

# T1/E1 Receive PRBS Time Slot Number Register High Word

Access : read/write

Address : 08<sub>H</sub> Reset Value : 00FF<sub>H</sub>

15 0 TSL(23:16)

TSL Time slot 31..16 Select

Selected bits in bit field TSL and RPTSL0.TSL determine those time slots, which are used for PRBS monitoring. Time slots can be programmed arbitrarily. E.g. if RPTSL0.TSL(1) and RPTSL0.TSL(2) are set to '1', the PRBS is monitored continuously over both time slots combined.



## **IMR**

# T1/E1 Receive Interrupt Mask Register

Access : read/write

Address :  $09_{H}$ Reset Value :  $0000_{H}$ 

15				11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	T400	CRC	PDEN /AUX	FAS	MFAS	AISS	LOSS	RAS	ES	SEC	LLBS	PRBSS

For each framer interrupt vector an interrupt vector generation mask is provided. Generation of an interrupt vector itself does not necessarily result in assertion of the interrupt pin. For description of interrupt concept and interrupt vectors see "Layer One Interrupts" on page 136.

The following definition applies:

1 The corresponding interrupt vector is suppressed by the device.

O The corresponding interrupt vector is generated.

T400 Mask '400 millisecond Timer'

CRC Mask 'CRC Error'

PDEN/AUX Mask 'Pulse Density / Auxiliary Pattern'

FAS Mask 'Frame Alignment Status'

MFAS Mask 'Multiframe Alignment Status'

AIS Mask 'Alarm Indication Status'
LOSS Mask 'Loss of Signal Status'
RAS Mask 'Remote Alarm Status'

ES Mask 'Errored Second' SEC Mask 'One Second Tick'

LLBS Mask 'Line Loopback Status'

PRBSS Mask 'PRBS Status'



# RFMR1 T1/E1 Receive Mode Register 1

Access : read/write

Address :  $0A_H$ Reset Value :  $0000_H$ 

15											4	2	1	0
0	0	0	0	0	0	0	0	0	0	0	FRST(2	:0)	EACM	ECM

# FRST Force Resynchronization Timer

This bit field defines the time after which the framer automatically starts resynchronization if Emulator Automatic Check Mode is enabled.

0..7 Automatic resynchronization after (FRST+1)\*8 milliseconds.

## EACM Enable Emulator Automatic Check Mode

This bit enables automatic resynchronization mode. After loss of frame the receive framer starts resynchronization after (FRST+1)\*8ms when frame search is not started by system software. If EACM is disabled system software has to force resynchronization by setting bit RCMDR.FRS.

#### ECM Error Counter Mode

- Unbuffered error counter mode. Counters are updated when respective error occurs. Counter registers are directly readable and cleared automatically at the end of a read cycle.
- Buffered error counter mode. Actual error counts are hidden from user and updated in background. The counter is copied to the bus register at one second intervals and reset automatically. This operation is synchronous with the periodic one second interrupt which alerts software to read the register.



# PCD T1/E1 Receive Pulse Count Detection Register

Access : read/write

 $\begin{array}{ll} \text{Address} & : 0 \text{B}_{\text{H}} \\ \text{Reset Value} & : 0015_{\text{H}} \\ \end{array}$ 

15										5	0
0	0	0	0	0	0	0	0	0	0	PCD(5:0)	

## PCD Pulse Count Detection

A 'Loss of Signal' alarm will be detected, if the incoming data stream has zero octets for a programmable number T of consecutive octets. The number T is programmable via the PCD register and can be calculated as follows:

 $T = 8*(PCD+1), 1 \le PCD \le 63.$ 

E.g. PCD = 21 sets loss of signal threshold to 176 (=(21+1)\*8) zeros.

Note: For T1 mode time detection interval has cumulative uncertainty of 1 per 193 clocks.



# PCR T1/E1 Receive Pulse Count Recovery Register

Access : read/write

 $\begin{array}{ll} \text{Address} & : 0\text{C}_{\text{H}} \\ \text{Reset Value} & : 0015_{\text{H}} \end{array}$ 

15										5	0
0	0	0	0	0	0	0	0	0	0	PCR(5:0)	

# PCR Pulse Count Recovery

'Loss of Signal' alarm will be cleared, when a programmable pulse density is detected in the received bit stream. A pulse is a logical '1' in the received bit stream. The number of pulses M which must occur in a certain time interval, which is programmable via register PCR, can be calculated as follows:

M = PCR,  $1 \le PCR \le 63$ .

Additional 'Loss of Signal' recovery condition may be selected by using RFMR.LOSR.



# FRS T1/E1 Receive Status Register

Access : read/write

Address :  $40_{H}$ Reset Value :  $0000_{H}$ 

15	14	13	12	11	10	9	8					3	2	1	0
0	NMF	LOS	AIS	LFA	RRA	LMFA	FSRF	0	0	0	0	PDEN AUX	LLBDD	LLBAD	PRBS

Each bit in the framer receive status register declares a specific condition dependent on the selected modes. The following convention applies to the individual bits:

The named status is not or no longer existing.

1 The named status is currently effective.

The change of status bit (except FSRF) can also be used to generate a framer interrupt vector. See also register IMR which describes how to enable/disable interrupt vector generation and refer to the description of framer interrupt vector on page "Layer One Interrupts" on page 136.

NMF No Multiframe Found

E1: CRC-4 Interworking

This bit is set, if no multiframe is found after 400 milliseconds.

LOS Loss of Signal (Red Alarm)

This bit is set, when the 'Loss of Signal' condition has been detected.

**T1** 

Detection

An alarm will be generated if the incoming data stream remain at logical zero for 168 cycles.

Recovery

The recovery procedure starts after detecting a logical 1. The LOS alarm is cleared if 21 one's are detected within 168 bits (12.5%).

E1

see T1 and "Error Performance Monitoring and Alarm Handling" on page 94.



AIS Alarm Indication Signal (AIS)

This bit is set, when the alarm indication condition defined by bit RFMR.AIS3 has been detected. The flag stays active for at least one multiframe. It will be reset with the beginning of the next following multiframe, if no alarm condition is detected.

LFA Loss of Frame Alignment

**T1** 

This bit is set, when the 'Loss of Frame Alignment' condition defined by bits RFMR.SSP and RFMR.SSC has been detected. The flag is cleared, when synchronization has been regained.

**E1** 

This bit is set, when the 'Loss of Frame Alignment' condition defined by bit RFMR.SSC has been detected. The flag is cleared, when synchronization has been regained.

RRA Received Remote Alarm (Yellow Alarm)

Condition for receive remote alarm is defined by bit FMR.RRAM. The flag is set after detecting remote alarm (yellow alarm).

LMFA Loss of Multiframe Alignment

T1: F12

This bit is set, when the condition for 'Loss of Multiframe Alignment' defined by bit RFMR.SSC has been detected. The flag is cleared after multiframe synchronization has been regained.

## E1: CRC-4 Multiframe, CRC-4 Interworking

This bit is set in CRC-4 multiframe or CRC-4 interworking mode, when double frame alignment is lost. This bit is reset, when the multiframe pattern is acquired or after 400 milliseconds in CRC-4 interworking mode, when NMF is asserted.

FSRF Frame Search Restart Flag

This bit toggles on each new pulse frame search started. This function can be used to recognize multiple candidates. If FSRF does not toggle, but LFA and LMFA remain active, the synchronizer has multiple candidates and cannot determine which one is correct.

Note: This flag can not be used to generate an interrupt vector.



#### PDEN/AUX T1

Pulse Density Code Violation Detected

This bit is set, when the pulse density of the received data stream is below the requirement defined by ANSI T1.403.

## **E1**

**Auxiliary Pattern Detected** 

This bit is set, when the pattern '...010101...' has been detected concurrent with loss of frame.

# LLBDD Line Loop-Back Deactuation Signal Detected

This bit is set, when line loopback deactuate signal is detected and then received over a period of more than 33,16ms with a bit error rate less than 1/100. The bit remains set as long as the bit error rate does not exceed 1/100.

If framing is aligned, the first bit position of any frame is not taken into account for the error rate calculation. If frame alignment state is not synchronized, all received data bits are searched for the LLBD pattern.

# LLBAD Line Loop-Back Actuation Signal Detected

This bit is set to one in case the LLB actuate signal is detected and then received over a period of more than 33,16ms with a bit error rate less than 1/100. The bit remains set as long as the bit error rate does not exceed 1/100.

If framing is aligned, the first bit position of any frame is not taken into account for the error rate calculation. If frame alignment state is not synchronized, all receive data bits are searched for the LLBA pattern.

#### PRBS PRBS status

This bit is set, when the PRBS receiver is in the synchronous state. It is set high if the synchronous state is reached even in the presence of a BER 1/10. A data stream containing all zeros with / without framing bits is also a valid pseudo-random bit sequence.



# FEC T1/E1 Receive Framing Error Counter

Access : read/write

Address : 41<sub>H</sub> Reset Value : 0000<sub>H</sub>

15

FE(15:0)

# FE Framing Error Counter

The counter will not be incremented during asynchronous state. Error counter mode (Clear on Read or Errored Second) depends on register RFMR1.ECM. In errored second mode the counter is 10 bit wide, otherwise 16 bit.

## T1: F12

The counter will be incremented when incorrect FT and FS bits are received.

## T1: ESF

The counter will be incremented when incorrect FAS bits are received.

## **E1**

The counter will be incremented when incorrect FAS words are received.



# CEC T1/E1 Receive CRC Error Counter

Access : read/write

Address :  $42_H$ Reset Value :  $0000_H$ 

15

CR(15:0)

## CR CRC Errors

The counter will not be incremented during asynchronous state. Error counter mode (Clear on Read or Errored Second) depends on register RFMR1.ECM. In errored second mode the counter is 10 bit wide, otherwise 16 bit.

T1: F12

No function.

T1: ESF

The counter will be incremented when a multiframe has been received with a CRC error.

E1: Doubleframe

No function.

E1: CRC-4 Multiframe

In CRC-4 multiframe mode the counter will be incremented when a submultiframe has been received with a CRC error.



# EBC T1/E1 Receive Errored Block Counter

Access : read/write

Address : 43<sub>H</sub> Reset Value : 0000<sub>H</sub>

15

EB(15:0)

## EB E-Bit or Errored Block counter

The counter will not be incremented during asynchronous state. Error counter mode (Clear on Read or Errored Second) depends on register RFMR1.ECM. In errored second mode the counter is 10 bit wide, otherwise 16 bit.

## **T1**

The counter will be incremented once per multiframe if a submultiframe has been received with a CRC error or an errored frame alignment has been detected.

#### E1: Doubleframe

No function.

## E1: CRC-4 Multiframe

The counter will be incremented each time the framer receives a CRC-4 multiframe with  $S_i$  bit in frame 13 or frame 15 set to zero.



# BEC T1/E1 Receive Bit Error Counter

Access : read/write

Address :  $44_{H}$ Reset Value :  $0000_{H}$ 

15

BE(15:0)

## BE Bit Error Counter

Error counter mode (Clear on Read or Errored Second) depends on register RFMR1.ECM. In errored second mode the counter is 10 bit wide, otherwise 16 bit.

## **T**1

This bit counter will be incremented with every received PRBS bit error in the PRBS synchronous state.



# 8.2.7 Facility Data Link Registers

Facility data link registers control the signalling channels of T1, E1 as well as the signalling channels of the DS3 C-bit parity format (Path Maintenance Data Link and Far End Alarm and Control Channel).

#### RCR1

## **Receive Channel Configuration Register 1**

Access : read/write

Address : 00<sub>H</sub> Reset Value : 0000<sub>H</sub>

15	5 14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	RAH	2 RAH1	RTF(	(1:0)	INV	RIFTF	BFE	BRM	BRAC	RAL2	RAL1	XCRC	CRC DIS	RON	HDLC

RAH2 Receive Address High Byte 2 Valid

This bit enables byte RAH.RAH2 for address comparison.

Disable

1 Enable

RAH1 Receive Address High Byte 1 Valid

This bit enables byte RAH.RAH1 for address comparison.

0 Disable

1 Enable

RTF RFIFO Threshold Level

This bit field sets the threshold of the receive FIFO and is applied to both pages of the receive FIFO. A 'Receive Pool Full' interrupt vector will be generated, when the programmed threshold is reached. The threshold value is given as follows:

 $00_{\rm B}$  32 byte threshold  $01_{\rm B}$  16 byte threshold  $10_{\rm B}$  4 byte threshold

11<sub>B</sub> 2 byte threshold



INV Invert data input from Receive Framer

This bit enables data inversion between receive framer and receive signalling controller.

- Disable data Inversion.
- 1 Enable data inversion.

RIFTF Report Interframe Time-fill Change

This bit selects, that interframe time-fill changes should be reported.

- 0 Disable IFF status messages.
- 1 Enable IFF status messages.

BFE Enable BOM Filter Mode

This bit selects, that byte oriented messages have to be filtered. The BOM is reported only if 7 out 10 data is received. This bit is valid in BOM mode only.

- 0 Disable BOM filter mode.
- 1 Enable BOM filter mode.

BRM BOM Receive Mode

This bit switches continuous and 10 byte packet reception of the receive signalling controller. This bit is valid in BOM mode only.

- 0 Enable continuous reception.
- 1 Enable 10 bytes packets.

#### BRAC BOM Receiver Active

#### T1: ESF

This bit switches the BOM receiver to operational state (on) or inoperational state (off). When BOM Receiver is switched on, an automatic switching between HDLC mode and BOM mode is enabled. If eight or more consecutive '1's are detected, the BOM mode is entered. Upon detection of a flag in the data stream, the signalling controller switches back to HDLC mode.

- Switch BOM receiver off.
- Switch BOM receiver on.

RAL2 Receive Address Low Byte 2 Valid

This bit enables byte RAL.RAL2 for address comparison.

- 0 Disable
- 1 Enable



RAL1 Receive Address Low Byte 1 Valid

This bit enables byte RAL.RAL1 for address comparison.

0 Disable

1 Enable

XCRC Transfer CRC to RFIFO

This bit defines, that CRC of incoming data packets shall be transferred to the receive FIFO or not.

No transfer of CRC to RFIFO.

Transfer of CRC to RFIFO.

CRCDIS CRC Check Disable

This bit enables or disables the CRC check of incoming data packets.

0 Enable CRC check.

1 Disable CRC check.

RON Receiver On/Off

This bit switches the receiver of the facility data link channel to operational (on) or inoperational state (off).

0 Switch receiver off.

1 Switch receiver on.

HLDC HDLC Mode

This bit identifies the protocol mode of the facility data link receiver.

O Set protocol mode to transparent.

1 Set protocol mode to HDLC.



### RCR2

# **Receive Channel Configuration Register 2**

Access : read/write

Address :  $01_{H}$ Reset Value :  $0000_{H}$ 

15	14	13	12	10	9	7	6	5	4	3	2	1	0	
PAS	SAUM	SAUP	SACR	C(2:0)	SASS	SM(2:0)	SA8E	SA7E	SA6E	SA5E	SA4E	SMF	T1E1	

### PAS Pattern Select for SSM and CRC Count Function

This bit selects the default pattern for synchronization status messages and bit error indication.

- 0 Use pattern defined in ETS 300233.
- 1 Use patterns specified in registers VSSM and VCRC.

# SAUM S<sub>a</sub>-bit Update Mode

This bit selects the update mode for the  $S_a$ -bits located in register RSAW1..RSAW3.

### E1: Doubleframe

- 0 S<sub>a</sub>-bits are updated after eight frames.
- S<sub>a</sub>-bits are updated only, if S<sub>a</sub> data changes. Update is done after eight frames.

### E1: CRC-4 Multiframe

- O S<sub>a</sub>-bits are updated after every multiframe.
- S<sub>a</sub>-bits are updated only, if S<sub>a</sub> data changes. Update is done on a multiframe start.

# SAUP S<sub>a</sub>-Bit Update

This bit enables the  $S_a$ -bit update function.

- 0 Disable update of S<sub>a</sub>-bits.
- 1 Enable update of S<sub>a</sub>-bits using RSAW1..RSAW3 registers.



# SACRC S<sub>a</sub>-bit Select for CRC Function

This bit field enables the CRC count function of the selected S<sub>a</sub>-bit.

- 0 Disable CRC count function.
- 1..5 Enable CRC count function for bit  $S_{a4}...S_{a8}$ , e.g. SACRC = 2 selects bit  $S_{a8}$  for CRC count function.

Other Reserved

# SASSM S<sub>a</sub>-bit Select for SSM Function

This bit field enables the synchronization status message function of the selected  $S_a$ -bit. The SSM function checks incoming messages and reports any change if a synchronization status message has been received three times in a row.

- Disable SSM function.
- 1..5 Enable SSM function for bit  $S_{a4}...S_{a8}$ , e.g. SASSM = 2 selects bit  $S_{a8}$  for SSM function.

Other Reserved

# SA8E..SA4E S<sub>a</sub>-bit Signalling Enable

Setting one of the bits switches between S<sub>a</sub>-bit access or protocol access of the selected bits.

- 0 Enable S<sub>a</sub>-bit access via register RSAW1-3.
- 1 Enable protocol access (HDLC, transparent). Selected bits will be combined to receive protocol data.

### SMF Select Multiframe Format

This bit switches between doubleframe and CRC-4 multiframe format.

- Select doubleframe format.
- Select CRC-4 multiframe format.

### T1E1 T1/E1 Mode Selection

This bit switches the receive signalling controller into T1 or E1 mode.

- Select T1 mode.
- Select E1 mode.



# RFF Receive FIFO Register

15

RFIFO(15:0)

### RFIFO Receive FIFO Data

This bit field contains the first 16 bit word of the receive FIFO of the signalling controller. The receive FIFO itself consists of two pages with 32 bytes, thus 16 words can be stored inside the receive FIFO at a time. Port status and FIFO operations can be accessed via register PSR and

register HND.

The first bit received is stored in bit 0.



### XCR1

### **Transmit Channel Configuration Register 1**

Access : read/write

 $\begin{array}{lll} \text{Address} & : 03_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \end{array}$ 

15	8	7		4	3	2	1	0	
PBYTE(7:0)			PCNT(3:0)		INV	XON	DIS CRC	SF	

PBYTE Preamble Byte

This bit field selects the preamble byte to be sent after interframe time-

fill transmission is stopped.

PCNT Preamble Count

This bit field selects the amount of preamble repetitions.

INV Invert Data

This bit enables data inversion between transmit signalling controller

and transmit framer.

0 Disable data Inversion.

1 Enable data inversion.

XON Transmitter On/Off

This bit switches the transmitter of the facility data link to operational (on)

or inoperational state (off).

Switch transmitter off.

1 Switch transmitter on.

DISCRC Disable CRC

This bit enables CRC generation and transmission on transmission of

HDLC packets.

0 Enable CRC generation.

1 Disable CRC generation.



# SF Shared Flags

This bit enables transmission of protocol data with shared flags.

- 0 Disable shared flags.
- 1 Enable shared flags.



### XCR<sub>2</sub>

### **Transmit Channel Configuration Register 2**

Access : read/write

Address : 04<sub>H</sub> Reset Value : 0000<sub>H</sub>

15							8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	IFTF	SA8E	SA7E	SA6E	SA5E	SA4E	SMF	T1E1

### IFTF Interframe Time Fill

This bit determines the interframe time of the transmit signalling controller.

- 0 Interframe time fill is 7E<sub>H</sub>.
- 1 Interframe time fill is FF<sub>H</sub>.

# SA8E..SA4E S<sub>a</sub>-bit Signalling Enable

Setting one of the bits switches between normal S<sub>a</sub>-bit access or protocol access of the selected bits.

- 0 Enable S<sub>a</sub>-bit access via register XSAW1-3.
- 1 Enable protocol access (HDLC, transparent). Selected bits will be combined for protocol data transmission.

### SMF Select CRC-4 Multiframe Format

This bit switches between doubleframe and multiframe format.

### **E1**

- Select doubleframe format.
- 1 Select CRC-4 multiframe format.

### T1E1 T1/E1 Mode Selection

This bit switches the receive signalling controller into T1 or E1 mode.

- Select T1 mode.
- 1 Select E1 mode.



# XFF Transmit FIFO Register

15

XFIFO(15:0)

### XFIFO Transmit FIFO Data

This bit field writes a 16 bit word to the transmit FIFO of the signalling controller. The transmit FIFO itself consists of two pages with 32 bytes, thus 16 words can be written to the transmit FIFO at a time. Port status and FIFO operations can be accessed via register PSR and register HND.

Data written to the transmit FIFO is sent starting with bit 0 up to bit 15.



# PSR Port Status register

15	14	13	12		8	7	6	5	4		0
	XRA	XFW		RBC(4:0)		SMOD	E(1:0)	BRFO		STAT(4:0)	

### XRA Transmit Repeat Active

This bit indicates that the transmit signalling controller is operating in repeat mode.

Normal operationRepeat operation

XFW Transmit FIFO Write Enable

This bit indicates that data can be written to XFF.XFIFO. This bit is for polling use with the same meaning as the 'Transmit Pool Ready'

interrupt vector.

RBC Receive Byte Count

This bit field indicates the amount of data stored in the receive FIFO. Valid after a 'Receive Message End' interrupt vector is generated. Receive byte count will be cleared, when a 'Receive Message Clear' command is executed via register HND. A zero byte count in combination with a 'Receive Pool Full' or 'Receive Message End' interrupt vector means that 32 bytes are available in the receive FIFO.

SMODE Receiver Status Mode

This bit indicates the status of the receive signalling controller. If BOM mode is selected via bit RCR1.BRM the receiver switches automatically between HDLC mode and BOM mode.

10<sub>B</sub> HDLC mode01<sub>B</sub> BOM modeOther Reserved



BRFO BOM Receive FIFO Overflow

0 No overflow

1 RFF overflow

The status word will be cleared after a 'Receive Message Clear'

command is issued.

STAT Receive FIFO Status

This bit field reports the status of the data stored in the receive FIFO.

### **HDLC** mode

00000<sub>B</sub> Valid HDLC Frame

00001<sub>R</sub> Receive Data Overflow

00010<sub>R</sub> Receive Abort

00011<sub>R</sub> Not Octet

00100<sub>B</sub> CRC Error

00101<sub>B</sub> Channel Off

### **BOM MODE**

00000<sub>B</sub> BOM Filtered data declared

00001<sub>B</sub> BOM data available

00010<sub>B</sub> BOM End

00011<sub>B</sub> BOM filtered data undeclared

00100<sub>B</sub> BOM header error (ISF, incorrect synchronization format)



# HND Handshake Register

15	j							8			5	4	3	2	1	0
0		0	0	0	0	0	0	RMC	0	ABORT	XRES	XREP	ОВІ	XHF	XTF	XME

Note: Receive command (bit 8) and transmit commands (bit 5 down to bit 0) can not be issued at the same time. Doing so will cause the facility data link to omit the transmit commands.

# RMC Receive Message Complete

This bit is a confirmation from CPU that a data block has been read from RFIFO following a 'Receive Pool Full' or 'Receive Message End' interrupt vector and that the occupied page can now be released.

- 0 No function
- 1 Release page of receive FIFO.

Note: If this bit is set, the low byte (transmit commands) of the register HND is ignored.

### ABORT Abort Frame

Setting this bit aborts HDLC frames which are transmitted.

- 0 Normal operation
- Abort HDLC frame.

### XRES Transmitter Reset

This bit resets the signalling controller transmit. However, the contents of the control register will not be reset.

- 0 Normal operation
- 1 Transmitter reset

### XREP Transmission Repeat

Setting this bit together with bit XTF indicates that the contents stored in XFF.XFIFO shall be repeatedly transmitted by the MUNICH256FM.

0 No cyclic transmission.



1 Enable cyclic transmission.

### OBI Odd Byte Count Indicator

Setting this bit together with bit XME indicates the number of bytes written to XFF.XFIFO is odd. This means the <u>lower</u> byte of the last write transfer to the transmit FIFO is valid only. In HDLC mode the status byte written to transmit FIFO must be included in calculation.

- 0 Even number of bytes stored in XFF.XFIFO.
- 1 Odd number of bytes stored in XFF.XFIFO.

### XHF Transmit HDLC frame

Setting this bit indicates that the contents written to XFF.XFIFO shall be transmitted as HDLC frame. If data written to XFF.XFIFO completes a HDLC frame, bit XME must be set together with XHF in order to generate CRC and flag.

- 0 No function
- 1 Transmit data stored in XFF.XFIFO in HDLC format.

### XTF Transmit transparent frame

Setting this bit indicates that the contents written to XFF.XFIFO shall be transmitted in transparent mode.

- 0 No function
- 1 Transmit data stored in XFF.XFIFO fully transparent, i.e. without bit stuffing and CRC.

### XME Transmit Message End

Setting this bit indicates that the last data block written to XFF.XFIFO completes the current frame. The last byte of the data block written to the transmit FIFO is a status word indicating the message status. The signalling controller terminates the transmission properly by appending CRC and the closing flag to the data sequence if the status word written as the last entry to the transmit FIFO does not contain an abort indication.



Table 8-8 Signalling Controller Transmit Commands

XRES	XREP	OBI	XHF	XTF	XME	Function
1	-	-	-	-	-	Reset Port
0	0	0	1	0	0	Transmit HDLC Frames Send FIFO content as HDLC frame.
0	0	0/1	1	0	1	End Transmit HDLC Send FIFO content as HDLC frame. Add CRC (if enabled) and flag after last byte stored in FIFO.
0	1	0/1	1	0	0	Repeat HDLC Frame Send FIFO content as HDLC frame. Add CRC (if enabled) and flag after last byte stored in FIFO. Then repeat transmission of FIFO content.
0	1	0/1	1	0	1	Stop Repeat HDLC Frame Stop transmission after last byte stored in FIFO. This command is issued when repetitive transmission started by command 'Repeat HDLC Frame' shall be stopped.
0	0	0	0	1	0	Transmit Transparent Send FIFO content in transparent mode.
0	0	0/1	0	1	1	End Transmit Transparent Send FIFO content in transparent mode. End transmission after last byte stored in FIFO.
0	1	0/1	0	1	0	Repeat Transmit Transparent Send FIFO content in transparent mode. Repeat transmission of FIFO content after last byte was sent.
0	1	0/1	0	1	1	Stop Repeat Transmit Transparent Stop transparent transmission after last byte stored in FIFO. This command is issued when repetitive transmission started by command 'Repeat transmit transparent' shall be stopped.



# MSK Interrupt Mask Register

Access : read/write

Address : 08<sub>H</sub> Reset Value : 0000<sub>H</sub>

15				11	10	9	8				4	3	2	1	0
0	0	0	0	TXSA	ALLS	XDU	XPR	0	0	0	RSA	SSM	RPF	RME	ISF

For each facility data link interrupt vector an interrupt vector generation mask is provided. Generation of an interrupt vector itself does not necessarily result in assertion of the interrupt pin. For description of interrupt concept and interrupt vectors see "Layer One Interrupts" on page 136.

The following definition applies:

1 The corresponding interrupt vector will not be generated by the device.

The corresponding interrupt vector will be generated.

### **Facility Data Link Interrupt Vector Transmit**

TXSA Mask 'Transmit S<sub>a</sub> Data'

ALLS Mask 'All Sent'

XDU Mask "Transmit Data Underrun"
XPR Mask 'Transmit Pool Ready'

### **Facility Data Link Interrupt Vector Receive**

RSA Mask 'Receive S<sub>a</sub> Data Valid'

SSM Mask 'Synchronization Status Message Received'

RPF Mask 'Receive Pool Full'

RME Mask 'Receive Message End'

ISF Mask 'Incorrect Synchronization Format'



# RAL Receive Address Low

Access : read/write

Address : 09<sub>H</sub> Reset Value : 0000<sub>H</sub>

15 8	7 0
RAL2(7:0)	RAL1(7:0)

RAL2 Receive Address Low Byte

This bit field defines the low byte of the second receive address.

RAL1 Receive Address Low Byte

This bit field defines the low byte of the first receive address.



# RAH Receive Address High

Access : read/write

 $\begin{array}{lll} \mbox{Address} & : \mbox{OA}_{\mbox{\scriptsize H}} \\ \mbox{Reset Value} & : \mbox{O000}_{\mbox{\scriptsize H}} \end{array}$ 

15 8	7 0
RAH2(7:0)	RAH1(7:0)

RAH2 Receive Address High Byte

This bit field defines the high byte of the second receive address.

RAH1 Receive Address High Byte

This bit field defines the high byte of the first receive address.



# RSAW1 Receive S<sub>a</sub> Word 1

15	3	3	7	0
	SA5(7:0)		SA4(7:0)	

# SA5 Received S<sub>a5</sub> Data Byte

This bit field contains data received in  $S_{a5}$  of an E1 doubleframe or an E1 CRC-4 multiframe.

### E1: CRC-4 Multiframe

Received data byte is aligned to a multiframe boundary. SA5(0) is the data bit receive in frame one, while SA5(7) is the data byte received in frame 15 of a multiframe.

SA4 Received S<sub>a4</sub> Data Byte

This bit field contains data received in  $S_{a4}$  of an E1 doubleframe or an E1 multiframe.

### E1: CRC-4 Multiframe

Received data byte is aligned to a multiframe boundary. SA4(0) is the data bit receive in frame one, while SA4(7) is the data byte received in frame 15 of a multiframe.



# RSAW2 Receive S<sub>a</sub> Word 2

15 8	7 0
SA7(7:0)	SA6(7:0)

# SA7 Received S<sub>a7</sub> Data Byte

This bit field contains data received in  $S_{a7}$  of an E1 doubleframe or an E1 CRC-4 multiframe.

### E1: CRC-4 Multiframe

Received data byte is aligned to a multiframe boundary. SA7(0) is the data bit receive in frame one, while SA7(7) is the data byte received in frame 15 of a multiframe.

# SA6 Received S<sub>a6</sub> Data Byte

This bit field contains data received in  $S_{a6}$  of an E1 doubleframe or an E1 multiframe.

### E1: CRC-4 Multiframe

Received data byte is aligned to a multiframe boundary. SA6(0) is the data bit receive in frame one, while SA6(7) is the data byte received in frame 15 of a multiframe.



# RSAW3 Receive S<sub>a</sub> Word 3

15							8	7	0
0	0	0	0	0	0	0	SADV	SA8(7:0)	

# SADV Received S<sub>a4</sub>..S<sub>a8</sub> Data Valid

This bit indicates that new  $S_a$  data in register RSAW1..RSAW3 is available. The signalling controller will not update  $S_a$  data while this bit is set. SADV will be cleared on reads to this register.

0 No S<sub>a</sub> data available.

1 S<sub>a</sub> data available in register RSAW1..RSAW3.

# SA8 Received S<sub>a8</sub> Data Byte

This bit field contains data received in  $S_{a8}$  of an E1 doubleframe or an E1 multiframe.

### E1: CRC-4 Multiframe

Received data byte is aligned to a multiframe boundary. SA8(0) is the data bit receive in frame one, while SA8(7) is the data byte received in frame 15 of a multiframe.



# RSAW4 Receive S<sub>a</sub> Word 4

15								7	4	3		1	0
0	0	0	0	0	0	0	0	SSMD(3:0)		0	0	0	SSMV

### SSMD SSM Data Pattern

This bit field contains the received synchronization status message. The synchronization status message reported depends on bit RCR2.PAS and, if selected, on pattern enabled in register VSSM. Only valid if SSMV is set.

is se

# SSMV Synchronization Status Message Valid

This bit indicates that a new synchronization status message has been received. A new SSM is reported every time a message has been received three time in a row on the  $S_a$ -bit selected via register RCR2.SASSM. This bit is reset after the user performs a read on this register.

- 0 No new SSM data available.
- New SSM data available.



# CRC1 CRC Status Counter 1

15

CRCS1(15:0)

### CRC1 CRC1 counter

The  $S_a$ -bit error indication counter CRC1 (16 bits) counts either the received bit sequences  $0001_B$  and  $0011_B$  or user programmable values specified in register VCRC in every submultiframe on a selectable  $S_a$ -bit. In the primary rate access digital section CRC errors are reported from the TE via  $S_{a6}$ . Incrementing is only possible in the multiframe synchronous state.

The counter is increased with every received bit error indication if enabled in register RCR2. The counter will not be incremented once it reaches FFFF<sub>H</sub>. A read will clear this counter.



# CRC2 CRC Status Counter 2

15

CRCS(15:0)2

### CRC2 CRC2 counter

The  $S_a$ -bit error indication counter CRC2 (16 bits) counts either the received bit sequences  $0010_B$  and  $0011_B$  or user programmable values specified in register VCRC in every submultiframe on a selectable  $S_a$ -bit. In the primary rate access digital section CRC errors detected at T-reference points are reported via  $S_{a6}$ . Incrementing is only possible in the multiframe synchronous state.

The counter is increased with every received bit error indication if enabled in register RCR2. The counter will not be incremented once it reaches FFFF<sub>H</sub>. A read will clear this counter.



# XSAW1 Transmit S<sub>a</sub> Word 1

Access : read/write

Address :  $11_{H}$ Reset Value :  $0000_{H}$ 

15	8	7	0
SA5(7:0)		SA4(7:0)	

# SA5 Transmit S<sub>a5</sub> Data Byte

This bit field contains data to be transmitted in  $S_{a5}$  of an E1 doubleframe or an E1 CRC-4 multiframe. SA5 will be inserted into the data stream, if selected via bit XCR2.SA5E.

### E1: CRC-4 Multiframe

Transmit data will be aligned to a multiframe boundary. SA5(0) is the data bit transmitted in frame one while SA5(7) is the data bit transmitted in frame 15 of a multiframe.

# SA4 Transmit S<sub>a4</sub> Data Byte

This bit field contains data to be transmitted in  $S_{a4}$  of an E1 doubleframe or an E1 CRC-4 multiframe. SA4 will be inserted into the data stream, if selected via bit XCR2.SA4E.

### E1: CRC-4 Multiframe

Transmit data will be aligned to a multiframe boundary. SA4(0) is the data bit transmitted in frame one while SA4(7) is the data bit transmitted in frame 15 of a multiframe.



# XSAW2 Transmit S<sub>a</sub> Word 2

Access : read/write

 $\begin{array}{lll} \text{Address} & : 12_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \\ \end{array}$ 

15 8	7 0
SA7(7:0)	SA6(7:0)

# SA7 Transmit S<sub>a7</sub> Data Byte

This bit field contains data to be transmitted in  $S_{a7}$  of an E1 doubleframe or an E1 multiframe. SA7 will be inserted into the data stream, if selected via bit XCR2.SA7E.

### E1: CRC-4 Multiframe

Transmit data will be aligned to a multiframe boundary. SA7(0) is the data bit transmitted in frame one while SA7(7) is the data bit transmitted in frame 15 of a multiframe.

# SA6 Transmit S<sub>a6</sub> Data Byte

This bit field contains data to be transmitted in  $S_{a6}$  of an E1 doubleframe or an E1 CRC-4 multiframe. SA6 will be inserted into the data stream, if selected via bit XCR2.SA6E.

### E1: CRC-4 Multiframe

Transmit data will be aligned to a multiframe boundary. SA6(0) is the data bit transmitted in frame one while SA6(7) is the data bit transmitted in frame 15 of a multiframe.



# XSAW3 Transmit S<sub>a</sub> Word 3

Access : read/write

Address :  $13_{H}$ Reset Value :  $0000_{H}$ 

15	14	13	8 7		0
0	XSAV	XSAR(5:0)		SA8(7:0)	

### XSAV S<sub>a</sub> Data Valid

This bit indicates that new  $S_a$  data has been written to register XSAW1..XSAW3 from system processor.

0 No new S<sub>a</sub> data available.

New S<sub>a</sub> data available.

# XSAR S<sub>a</sub> Data Repetitions

This bit field defines the number of repetitions of the  $S_a$  data bytes. A 'Transmit  $S_a$  Data' interrupt vector will be generated after programmed

number of repetitions.

# SA8 Transmit S<sub>a8</sub> Data Byte

This bit field contains data to be transmitted in  $S_{a8}$  of an E1 doubleframe or an E1 CRC-4 multiframe. SA8 will be inserted into the data stream, if selected via bit XCR2.SA8E.

### E1: CRC-4 Multiframe

Transmit data will be aligned to a multiframe boundary. SA8(0) is the data bit transmitted in frame one while SA8(7) is the data bit transmitted in frame 15 of a multiframe.



# VSSM Valid SSM Pattern

Access : read/write

 $\begin{array}{lll} \text{Address} & : 14_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \end{array}$ 

15

PA(15:0)

# PA Pattern 15..0

Setting one or more of the bits enables the selected pattern for SSM comparison. E.g. setting PA(3) and PA(1) enables pattern  $0010_B$  and  $0001_B$  for SSM comparison. Identified SSM pattern are reported via

register RSAW4.

Only valid if RCR2.PAS is set to '1'.



# VCRC Valid CRC Count Pattern

Access : read/write

 $\begin{array}{lll} \text{Address} & : 15_{\text{H}} \\ \text{Reset Value} & : 0000_{\text{H}} \end{array}$ 

15 12	11 8	7 4	3 0
CRC22(3:0	CRC21(3:0)	CRC12(3:0)	CRC11(3:0)

CRC22

CRC21 CRC2 Pattern Definition

The bit fields CRC21 and CRC22 determine the S<sub>a</sub>-bit error indication

pattern to be reported in register CRC2.

Only valid if RCR2.PAS is set to '1'.

CRC12

CRC11 CRC1 Pattern Definition

The bit fields CRC11 and CRC12 determine the  $S_a$ -bit error indication

pattern to be reported in register CRC1.

Only valid if RCR2.PAS is set to '1'.



# 9 Electrical Characteristics

# 9.1 Important Electrical Requirements

Both  $V_{DD3}$  and  $V_{DD25}$  can take on any power-on sequence. Within 50 milliseconds of power-up the voltages must be within their respective absolute voltage limits. At power-down, within 50 milliseconds of either voltage going outside its operational range, both voltages must be returned below 0.1V.

# 9.2 Absolute Maximum Ratings

Table 9-1 Absolute Maximum Ratings

Parameter	Symbol	Limit	Unit	
		min	max	
Ambient temperature under bias	$T_{A}$			°C
PEB 20256M E		0	70	
PEF 20256M E		-40	85	
Junction temperature under bias	$T_{J}$		125	°C
Storage temperature	$T_{stg}$	-65	125	°C
Voltage on any pin with respect to ground	$V_{S}$	-0.4	V <sub>DD3</sub> +0.4	V

Note: Stresses above those listed here may cause permanent damage to the device. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

### 9.3 DC Characteristics

# a) Power Supply Pins

Table 9-2 DC Characteristics

Parameter	Symbol	Limit Values		Unit	Test Condition
		min.	max.		
Core Supply Voltage	$V_{DD25}$	2.25	2.75	V	
I/O Supply Voltage	$V_{DD3}$	3.0	3.6	V	



Parameter		Symbol Limit Values		Unit	<b>Test Condition</b>	
			min.	max.		
Core	operational	$I_{\rm CC25}$		< tbd	mA	
supply current $V_{\mathrm{DD25}}$	power down (no clocks)	$I_{\text{CCPD25}}$		< 2	mA	
I/O supply	operational	$I_{\rm CC3}$		< tbd	mA	Inputs at $V_{\rm SS}/V_{\rm DD3}$
$\begin{array}{c} \text{current} \\ V_{\text{DD3}} \end{array}$	power down (no clocks)	$I_{\text{CCPD3}}$		< 2	mA	No output loads.
Sum of Input leakage current and Output leakage current (Outputs Hi-z)		$I_{LI}$		< 10	μΑ	
		$I_{LO}$				
Power Dissi	pation	P		<3	W	

# b) Non-PCI Interface Pins

Table 9-3 DC Characteristics (Non-PCI Interface Pins)

$$T_{\rm A}$$
 = -40 to 85°C,  $V_{\rm DD3}$  = 3.3 V  $\pm$  0.3 V,  $V_{\rm DD25}$  = 2.5 V  $\pm$  0.25 V,  $V_{\rm SS}$  = 0 V

Parameter	Symbol	Symbol Limit Values			<b>Test Condition</b>
		min.	max.		
L-input voltage	$V_{IL}$	-0.4	0.8	V	
H-input voltage	$V_{IH}$	2.0	V <sub>DD3</sub> +0.4	V	
L-output voltage	$V_{OL}$		0.45	V	$I_{\rm QL}$ = 2 mA
H-output voltage	$V_{OH}$	2.4		V	$I_{QH} = -400  \mu A$

# c) PCI Interface Pins

Table 9-4 DC Characteristics (PCI Interface Pins)

$$T_{\rm A}$$
 = -40 to 85°C,  $V_{\rm DD3}$  = 3.3 V  $\pm$  0.3 V,  $V_{\rm DD25}$  = 2.5 V  $\pm$  0.25 V,  $V_{\rm SS}$  = 0 V

Parameter	Symbol	Limit Values		Unit	Test Condition
		min.	max.		
L-input voltage	$V_{IL}$	-0.5	$0.3V_{DD3}$	V	
H-input voltage	$V_IH$	$0.5V_{DD3}$	V <sub>DD3</sub> +0.5	V	



Parameter	Symbol	Limit Values		Limit Values		Limit Values		Unit	Test Condition
		min.	max.						
L-output voltage	$V_{OL}$		0.1V <sub>DD3</sub>	V	$I_{\rm QL}$ = 1500 $\mu A$				
H-output voltage	$V_{OH}$	$0.9V_{DD3}$		V	$I_{QH} = -500  \mu A$				

# 9.4 AC Characteristics

# a) Non-PCI interface pins

$$T_{\rm A}$$
 = -40 to 85°C,  $V_{\rm DD3}$  = 3.3 V  $\pm$  0.3 V,  $V_{\rm DD25}$  = 2.5 V  $\pm$  0.25 V,  $V_{\rm SS}$  = 0 V

Inputs are driven to 2.4 V for a logical '1' and to 0.4 V for a logical '0'. Timing measurements are made at 2.0 V for a logical '1' and at 0.8 V for a logical '0'.

The AC testing input/output waveforms are shown below.

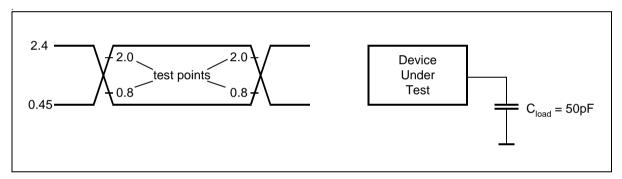


Figure 9-1 Input/Output Waveform for AC Tests

### b) PCI interface pins

PCI interface pins are measured as pins compliant to the 3.3V signalling environment according to the PCI Specification Rev. 2.1.



# 9.4.1 PCI Bus Interface Timing

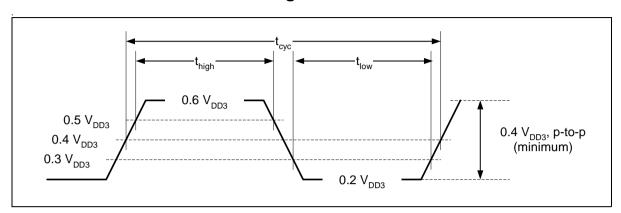


Figure 9-2 PCI Clock Cycle Timing

Table 9-5 PCI Clock Characteristics

Parameter	Symbol	Limit \	Unit	
		min.	max.	-
CLK cycle time	t <sub>cyc</sub>	15		ns
CLK high time	t <sub>high</sub>	6		ns
CLK low time	t <sub>low</sub>	6		ns
CLK slew rate (see note)		1.5	4	V/ns

Note: Rise and fall times are specified in terms of the edge rate measured in V/ns. This slew rate must be met across the minimum peak-to-peak portion of the clock waveform shown in **Figure 9-3**.

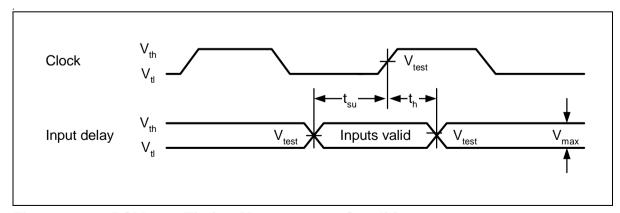


Figure 9-3 PCI Input Timing Measurement Conditions



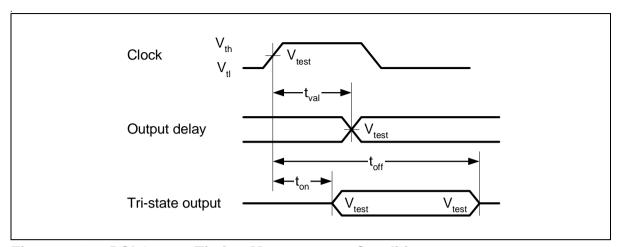


Figure 9-4 PCI Output Timing Measurement Conditions

**Table 9-6** PCI Interface Signal Characteristics

Parameter	Symbol	Limit Values		Unit	Notes
		min.	max.		
CLK to signal valid - bussed signals	t <sub>val</sub>	2	6	ns	1, 2
CLK to REQ valid	t <sub>val</sub>	2	6	ns	1, 2
Float to active delay	t <sub>on</sub>	2		ns	
Active to float delay	t <sub>off</sub>		14		
Input setup time to CLK - bussed signals	t <sub>su</sub>	3			2
Input setup time to CLK - GNT	t <sub>su</sub>	5			2
Input hold time from CLK	t <sub>h</sub>	0			

### Note:

- 1. Minimum times are measured for 3.3V signalling environment according to the PCI Specification Rev. 2.1.
- 2.  $\overline{REQ}$  and  $\overline{GNT}$  are point-to-point signals. All other signals are bussed.



# 9.4.2 SPI Interface Timing

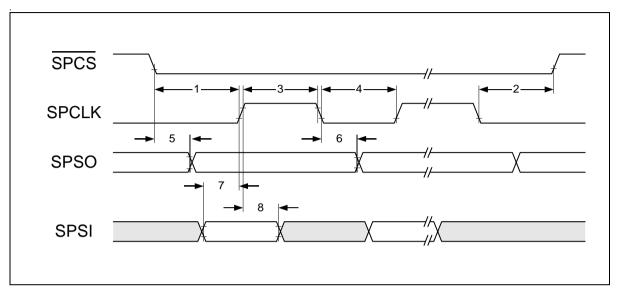


Figure 9-5 SPI Interface Timing

Table 9-7 SPI Interface Timing

No. Parameter	Parameter	Limit '	Limit Values		Notes
		min.	max.		
1	SPCS low to SPCLK delay	500		ns	1
2	SPCLK to SPCS delay	500		ns	
3	SPCLK high time	500		ns	
4	SPCLK low time	500		ns	
5	SPCS to SPSO delay		100	ns	
6	SPCLK to SPSO delay		100	ns	
7	SPSI to SPCLK setup time	100		ns	
8	SPSI to SPCLK hold time	100		ns	

### Note:

1 SPI clock is related to PCI clock where the SPI frequency is 1/78 of the PCI frequency. All timings for SPI interface are calculated with a PCI clock running at 33 MHz.



# 9.4.3 Local Microprocessor Interface Timing

# 9.4.3.1 Intel Bus Interface Timing (Slave Mode)

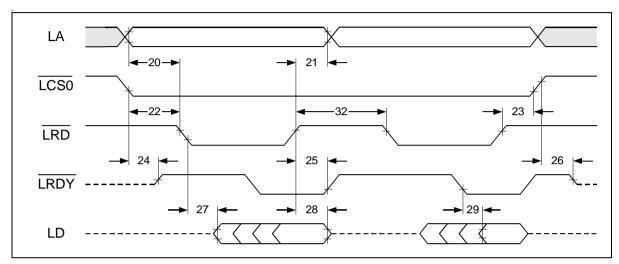


Figure 9-6 Intel Read Cycle Timing (Slave Mode)

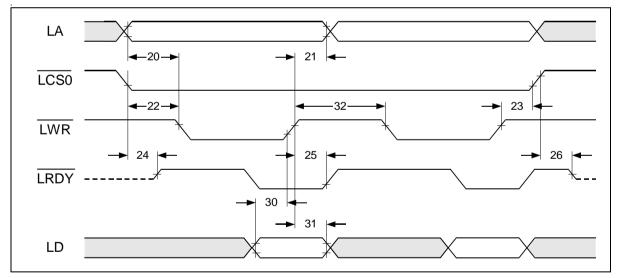


Figure 9-7 Intel Write Cycle Timing (Slave Mode)



# Table 9-8 Intel Bus Interface Timing

No. Parameter	Parameter	Limit Values		Unit
	min.	max.		
20	LA to LRD, LWR setup time	20		ns
21	LA to LRD, LWR hold time	0		ns
22	LCS0 to LRD, LWR setup time	20		ns
23	LCS0 to LRD, LWR hold time	0		ns
24	LCS0 low to LRDY active delay		20	ns
25	LRD, LWR high to LRDY high delay		20	ns
26	LCS0 high to LRDY float delay		20	ns
27	LRD low to LD active delay		20	ns
28	LRD high to LD float delay		20	ns
29	LRDY low to LD valid delay		20	ns
30	LD to LWR setup time	20		ns
31	LD to LWR hold time	5		ns
32	LRD, LWR minimum high time	20		ns



# 9.4.3.2 Intel Bus Interface Timing (Master Mode)

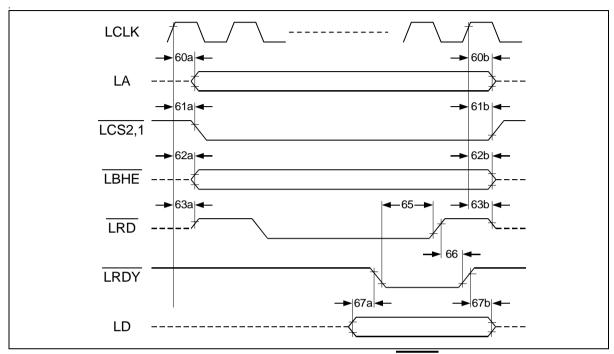


Figure 9-8 Intel Read Cycle Timing (Master Mode, LRDY controlled)

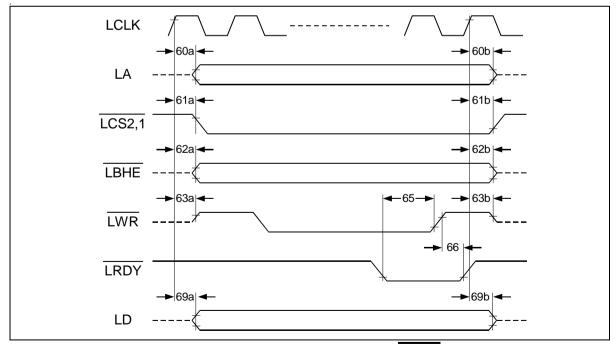


Figure 9-9 Intel Write Cycle Timing (Master Mode, LRDY controlled)



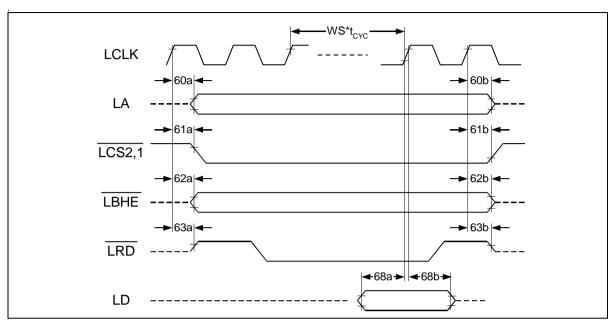


Figure 9-10 Intel Read Cycle Timing (Master Mode, Wait state controlled)

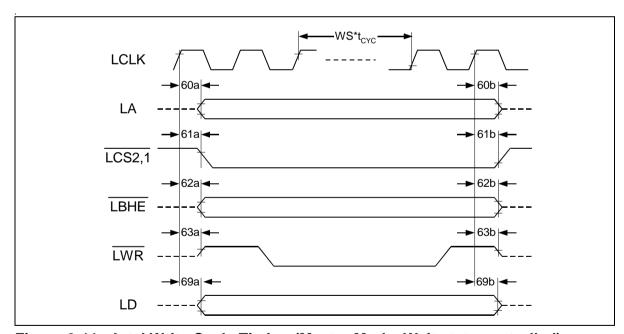


Figure 9-11 Intel Write Cycle Timing (Master Mode, Wait state controlled)



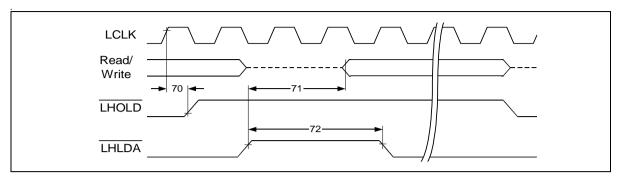


Figure 9-12 Intel Bus Arbitration Timing

Table 9-9 Intel Bus Interface Timing (Master Mode)

No.	Parameter	Limit	Values	Unit
		min.	max.	
60a	LCLK to LA active delay	2	10	ns
60b	LCLK to LA float delay	2	10	ns
61a	LCLK to LCS2,1 active delay	2	10	ns
61b	LCLK to LCS2,1 float delay	2	10	ns
62a	LCLK to LBHE active delay	2	10	ns
62b	LCLK to LBHE float delay	2	10	ns
63a	LCLK to LRD, LWR active delay	2	10	ns
63b	LCLK to LRD, LWR float delay	2	10	ns
65	LRDY low to LRD, LWR high delay	2		t <sub>CYC</sub>
66	LRDY to LRD, LWR hold time	0		ns
67a	LD to LRDY setup time	0		ns
67b	LD to LRDY hold time	0		ns
68a	LD to LCLK setup time	10		ns
68b	LD to LCLK hold time	5		ns
69a	LCLK to LD delay	2	10	ns
69b	LCLK to LD float delay	2	10	ns
70	LCLK to LHOLD delay	2	10	ns
71	LHLDA asserted to Read/Write Cycle start	1		t <sub>CYC</sub>
72	LHLDA minimum pulse width	2		t <sub>CYC</sub>

Note:  $t_{CYC}$  is the clock period of the PCI clock.



## 9.4.3.3 Motorola Bus Interface Timing (Slave Mode)

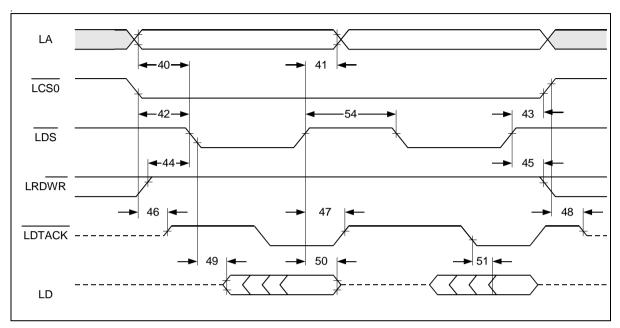


Figure 9-13 Motorola Read Cycle Timing (Slave Mode)

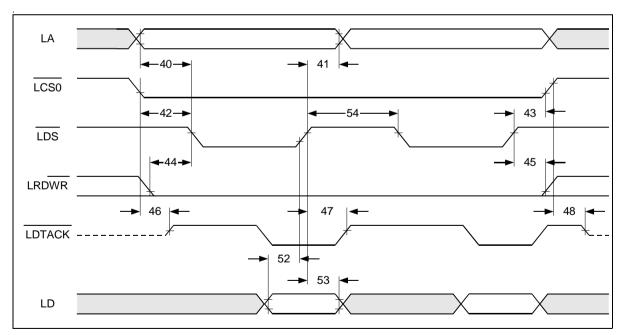


Figure 9-14 Motorola Write Cycle Timing (Slave Mode)



### Table 9-10 Motorola Bus Interface Timing

No.	Parameter	Limit '	Values	Unit
		min.	max.	
40	LA to LDS setup time	20		ns
41	LA to LDS hold time	0		ns
42	LCS0 to LDS setup time	20		ns
43	LCS0 to LDS hold time	0		ns
44	LRDWR to LDS setup time	20		ns
45	LRDWR to LDS hold time	0		ns
46	LCS0 low to LDTACK active delay		20	ns
47	LDS high to LDTACK high delay		20	ns
48	LCS0 high to LDTACK float delay		20	ns
49	LDS low to LD active delay		20	ns
50	LDS high to LD float delay		20	ns
51	LDTACK low to LD valid delay		20	ns
52	LD to LDS setup time	20		ns
53	LD to LDS hold time	5		ns
54	LDS minimum high time	20		ns



### 9.4.3.4 Motorola Bus Interface Timing (Master Mode)

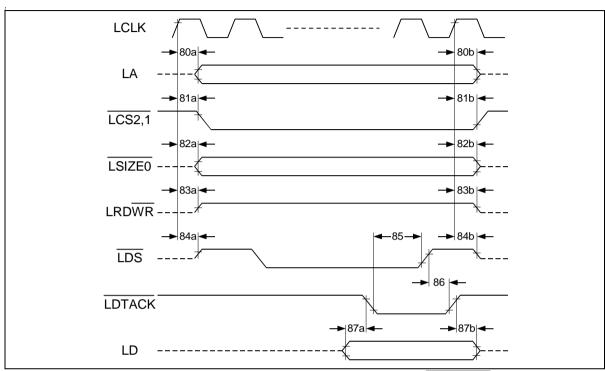


Figure 9-15 Motorola Read Cycle Timing (Master Mode, LDTACK controlled)

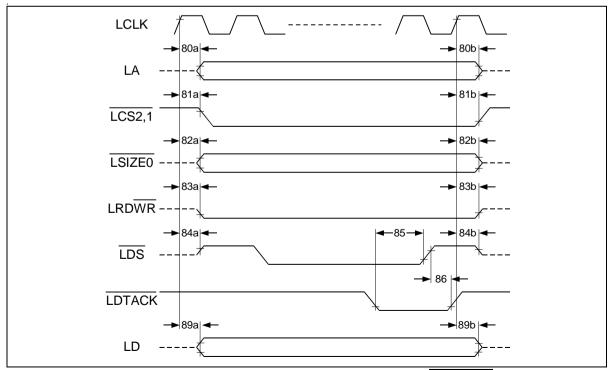


Figure 9-16 Motorola Write Cycle Timing (Master Mode, LDTACK controlled)



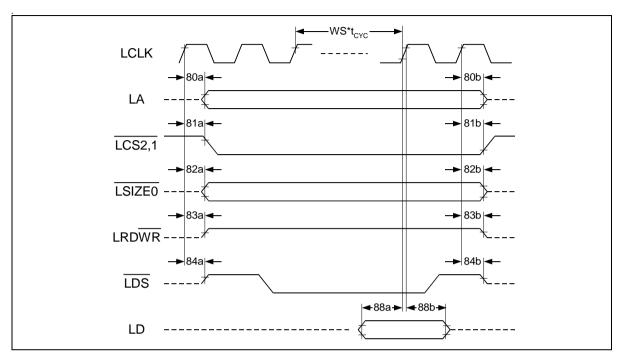


Figure 9-17 Motorola Read Cycle Timing (Master Mode, Wait state controlled)

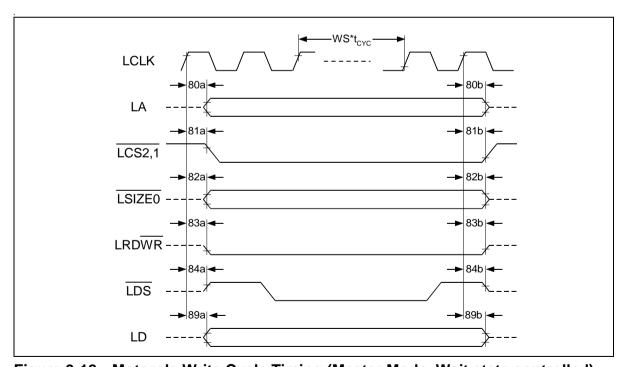


Figure 9-18 Motorola Write Cycle Timing (Master Mode, Wait state controlled)



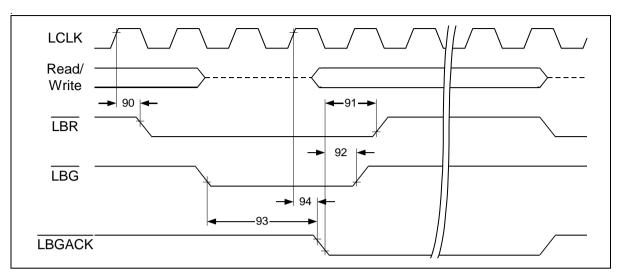


Figure 9-19 Motorola Bus Arbitration Timing

**Table 9-11 Motorola Bus Interface Timing (Master Mode)** 

No.	Parameter	Limit Values		Unit
		min.	max.	
80a	LCLK to LA active delay	2	10	ns
80b	LCLK to LA float delay	2	10	ns
81a	LCLK to LCS2,1 active delay	2	10	ns
81b	LCLK to LCS2,1 float delay	2	10	ns
82a	LCLK to LSIZE0 active delay	2	10	ns
82b	LCLK to LSIZE0 float delay	2	10	ns
83a	LCLK to LRDWR active delay	2	10	ns
83b	LCLK to LRDWR float delay	2	10	ns
84a	LCLK to LDS active delay	2	10	ns
84b	LCLK to LDS float delay	2	10	ns
85	LDTACK low to LDS high delay	2		t <sub>CYC</sub>
86	LDTACK to LDS hold time	0		ns
87a	LD to LDTACK setup time	0		ns
87b	LD to LDTACK hold time	0		ns
88a	LD to LCLK setup time	10		ns
88b	LD to LCLK hold time	5		ns
89a	LCLK to LD delay	2	10	ns



No.	Parameter	Limit	Limit Values	
		min.	max.	
89b	LCLK to LD float delay	2	10	ns
90	LCLK to LBR delay	2	10	ns
91	LBGACK to LBR delay	1		t <sub>CYC</sub>
92	LBG to LBGACK hold time	0		ns
93	LBG to LBGACK delay	1		t <sub>CYC</sub>
94	LCLK to LBGACK delay	2	10	ns

Note:  $t_{CYC}$  is the clock period of the PCI clock.



### 9.4.4 Serial Interface Timing

### 9.4.4.1 DS3 Serial Interface Timing

Note: The clock input timings are calculated assuming a PCI clock frequency of 33 MHz or more.

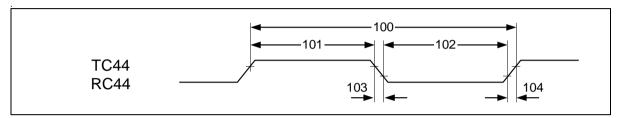


Figure 9-20 Clock Input Timing

Table 9-12 Clock Input Timing

No.	Parameter	Limit Values		Unit
		min.	max.	1
100	Clock frequency	nom. 44.736		MHz
101	Clock high timing	7.5		ns
102	Clock low timing	7.5		ns
103	Clock fall time		2	ns
104	Clock rise time		2	ns



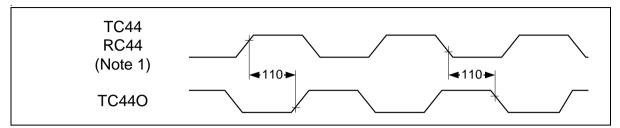


Figure 9-21 DS3 Transmit Cycle Timing

#### Note:

1. Actual clock reference depends on selected clock mode:

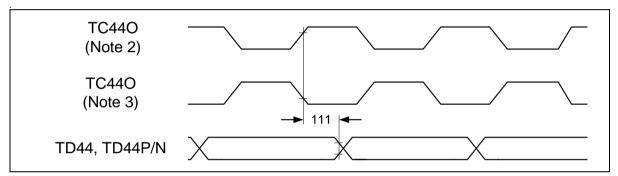


Figure 9-22 DS3 Transmit Data Timing

### Note:

- 2. Timing for transmit data which is updated on the rising edge of TC44O.
- 3. Timing for transmit data which is updated on the falling edge of TC44O.

Table 9-13 DS3 Transmit Cycle Timing

No.	Parameter	Limit Values		Unit
		min.	max.	
110	RC44, TC44 to TC44O delay	2	15	ns
111	TC44O to TD44, TD44P/TD44N delay	-5	5	ns



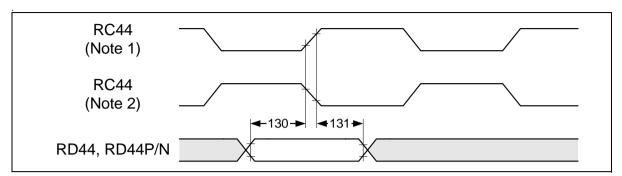


Figure 9-23 DS3 Receive Cycle Timing

#### Note:

- 1. Timing for data which is sampled on the rising edge of the receive clock.
- 2. Timing for data which is sampled on the falling edge of the receive clock.

Table 9-14 DS3 Receive Cycle Timing

No.	Parameter	Limit Values		Unit
		min.	max.	
130	RD44, RD44P/RD44N to RC44 setup time	5		ns
131	RD44, RD44P/RD44N to RC44 hold time	5		ns



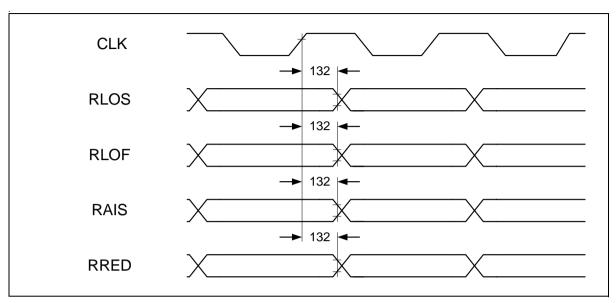


Figure 9-24 DS3 Status Signal Timing

Note: Status signals are generated synchronous to the PCI clock.

Table 9-15 DS3 Status Signal Timing

No.	Parameter	Limit \	/alues	Unit
		min.	max.	
132	CLK to RLOS/RLOF/RAIS/RRED delay	2	10	ns



### 9.4.4.2 Overhead Bit Timing

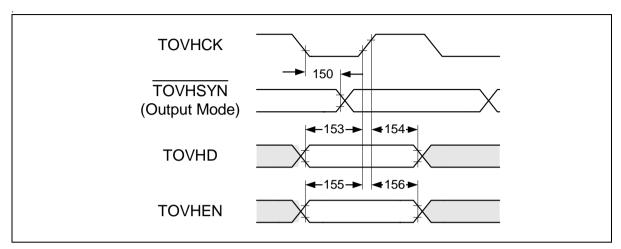


Figure 9-25 DS3 Transmit Overhead Timing

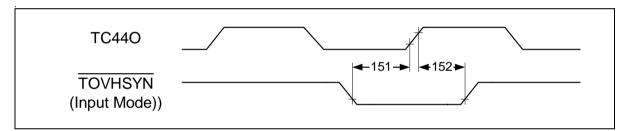


Figure 9-26 DS3 Transmit Overhead Synchronization Timing

Table 9-16 DS3 Transmit Overhead Timing

No.	Parameter	Limit Values		Unit
		min.	max.	
150	TOVHCK to TOVHSYN delay		75	ns
151	TOVHSYN to TCLKO44 setup time	5		ns
152	TOVHSYN to TCLKO44 hold time	5		ns
153	TOVD to TOVHCK setup time	25		ns
154	TOVD to TOVHCK hold time	5		ns
155	TOVHEN to TOVHCK setup time	25		ns
156	TOVHEN to TOVHCK hold time	5		ns



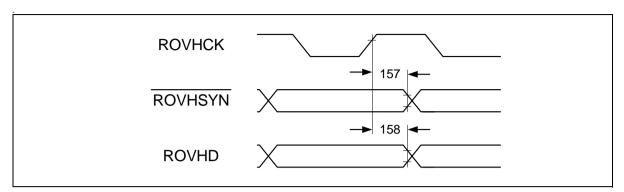


Figure 9-27 DS3 Receive Overhead Timing

Table 9-17 DS3 Receive Overhead Timing

No.	Parameter	Limit \	<b>Values</b>	Unit
		min.	max.	
157	ROVHCK to ROVHSYN delay		75	ns
158	ROVHCK to ROVHD delay		75	ns



# 9.4.4.3 Stuff Bit Timing

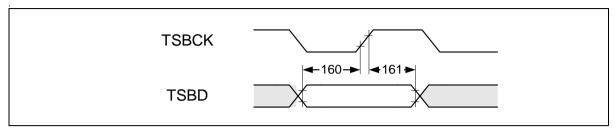


Figure 9-28 DS3 Transmit Stuff Bit Timing

# Table 9-18 DS3 Transmit Stuff Timing

No.	Parameter	Limit Values		Unit
		min.	max.	
160	TSBD to TSBCK setup time	25		ns
161	TSBD to TSBCK hold time	5		ns

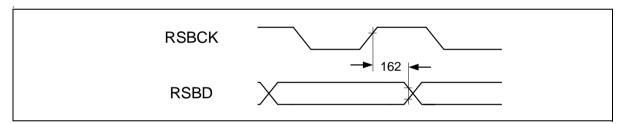


Figure 9-29 DS3 Receive Stuff Bit Timing

### Table 9-19 DS3 Receive Stuff Bit Timing

No.	Parameter	Limit \	/alues	Unit
		min.	max.	
162	RSBCK to RSBD delay		75	ns



# 9.4.4.4 T1/E1 Tributary Timing

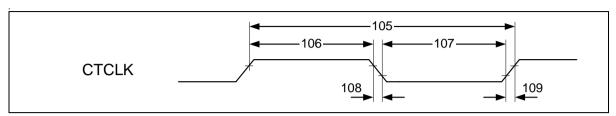


Figure 9-30 T1/E1 Tributary Clock Input Timing

Table 9-20 T1/E1 Tributary Clock Input Timing

No.	Parameter	Li	Limit Values		
		min.	typ	max.	
Tribu	taries operated in E1 Mode	,	I		
105	Clock frequency	2.048	MHz ± 5	50 ppm	
106	Clock high timing	40			ns
107	Clock low timing	40			ns
108	Clock fall time			10	ns
109	Clock rise time			10	ns
Tribu	taries operated in T1 Mode				
105	Clock frequency	1.544 [	MHz ± 1	30 ppm	
106	Clock high timing	40			ns
107	Clock low timing	40			ns
108	Clock fall time			10	ns
109	Clock rise time			10	ns



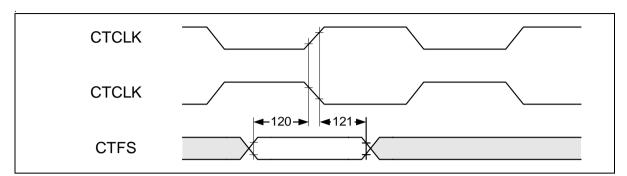


Figure 9-31 T1/E1 Tributary Synchronization Timing

Table 9-21 T1/E1 Tributary Synchronization Timing

No.	Parameter	Limit Values		Unit
		min.	max.	
120	CTFS to CTCLK setup time	5		ns
121	CTFS to CTCLK hold time	5		ns



# 9.4.4.5 Test Port Timing



Figure 9-32 T1/E1 Test Transmit Clock Timing

Table 9-22 T1/E1 Test Transmit Clock Timing

No.	Parameter	Lii	Limit Values		
		min.	typ	max.	
Test <sub> </sub>	oort operated in E1 Mode	,	I		
170	Clock period	2.048	MHz ± 5	50 ppm	
171	Clock high timing	100			ns
172	Clock low timing	100			ns
173	Clock fall time			10	ns
174	Clock rise time			10	ns
Test <sub> </sub>	oort operated in T1 Mode				
170	Clock period	1.544 [	MHz ± 1	30 ppm	
171	Clock high timing	100			ns
172	Clock low timing	100			ns
173	Clock fall time			10	ns
174	Clock rise time			10	ns



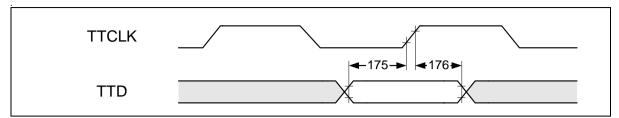


Figure 9-33 T1/E1 Test Transmit Data Timing

Table 9-23 T1/E1 Test Transmit Data Timing

No.	Parameter	Limit \	Limit Values	
		min.	max.	
175	TTD(x) to TTC(x) setup time	25		ns
176	TTD(x) to TTC(x) hold time	75		ns

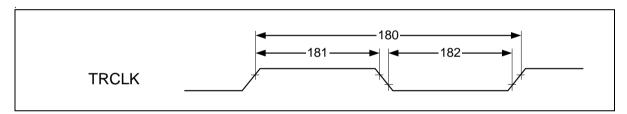


Figure 9-34 T1/E1 Test Receive Clock Timing

Table 9-24 T1/E1 Test Receive Clock Timing

No.	Parameter	Limit Values			Unit
		min.	typ	max.	
Test p	port operated in E1 Mode				
180	Clock period	469		2056	ns
181	Clock high timing	156		335	ns
182	Clock low timing	312		1900	ns
Test F	Port operated in T1 Mode				
180	Clock period	625		1587	ns
181	Clock high timing	310		495	ns
182	Clock low timing	310		1275	ns



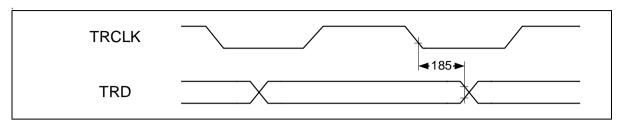


Figure 9-35 T1/E1 Test Receive Data Timing

Table 9-25 Test T1/E1 Receive Data Timing

No.	Parameter	Limit \	/alues	Unit
		min.	max.	
185	RTC(x) to RTD(x) delay	-5	25	ns



# 9.4.5 JTAG Interface Timing

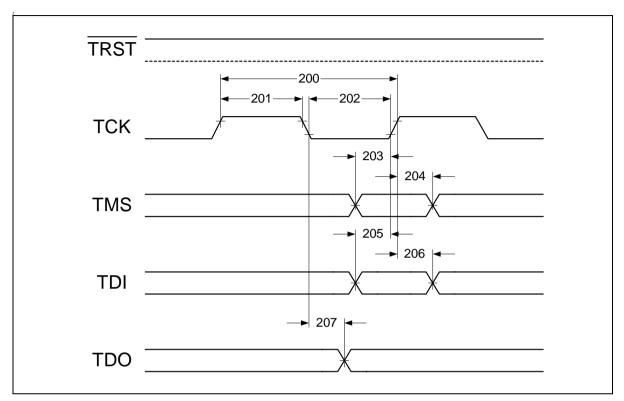


Figure 9-36 JTAG Interface Timing

Table 9-26 JTAG Interface Timing

No.	Parameter	Limit \	Unit	
		min.	max.	
200	TCK period	120		ns
201	TCK high time	60		ns
202	TCK low time	60		ns
203	TMS setup time	20		ns
204	TMS hold time	20		ns
205	TDI setup time	20		ns
206	TDI hold time	20		ns
207	TDO valid time	50		ns



# 9.4.6 Reset Timing

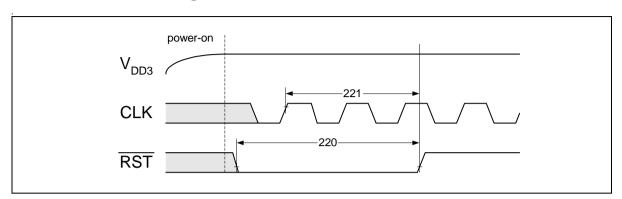


Figure 9-37 Reset Timing

Table 9-27 Reset Timing

No.	Parameter	Limit '	Limit Values		
		min.	max.	]	
220	RST pulse width	120		ns	
221	Number of CLK cycles during RST active	2		CLK cycles	



**Package Outline** 

# 10 Package Outline

