# **Contents**

Feature	1
Applications	1
Block Diagram	1
Pin Assignment	2
Description of Terminals	2
Description of Operation	3
1.Serial interface	3
2.Command configuration	7
3.Initialization	
4.Processing of none-existent data	
and end-of-month	12
5.Interrupt	13
6.Power voltage detecting circuits	15
7.Example of software treatment	
Samples of Applied Circuits	17
Dimensional Outline Diagram (Unit:mm)	18
Order Specification	18
Adjastment of Oscillating Frequency	19
1.Configuration of the oscillating circuit	19
2. Measurement of oscillating frequencies	19
3. Adjustment of oscillating frequencies	20
Absolute Maximum Ratings	21
Recommended Operating Conditions	21
Oscillation Characteristics	21
DC Electrical Characteristics	22
AC Electrical Characteristics	24
Sample of Properties	25
Frequently Asked Questions	27

Real-Time Clock S-3530A

S-3530A is a CMOS real-time clock IC supporting an I2C-BUS, which is designed to transfer or set each data of a clock and calender as requested by a CPU. It provides connection with a CPU via two wires and has two systems of an interrupt/alarm feature, allowing the alleviation of software treatment on the side of a host.

It also works on lower power with the oscillating circuit operated at a constant voltage. Its package uses an extremely small and thin type of eight-pin SSOP.

#### Feature

• Low power consumption :  $0.7 \,\mu\text{A}$  typ.  $(V_{DD}=3.0 \,\text{V})$ 

• Wide area of operating voltage : 1.7 to 5.5 V

- BCD input/output of year, month, day, day of a week, hour, minute and second
- CPU interface via two wires(I2C- BUS)
- Auto calender till the year of 2,099 (automatic leap year arithmetic feature included)
- Built-in power voltage detecting circuit
- Built-in constant voltage circuit
- Built-in flag generating circuit on power on/off
- Built-in alarm interrupter (two systems)
- Steady-state interrupt frequency/duty setting feature
- Built-in 32 KHZ crystal oscillating circuit (Internal Cd, External Cg)
- 8-pin SSOP package (terminal pitch: 0.65 mm)
  - (\*) I<sup>2</sup>C-BUS is a trademark of PHILLIPS ELECTRONICS N.V.

## Applications

- Cellular phone
- PHS
- · A variety of pagers
- TV set and VCR
- Camera

## ■ Block Diagram

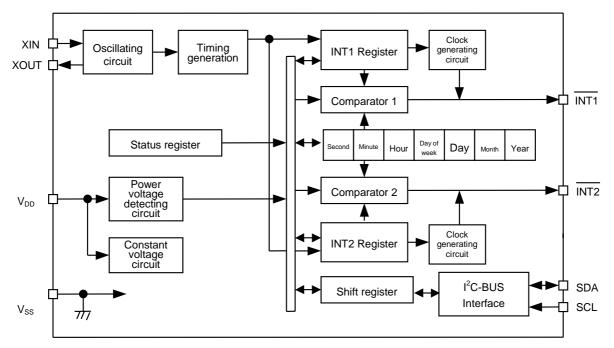


Figure 1 Block diagram

## ■ Pin Assignment

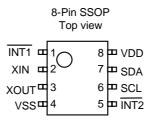


Figure 2 Pin assignment

## Description of Terminals

Terminal Num.	Abbreviation	Description	Configuration
1	ĪNT1	Alarm interrupt 1 output terminal.  Depending on the mode set by the INT1 register and status register, it outputs low or Clock when time is reached. It is disabled by rewriting the status register.	N-channel open drain output (No protective diode on the side of VDD)
2	XIN	Crystal oscillator connect terminal (32,768 HZ)	_
3	XOUT	(Internal Cd, External Cg)	
4	VSS	Negative power supply terminal (GND)	_
5	ĪNT2	Alarm interrupt 2 output terminal.  Depending on the mode set by the INT2 register and status register, it outputs low or Clock when time is reached. It is disabled by rewriting the status register.	N-channel open drain output (No protective diode on the side of VDD)
6	SCL	Serial clock input terminal. Follow the specification with great care to the rising/falling time of the SCL signal because the signal is treated at its rising/falling edge.	CMOS input (No protective diode on the side of VDD)
7	SDA	Serial data input/output terminal.  It is normally used with pulled up to VDD charge via resistance and wired or connected to other devices with open drain or open collector output	N-channel open drain output (No protective diode on the side of VDD) CMOS input
8	VDD	Positive power supply terminal.	_

Table 1 Description of terminals

### ■ Description of Operation

#### 1.Serial interface

S-3530A receives various commands through the I<sup>2</sup>C-BUS-based serial interface to read/write data. The method of I<sup>2</sup>C-BUS-based transfer is described here.

#### 1-1. Start condition

When the SCL line is on the "H" level, the line changes from "H" to "L" so that the start condition is obtained. All the operations begin at the start condition.

#### 1-2. Stop condition

When the SCL line is on the "H" level, the line changes from "L" to "H" so that the stop condition is reached. During a read sequence, any read operation is stopped and a device enters its stand-by mode when a stop condition is received.

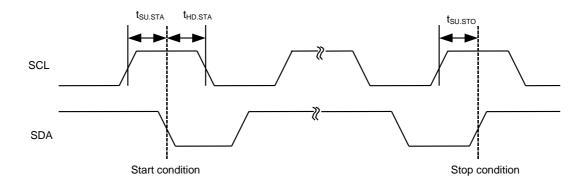


Figure 3 Start/Stop condition

#### 1-3. Data transfer

When the SDA line is changed while it is on "L", data transfer is performed.

When the SDA line is changed while it is on "H", a start or stop condition is recognized.

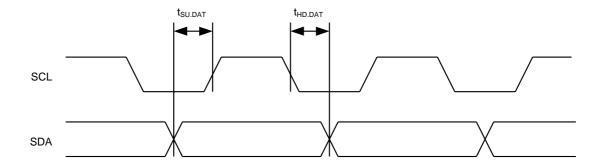


Figure 4 Data transfer timing

#### 1-4. Acknowledge

Data transfer is performed in eight-bit sequence. A device on the system bus, which succeedingly receives data during a period of a ninth clock cycle, puts the SDA line on "L" and returns an acknowledge signal meaning that the data has been received.

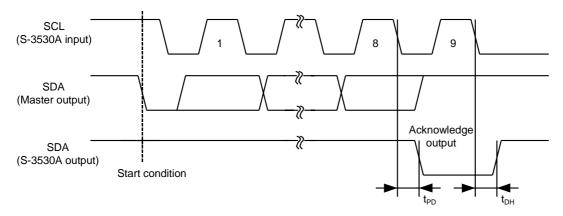


Figure 5 Acknowledge output timing

#### 1-5. Device addressing

The master device on the system generates a start condition to its slave device to make communication. It continuously issues the device address of a four-bit length, the command of a three-bit length and the read/write command of a one-bit length over the SDA bus.

The upper four bits, called a device code, represent a device address and are fixed at "0110".





Figure 6 Communication data


#### 1-6. Data reading

After a start condition is detected from the outside, the device code and command are received. At this point, the real-time reading mode or status register reading mode is entered when the read/write bit is "1". In either the real-time reading mode or status register reading mode, data are output in the order from LSB.

#### (1)Real-time data reading 1

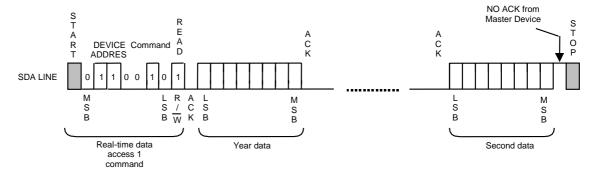

#### (2)Real-time data reading 2

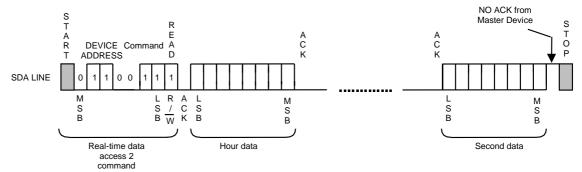

#### (3)Status register reading

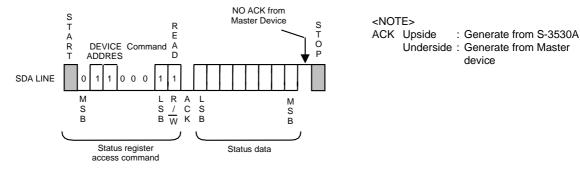



Figure 7 Read communication

#### 1-7. Data writing


After a start condition is detected from the outside, the device code and command are received. At this point, the real-time data writing mode or other register writing mode is entered when the read/write bit is "0". Data must be entered in the order from LSB of the real-time data writing mode or status register writing mode.

In real-time data writing, the count of a calender and time is reset when the ACK signal rises following the real-time writing command, and any update operation is disabled. After a minute data is received, the end of a month is corrected while a second data is imported. Then, the count is started when the ACK signal rises after the second data is received.

#### (1)Real-time data writing 1

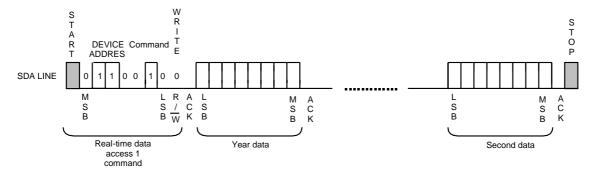

#### (2)Real-time data writing 2

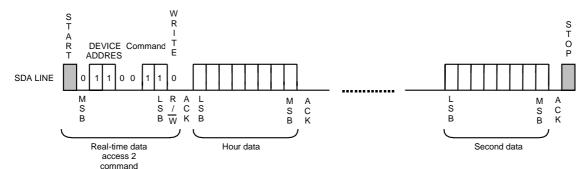

#### (3)Status register writing

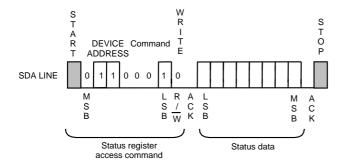


Figure 8 Write communication

# 2.Command configuration

There are eight commands by which the read/write operation of various registers is performed. The table below lists them.

C2	C1	C0	Description	Number of ACK
0	0	0	Reset (00 (year), 01 (month), 01 (day), 0 (day of week), 00 (minute), 00 (second)) (*1)	1
0	0	1	Status register access	2
0	1	0	Real-time data access 1 (year data to)	8
0	1	1	Real-time data access 2 (hour data to)	4
1	0	0	Alarm time/frequency duty setting 1 (for INT1 terminal)	3
1	0	1	Alarm time/frequency duty setting 2 (for INT2 terminal)	3
1	1	0	Test mode start (*2)	1
1	1	1	Test mode end (*2)	1

- (\*1) Don't care the R/W bit of this command.
- (\*2) This command is access-disabled due to specific use for the IC test.

Table 2 Command list

#### 2-1. Real-time data register

The real-time data register is a fifty-six-bit register which stores the BCD code of the data of year, month, day, day of week, hour, minute and second. Any read/write operation performed by the real-time data access command sends or receives the data from LSB on the first digit of the year data.

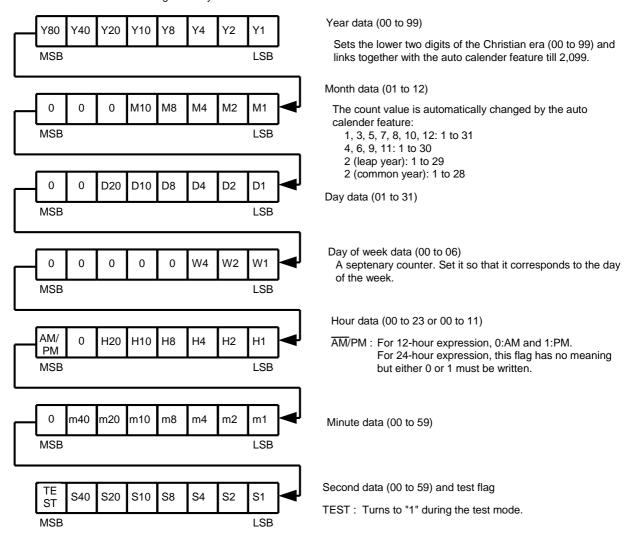


Figure 9 Real-time data register

#### 2-2. Status register

The status register is an eight-bit register which allows you to display and set various modes. The POWER flag is read-only and others are read/write-enabled.




Figure 10 Status register

**B7:POWER** 

This flag turns to "1" if the power voltage detecting circuit operates during power-on or changes in power voltage (below VDET). Once turning to "1", this flag does not turns back to "0" even when the power voltage reaches or exceeds the detected voltage. When the flag is "1", you must send the reset command and turn it to "0". It is a read-only flag.

B6:12/24

This flag is used to set 12-hour or 24-hour expression.

0 : 12-hour expression1 : 24-hour expression

#### B5:INT1AE, B4:INT2AE

This flag is used to choose the state of INT1 terminal (or INIT2 terminal) output with interrupt output set. Enable this flag after setting alarm time that forms a meeting condition in the INT1 register (or INT2 register):

0 : Alarm interrupt output is disabled.

1 : Alarm interrupt output is enabled.

#### B3:INT1ME, B2:INT2ME

This flag is used to make the output of the  $\overline{\text{INT1}}$  terminal (or  $\overline{\text{INT2}}$  terminal) per-minute edge interrupt or per-minute steady interrupt. To make the output per-minute steady interrupt, set "1" at INT1ME and INT1FE (or INT2ME and INT2FE).

0 : Alarm interrupt or selected frequency steady interrupt output

1 : Per-minute edge interrupt or per-minute steady interrupt output

#### B1:INT1FE, B0:INT2FE

This flag is used to make the output of the INT1 terminal (or INT2 terminal) per-minute steady interrupt output (a period of one minute, 50% of duty) or selected frequency steady interrupt. Note that the INT1 register (INT2 register) is considered as the data of frequency/duty if selected frequency steady interrupt is chosen.

 ${\tt 0}\,:\,{\sf Alarm}$  interrupt or selected frequency steady interrupt output

 ${f 1}\,:\,$  Per-minute edge interrupt or per-minute steady interrupt output

#### 2-3. Alarm time/Frequency duty setting register

There are two types of alarm time/frequency duty setting registers, sixteen-bit registers, which set alarm time or frequency duty. They are switched by INTxAE or INTxFE register. AM/PM flag to be set must be in accordance with 12-hour or 24-hour expression. If AM/PM flag is not rightly then set hour data is not met to alarm data. The alarm time/frequency duty setting register is a write-only register.

(1) When INTxAE = 1

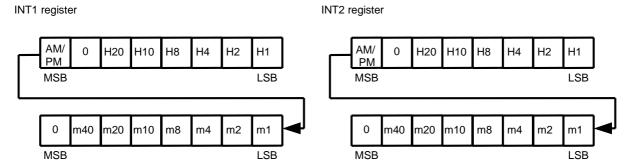


Figure 11 INT1 and INT2 registers (alarm)

INT1 and INT2 registers are considered as alarm time data. Having the same configuration as the time and minutes registers of real-time register configuration, they represent hours and minutes with BCD codes. When setting them, do not set any none-existent day. Data to be set must be in accordance with 12-hour or 24-hour expression that is set at the status register.

#### (2) When INTxFE = 1

INT1 and INT2 registers are considered as frequency duty data. By turning each bit of the registers to "1", a frequency corresponding to each bit is chosen in an ANDed form.


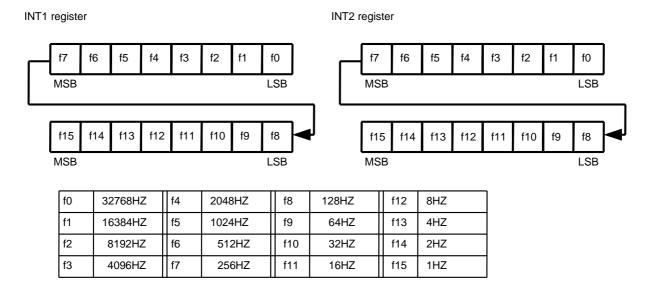


Figure 12 INT1 and INT2 registers (frequency duty)

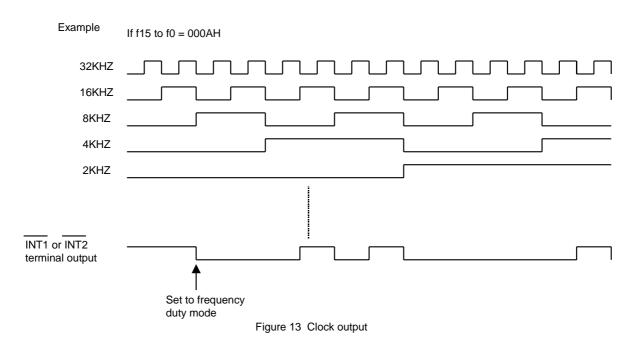

#### 2-4. Test flag

The test flag is a one-bit register which is assigned to MSB of the second data of the real-time data register. If a transferred data is considered as the test mode starting data due to the receiving of the test mode starting data or noises, "1" is set. When "1" is set, you must send the test mode ending command or reset command.

#### 3.Initialization

Note that S-3530A has different initializing operations, depending on states.

#### 3-1. When power is turned on

When power is turned on, the status register is set to "82h" and the INT1 register to "8000h" by the power-on detecting circuit. In other words, "1" is sets at the bit 7 (POWER flag) of the status register and the clock of 1HZ is output from the INT1 terminal. This is provided to adjust oscillating frequencies. In normal use, the reset command must be sent when power is turned on.

Real-time data register: 00 (year), 01 (month), 01 (day), 0 (day of week), 00 (hour), 00 (minute), 00 (second)

Status register : "82h"

INT1 register : "8000h" INT2 register : "0000h"

## 3-2. When the power voltage detecting circuits operates

The power voltage detecting circuit included in S-3530A operates and sets "1" at the bit 7 (POWER flag) of the internal status register when power is turned on or power voltage is reduced. Once "1" is set, it is held even after the power voltage gets equal to or higher than the detected power voltage. When the flag has "1", you must send the reset command from CPU and initialize the flag. At this point, other registers does not change.

However, if the POWER flag has "0" during the power-on reset of CPU (S-3530A does not reach any indefinite area during backup), you do not have to send the reset command.

#### 3-3. When the reset command is received

When the reset command is received, each register turns as follows:

Real-time data register: 00 (year), 01 (month), 01 (day), 0 (day of week), 00 (hour), 00 (minute), 00 (second)

Status register : "00h"

INT1 register : "0000h" INT2 register : "0000h"

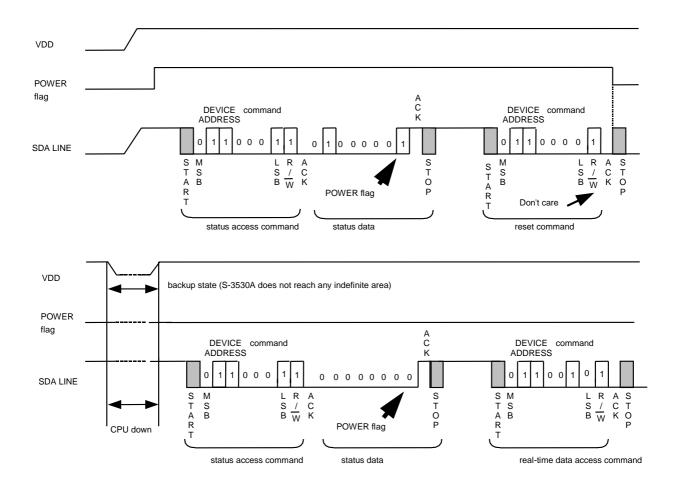


Figure 14 Initializing

## 4. Processing of none-existent data and end-of-month

When writing real-time data, validate it and treat any invalid data and end-of-month correction.

#### [None-existent data processing]

Table 3 None-existent data processing

		-	
Register	Normal data	Error data	Result
Year data	00 to 99	XA to XF, AX to FX	00
Month data	01 to 12	00, 13 to 19, XA to XF	01
Day data	01 to 31	00, 32 to 39, XA to XF	01
Day of week data	0 to 6	7	0
Hour data (24-hour) (*) (12-hour)	0 to 23 0 to 11	24 to 29, 3X, XA to XF 12 to 19, XA to XF	00 00
Minute data	00 to 59	60 to 79, XA to XF	00
Second data (**)	00 to 59	60 to 79, XA to XF	00

<sup>(\*)</sup> For 12-hour expression, write the AM/PM flag.

#### [End-of-month correction]

Any none-existent day is corrected to the first day of the next month. For example, February 30 is changed to March 1. Leapyear correction is also performed here.

The  $\overline{AM}/PM$  flag is ignored in 24-hour expression, but "0" for 0 to 11 o'clock and "1" for 12 to 23 o'clock are read in a read operation.

<sup>(\*\*)</sup> None-existent data processing for second data is performed by a carry pulse one second after the end of writing. At this point, the carry pulse is sent to the minute counter.

#### 5.Interrupt

There are different five output formats from the INT1 and INT2 terminals, which are chosen by the INTxAE, INTxME and INTxFE bits of the status register (x:1 or 2).

#### (1) Alarm interrupt output

Alarm interrupt is enabled by setting hour and minute data to the INT1 register (or INT2 register) and turning the status register's INT1AE to "1" and INT1ME and INT1FE to "0" (or INT2AE to "1" and INT2ME and INT2FE to "0"). When set hour data is met, low is output from the INT1 terminal (or INT2 terminal). Since the output is held, rewrite INT1AE (or INT2AE) of the status register to "0" through serial communication to turn the output to high (OFF state).

#### (2) Selected frequency steady interrupt output

When you set frequency/duty data to the INT1 register (or INT2 register) and turn the status register's INT1ME to "0" and INT1FE to "1" (or INT2ME to "0" and INT2FE to "1"), clock set at the INTx register is output from the INT1 terminal (or INT2 terminal).

#### (3) Per-minute edge interrupt output

When a first minute carry is performed after the status register's INT1ME is set with "1" and INT1FE with "0" (or INT2ME with "0" and INT2FE with "1"), low is output from the INT1 terminal (or INT2 terminal). Since the output is held, rewrite INT1AE, INT1ME and INT1FE (or INT2AE, INT1ME and INT2FE) of the status register to "0" through serial communication to turn the output to high (OFF state). When you perform DISABLE or ENABLE communication while the minute carry processing signal is being retained (for 10 msec), "Low" signal is output from the INTx terminal again.

#### (4) Per-minute steady interrupt output

When a first carry is performed after the status register's INT1ME and INT1FE are set with "1" (or INT2ME and INT2FE with "1"), clock is output from the INT1 terminal (or INT2 terminal) with a period of one minute (50% duty).

When you perform DISABLE or ENABLE communication while the INTx terminal is at "L", "Low" signal is output from the INTx terminal again.

Note 1: If changing an output mode, give care to the state of the INT1 and INT2 registers and output.

Note 2 : If per-minute edge interrupt output or per-minute steady interrupt output is chosen, the INT1 and INT2 registers have no meaning.

Table 4 Interrupt description

NO.	INT1AE	INT1ME	INT1FE	Description		
0	0	0	0	INT1 terminal output disabled (No interrupt output)		
1	*	0	1	Selected frequency steady interrupt output from the INT1 terminal		
2	*	1	0	Per-minute edge interrupt output from the INT1 terminal		
3	*	1	1	Per-minute steady interrupt output from INT1 terminal		
4	1	0	0	Per-minute alarm interrupt output from INT1 terminal		
NO.	INT2AE	INT2ME	INT2FE	Description		
		IINIZIVIL	INIZE	Description		
5	0	0	0	INT2 terminal output disabled (No interrupt output)		
5						
		0	0	INT2 terminal output disabled (No interrupt output)		
6	0 *	0	0	INT2 terminal output disabled (No interrupt output)  Selected frequency steady interrupt output from the INT2 terminal		

Note \*: Don't care.

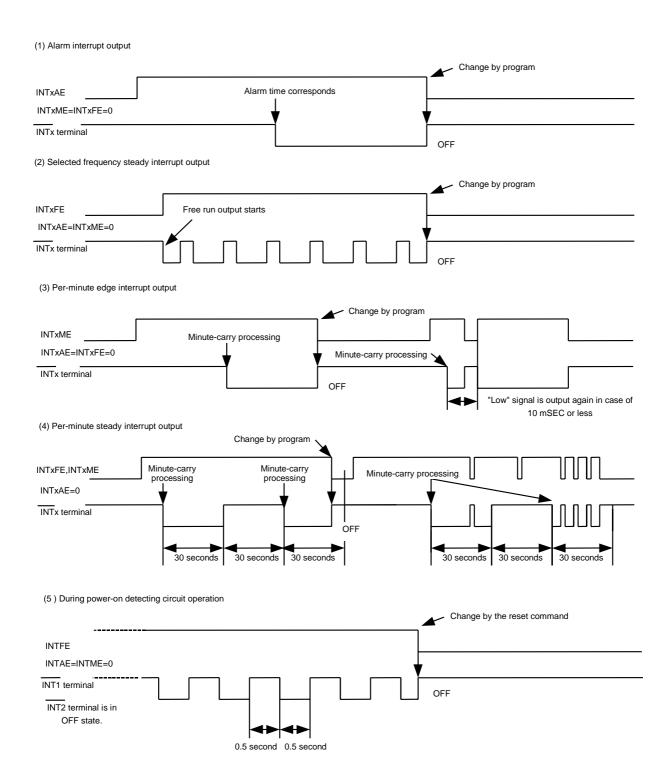


Figure 15 Output mode

#### 6. Power voltage detecting circuit

S-3530 has an internal power voltage detecting circuit. This circuit gives sampling movement for only 15.6msec. once a second. If the power voltage decreases below the detected voltage (VDET), sampling movement stops. Only when subsequent communication is of the status read command, the output of the latch circuit is transferred to the sift register and the sampling movement is resumed.

Decrease in power voltage can be monitored by reading the POWER flag.

That is to say, once decrease in power voltage is detected, any detecting operation is not performed and "H" is held unless you perform initialization or send the status read command.

#### [Note]

When power voltage is increased and the first read operation is performed after decrease in power voltage occurs and the latch circuit latches "H", "1" can be read on the POWER flag. However, if the next read operation is performed after the sampling of the detecting circuit, the POWER flag is reset since sampling is subsequently allowed. See the timing diagram below.


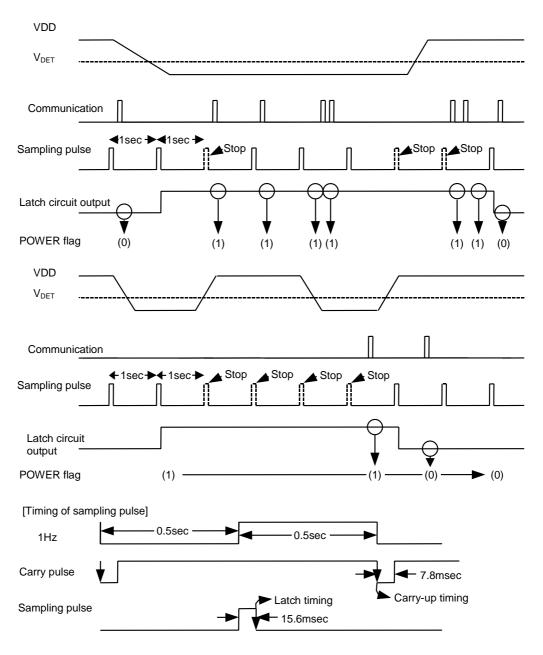


Figure 16 Timing of the power voltage detecting circuit

## 7. Example of software treatment


### (1) Initialization flow at power-on

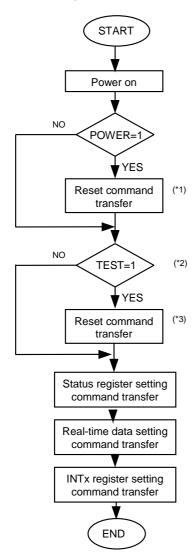

- (\*1) If S-3530 is back-up and power is turned on only on the CPU side, the reset command does not need transferring.
- (\*2) If conditions are no good (e.g., noise) and probable changes in commands occurs via serial communications, it is recommended to make sure the TEST flag.
- (\*3) The test ending command may be used alternately

Figure 17 Initialization flow

## Samples of Applied Circuits

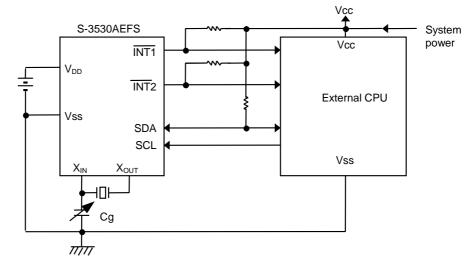

Due to the I/O terminal with no protective diode on the VDD side, the relation of VCC  $\geq$ VDD has no problem. But give great care to the standard.

Make communications after the system power is turned on and a stable state is obtained.

S-3530AEFS

S-3530AEFS

INT1

Vcc

VDD

INT2

Vss

SDA

SCL

XIN

XOUT

Cg

System power

System power

Vcc

External CPU

Vss

Vss

Figure 18 Applied circuit 1

Make communications after the system power is turned on and a stable state is obtained.

Figure 19 Applied circuit 2

# ■ Dimensional Outline Diagram (Unit: mm)

# Eight-pin SSOP

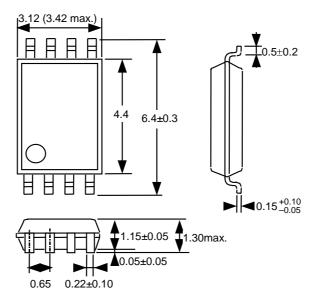


Figure 20 Dimensional outline diagram

## Order Specification



#### Adjustment of Oscillating Frequency

#### Configuration of the oscillating circuit

Since crystal oscillation is sensitive to external noises (clock accuracy is affected), the fallowing measures must be taken in configuring the oscillating circuit:

- (1) S-3530A, crystal oscillator and external capacitor (Cg) are placed as close to each other as possible.
- (2) Make high the insulation resistance between terminals and the board between XIN and XOUT.
- (3) Do not place any signal or power lines close to the oscillating circuit.

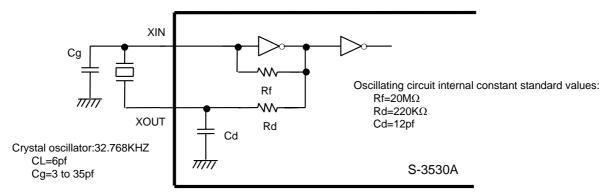


Figure 21 Connection diagram

#### 2. Measurement of oscillating frequencies

When power is turned on, S-3530A has the internal power-on detecting circuit operating and outputs a signal of 1HZ from the INT1 terminal to select the crystal oscillator and optimize the Cg value. Turn power on and measure the signal with a frequency counter following the circuit configuration shown in Figure 22. Refer to 11 and 14 pages in this document for further information.

(\*) If the error range is ±1ppm in relation to 1HZ, time is shifted by approximately 2.6 seconds a month:

 $10^{-6}$  (1ppm)  $\times$  60 seconds  $\times$  60 minutes  $\times$  24 hours  $\times$  30 days = 2.592 seconds


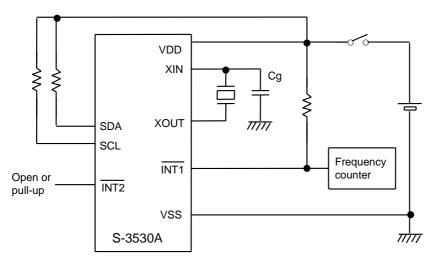


Figure 22 Connection diagram

- Note 1: Use a high-accuracy frequency counter (1ppm order).
- Note 2: Since the 1HZ signal continues to be output, you must send the reset command in normal operation.
- Note 3: Determine Cg with its frequency slow/fast range property referred.

### 3. Adjustment of oscillating frequencies

Matching of a crystal oscillator with the nominal frequency must be performed with suspended capacity on the board included. Select a crystal oscillator and optimize the Cg value in accordance with the flow chart below.

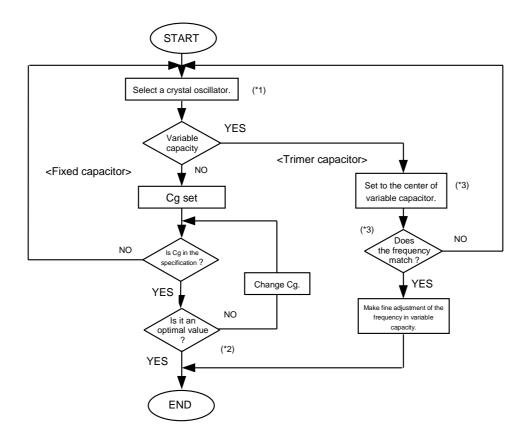

- (\*1) For making matching adjustment of the IC with a crystal, contact an appropriate crystal maker to determine the CL value (load capacity) and RI value (equivalent serial capacity). The CL value = 6pf and RI value = 30KΩ TYP. are recommended values.
- (\*2) Cg value selection must be performed on the actual PCB since suspended capacity affects it. Select the Cg value in a range from 3pf to 35pf. If the frequency does not match, change the CL value of the crystal.
- (\*3) Adjust the rotation angle of the variable capacity so that the capacity value is somewhat smaller than the center, and confirm the oscillating frequency and the center value of the variable capacity. This is done in order to make the capacity of the center value smaller than one half of the actual capacity value because a smaller capacity value makes a greater quantity of changes in a frequency. If the frequency does not match, change the CL value of the crystal.
- Note 1: Oscillating frequencies are changed by ambient temperature and power voltage. Refer to property samples.
- Note 2: The 32KHZ crystal oscillator operates slower at higher or lower ambient temperature than 20 to 25°C. Therefore, it is recommended to adjust or set the oscillator to operate somewhat faster at normal temperature.

## ■ Absolute Maximum Ratings

Table 5 Absolute maximum ratings

Item	Symbol	Symbol Rating		Applicable terminal, conditions
Power voltage	VDD	-0.3 to +6.5	٧	_
Input voltage	$V_{IN}$	-0.3 to +6.5	>	SCL,SDA
Output voltage	$V_{OUT}$	-0.3 to +6.5	V	SDA,INT1,INT2
Operating temperature	$T_{opr}$	-40 to +85	°C	VDD=3.0V
Retention temperature	$T_{stg}$	-55 to +125	ပ္	_

# ■ Recommended Operating Conditions

Table 6 Recommended operating conditions

Item	Symbol	Condition	Min.	Тур.	Max.	Unit
Power voltage	VDD	_	1.7	3.0	5.5	V
Operating temperature	T <sub>opr</sub>	_	-20	+25	+70	°C

### Oscillation Characteristics

Table 7 Oscillation characteristics

 $(Ta=25^{\circ}C, VDD=3V, DS-VT-200 \ (crystal \ oscillator, \ CL=6pF, \ 32,768HZ) \ manufactured \ by \ Seiko \ Electronic \ Part \ Co., \ Ltd.)$ 

(1a-25 c, VBB-5V, Bc V1 200 (dystai oscillator, GE-6pi , 52,70012) Mandiactured by Gento Electronic 1 art Go., Eta.)								
Item	Symbol	Condition	Min.	Тур.	Max.	Unit		
Oscillation start voltage	V <sub>STA</sub>	Within ten seconds	1.7	_	5.5	V		
Oscillation start time	T <sub>STA</sub>	_	_	_	1	SEC		
IC-to-IC frequency diversity	δIC	_	-10	_	+10	ppm		
Frequency voltage diversity	δV	VDD=1.7 to 5.5V	-3	_	+3	ppm/V		
Input capacity	Cg	Applied to the XIN terminal	3	_	35	pF		
Output capacity	Cd	Applied to the XOUT terminal	_	12	_	pF		

## ■ DC Electrical Characteristics

Table 8 DC characteristics (3V)

(Ta=25°C, VDD=3V, DS-VT-200 (crystal oscillator, CL=6pF, 32,768HZ) manufactured by Seiko Electronic Part Co., Ltd.)

Item	Symbol	Condition	Min.	Тур.	Max.	Unit	Applicable terminal
Range of operating voltage	VDD	Ta= -20 to +70 C	1.7	3.0	5.5	V	_
Drain current 1	I <sub>DD1</sub>	During no communications	_	0.7	1.5	μА	_
Drain current 2	I <sub>DD2</sub>	During communications (SCL=100KHZ)	_	12	20	μΑ	_
Input leak current 1	I <sub>ILL1</sub>	V <sub>IN</sub> = VDD	-0.5	1	0.5	μА	SCL,SDA
Input leak current 2	I <sub>ILL2</sub>	V <sub>IN</sub> = VSS	-0.5	_	0.5	μА	SCL,SDA
Output leak current1	I <sub>OZH</sub>	V <sub>OUT</sub> =VDD	-0.5	_	0.5	μА	INT1,INT2 SDA
Output leak current2	I <sub>OZL</sub>	V <sub>OUT</sub> =VSS	-0.5	1	0.5	μΑ	INT1,INT2 SDA
Input voltage 1	V <sub>IH</sub>	_	0.8xVDD	_	_	V	SDA,SCL
Input voltage 2	V <sub>IL</sub>	_	_	_	0.2xVDD	V	SDA,SCL
Output current 1	I <sub>OL1</sub>	V <sub>OUT</sub> =0.4V	1.5	2.5	_	mA	INT1,INT2
Output current 2	I <sub>OL2</sub>	V <sub>OUT</sub> =0.4V	5	10	_	mA	SDA
Power voltage detecting voltage 1	V <sub>DET1</sub>	Ta=+25°C	1.8	2.0	2.2	V	_
Power voltage detecting voltage 2	V <sub>DET2</sub>	Ta= -20 to+70°C	1.72	_	2.3	V	_

Table 9 DC characteristics (5V)

(Ta=25°C, VDD=3V, DS-VT-200 (crystal oscillator, CL=6pF, 32,768HZ) manufactured by Seiko Electronic Part Co., Ltd.)

Item	Symbol	Condition	Min.	Тур.	Max.	Unit	Applicable terminal
Range of operating voltage	VDD	Ta= -20 to +70°C	1.7	3.0	5.5	V	1
Drain current 1	I <sub>DD1</sub>	During no communications	_	1.6	3.0	μА	
Drain current 2	I <sub>DD2</sub>	During communications (SCL=100KHZ)	_	26	40	μΑ	ı
Input leak current 1	I <sub>ILL1</sub>	V <sub>IN</sub> = VDD	-0.5		0.5	μА	SCL,SDA
Input leak current 2	I <sub>ILL2</sub>	V <sub>IN</sub> = VSS	-0.5	1	0.5	μА	SCL,SDA
Output leak current1	I <sub>OZH</sub>	V <sub>OUT</sub> =VDD	-0.5	1	0.5	μΑ	INT1,INT2 SDA
Output leak current2	I <sub>OZL</sub>	V <sub>OUT</sub> =VSS	-0.5		0.5	μΑ	INT1,INT2 SDA
Input voltage 1	V <sub>IH</sub>	_	0.8xVDD		_	٧	SDA,SCL
Input voltage 2	V <sub>IL</sub>	_	_		0.2xVDD	٧	SDA,SCL
Output current 1	I <sub>OL1</sub>	V <sub>OUT</sub> =0.4V	2.0	3.5	_	mA	INT1,INT2
Output current 2	I <sub>OL2</sub>	V <sub>OUT</sub> =0.4V	6	12	_	mA	SDA
Power voltage detecting voltage 1	V <sub>DET1</sub>	Ta=+25°C	1.8	2.0	2.2	V	_
Power voltage detecting voltage 2	V <sub>DET2</sub>	Ta= -20 to+70°C	1.72	_	2.3	V	_

## ■ AC Electrical Characteritics

Table 10 Measurement conditions

Input pulse voltage	0.1 × VDDto 0.9 × VDD
Input pulse rising/falling time	20ns
Output judgment voltage	0.5×VDD
Output load	100pF+pull-up resistance 1.0kΩ

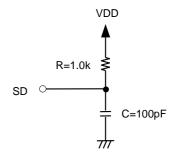


Figure Output load circuit

Table 11 AC properties

Item	Symbol	VDD:	- Unit			
nem	Symbol	Min.	Тур.	Max.	Offic	
SCL clock frequency	f <sub>SCL</sub>	0	_	100	kHz	
SCL clock "L" time	t <sub>LOW</sub>	4.7	_	_	μS	
SCL clock "H" time	t <sub>HIGH</sub>	4.0	_	_	μS	
SDA output delay time	t <sub>PD</sub>	_	_	3.5	μS	
Start condition setup time	t <sub>SU.STA</sub>	4.7	_	_	μS	
Start condition holding time	t <sub>HD.STA</sub>	4.0	_	_	μS	
Data input setup time	t <sub>SU.DAT</sub>	250	_	_	ns	
Data input holding time	t <sub>HD.DAT</sub>	150	_	_	ns	
Stop condition setup time	t <sub>SU.STO</sub>	4.7	_	_	μS	
SCL-SDA rising time	t <sub>R</sub>	_	_	1.0	μS	
SCL-SDA falling time	t <sub>F</sub>	_		0.3	μS	
Bus release time	t <sub>BUF</sub>	4.7	_	_	μS	
Noise suppression time	tı		_	100	ns	


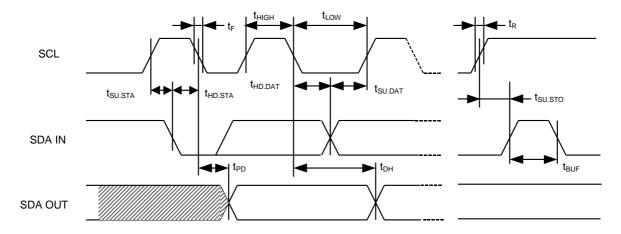



Figure 22 Bus timing

### ■ Sample of Characteristics (Reference values)


## (1) Standby current versus Cg

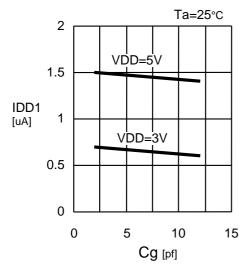


(3) Operating drain current versus Input clock

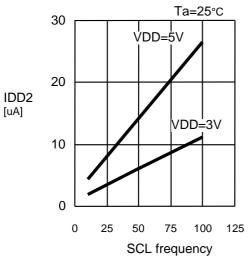


(5) Oscillating frequency versus Cg

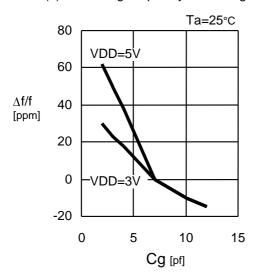


(2) Standby current versus VDD

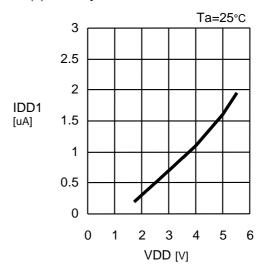


(4) Standby current versus temperature

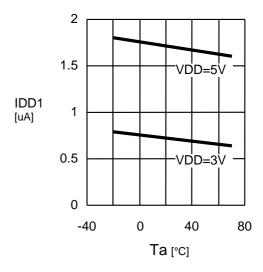


(6) Oscillating frequency versus VDD

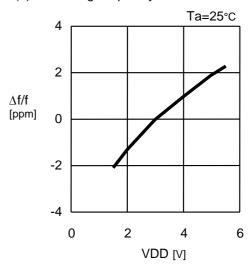


#### (7) Oscillating frequency versus temperature

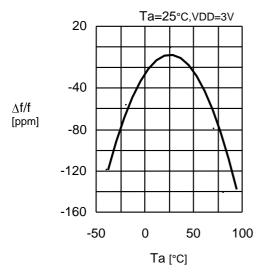


### (9) Output current 1 (VDS versus IDS)

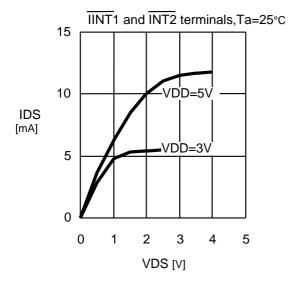

#### (8) Oscillation start time versus Cg

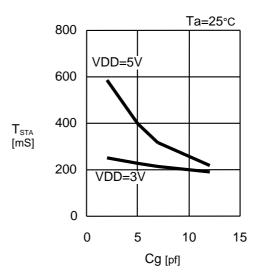

(10) Output current 2 (VDS versus IDS)

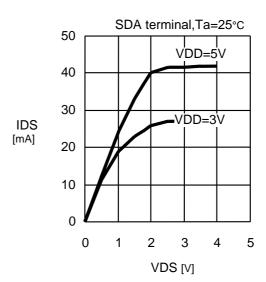

Purchase of I<sup>2</sup>C components of Seiko Instruments Inc. conveys a license under the Philips I<sup>2</sup>C Patent Rights to use these components in an I<sup>2</sup>C system, provided that the system conforms to the I<sup>2</sup>C Standard Specification as defined by Philips.

Please note that any product or system incorporating this IC may infringe upon the Philips I<sup>2</sup>C Bus Patent Rights depending upon its configuration.

In the event that such product or system incorporating the I<sup>2</sup>C Bus infringes upon the Philips Patent Rights, Seiko Instruments Inc. shall not bear any responsibility for any matters with regard to and arising from such patent infringement.

Author: Shirai Masaaki Date: 99/04/16 (Friday) 18:20 (modified: 99/04/16(Friday))

<Information level>

A: Public (Printing O.K.)

Index: B: General

<Product>

Division name: 01 IC Category 1: 17 ASSP

Category 2: 2. Real-Time Clock

Product name: Overall

Related documents:

# Question:

What are the notes for time settings (S3511/S3530/S3531)?

# Answer:

If time data is rewritten in a product with an alarm interrupt (S-3511/S-3530/S-3531), be sure to disable the alarm interrupt before the time is set.

Reason: When data is written using real-time data access 2, registers for hours, minutes, and seconds are reset (all "0"s), and arbitrary hours, minutes, and seconds are then set. If the alarm is set for 0:00 a.m. and the alarm interrupt is enabled, when the time data is rewritten the registers are reset (all "0"s) to 0:00 a.m., the set alarm time, thereby causing an interrupt (INT).

<Remarks>

Author: Shirai Masaaki Date: 99/04/14 (Wednesday) 11:34 (modified: 99/05/18)

#### <Information level>

A: Public (Printing O.K.)

Index: B: Technical

#### <Product>

Division name: 01 IC Category 1: 17 ASSP

Category 2: 2. Real-Time Clock

Cal No.: Overall


#### Related documents:

# Question:

What about the write/read errors (notes)?

# Answer:

To continuously write or read data in a 3-wire RTC (S-3511/S-3513/S-35L12/S-3510), be sure to change "CS" to "L" after the first command has been executed and before the next command is executed. If commands are continuously executed without changing "CS" to "L," the second command is disregarded.

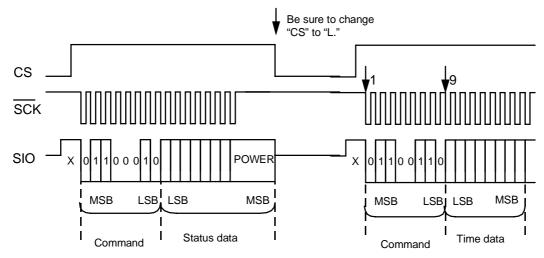

## <Remarks>

Author: Shirai Masaaki Date: 99/04/13 (Tuesday) 15:40 (modified: 99/05/18)

<Information level>

A: Public (Printing O.K.)

Index: A: General

<Product>

Division name: 01 IC Category 1: 17 ASSP

Category 2: 2. Real-Time Clock

Cal No.: Overall

Related documents:

# Question:

What about the Y2K problem?

# Answer:

Our Real-Time Clock outputs information consisting of the last two digits of the year. The S-35L12/L32 can use the register bits in its RTC to determine whether the year is 1900 or 2000 when the last two digits change from 99 to 00. Most other RTCs, however, cannot determine whether the year is 1900 or 2000 when the last two digits change from 99 to 00. Thus, when this microcomputer is used, the user must load year information for the RTC in a microcomputer to determine whether the year is 1900 or 2000. Accordingly, when the year reaches 2000, our RTC allows year information to operate normally and be output as "00," thereby preventing malfunctions.

There is no problem with the operation of the IC. If, however, peripheral circuits and software developed by a client manage year information using the last two digits of the year, they may malfunction. Thus, such devices should be checked.

<reference>

http://www.sii.co.jp/sii2000.htm

<Remarks>

Author: Shirai Masaaki Date: 99/04/13 (Tuesday) 14:26 (modified: 99/04/13)

<Information level>

A: Public (Printing O.K.)

Index: A: General

<Product>

Division name: 01 IC Category 1: 17 ASSP

Category 2: 2. Real-Time Clock

Cal No.: Overall

Related documents:

# Question:

Why is an auto calendar available through the year 2099?

# Answer:

The SII's RTC denotes the year using its last two digits. These digits are then divided by four, and if they are divisible the year is determined to be a leap year (the auto calendar determines both 1996 and 2000 to be leap years). The actual calendar, however, does not treat a year with "00" as its last two digits as a leap year (except for the year 2000; see the following). Accordingly, although 2100 is not a leap year, the RTC treats it as one. Therefore, this auto calendar is available through 2099.

(Note) A year is defined as a leap year when its last two digits are "00" and its first two digits are divisible by four.

<Remarks>