


Small Signal Low Leakage Diodes

Features

- Silicon Planar Diodes
- Very low reverse current

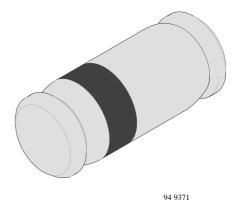

Applications

Protection circuits, time delay circuits, peak follower circuits, logarithmic amplifiers

Order Instruction

Туре	Type Differentiation	Ordering Code	Remarks
BAQ33	$V_{RRM} = 40 \text{ V}$	BAQ33-GS08	Tape and Reel
BAQ34	$V_{RRM} = 70 \text{ V}$	BAQ34-GS08	Tape and Reel
BAQ35	V _{RRM} = 140 V	BAQ35-GS08	Tape and Reel

Absolute Maximum Ratings

 $T_j = 25^{\circ}C$

Parameter	Test Conditions	Type	Symbol	Value	Unit
		BAQ33	V_{R}	30	٧
Reverse voltage		BAQ34	V_{R}	60	V
		BAQ35	V_{R}	125	V
Peak forward surge current	t _p =1μs		I _{FSM}	2	Α
Forward current	•		I _F	200	mΑ
Junction temperature			T _i	200	°C
Storage temperature range			T _{stg}	<i>−</i> 65+200	°C

Maximum Thermal Resistance

 $T_j = 25^{\circ}C$

Parameter	eter Test Conditions		Value	Unit	
Junction ambient	on PC board 50 mmx50 mmx1.6 mm	R_{thJA}	500	K/W	

Document Number 85537 Rev. 3, 13-Feb-01

Vishay Telefunken



Electrical Characteristics

 $T_j = 25^{\circ}C$

Parameter	Test Conditions	Туре	Symbol	Min	Тур	Max	Unit
Forward voltage	I _F =100mA		V_{F}			1	V
	E ≦ 300lx, V _R		I _R		1	3	nA
	$E \le 300 \text{lx}, V_R, T_j = 125 \text{ °C}$		I _R			0.5	μΑ
Reverse current	E ≦ 300lx, V _R =15 V	BAQ33	I _R		0.5	1	nA
	E ≦ 300lx, V _R =30 V	BAQ34	I _R		0.5	1	nA
	E ≦ 300lx, V _R =60 V	BAQ35	I _R		0.5	1	nA
	$I_R=5\mu A, t_p/T=0.01, t_p=0.3ms$	BAQ33		40			V
Breakdown voltage		BAQ34	V _(BR)	70			V
		BAQ35		140			V
Diode capacitance	V _R =0, f=1MHz		C _D			3	рF

Characteristics $(T_j = 25^{\circ}C \text{ unless otherwise specified})$

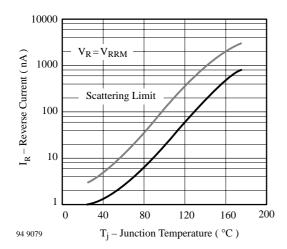


Figure 1. Reverse Current vs. Junction Temperature


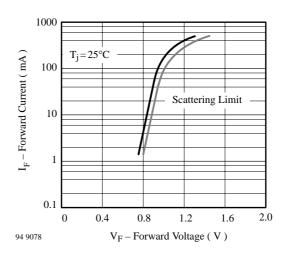



Figure 2. Forward Current vs. Forward Voltage



Vishay Telefunken

Dimensions in mm

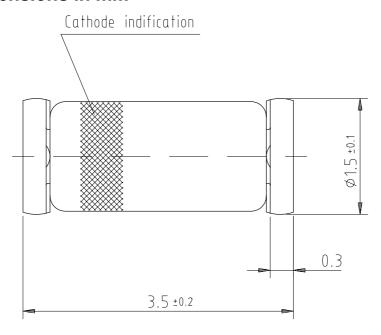

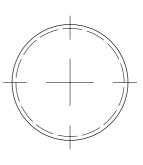

Glass case Mini MELF / SOD 80 JEDEC DO 213 AA

96 12070



BAQ33...BAQ35

Vishay Telefunken



Ozone Depleting Substances Policy Statement

It is the policy of Vishay Semiconductor GmbH to

- 1. Meet all present and future national and international statutory requirements.
- 2. Regularly and continuously improve the performance of our products, processes, distribution and operating systems with respect to their impact on the health and safety of our employees and the public, as well as their impact on the environment.

It is particular concern to control or eliminate releases of those substances into the atmosphere which are known as ozone depleting substances (ODSs).

The Montreal Protocol (1987) and its London Amendments (1990) intend to severely restrict the use of ODSs and forbid their use within the next ten years. Various national and international initiatives are pressing for an earlier ban on these substances.

Vishay Semiconductor GmbH has been able to use its policy of continuous improvements to eliminate the use of ODSs listed in the following documents.

- 1. Annex A, B and list of transitional substances of the Montreal Protocol and the London Amendments respectively
- 2. Class I and II ozone depleting substances in the Clean Air Act Amendments of 1990 by the Environmental Protection Agency (EPA) in the USA
- 3. Council Decision 88/540/EEC and 91/690/EEC Annex A, B and C (transitional substances) respectively.

Vishay Semiconductor GmbH can certify that our semiconductors are not manufactured with ozone depleting substances and do not contain such substances.

We reserve the right to make changes to improve technical design and may do so without further notice. Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer. Should the buyer use Vishay-Telefunken products for any unintended or unauthorized application, the buyer shall indemnify Vishay-Telefunken against all claims, costs, damages, and expenses, arising out of, directly or indirectly, any claim of personal damage, injury or death associated with such unintended or unauthorized use.

Vishay Semiconductor GmbH, P.O.B. 3535, D-74025 Heilbronn, Germany Telephone: 49 (0)7131 67 2831, Fax number: 49 (0)7131 67 2423